





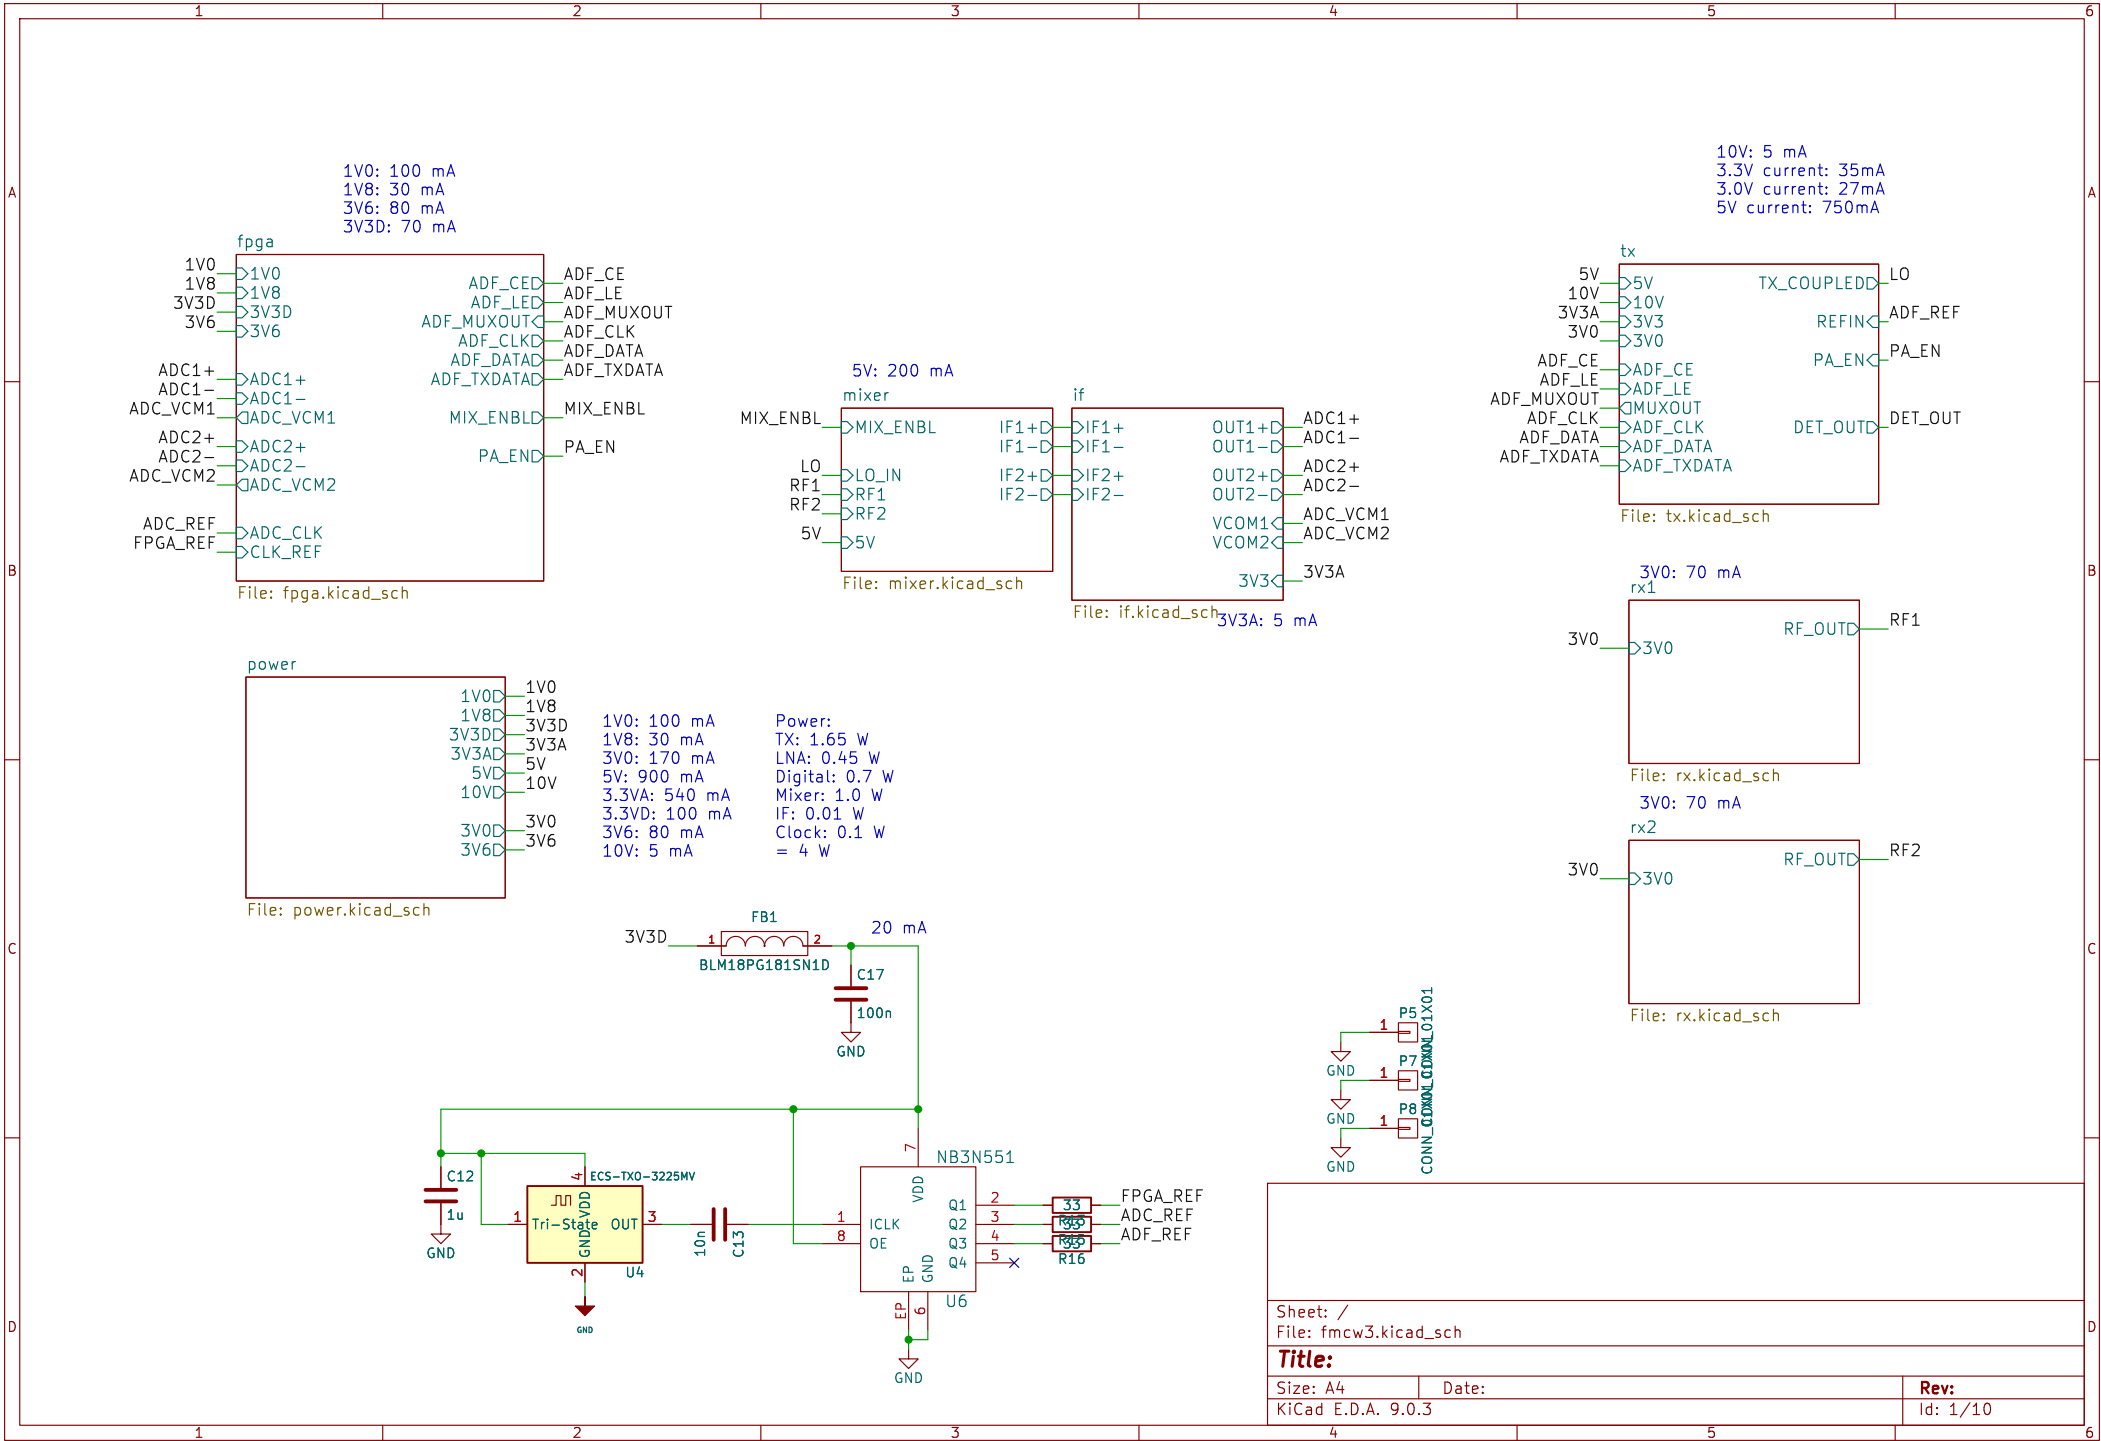

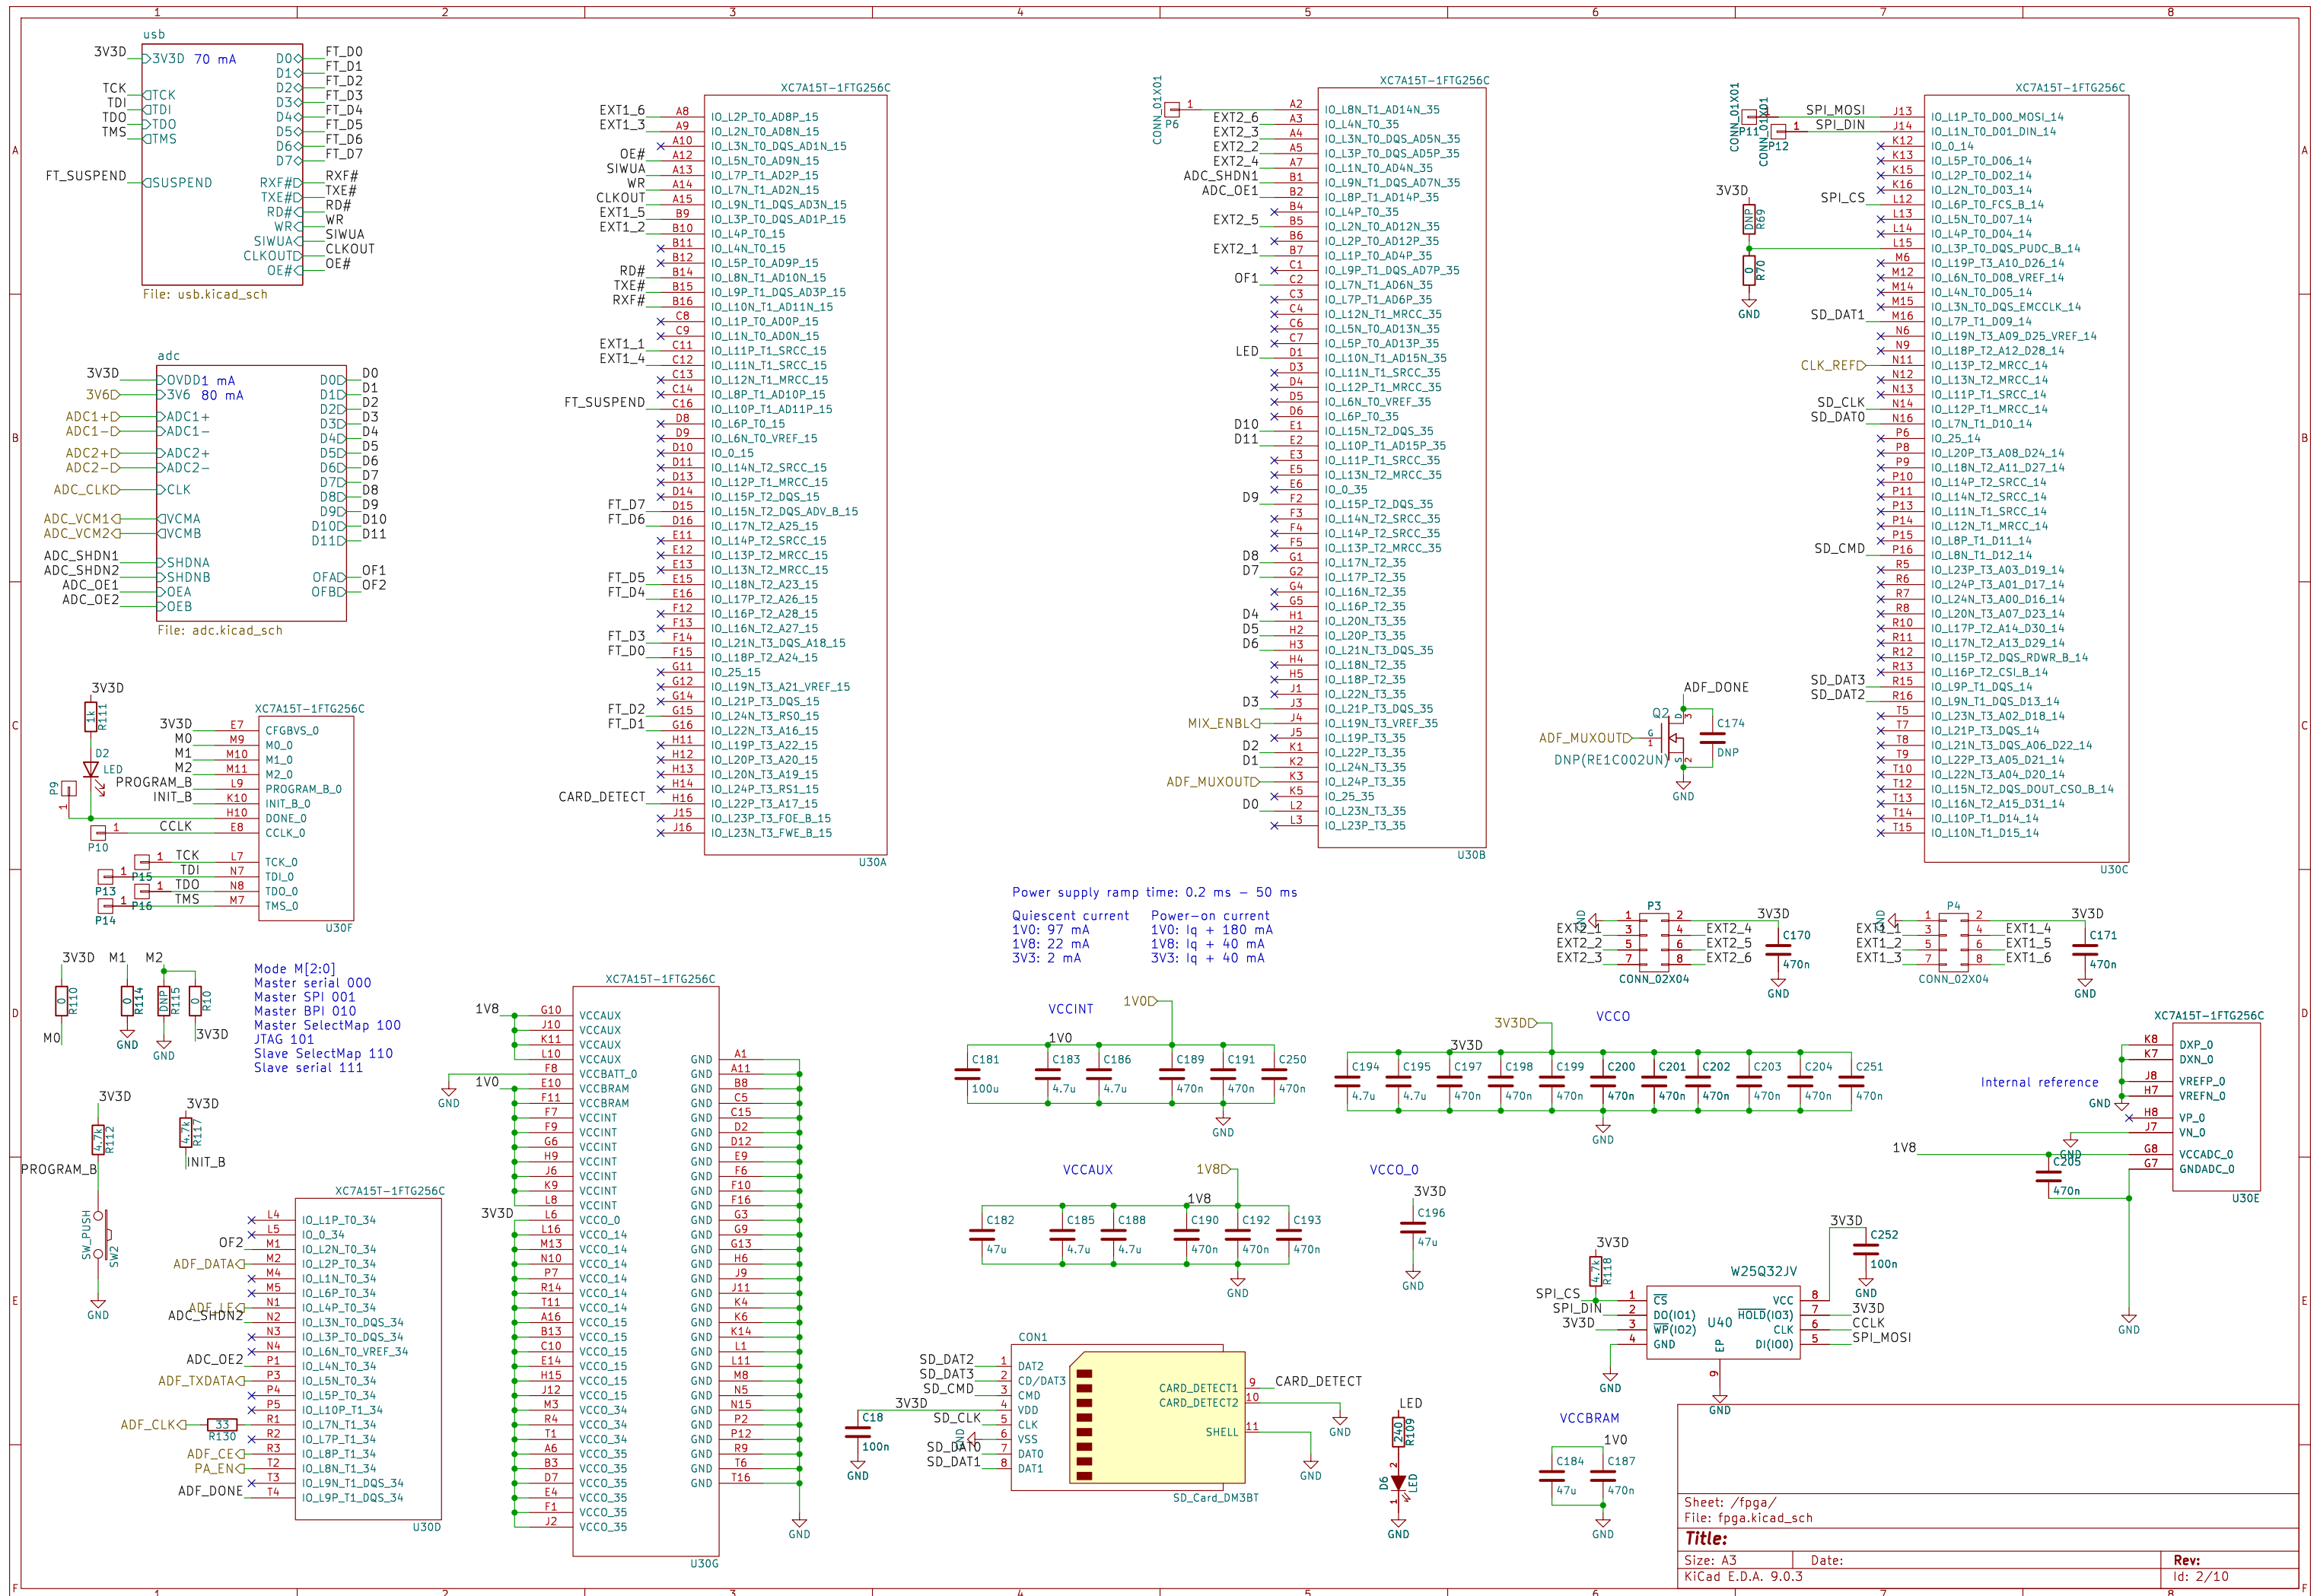

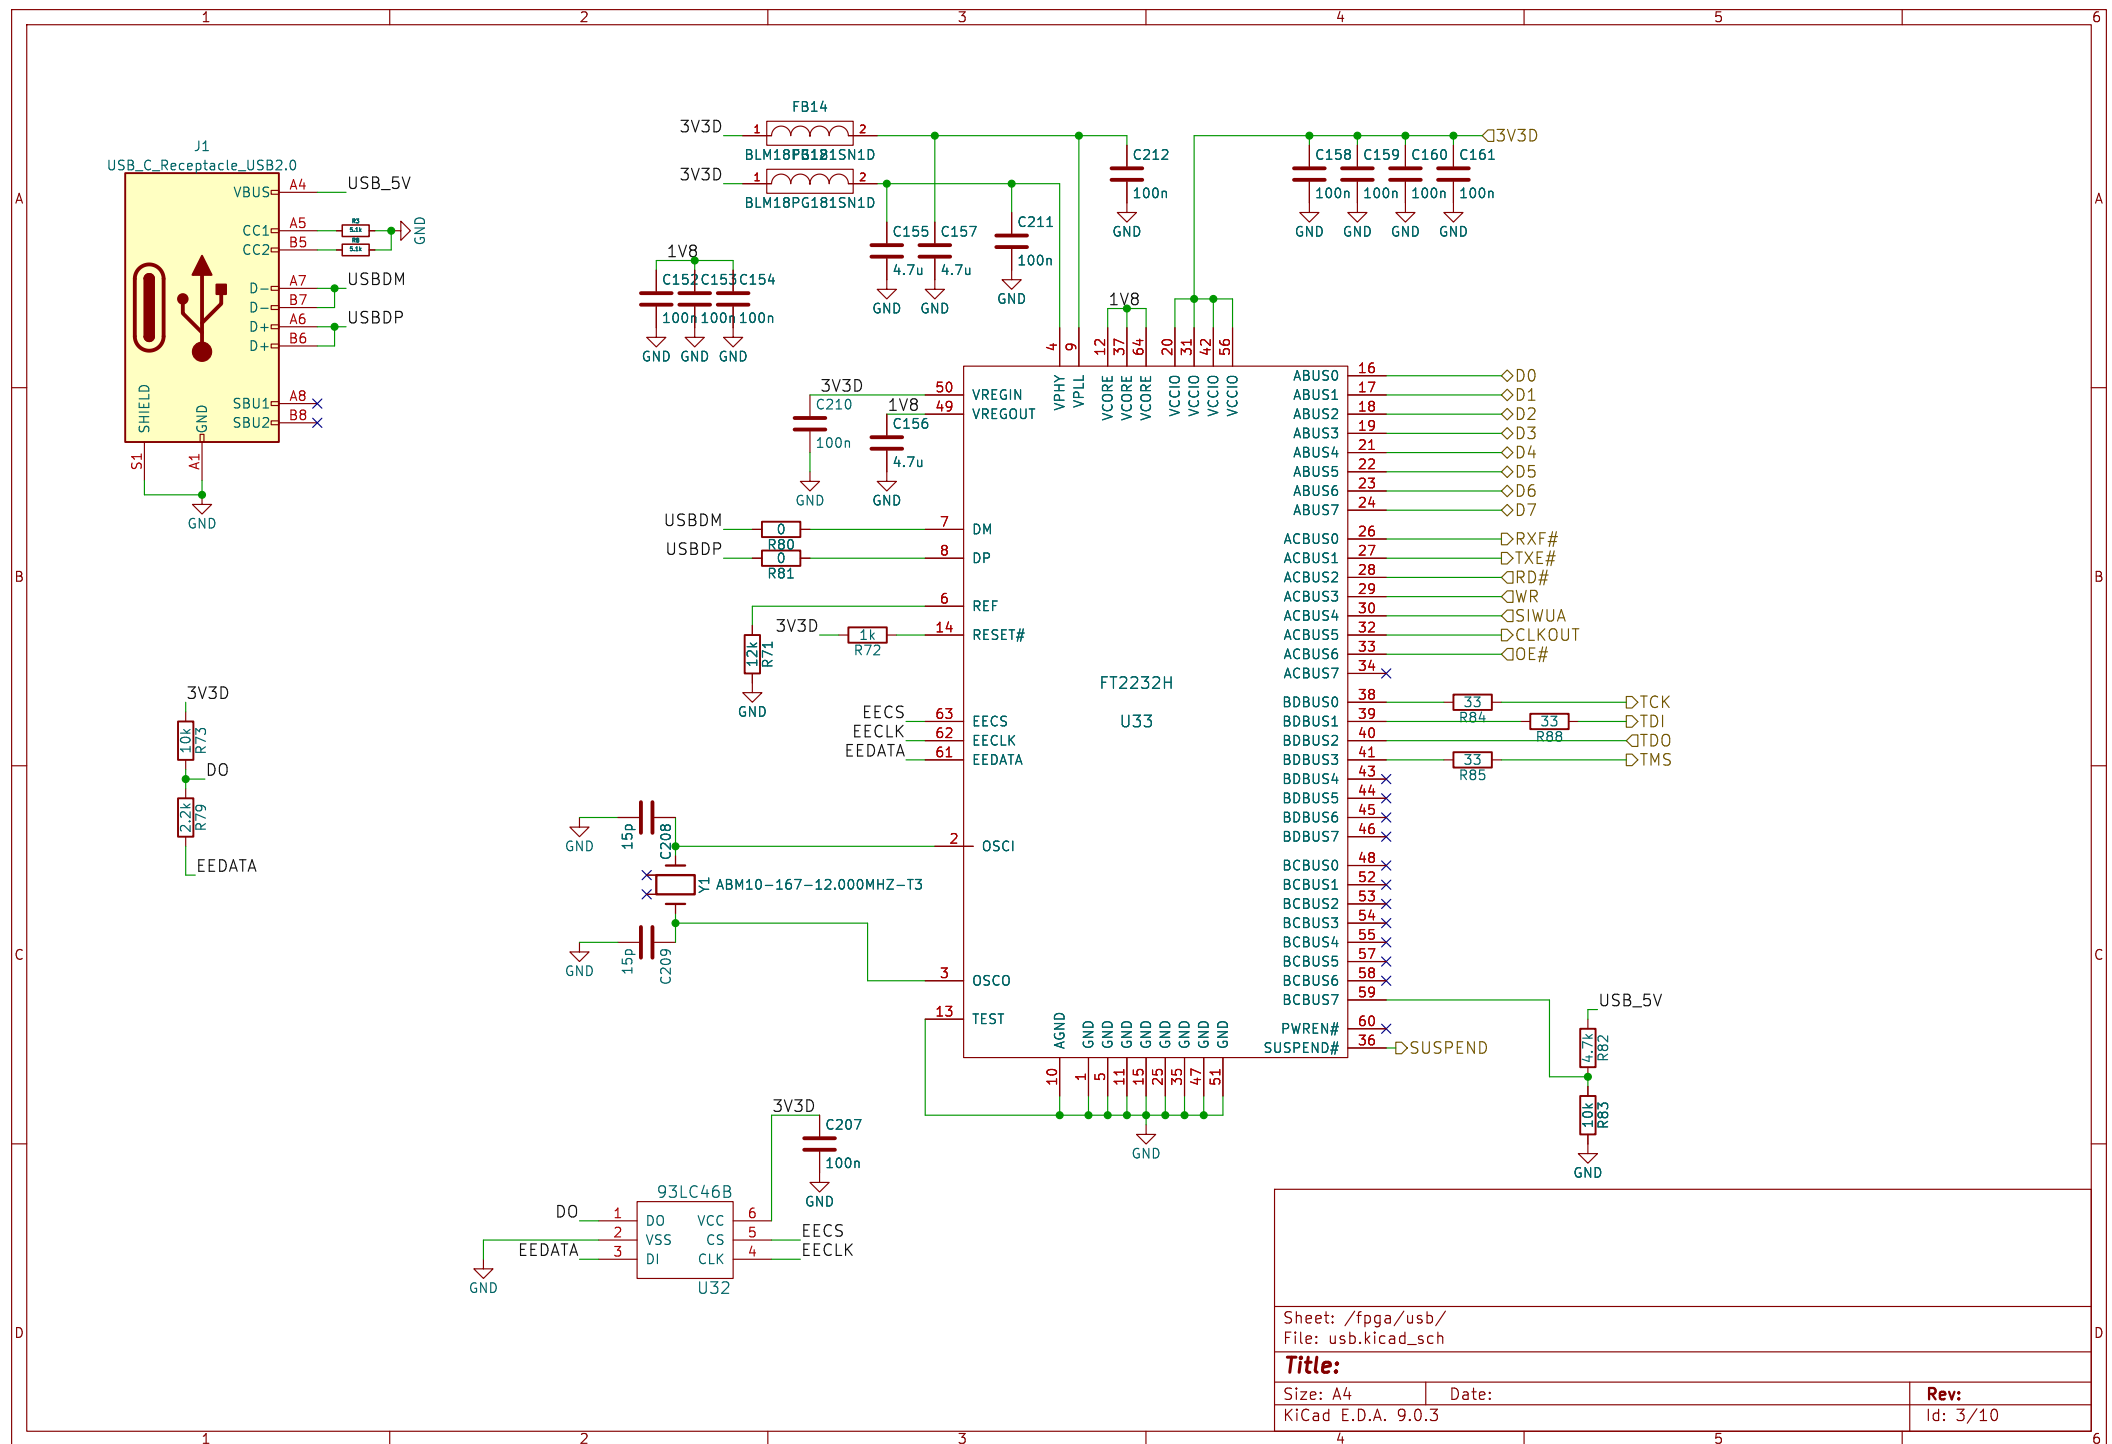

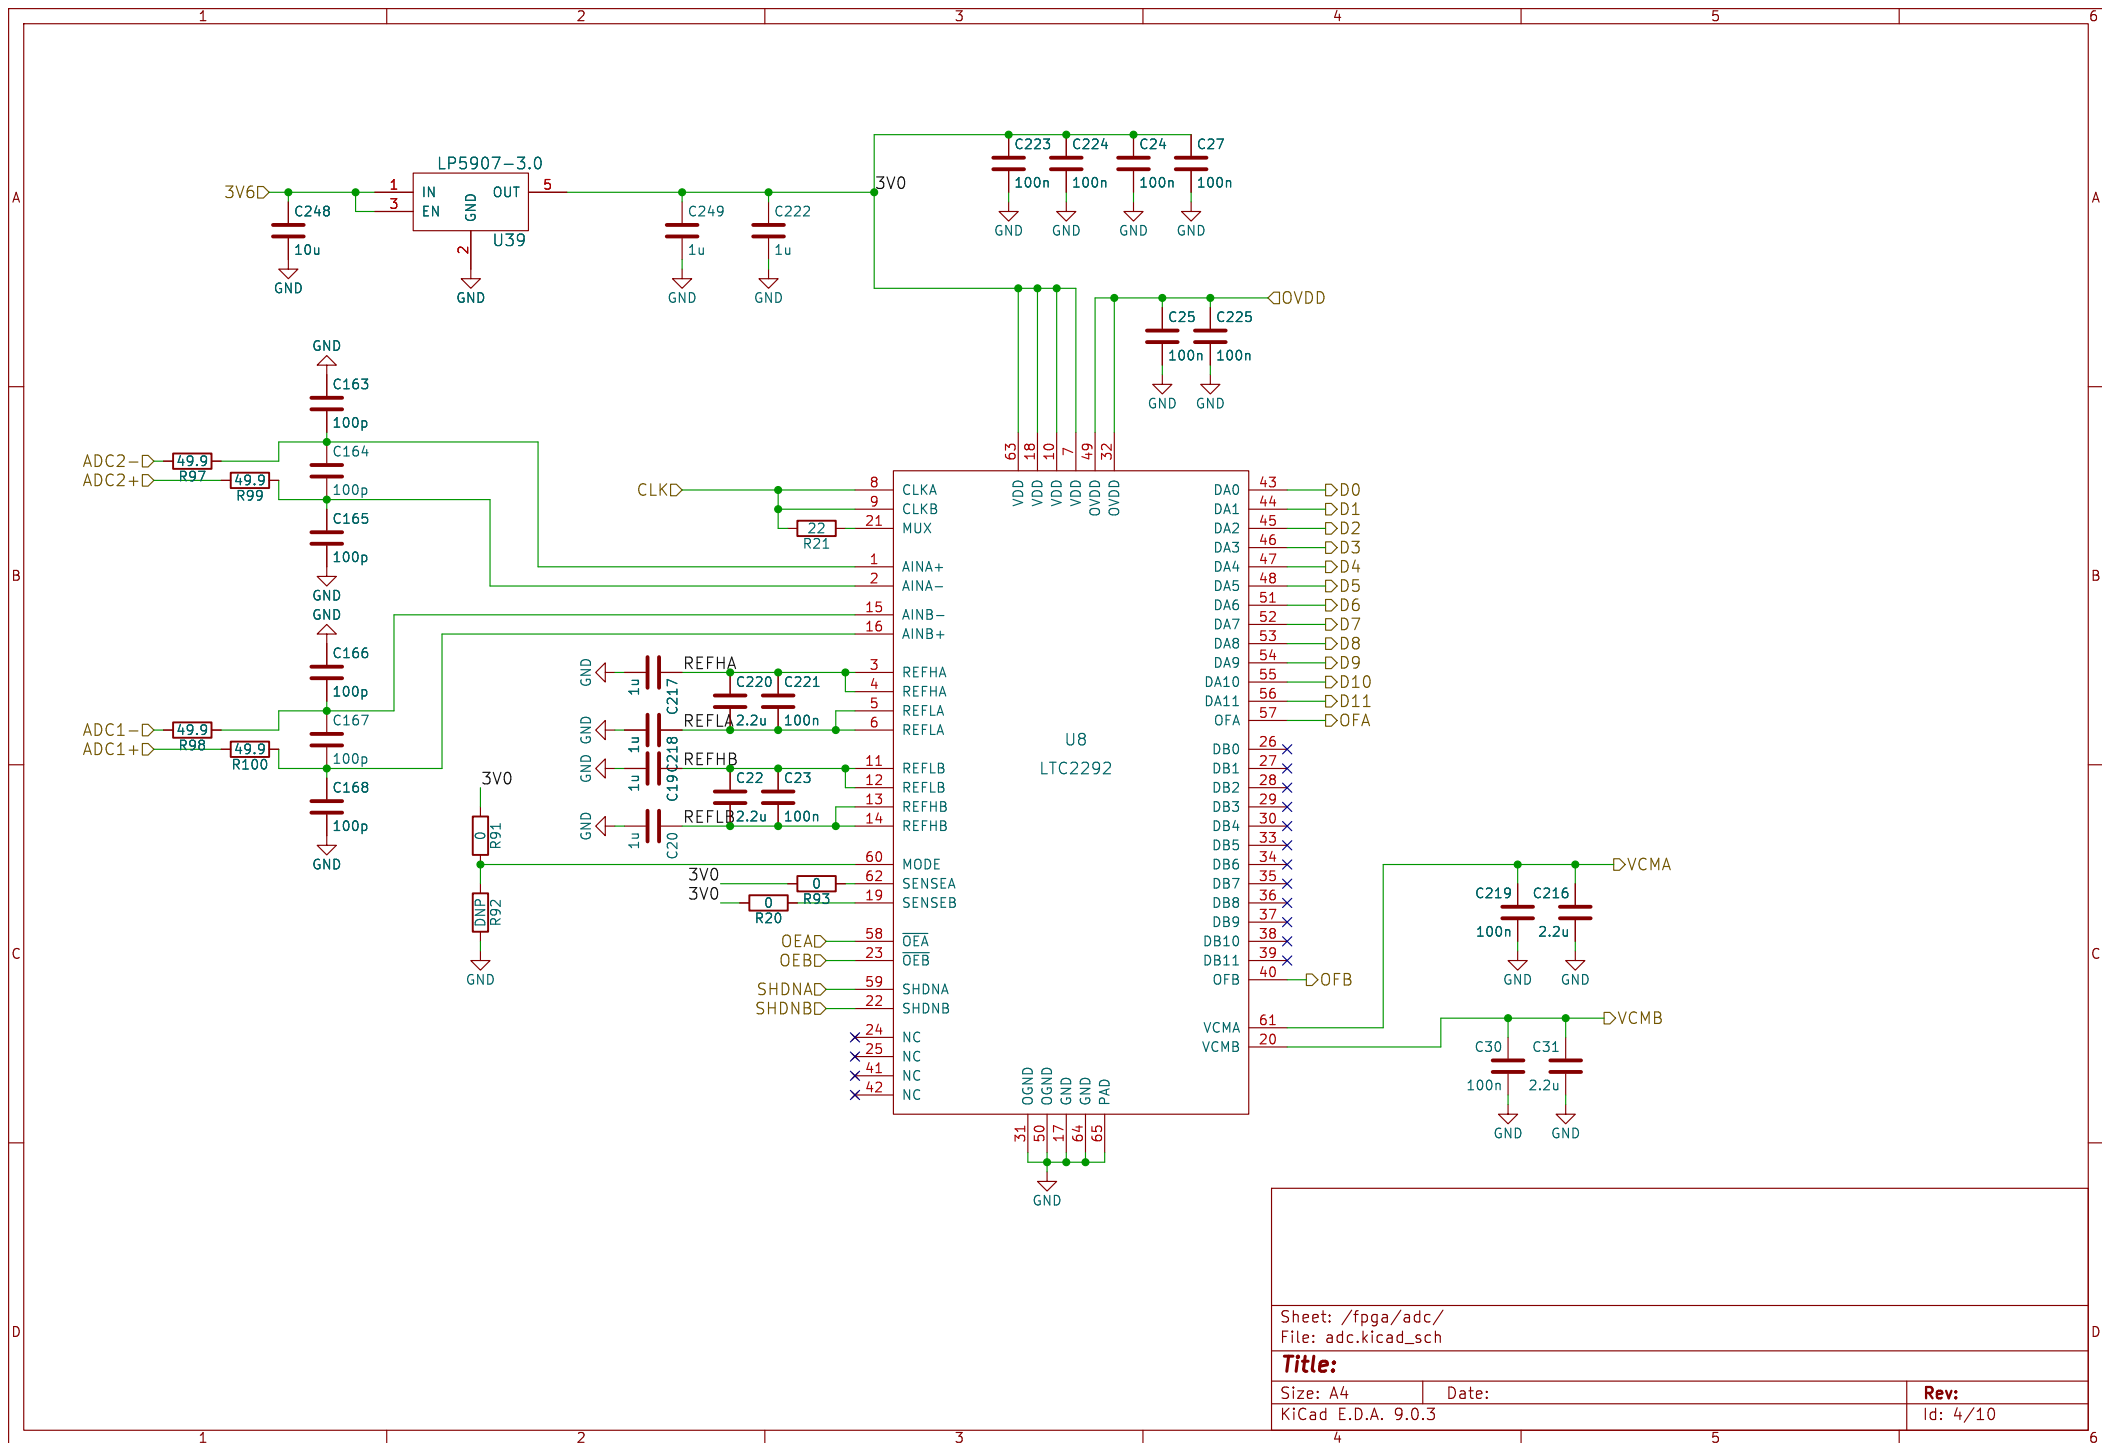

Sheet: /fpga/adc/
File: adc.kicad_sch

Title:

Size: A4

Date:






KiCad E.D.A. 9.0.3


Rev:


Id: 4/10


In the Artix-7 data sheet it states that the recommended power-on sequence is VCCINT, VCCBRAM, VCCAUX, and VCCO. 1v0 first 1v8 then 3v3 is the sequence so use power good

2A buck converter

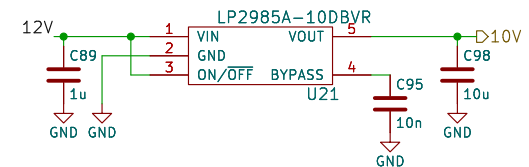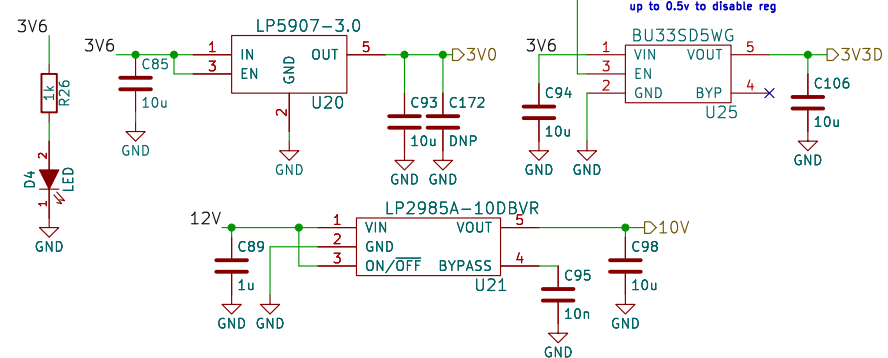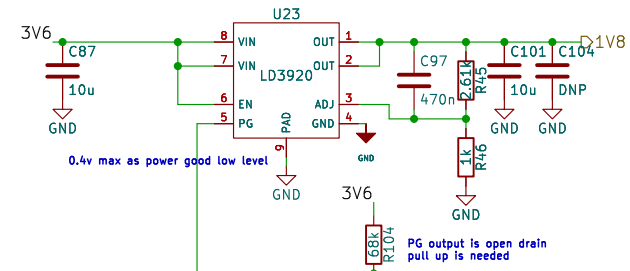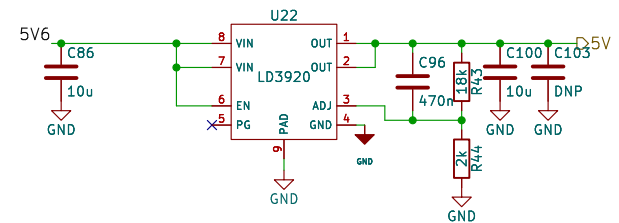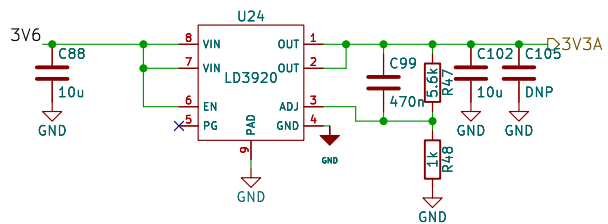


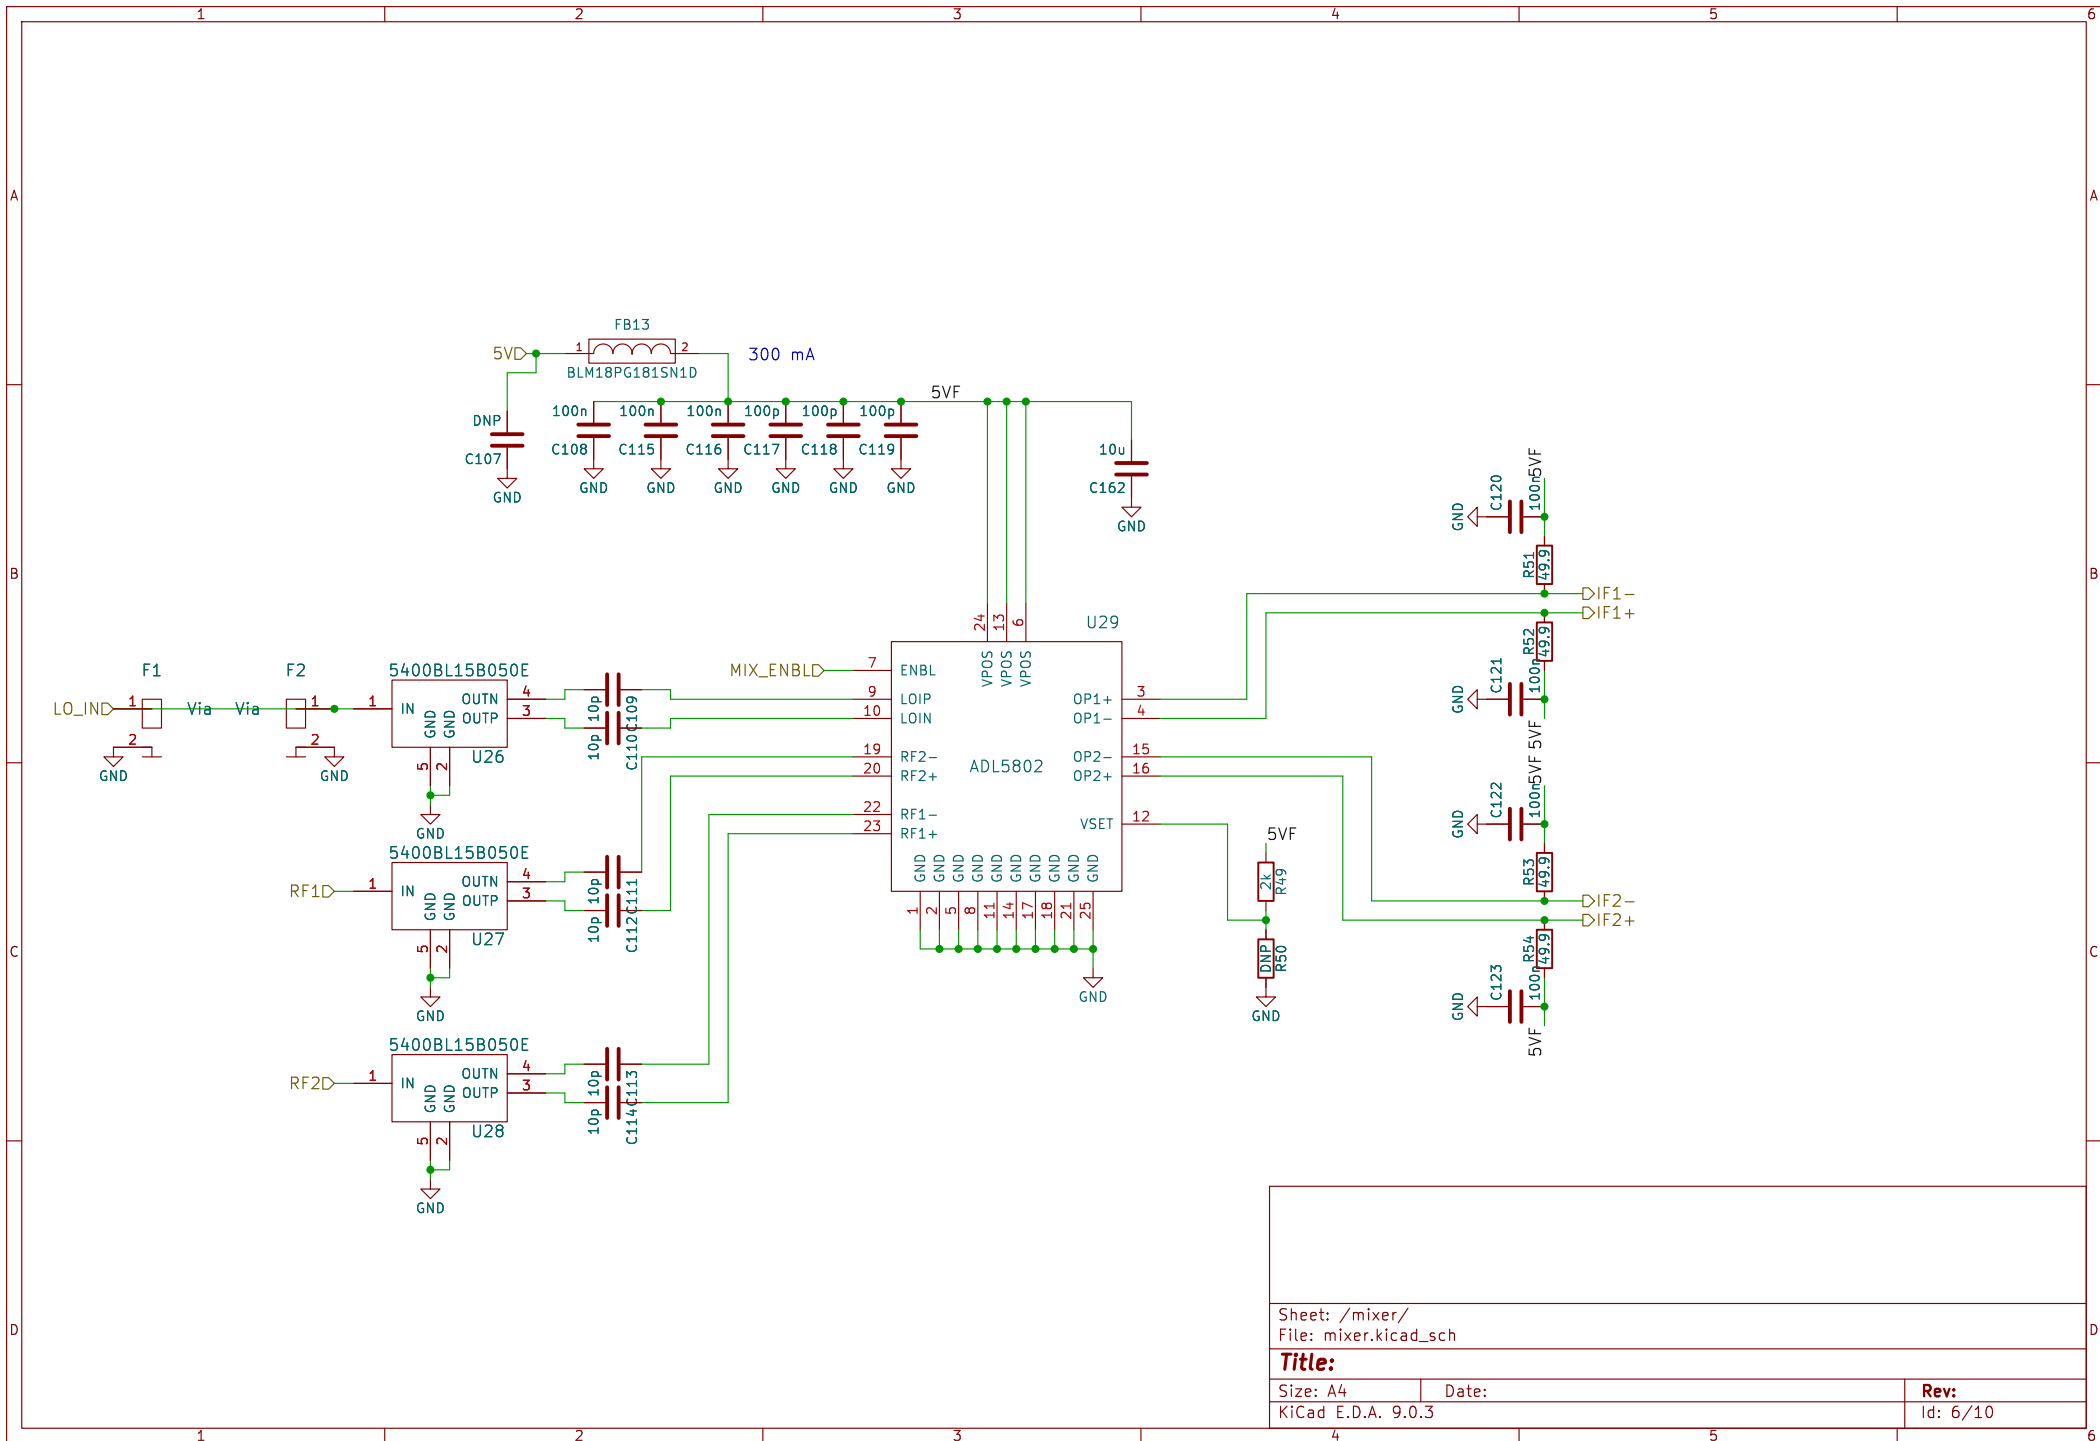

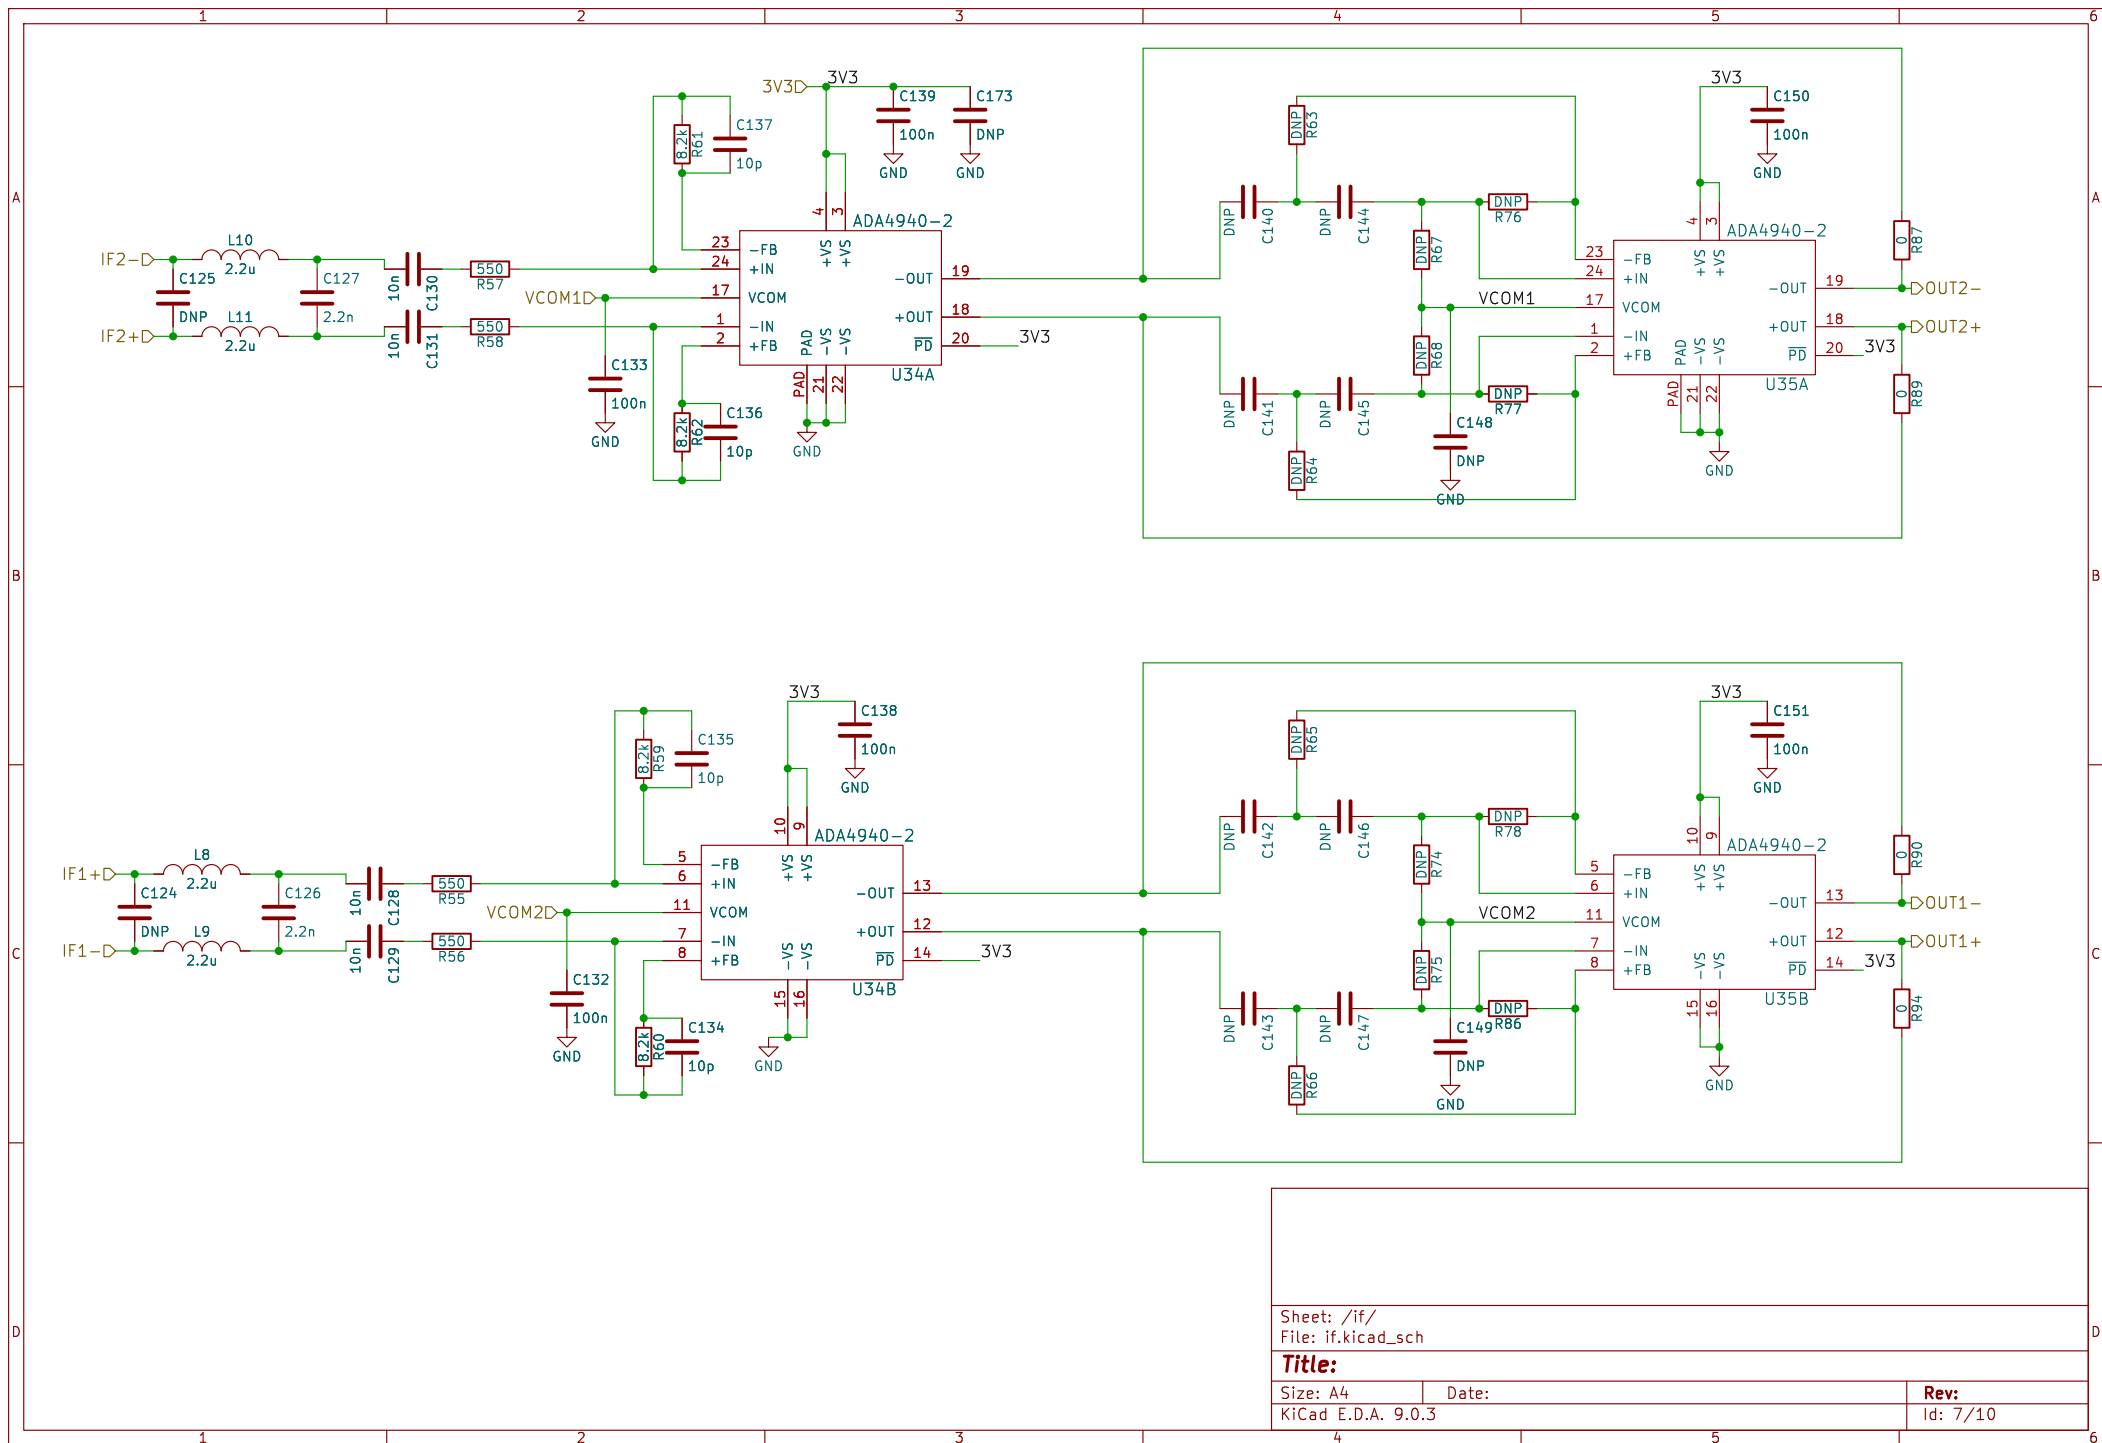

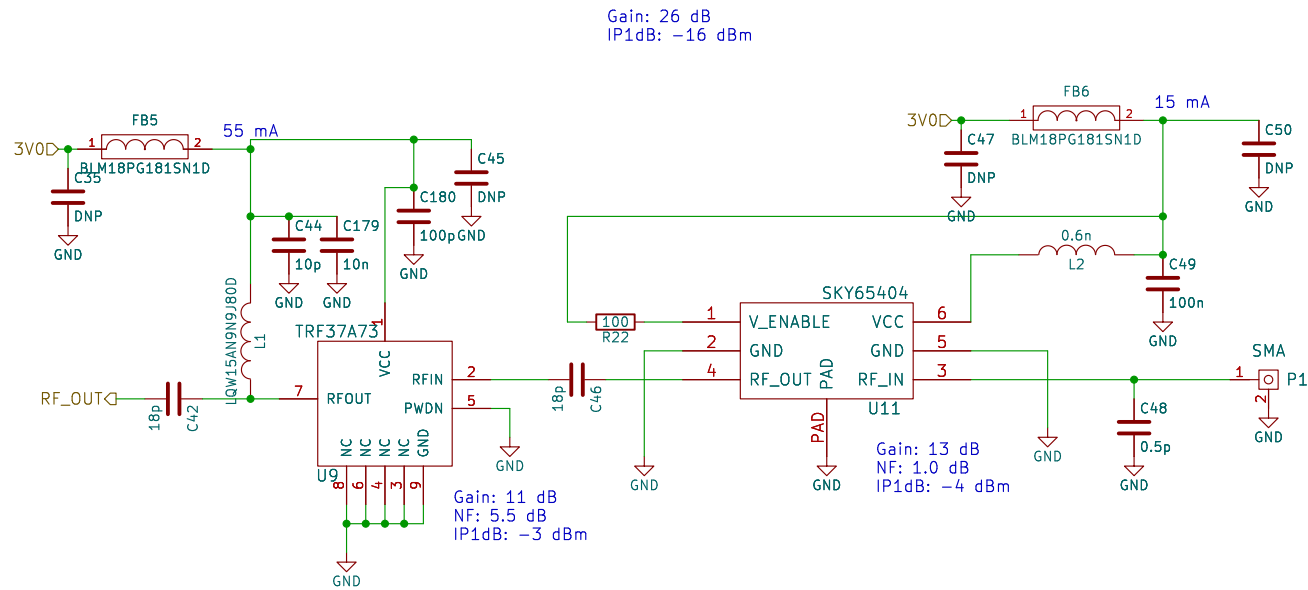

Sheet: /rx1/ File: rx.kicad_sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. 9.0.3	Id: 9/10	

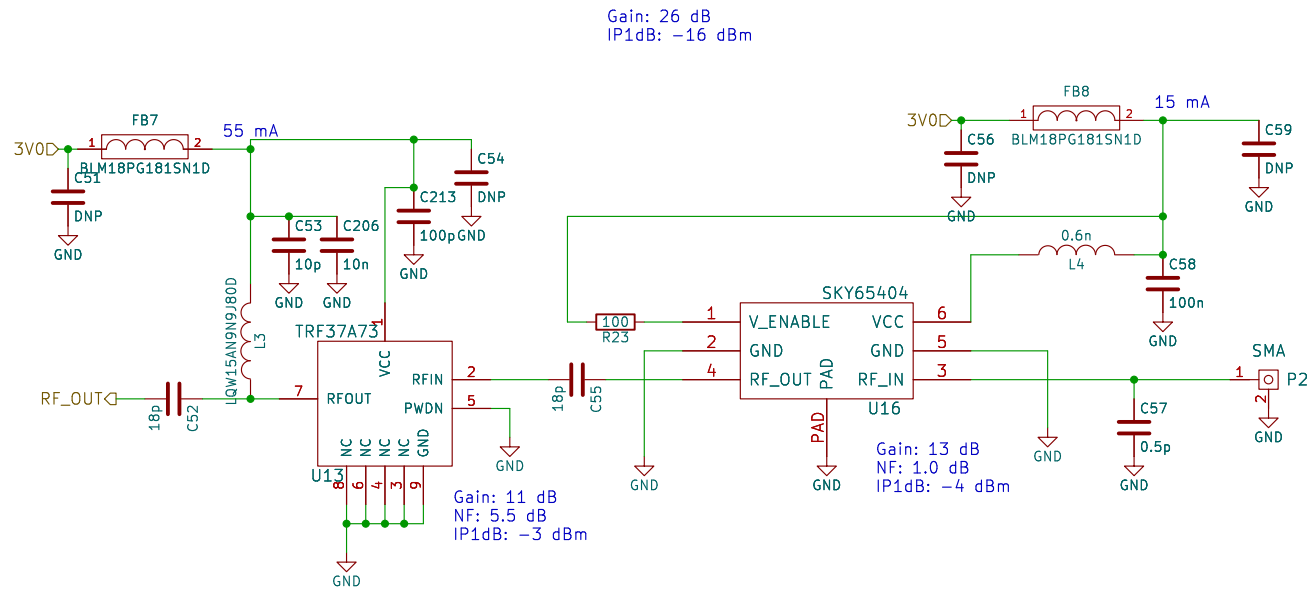

Sheet: /rx2/
File: rx.kicad_sch

Title:

Size: A4
KiCad E.D.A. 9.0.3

Date:

Rev:
Id: 10/10