


Instructions for using the SE "IO_Checkout_Tool"

This tool will generate:


- the CP's input files (*.i) with the IO test blocks for pushing them to the CP using the iccdvr.tsk.
- the batch files (*.bat) which can be run by double-click it to enable all ChildECB's.
- the Direct Access files (*.xml) which the IO test blocks to adding them to IDE.

Instructions:


1. Place the whole folder somewhere on the computer (desktop, or C drive, or D drive).
2. Double-click "IO Checkout Tool.zip" folder, then double-click "setup.exe." The "setup.exe" will run inside the zipped folder and install it on the computer.
3. Go to Start > IO Checkout Tool > IO Checkout Tool to start the tool.
4. The GUI below will appear.

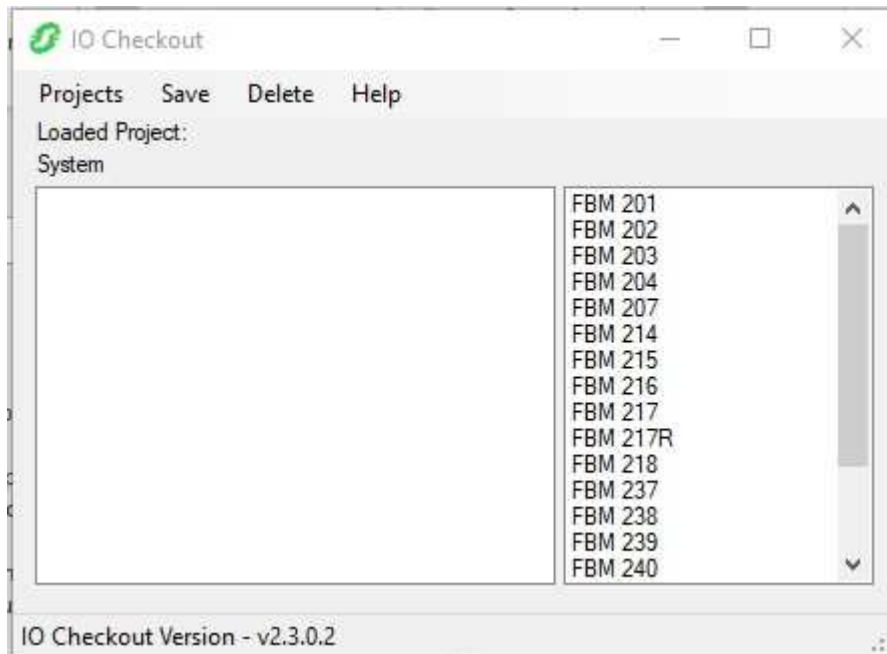


5. Click Projects, select New. New Project window will appear.

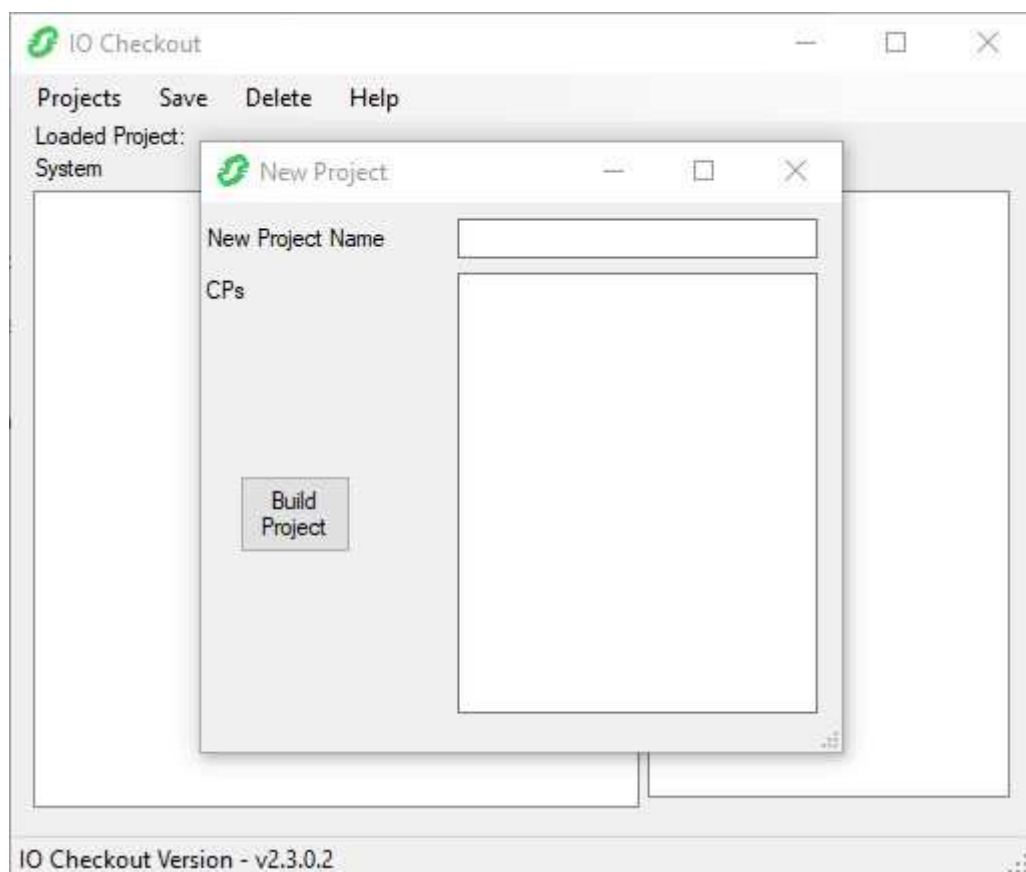


6. Enter new project name. Add all CP's into of the project here. Click Build Project to create the CP's and their associated ECB compounds to the project.

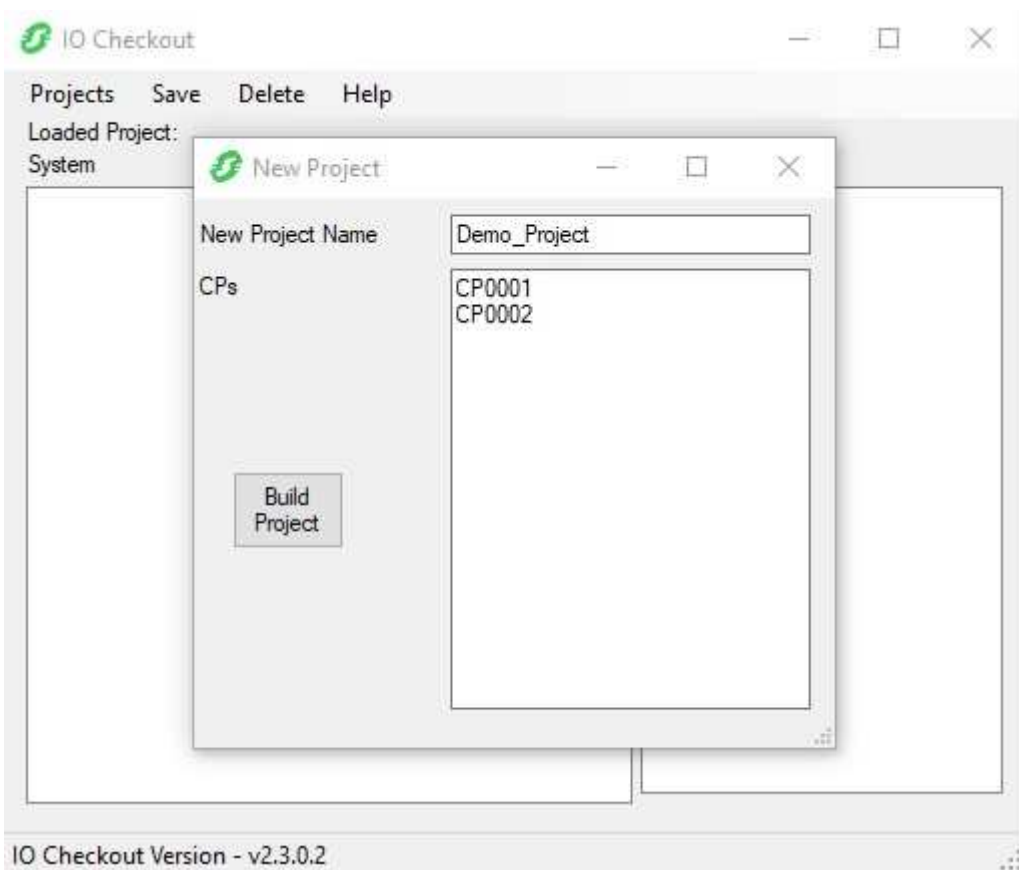


7. The CP's and ECB compounds are now created. Click Save to save the new project.

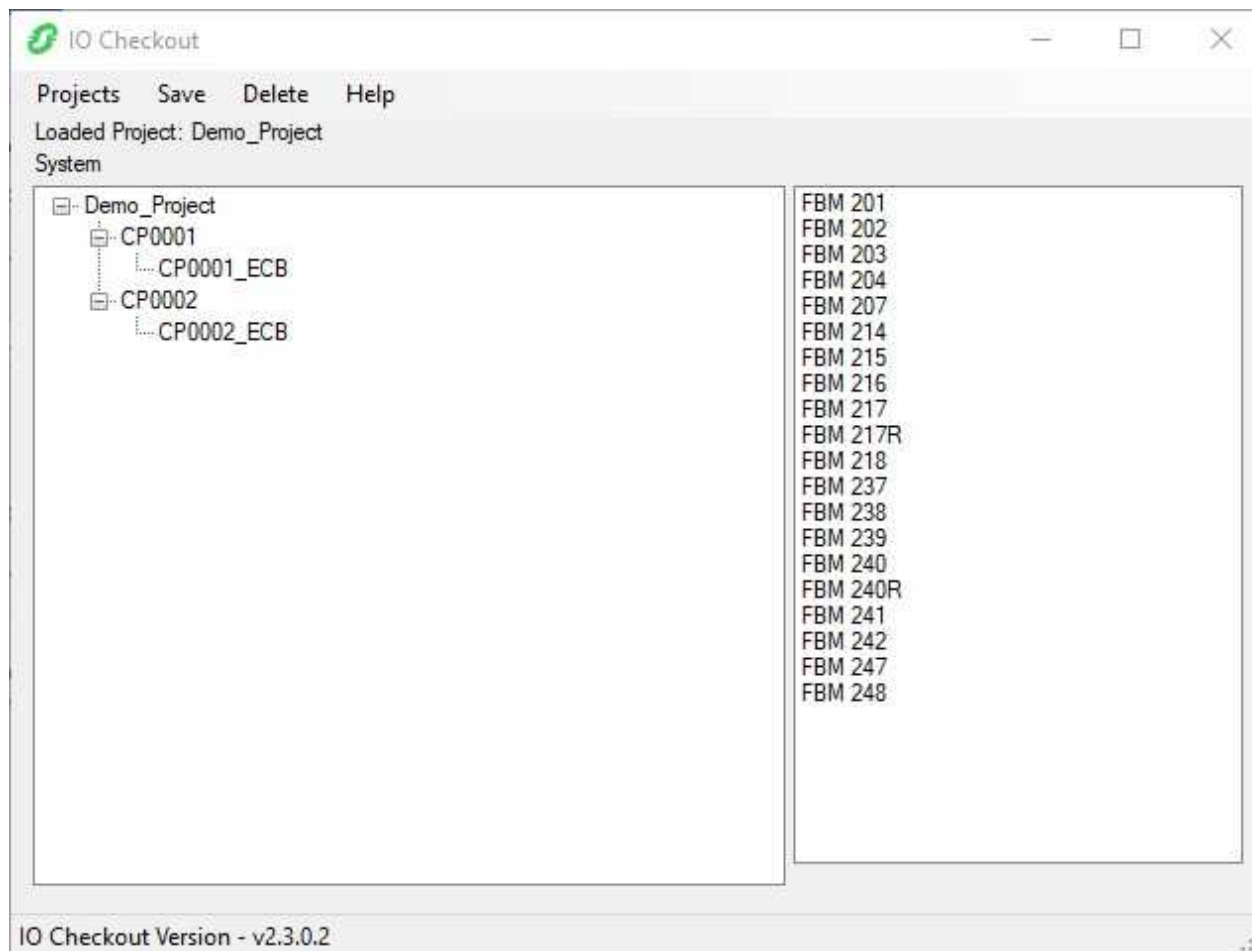

8. Click on the an FBM from the list on the right, drag and drop it to a CP on the left. Multiple FBM's can be added to the CP by single right-clicking the FBM's.

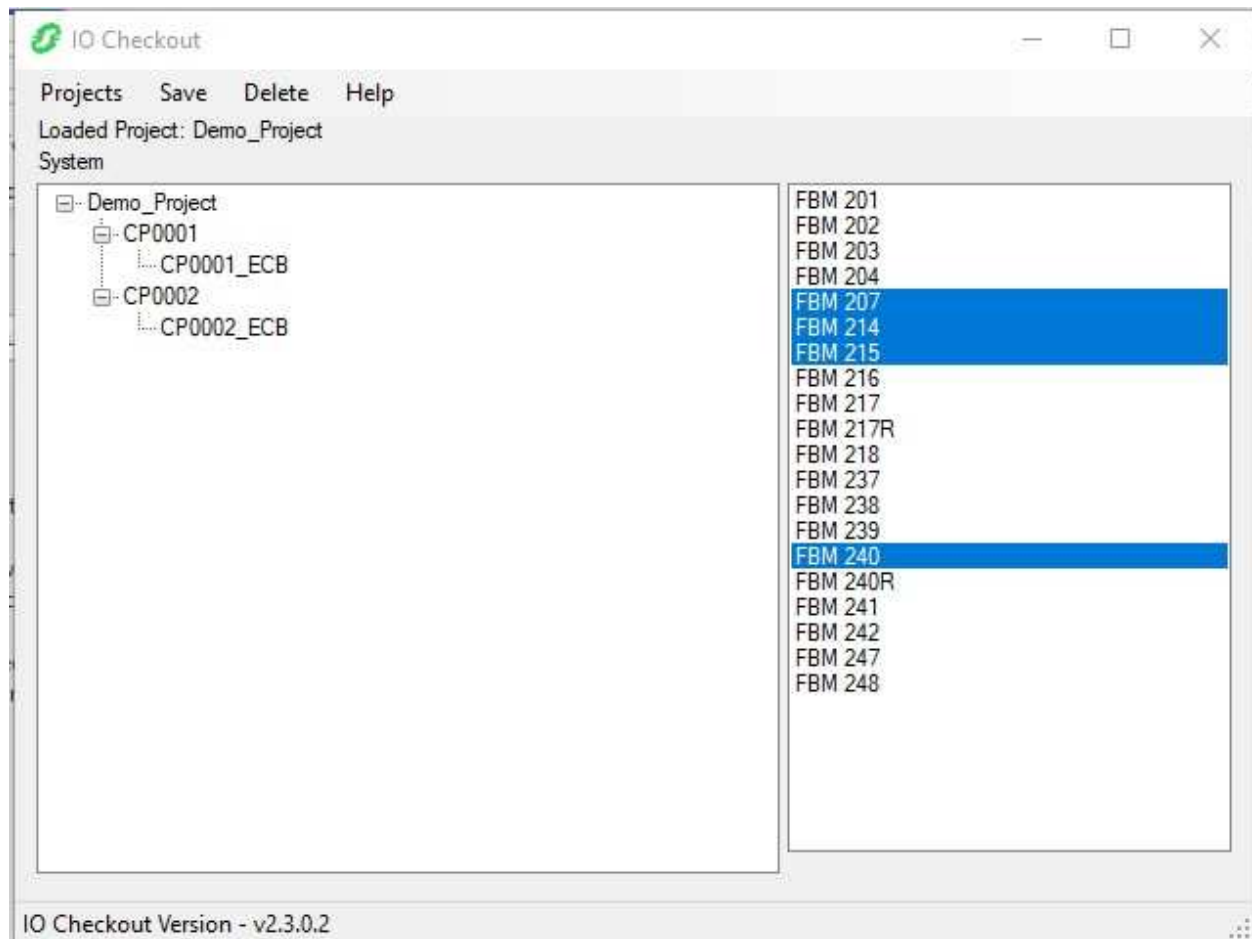

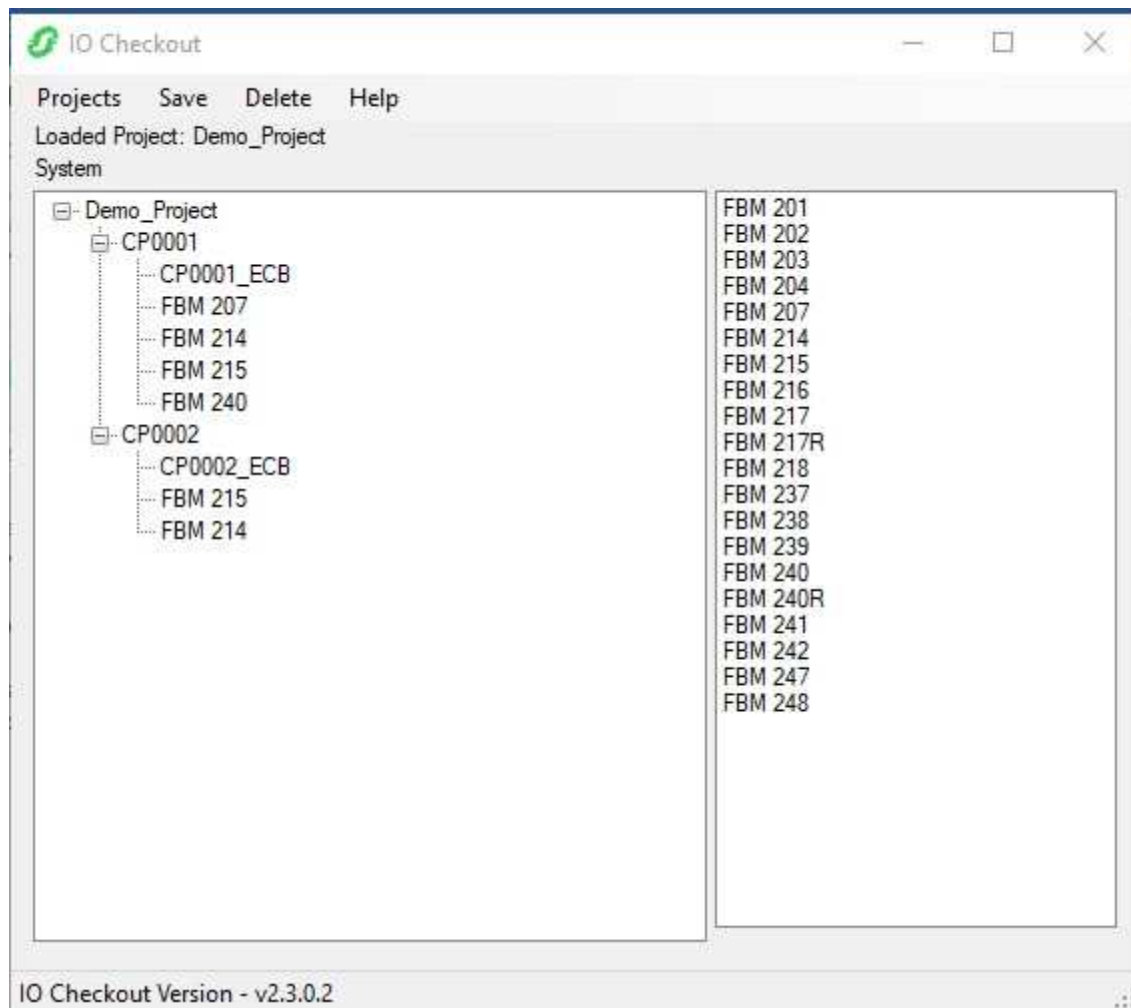

9. Right-click on each FBM then click Configure to open the FBM configure window. Enter FBM letterbug, select Channel 1 if using CP's other than FCP280. If using FCP280, then select the appropriate Channel the FBM is connected to. If making a mistake with the FBM assignment, then right click on that FBM and select Remove. Click Configure to assign the FBM letterbug and channel. Repeat the process to assign letterbug and channel to the remaining FBM's.

Demo_Project

CP0001

CP0001_ECB

010001

FBM 214

FBM 215

FBM 240

CP0002

CP0002_ECB

FBM 215

FBM 214

FBM 201

FBM 202

FBM 203

FBM 204

FBM 207



FBM 214

FBM Name

010002

Channel


1

Configure


FBM 242


FBM 247

FBM 248

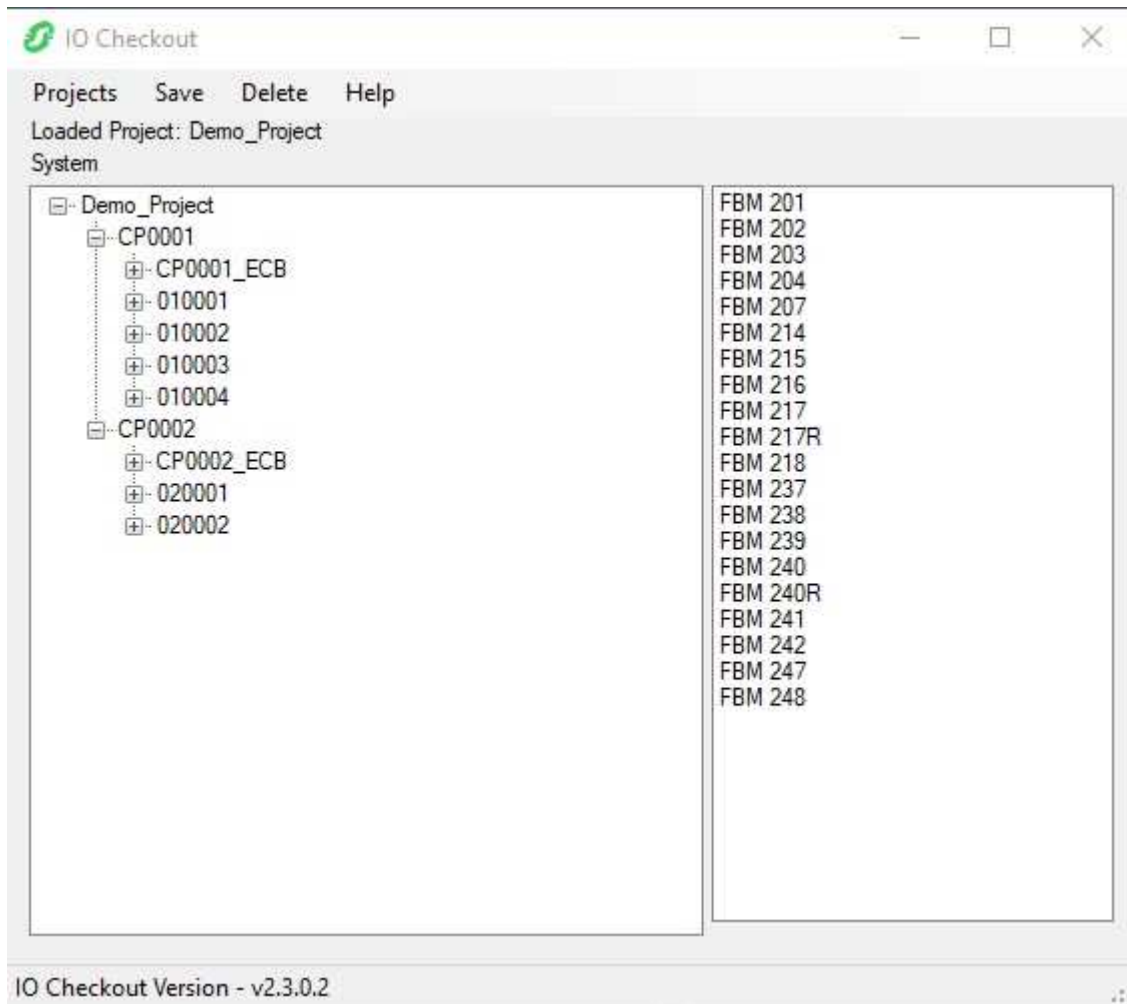

10. After configuring all FBM's to the CP's, right click on **either** the CP or project name and select Build. The CP's *.i and ChildECBEnable_<CP_Name>.bat and *.xml files will be created in C:\Users\<sesaID>\Documents\IO Checkout Files\<Project Name>. The File Explorer window will automatically open to this folder showing the *.i, *.bat, and *.xml files. Expand the FBM's will reveal the test blocks created automatically by the tool. Click Save to save the updated project.

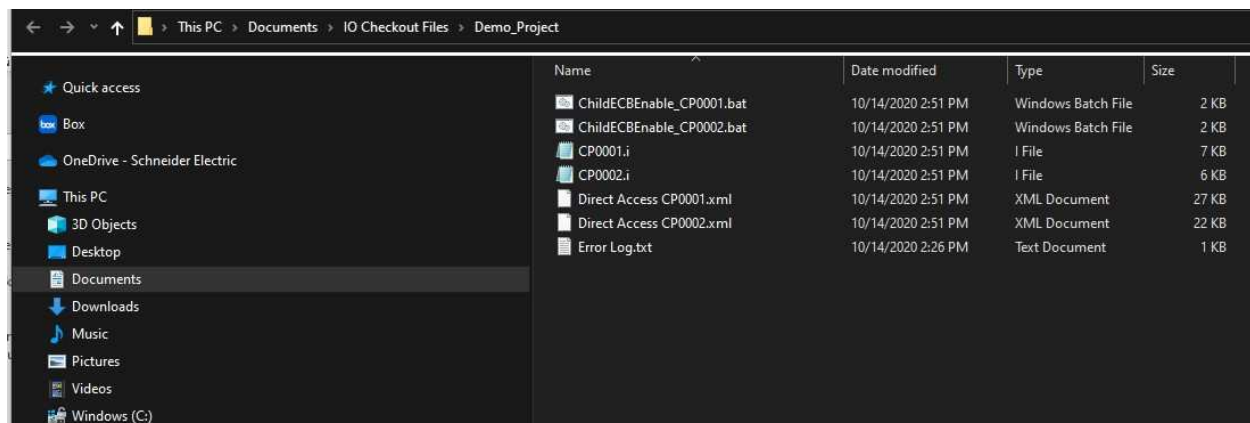

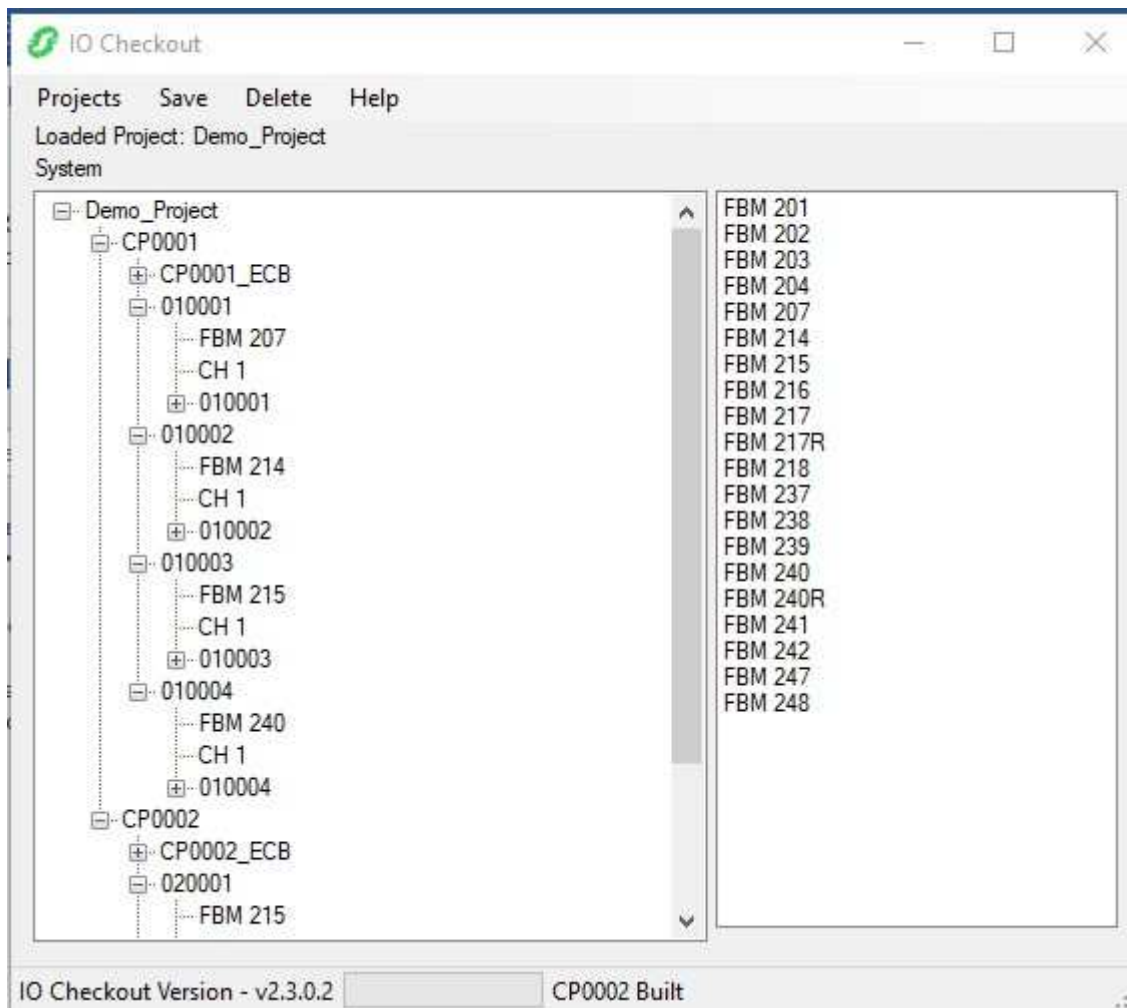

11. Copy all files (*.i, *.bat and *.xml) to the D drive of the IA station hosting the CP's. Start a Command Prompt in Admin mode and run iccdrvr.tsk (in /opt/fox/ciocfg/api directory) to add the input files to the CP's.

iccdrvr.tsk -i inputfile.i -o outputfile

Example: iccdrvr.tsk -i M1CP04.i -o cp0101.o

Or, use Direct Access and execute the *.xml files to add CP's and FBM's to the IDE.

12. From System Management, manually put the FCM's and parent ECB's on-line. Or double clicking each *.bat file to put all child ECB's on-line.