

iCE40 Hardware Checklist

January 2015 Technical Note TN1252

Introduction

When designing complex hardware using the iCE40TM device family (iCE40 LP/HX, iCE40LM, iCE40 UltraTM, iCE40 UltraLiteTM), designers must pay special attention to critical hardware configuration requirements. This technical note steps through these critical hardware requirements related to the iCE40 device. This document does not provide detailed step-by-step instructions but gives a high-level summary checklist to assist in the design process.

The iCE40 ultra-low power, non-volatile devices are available in four versions – LP series for low power applications, HX series for high performance applications, LM and Ultra/UltraLite series for ultra-low power for mobile applications.

This technical note assumes that the reader is familiar with the iCE40 device features as described in DS1040, iCE40LP/HX Family Data Sheet, DS1045, iCE40LM Family Data Sheet, DS1048, iCE40 Ultra Family Data Sheet and DS1050, iCE40 UltraLite Family Data Sheet. The critical hardware areas covered in this technical note include:

- Power supplies as they relate to the supply rails and how to connect them to the PCB and the associated system
- Configuration and how to connect the configuration mode selection
- Device I/O interface and critical signals

Power Supply

The VCC (core supply voltage) VCCIO_2, SPI_VCC and VPP_2V5 determine the iCE40 device's stable condition. These supplies need to be at a valid and stable level before the device can become operational. Refer to the family data sheets for voltage requirements.

Table 1. Power Supply Description and Voltage Levels

Supply ^{3, 4}	Voltage (Nominal Value)	Description
VCC	1.20 V	Core supply voltage
VCCIO_X	1.5 V to 3.3 V	Power supply for I/O banks
VPP_2V5	2.5 V	NVCM programming and operating supply voltage
VPP_FAST	Leave unconnected Optional fast NVCM programming supply	
SPI_VCC	1.8 V to 3.3 V	SPI interface supply voltage
VCCPLL ^{1, 2}	1.2 V	Analog voltage supply to Phase Locked Loop (PLL)


- 1. VCCPLL must be tied to VCC when PLL is not used.
- 2. External power supply filter required for VCCPLL and GNDPLL.
- 3. iCE40LM family devices do not have VPP_2V5 and VPP_FAST supplies.
- 4. iCE40 Ultra/iCE40 UltraLite family devices do not have VPP_FAST.

Analog Power Supply Filter for PLL

The iCE40 sysCLOCK™ PLL contains analog blocks, so the PLL requires a separate power and ground that is quiet and stable to reduce the output clock jitter of the PLL on device with external VCCPLL supply pins (PLL is not offered in some device/package combinations without the VCCPLL ball. Please refer to the data sheet and the device family Pin List to check the availability of VCCPLL ball.) The sysCLOCK PLL has the DC ground connection made on the FPGA, so the external PLL ground connection (GNDPLL) must NOT be connected to the board's ground. Figure 1 also includes sample values for the components that make up the PLL power supply filter.



Figure 1. Isolating PLL Supplies

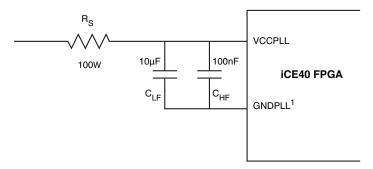

1. Note that GNDPLL should not be connected to the board's ground.

Configuration Considerations

The iCE40 LP/HX/Ultra/UltraLite devices contain two types of memory, CRAM (Configuration RAM) and NVCM (Non-volatile Configuration Memory). The iCE40LM device contains only the CRAM. CRAM memory contains the active configuration. The NVCM provides on-chip storage of configuration data. It is one-time programmable and is recommended for mass-production.

For more information, refer to TN1248, iCE40 Programming and Configuration.

The configuration and programming of the iCE40 LP/HX/LM/Ultra/Ultra/UltraLite devices from external memory is using the SPI port, both in Master and Slave modes. In Master SPI mode, the device configures its CRAM from an external SPI Flash connected to it. In Slave mode, the device can be configured or programmed using the Lattice Diamond® Programmer or embedded processor.

On the iCE40LP/HX and iCE40 Ultra/UltraLite family devices, the SPI_SS_B determines if the iCE40 CRAM is configured from an external SPI (SPI_SS_B=0) or from the NVCM (SPI_SS_B=1). This pin is sampled after Power-on-Reset (POR) is released or CRESET_B is held low or toggled (High-Low-High).

Table 2. Configuration Pins

Pin Name	Function	Direction	External Termination	Notes
CRESET_B	Configuration Reset input, active low.	Input	10 KOhm pull-up to VCCIO_2.	A low on CRESET_B delay's configuration.
CDONE	Configuration Done output from iCE40.	Output	Pull-up to VCCIO_2. The maximum Rpullup value is calculated as follows: Rpullup=1/(2*ConfigFrequency*CDONETraceCap)	
SPI_VCC	SPI interface supply voltage.	Supply		
SPI_SI	SPI serial input to the iCE40, in both Master and Slave modes.	Input		Released to user I/O after configuration.
SPI_SO	SPI serial output from the iCE40, in both Mas- ter and Slave modes.	Output		Released to user I/O after configuration.
SPI_SCK	SPI clock	Input/Output	10 KOhm pull-up to VCC_SPI recommended.	Direction based on Master or Slave modes. Released to user I/O after configuration.
SPI_SS_B	Chip select	Input (Slave mode)/ Output (Mas- ter mode)	10 KOhm pull-up to VCC_SPI in Master mode and a 10 KOhm pull-down in Slave mode.	Refer to TN1248, iCE40 Programming and Configuration, for more details.



SPI Flash Requirement in Master SPI Mode

Users are free to select any industry standard SPI Flash. The SPI Flash must support the 0x0B Fast Read command, using a 24-bit start address with eight dummy bits before the PROM provides first data. Refer to TN1248, iCE40 Programming and Configuration, for additional information.

LVDS Pin Assignments (For iCE40LP/HX Devices Only)

The differential inputs are supported only by Bank 3; however, differential outputs are supported in all banks.

Checklist

Table 3. iCE40 Hardware Checklist

	iCE40 Hardware Checklist Item	ОК	N/A	
1	Power Supply			
1.1	Core supply VCC at 1.2 V			
1.2	I/O power supply VCCIO 0-3 at 1.5 V to 3.3 V			
1.3	SPI_VCC at 1.8 V to 3.3 V			
1.4	VCCPLL pulled to VCC even if PLL not used			
1.5	Power supply filter for VCCPLL and GNDPLL			
1.6	GNDPLL must NOT be connected to the board			
2	Power-on-Reset (POR) inputs			
2.1	VCC			
2.2	SPI_VCC			
2.3	VCCIO_0-3			
2.4	VPP_2V5			
	VPP_FAST			
3	Configuration			
3.1	Configuration mode based on SPI_SS_B			
3.2	Pull-up on CRESET_B,CDONE pin			
3.3	TRST_B is kept low for normal operation			
4	I/O pin assignment			
4.1	LVDS pin assignment considerations			



Technical Support Assistance

e-mail: techsupport@latticesemi.com

Internet: www.latticesemi.com

Revision History

Date	Version	Change Summary
January 2015	1.5	Added support for iCE40 UltraLite.
June 2014	1.4	Added support for iCE40 Ultra.
		Updated Analog Power Supply Filter for PLL section.
		Updated Table 2, Configuration Pins. Changed VCCIO_2 to VCC_SPI in SPI_SCK and SPI_SS_B.
October 2013	01.3	Updated the Configuration Pins table.
		Updated Technical Support Assistance information.
December 2012	01.2	Power Supply Description and Voltage Levels table – corrected VCC nominal voltage.
September 2012	01.1	LVDS Pin Assignments text section – corrected description of differential input and output support.
	01.0	Initial release.