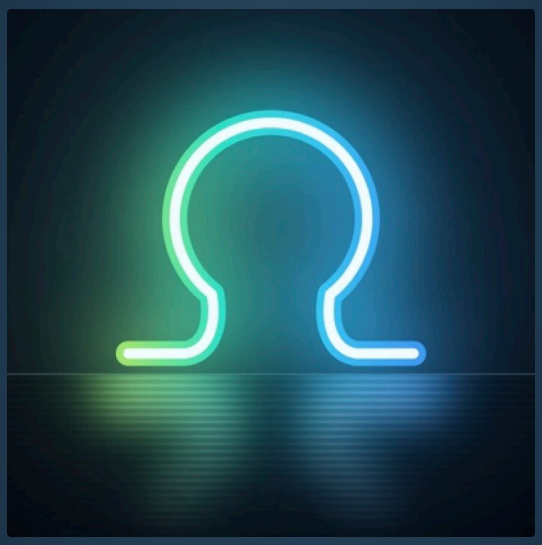


Omega Maximus

The editor maximum: from a street address to a priced design and a permit set, on the parcel and the aerial photo, in one place.

8	$1.77M	12 sheets
GUIDED BUILDS, PLANNED ON THE SERVER	INSTALLED, PRICED OFF THE DRAWING BY RUN	IN THE PERMIT SET, FROM THE SAME DRAWING

From an address to a permit set

Omega Maximus is the full site editor. You type an address, set the lot line from the county's parcel, mark what is in the way, and let a guided build lay out the equipment, then put it down where you want it. Run prices the drawing and works out the value stack and the IRR on the server. Outputs turns the same drawing into a permit set, a one-line, a bill of materials and a 3D view, and Save puts it in your workspace as a project.

This guide walks one site from start to finish: a warehouse on 51st Avenue in west Phoenix, 8.1 acres on Maricopa County's parcel layer.

1
Find
Type the address. The editor opens on the block around it, on the aerial photo.


2
Lot line
Show the county's parcel lines and use the parcel as the lot line.

3
Mark
Draw what is in the way as an obstruction. Builds keep clear of it.

4
Build
Pick a guided build. It comes in hand on clear ground: put it down where you want it.

5
Run
Installed cost, value stack and IRR, from the server.

6
Hand over
Permit set, one-line, BOM and 3D. Save it, send it to funding.

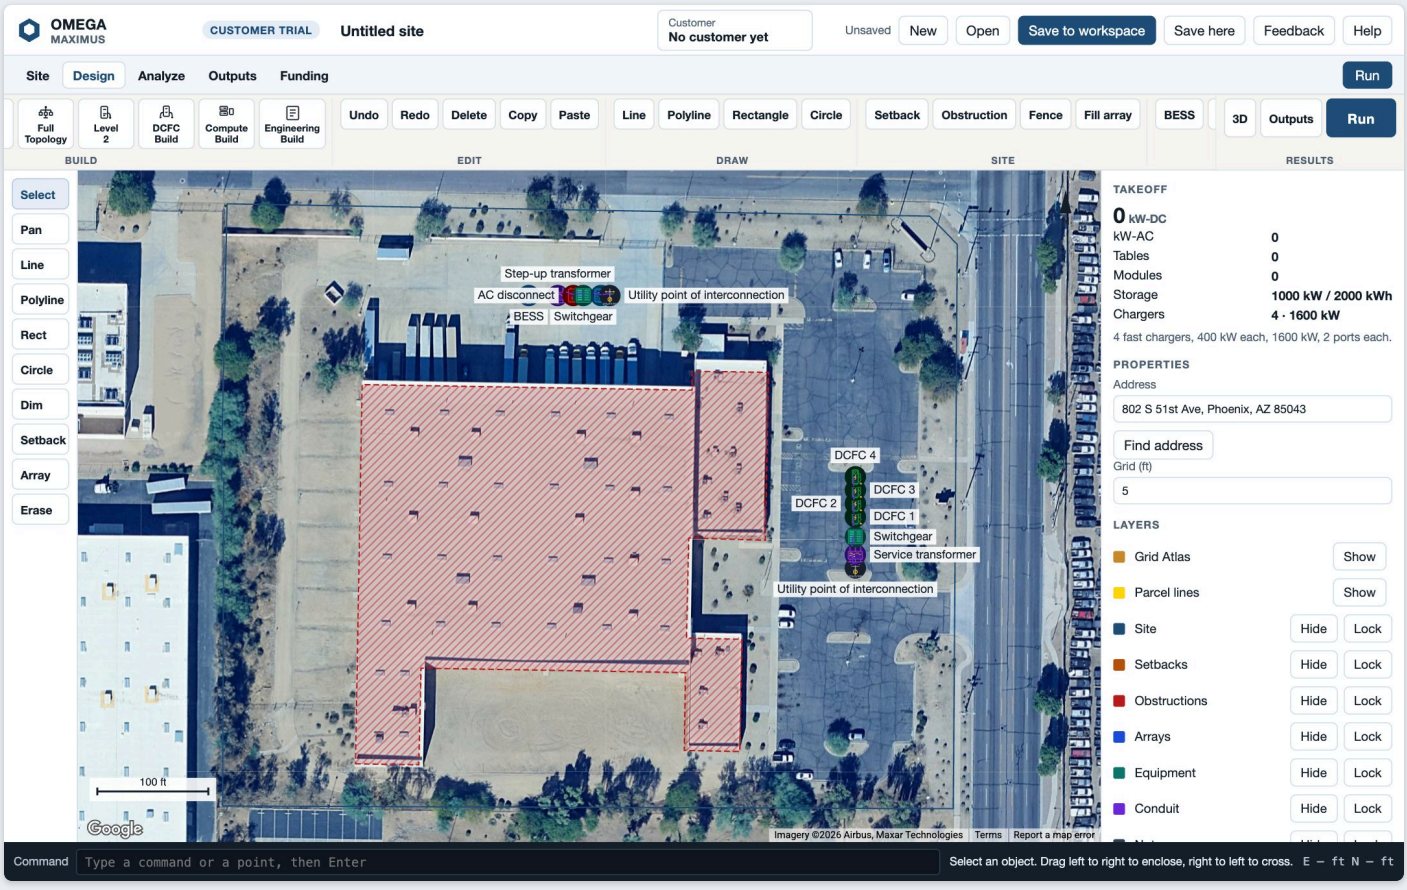

The site in this guide, built: the warehouse marked as an obstruction (red), a 1,000 kW / 2,000 kWh battery in the yard to the north, and 4 fast chargers (1,600 kW in all) on the lot along 51st Avenue. The takeoff on the right counts what is on the drawing. Imagery: Google satellite (Imagery ©2026 Airbus, Maxar Technologies).

Find the site


Open Omega Maximus from your workspace: **Design › Omega Maximus**, or go to **/editor-v2**.

New starts at the address

New opens a blank project on the **Site** tab with the cursor in **Site address**. Type the street address, or latitude, longitude, and press Enter or **Find on the map**.

The map moves there and opens on the block around the point, about 700 feet across, on the aerial photo, scaled to the latitude. The drawing is in feet from that point.

> Nothing is saved until you press **Save to workspace**. A drawing in progress is kept on this computer, and the editor offers it back if the tab closes.

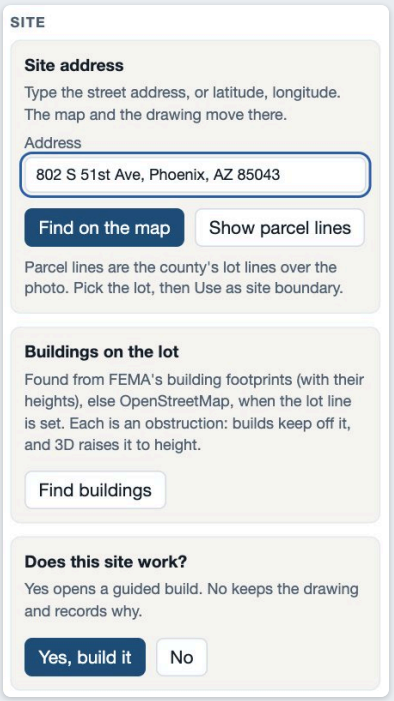

The Site tab.



Find on the map: the block around 802 S 51st Ave, Phoenix, AZ 85043, on the aerial photo (Google satellite (Imagery ©2026 Airbus, Maxar Technologies)).

Set the lot line

Show parcel lines, beside Find on the map, draws the county's lot lines over the photo and looks up the parcel under the site point. The card names it: **APN 10420052A · 8.1 acres · Maricopa County**. It never shows the owner. The lines come from 75 public county and state parcel layers, and from Regrid where a workspace has it.

Use as site boundary turns that parcel into the drawing's lot line and zooms to it. If the address point is not on the lot you want, move the map until that lot is in the middle and press **Look up at the map centre**.



Parcel lines on (yellow), and the card for the parcel under the address.



Use as site boundary: the lot line (blue), 8.1 acres, and the view on the lot.

> An assessor's line is a tax map, not a survey. The card and the status bar both say so: confirm it before you design to it.

Mark what is in the way

A guided build cannot see the photo. Draw anything it must not sit on with **Obstruction** in the Site group: click its corners, and Enter closes it. A building, a pond, an easement. **Setback** and **Fence** draw the other limits.


The command line under the drawing takes points as well as clicks: **x,y** in feet from the site point, **@dx,dy** from the last point, or a distance and an angle (**40<90**). The warehouse here was traced that way, from its outline in OpenStreetMap.




The warehouse marked as an obstruction (red): no build will be placed on it. Imagery: Google satellite (Imagery ©2026 Airbus, Maxar Technologies).

Pick a guided build

Does this site work? on the Site tab asks the first question. **Yes** opens the guided builds. **No** keeps the drawing and records what is in the way, in your words. Every build is also on the ribbon, on every tab.

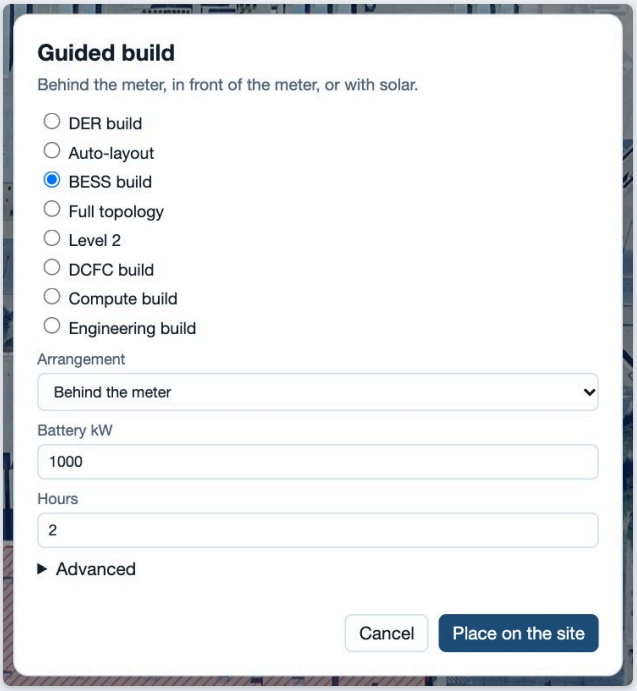

Yes, build it: the eight builds.

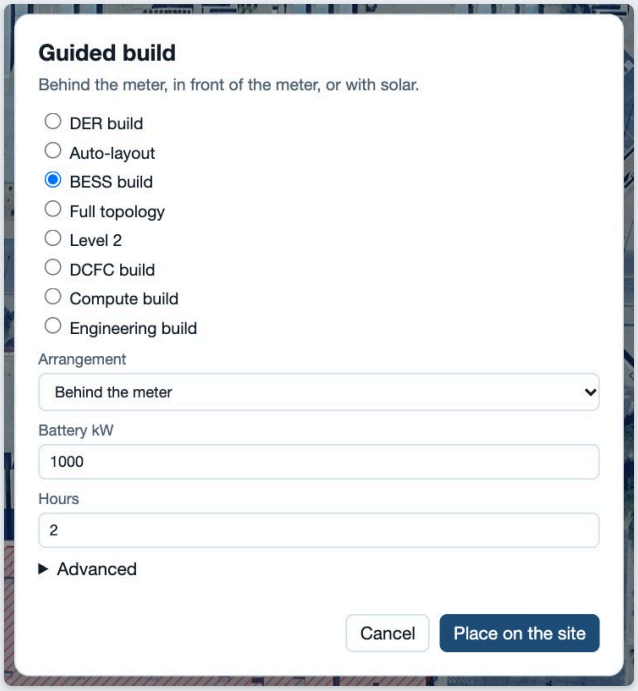


BESS build: the arrangement, the battery kW and the hours.

DER build	Solar, wind, or gas blocks and a collector.
Auto-layout	Fill the parcel with solar tables.
BESS build	Behind the meter, in front of the meter, or with solar.
Full topology	From the point of connection out to the utility.
Level 2	A row of Level 2 stalls and the panel that feeds them.
DCFC build	Fast chargers, a transformer, and the service.
Compute build	A data-center power chain. Radial unless you change it.
Engineering build	Interconnection, gear, battery, and the EMS.


The plan is made on the server from the lot line, the obstructions and the numbers in the form. Nothing about how a build is laid out runs in the browser.

Put it where you want it


Place on the site hands you the build, laid out as the server planned it, on the clear ground nearest the middle of your view: inside the lot line, clear of the obstructions and of anything already placed. It follows the mouse a grid step at a time. **R**, or a right-click, turns it a quarter turn. A **click** puts it down where it is; **Enter** puts it on the clear spot it was offered; **Esc** puts it away and nothing is drawn.

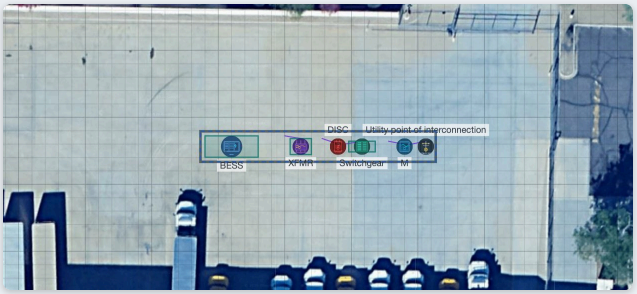


In hand: the BESS build on the clear ground it was offered in the yard north of the warehouse (dashed).

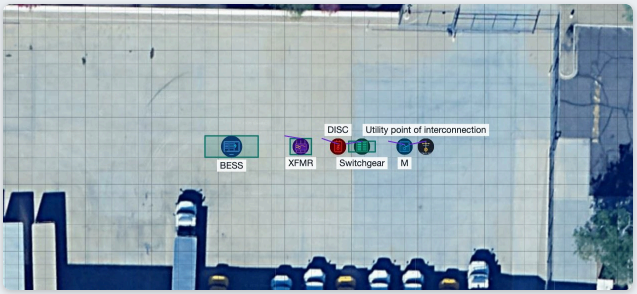

Enter put it there: BESS, step-up transformer, AC disconnect, switchgear, revenue meter and utility point of interconnection, with the conduit between them.

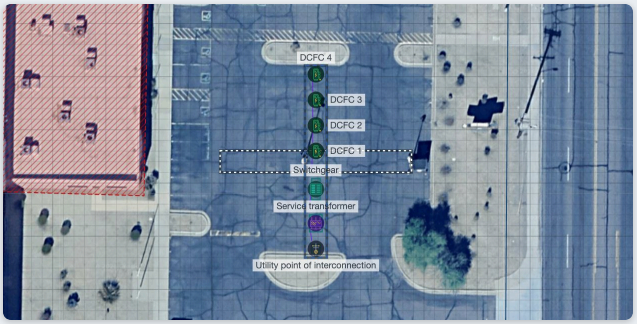

The DCFC build moved by hand to the frontage on 51st Avenue and turned with R to run along it. The faint outline is the spot it was offered.

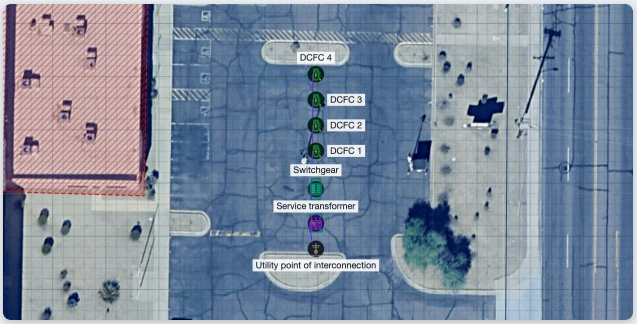

A click put it down: Utility point of interconnection, service transformer, switchgear and DCFC chargers.

> The outline turns **red** when a unit would stand on something already drawn: a building, an array table, other equipment. You can still put it down, and the status bar says so: drag it clear, or **Undo**.

Put down, the build is one group and selected: drag it to move it. **View › Icons**, on here, draws each unit as Site Map's icon on its footprint, with its name beside it, in short form (XFMR, SWGR, POI) when space is tight; no name is drawn over another. Aerial imagery: Google satellite (Imagery ©2026 Airbus, Maxar Technologies).

Run

Run prices the drawing on the platform's cost engine, the same one Site Map's Run uses, and works out the value stack and the IRR on the server. Nothing is priced in the browser. The answer opens in **Analyze**.

What it costs

Installed estimate **$1,769,735**:

Battery storage	$861,000
EV charging	$744,000
Site equipment	$3,850
Contingency	$160,885


What it earns

Demand charges avoided	$5,448 / yr	COMPUTED
Time-of-use energy (net of losses)	$367 / yr	COMPUTED
Utility battery programme (BYOD)	$40,500 / yr	PLANNING


Gross **$46,315** a year; the owner keeps **$34,165**. On these streams the project does not return its cost within the term, so Run shows **no IRR** and says why, with the NPV ($-1,430,147) and a simple payback of 36.3 years beside it.

> Every figure is a screening estimate, not a quote, and says so. Each stream is marked **computed** (from the tariff), **published** or **planning** (a lead until the programme's own terms replace it). The tariff is a planning rate for the ZIP until the customer's bill is imported. Change the drawing and the results are marked stale: Run again.

Project Intelligence scores the project from the drawing: **HOLD & DE-RISK · 39 / 100** here, with what is still missing listed under it.

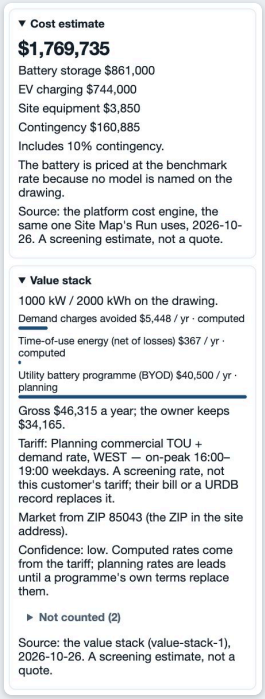

Analyze: the cost estimate and the value stack.

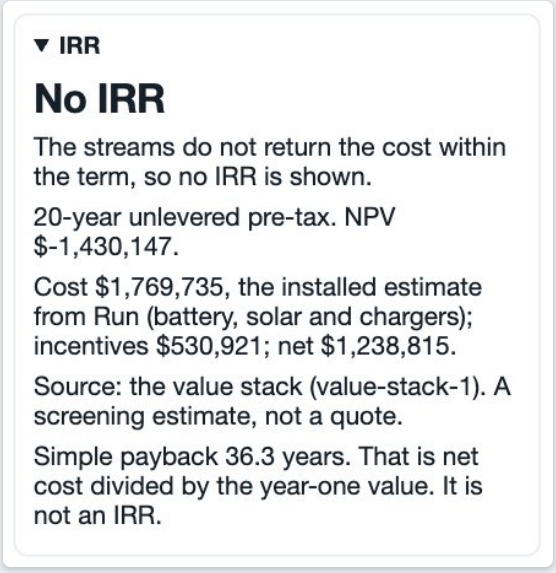


Analyze: the IRR, or why there is none.

Outputs

Outputs turns the same drawing into what you hand over:


Permit set + plot plan	12 sheets: cover, site plan, equipment, single-line, schedules, placards, grounding and the checks. Preview, PDF or DXF.
One-line	Sheet E-002 on its own, from the placed equipment.
Bill of materials	The placed equipment and conduit, and **Request a quote in Logic**.
Drawing file	PNG, PDF or DXF of the linework; the whole project as a file, and Import to open one.
Checks	What the set could not fill, to review. A blank stays blank; nothing is invented.
Hand off	The same saved project, opened in OMEGA Prime, in Logic, or pushed to funding.

Under **Electrical and sheet details** you add the utility, the service and the names that go in the title block; under **Sheet size and aerial photo**, the paper and whether the photo sits under the site plan.

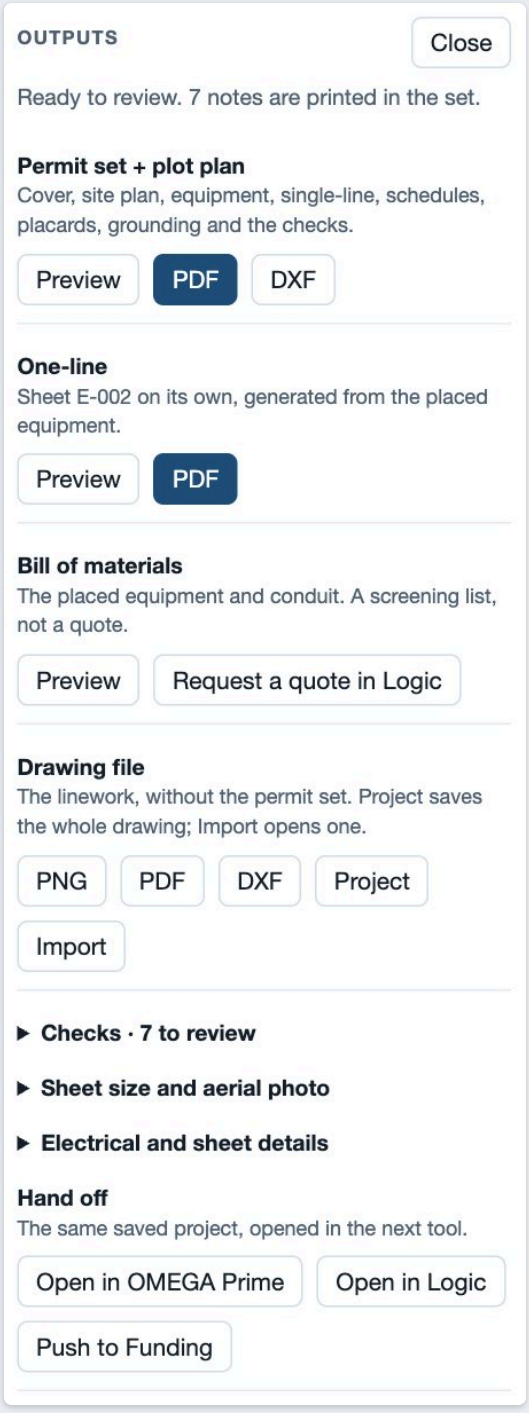


The Outputs panel.

The permit set, the one-line and 3D

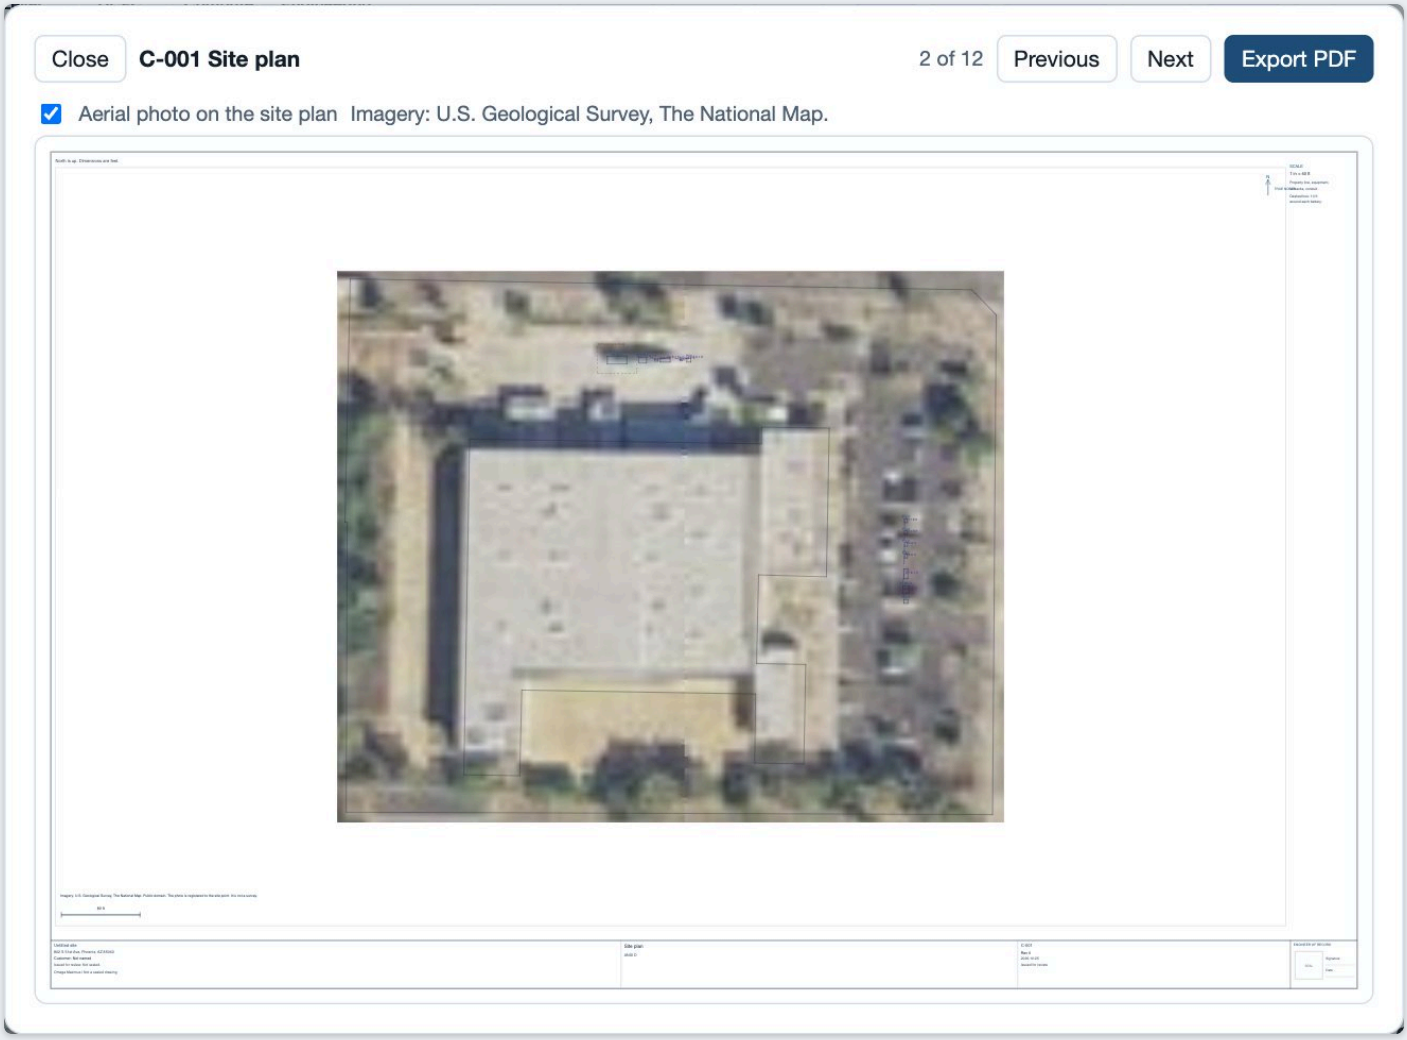

The permit set's site plan, on the USGS photo. Previous and Next page through the sheets; Export PDF writes the whole set.

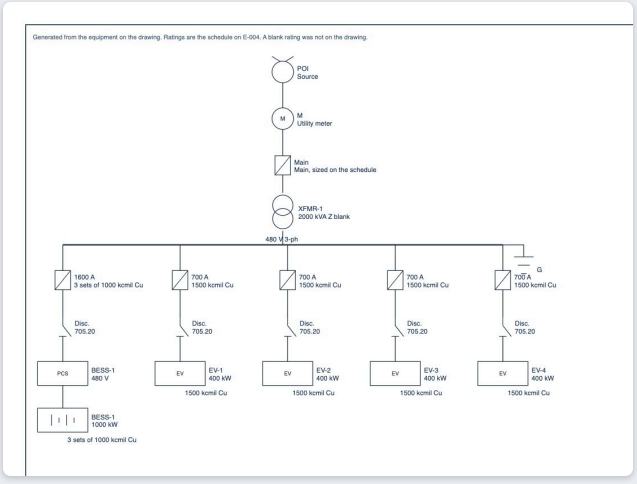


The one-line (E-002), drawn from the placed equipment.



3D: the site in place on the photo. Close returns to the plan.

Save, reopen and fund


Save to workspace stores the drawing as a project in your workspace, under the name in the header. A priced Run goes with it: the installed estimate becomes the project's capex ($1,769,735 here), with the battery size, the incentives and the year-one revenue, so the workspace shows the same figures Run did. **Open** lists the workspace's projects. **Save here** keeps a copy on this computer only.



Saved to workspace.

The **Funding** tab scores the project from the drawing, with the same score the financing marketplace uses, and says whether it clears the pursue line. **Send to funding** submits it to the marketplace, after you confirm on the page.

> The drawing is the source of truth. Run, Outputs and Funding all read the one drawing: change it, and Run again before you hand anything over.

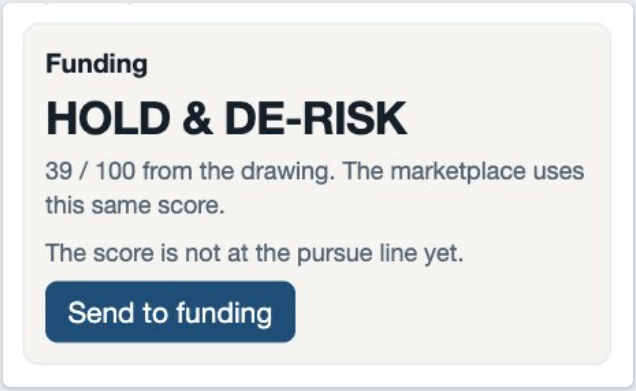


The Funding tab.

Plan and price

Omega Maximus is a module: **$1,299 a month**. A workspace holds it when:

- its package includes Omega Maximus;
- it is on an Enterprise plan or a trial;
- a Field or Pro plan adds it with **Opt in** on the Modules page, billed monthly beside the plan.

A workspace without it sees the price and **Opt in** instead of the editor. Site Map stays on every plan, and every Maximus door on the server asks the same question, so nothing is open in the editor that the server would refuse.

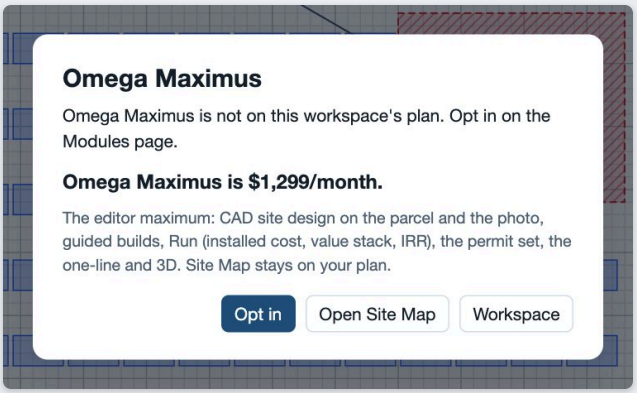

What a workspace without Omega Maximus sees.

What it is not, yet

- Every figure is a screening estimate, not a quote.
- The site screen is not in Run yet, so Project Intelligence leaves out the site-quality points.
- Cut and fill are reported only where USGS elevation loads.
- Fleet operations and the customer value-stack report are not built.