

---

# FLAMMABILITY PART 1

Clint Guymon, PhD PE

Brigham Young University

1<sup>st</sup> Jan, 2025

created in  Curvenote

---

**Keywords** Spiritual Safety, Process Safety, Chemical Engineering, Risk Assessment

## Learning Outcomes

- Understand characteristics of fires and explosions
- Understand key parameters of flammability like LFL, UFL, etc.
- Define the fire triangle and explain how to use it to prevent flammable mixtures
- Characterize the flammability of gases, liquids, and dusts
- Estimate flammability parameters

## Reading

- Foundations of Spiritual and Physical Safety: with Chemical Processes; Chapter 6, Sec. 2.2

Flames are a common hazard in many industries. Flames are all around us and they serve purposes from conversion of chemical bond energy to heat, propulsion of rockets, to cooking in our homes. These scenarios are planned for and designed to safely occur. However, there are many scenarios where flames are not planned for and can cause catastrophic damage.

Fires cause billions of dollars in damage every year. In the United States alone, the National Fire Protection Association (NFPA) estimate that in 2022, local fire departments responded to an estimated 1.5 million fires. Those fires caused 3,790 civilian fire deaths and 13,250 reported civilian fire injuries. The property damage caused by these fires was estimated at \$18 billion. [See the NFPA Site Here for Further Information](#)

## 1 Fires and Explosions

The below pie chart shows the fraction of fires per category for the approximately 4000 people that died in 2022. Notice that the majority of fires are residential fires.

Industrial loss of life and property is also due primarily to fires and explosions.



Figure 1: Chemical Processing Fire Example Image. Credit: <https://jenikirbyhistory.getarchive.net/media/fire-glowing-hot-372895>

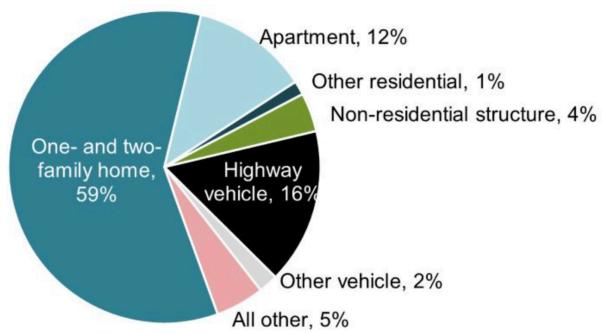


Figure 2: Fire Deaths by Category Pie Chart

## 1.1 What is a fire?

A rapid exothermic reaction. Or in other words, a fuel reacts with an oxidizer once ignited to produce a thermodynamically favored chemical change. Heat, light, and sound can be produced. The heat can be used to sustain the reaction, and the light and sound are often the first signs of a fire.

## 1.2 Hazardous Effects of Fires and Explosions

- Thermal radiation
- Asphyxiation
- Toxic gases
- Blast waves
- Fragmentation

These effects can cause damage to property, injury, and loss of life.

## 2 How do fires start?

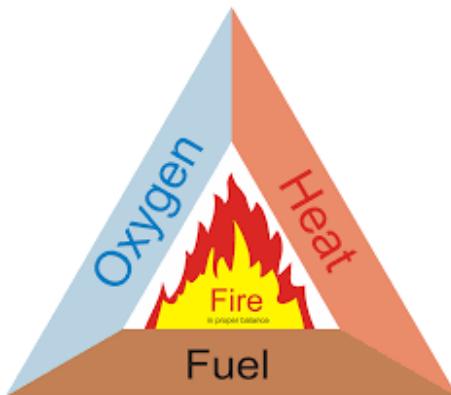


Figure 3: Fire Triangle. Credit to [https://commons.wikimedia.org/wiki/File:Fire\\_triangle\\_2.svg](https://commons.wikimedia.org/wiki/File:Fire_triangle_2.svg)

Fires and explosions require a fuel, an oxidizer, and an ignition source. This is known as the fire triangle.

### Fuel

Fuels can be solid, liquid or gases:

- Solids: wood, wood byproducts, metal particles, combustible dusts, plastics, rubber, etc.
- Liquids: gasoline, diesel, kerosene, alcohols, etc.
- Gases: methane, propane, hydrogen, etc.

### Oxidizer

Oxidizers are substances that provide oxygen to the reaction. Common oxidizers are:

- Solids: perchlorates, nitrates, etc.

- Liquids: hydrogen peroxide, nitric acid, sulfuric acid, etc.
- Gases: oxygen, chlorine, fluorine, etc.

### Ignition Source

- Friction, Impact, Static Electricity, Electrical Sparks, Hot Surfaces, Open Flames, etc.

## 2.1 What actually burns?

In all but the most unique of circumstances, it is the vapor of a liquid or solid that burns. The vapor or gas mixes with the oxidizer and ignites. The heat from the ignition sustains the reaction.

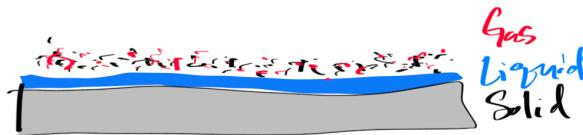


Figure 4: Surface Melt and Vaporization

## 3 How to Prevent Fires and Explosions

Ignition sources are plentiful and can be difficult to control. However, the fuel and oxidizer can be controlled. The most common way to prevent fires and explosions is to control the fuel and oxidizer. Often either the concentration of the fuel or the concentration of the oxidizer is controlled to prevent a fire or explosion.

### 3.1 How low or high do the concentrations need to be altered?

#### 3.1.1 Lower Flammability Limit (LFL)

- **LFL:** **LFL** is the lowest concentration of fuel in air that will support a flame.
- **LOL:** **LOL** is the lowest concentration of a fuel in pure oxygen that will support a flame.
- **LOC:** Also can define **LOC** (Limiting Oxygen Concentration) as the lowest concentration of oxygen in air that could result in combustion for a given fuel. This can be defined for oxygen in air or for a different gas.
- Units are typically in volume percent (vol%) or equivalently mole percent (mol%).

#### 3.1.2 Upper Flammability Limit (UFL)

- **UFL:** **UFL** is the highest concentration of fuel in air that will support a flame.
- **UOL:** **UOL** is the highest concentration of a fuel in pure oxygen that will support a flame.
- Units are typically in volume percent (vol%) or equivalently mole percent (mol%).

### Typical Values for LFL and UFL

Substance	LFL (vol%)	UFL (vol%)
Methane	5	15
Propane	2.1	9.5
Hydrogen	4	75
Gasoline	1.4	7.6
Ethanol	3.3	19
Acetylene	2.5	83

#### Typical Values for LOC in Air

Substance	LOC (vol%)
Hydrogen	5
Methane	12
Ethane	11

### 3.2 Controlling the temperature

**Flash point temperature** is the lowest temperature at which a liquid gives off enough vapor to form an ignitable mixture with air near the surface of the liquid.

#### Typical Flash Points

Substance	Flash Point (°C)
Methane	-188
Propane	-104
Gasoline	-43
Methanol	11

**Autoignition temperature** is the lowest temperature at which a substance will spontaneously ignite without an external ignition source.

#### Typical Autoignition Temperatures

Substance	Autoignition Temperature (°C)
Methane	600
Toluene	536
Gasoline	280
Methanol	463

### 3.3 Graphical Image of Flammability Limits, Autoignition Temperatures, and Flash Points

## 4 Equipment used for experimental determination

### 4.1 Flash point

Closed cup apparatus

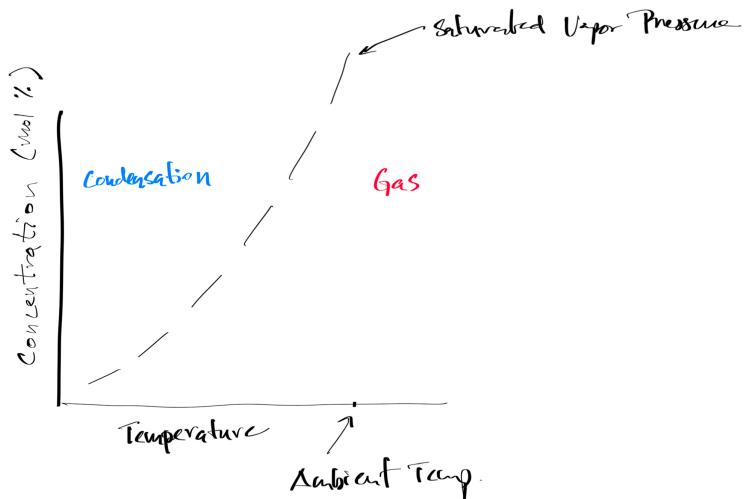


Figure 5: Graphical Image of Vapor Pressure

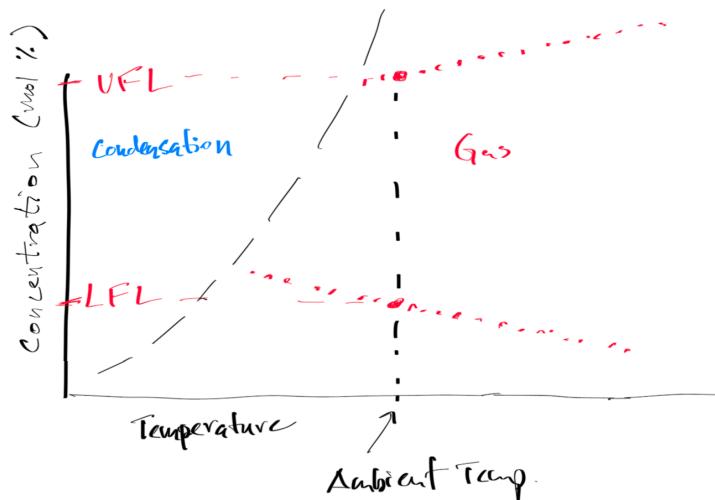


Figure 6: Graphical Image of LFL and UFL

#### 4.2 Flammability limits

```

import numpy as np
import matplotlib.pyplot as plt
import pandas as pd

data = {'Fuel Conc.':[2.1,2.5,3.5,4,4.2,5.8,6.4,7,7.7], 'Max Pressure':[0,2.5,6,8,8.5,7.6,5,3,.03]}
df = pd.DataFrame(data)

df.plot(x='Fuel Conc.',y='Max Pressure',kind='scatter')
#fit a parabola to the data
p = np.polyfit(df['Fuel Conc.'],df['Max Pressure'],2)
#plot the parabola
x = np.linspace(2,8,100)
y = lambda x: p[0]*x**2 + p[1]*x + p[2]

```

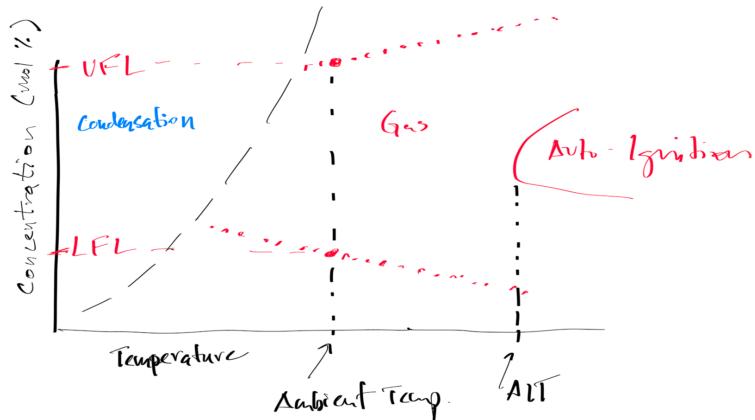


Figure 7: Graphical Image of Autoignition Temperatures

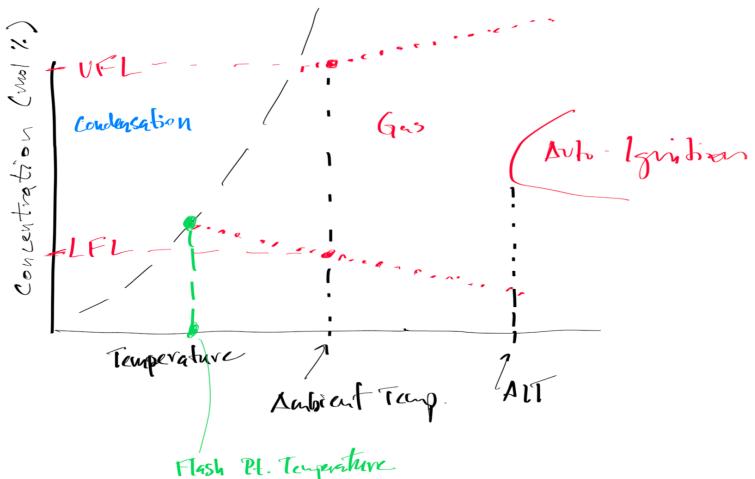


Figure 8: Graphical Image of Flash Point



Figure 9: Closed Cup Apparatus Image 1



Figure 10: Closed Cup Apparatus Image 2


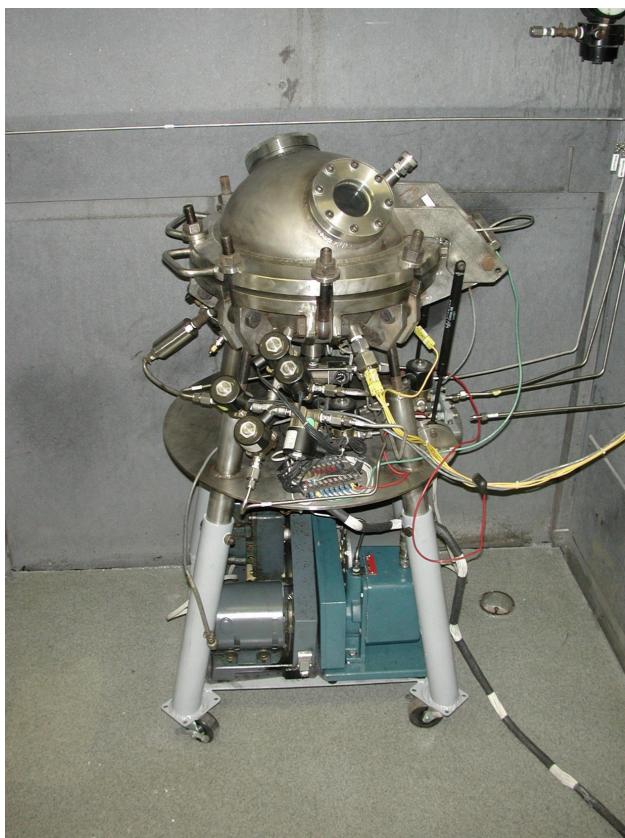


Figure 11: 20 Liter Sphere

```
plt.ylim(0,10)
plt.plot(x,y(x),'k -.')
plt.show()
```

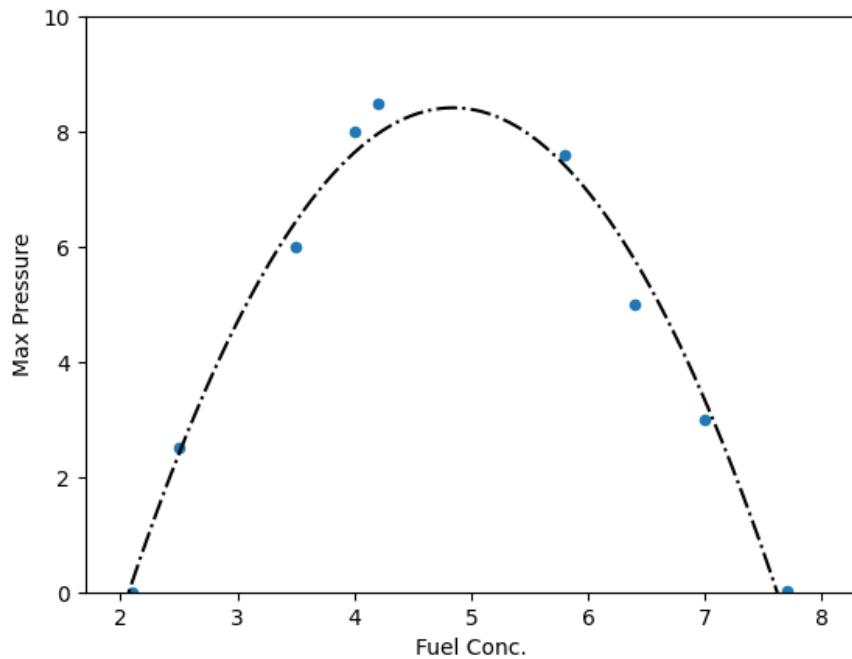

## 5 Empirical Estimation of Flammabilities


From Crowl and Louvar (4th edition of Chemical Process Safety, Chapter 6), the following empirical equations can be used to estimate the LFL and UFL for a gas or vapor:

### Flash Point

$$T_f = a + \frac{b(c/T_b)^2 e^{-c/T_b}}{1 - e^{-c/T_b}} \quad (1)$$

where a,b, and c are constants, and  $T_b$  is the normal boiling point of the liquid and  $T_f$  is the flash point. See Crowl and Louvar for the constants.

### Reaction Stoichiometry

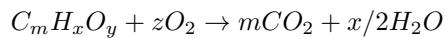

How do you get the stoichiometric concentration for say propane in air?

#### Note



#### Note

There are 3.72 moles of nitrogen for every mole of oxygen in air. So the stoichiometric concentration of propane in air is:

$$\frac{1}{1 + 5 + 5 * 3.72} = 0.041 \quad (3)$$

### LFL and UFL: Method 1

$$LFL = 0.55 \cdot C_{st} \quad UFL = 3.5 \cdot C_{st} \quad (4)$$

where  $C_{st}$  is the stoichiometric concentration (vol percent).

### LFL and UFL: Method 2

$$LFL = \frac{0.55}{4.76m + 1.19x - 2.38y + 1} \quad (5)$$

$$UFL = \frac{3.5}{4.76m + 1.19x - 2.38y + 1} \quad (6)$$

### LFL and UFL: Method 3

$$LFL = \frac{-3.42}{\Delta H_c} + 0.569\Delta H_c + 0.0538\Delta H_c^2 + 1.8 \quad (7)$$

$$UFL = 6.3\Delta H_c + 0.567\Delta H_c^2 + 23.5 \quad (8)$$

where  $\Delta H_c$  is the heat of combustion in kJ/mol.

### LFL and UFL: Mixtures

$$LFL = \frac{1}{\sum_i \frac{y_i}{LFL_i}} \quad (9)$$

where  $y_i$  is the mole fraction of the component and  $LFL_i$  is the LFL of the component. The UFL is calculated similarly.

### UOL

$$UOL = \frac{UFL[100 + 1.87(100 - UFL_o)]}{UFL_o + UFL(1 + 1.87)} \quad (10)$$

where  $UFL\_o$  is the oxygen concentration at the UFL. 1.87 is a fitting constant.

### LOC

$$LOC = \left( \frac{LFL + 1.11UFL}{1 + 1.11} \right) \left( \frac{UFL_o}{UFL} \right) \quad (11)$$

where  $UFL\_o$  is the oxygen concentration at the UFL. 1.11 is a fitting constant.

### Action Items

1. Why does the red ignitable conditions extend to unity in Figure VI.7([Guymon, 2025](#))? Shouldn't that be where there isn't sufficient oxygen? Explain.
2. Estimate the flash point of ethylamine and compare it to a literature value.
3. What is the effect of temperature and pressure on the LFL?
4. Use the stoichiometric concentration method to estimate the LFL and UFL for n-octane and compare your results to the experimental values of 1% and 7%.
5. Describe how the heat of reaction and the Arrhenius equation could be used together with heat transfer principles to estimate a temperature where the rate of heat input (from the reaction) exceeds the rate of heat loss, eventually leading to a large decomposition reaction.

## References

C. Guymon. *Foundations of Spiritual and Physical Safety: with Chemical Processes*. 2025.