


METER MOVEMENT PROTECTION

This circuit protects the analogue meter movement from excessive transient current and overload conditions.

D1 and D2 are connected in anti-parallel across the meter terminals. They clamp excessive voltage across the movement and help prevent damage during accidental overloads.

C1 provides damping and transient suppression across the meter movement. Use 8.2 μ F, preferably non-polar / bipolar if fitted directly across the movement.

R1 is an optional meter shunt resistor. It is not normally fitted and should only be populated if required to adapt a replacement meter movement to the correct full-scale sensitivity.

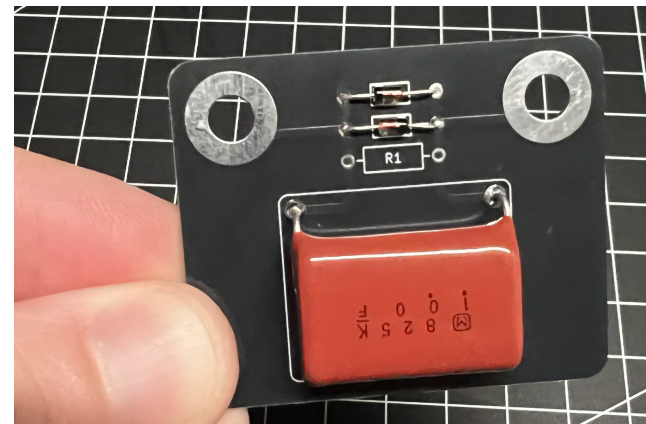

Title: AVO VCM MK III Meter Protection

Sheet: /

File: 00_avo_vcm_mk3_protection.kicad_sch

Size: A4

Date: 2026-08-19

Rev: 1

KiCad E.D.A. 10.0.5

Id: 1/1