
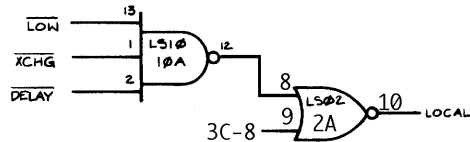

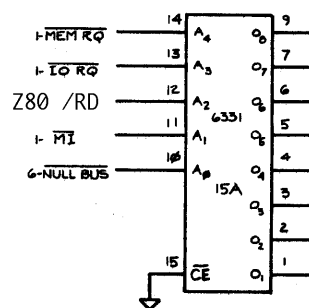


Rev 2 thru 3A

Cut off pins 8 and 9 of 16B, jumper 8 and 9 together on solder side of board



Rev 2A only

Lift pin 12 of 15A, connect to 16B-8 on component side

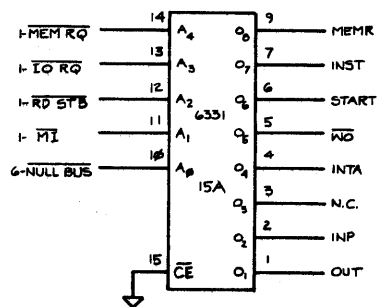

Rev 2A thru 3A

On circuit side, cut trace coming from 10A-12
Jumper 2A-10 to feedthrough on end of cut trace
Jumper 10A-12 to 2A-8
Jumper 3C-8 to 2A-9

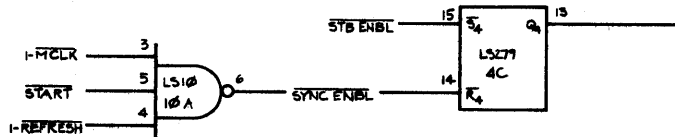

Rev 3 and 3A

Lift pin 10A-6 out of socket
On circuit side, jumper 10A-6 to 15A-15

Rev 3 and 4 replace the 6331 with a 82S153
On the component side of Rev 3/3A boards lift
pin 15A-3 and jumper to 16B-8 /RDSTB replaced with Z80 /RD

Rev 4 PCBs added rework to trace layout

1	/MEMRQ	(I0)	VCC	20
2	/IORQ	(I1)	(B9) OUT	19
3	/RDSTB	(I2)	(B8) INP	18
4	NULLBUS	(I3)	(B7) INTA	17
5	/REFRESH	(I4)	(B6) /WO	16
6	/M1	(I5)	(B5) /BEGIN	15
7	02	(I6)	(B4) INST	14
8	S0	(I7)	(B3) MEMR	13
9	S1	(BI0)	(B2) ENINT	12
10	GND	(B1)	/WM1	11

