Carnegie Mel

The Memory Hierarchy

15-213 / 18-213: Introduction to Computer Systems $10^{\rm th}$ Lecture, Feb. 16, 2012

Instructors:

Todd C. Mowry & Anthony Rowe

Random-Access Memory (RAM)

Key features

- RAM is traditionally packaged as a chip.
- Basic storage unit is normally a cell (one bit per cell).
- Multiple RAM chips form a memory.

Static RAM (SRAM)

- Each cell stores a bit with a four or six-transistor circuit.
- Retains value indefinitely, as long as it is kept powered.
- Relatively insensitive to electrical noise (EMI), radiation, etc.
- Faster and more expensive than DRAM.

Dynamic RAM (DRAM)


- Each cell stores bit with a capacitor. One transistor is used for access
- Value must be refreshed every 10-100 ms.
- More sensitive to disturbances (EMI, radiation,...) than SRAM.
- Slower and cheaper than SRAM.


Today


- Storage technologies and trends
- Locality of reference
- Caching in the memory hierarchy


SRAM vs DRAM Summary

Access Needs Needs Trans. Cost Applications per bit time refresh? EDC? SRAM 4 or 6 1X No Maybe 100x Cache memories DRAM 1 10X Yes Yes Main memories, frame buffers

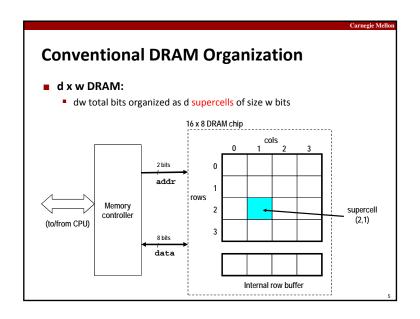

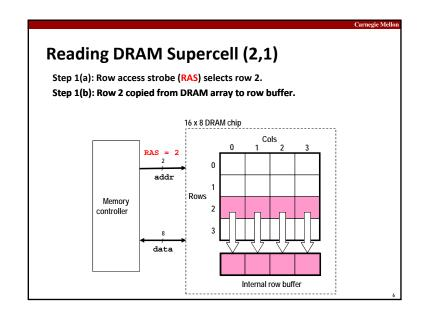

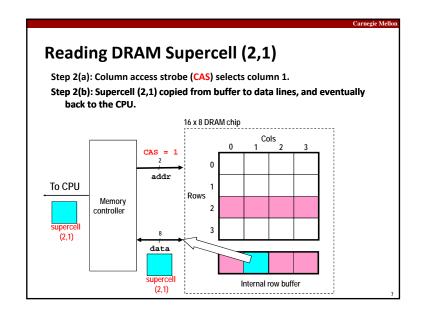

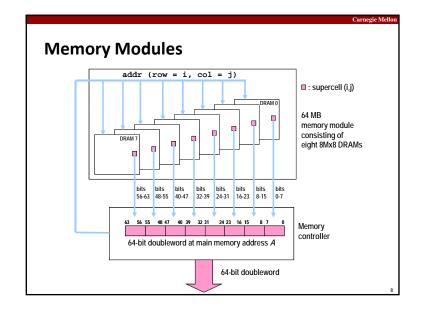

Carnegie Mello

Enhanced DRAMs

- Basic DRAM cell has not changed since its invention in 1966.
 - Commercialized by Intel in 1970.
- DRAM cores with better interface logic and faster I/O :
 - Synchronous DRAM (SDRAM)
 - Uses a conventional clock signal instead of asynchronous control
 - Allows reuse of the row addresses (e.g., RAS, CAS, CAS, CAS)
 - Double data-rate synchronous DRAM (DDR SDRAM)
 - Double edge clocking sends two bits per cycle per pin
 - Different types distinguished by size of small prefetch buffer:
 - DDR (2 bits), DDR2 (4 bits), DDR4 (8 bits)
 - By 2010, standard for most server and desktop systems
 - Intel Core i7 supports only DDR3 SDRAM

9

Carnegie Mellon


Nonvolatile Memories


- DRAM and SRAM are volatile memories
 - Lose information if powered off.
- Nonvolatile memories retain value even if powered off
 - Read-only memory (ROM): programmed during production
 - Programmable ROM (PROM): can be programmed once
 - Eraseable PROM (EPROM): can be bulk erased (UV, X-Ray)
 - Electrically eraseable PROM (EEPROM): electronic erase capability
 - Flash memory: EEPROMs with partial (sector) erase capability
 - Wears out after about 100,000 erasings.
- Uses for Nonvolatile Memories
 - Firmware programs stored in a ROM (BIOS, controllers for disks, network cards, graphics accelerators, security subsystems,...)
 - Solid state disks (replace rotating disks in thumb drives, smart phones, mp3 players, tablets, laptops,...)
 - Disk caches


_


Traditional Bus Structure Connecting CPU and Memory


- A bus is a collection of parallel wires that carry address, data, and control signals.
- Buses are typically shared by multiple devices.

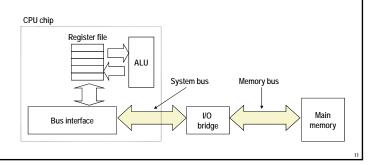


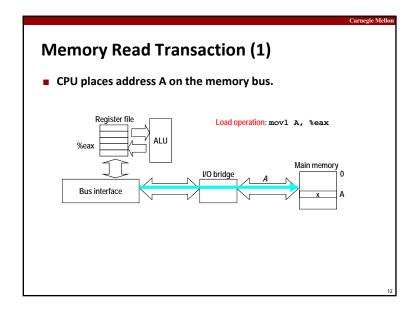


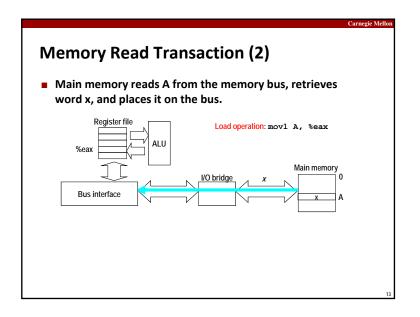


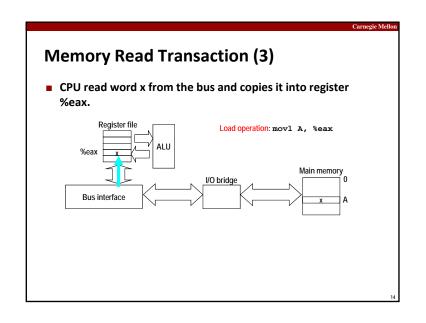


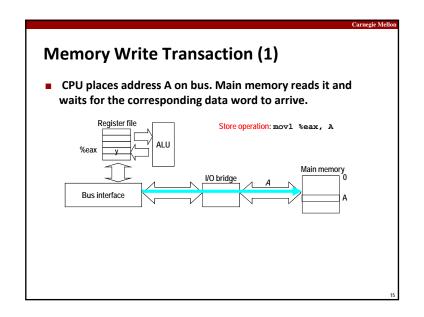


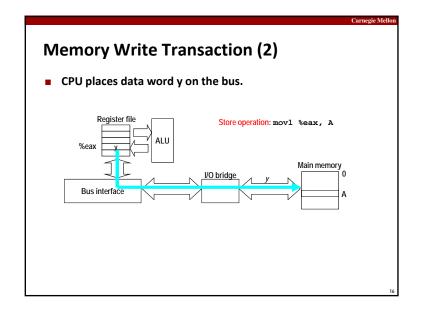

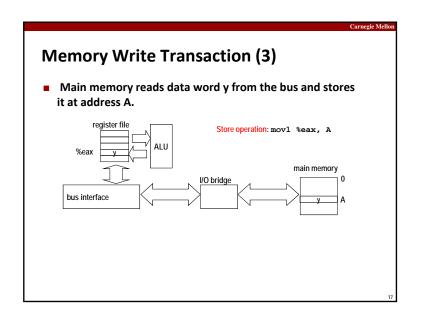

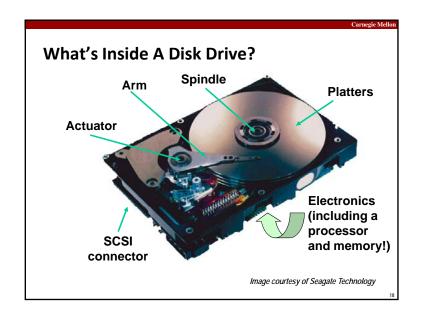

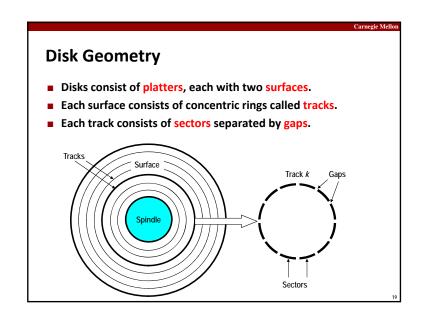


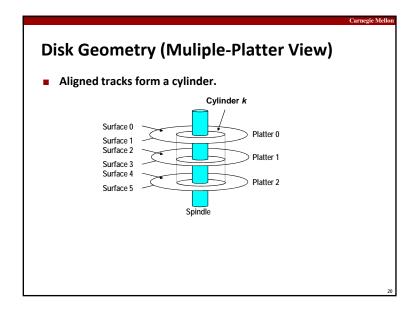


Disk Capacity

- Capacity: maximum number of bits that can be stored.
 - Vendors express capacity in units of gigabytes (GB), where
 1 GB = 10⁹ Bytes (Lawsuit pending! Claims deceptive advertising).
- Capacity is determined by these technology factors:
 - Recording density (bits/in): number of bits that can be squeezed into a 1 inch segment of a track.
 - Track density (tracks/in): number of tracks that can be squeezed into a 1 inch radial segment.
 - Areal density (bits/in2): product of recording and track density.
- Modern disks partition tracks into disjoint subsets called recording zones
 - Each track in a zone has the same number of sectors, determined by the circumference of innermost track.
 - Each zone has a different number of sectors/track

21

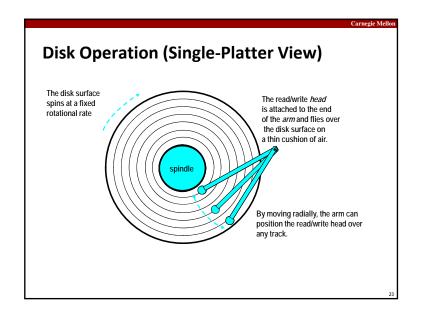


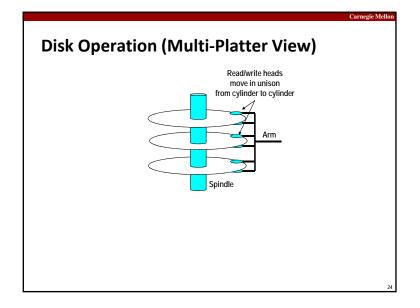



Disk Structure - top view of single platter


Surface organized into tracks


Tracks divided into sectors

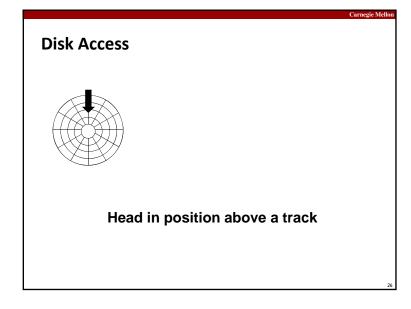


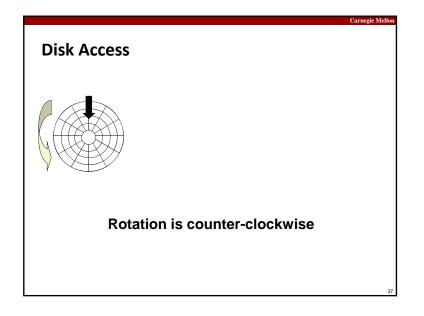


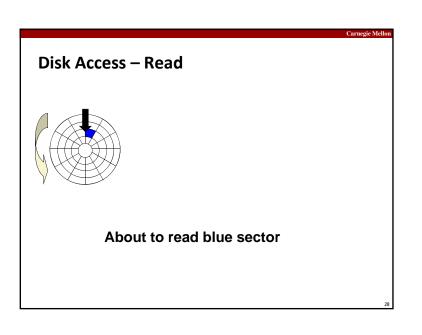


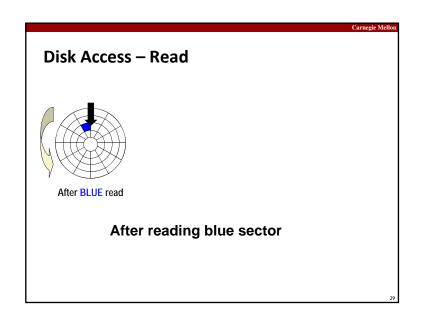


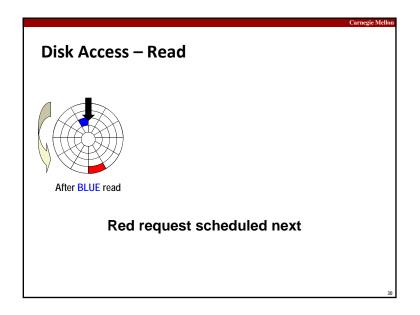

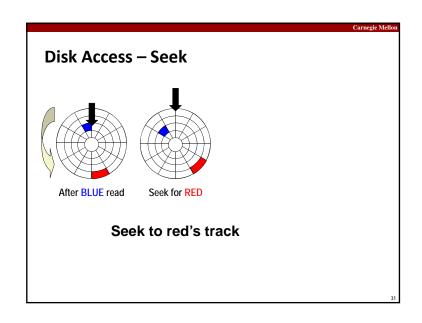

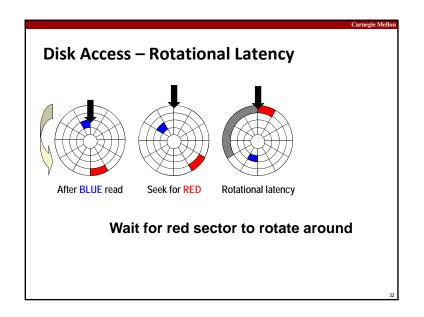

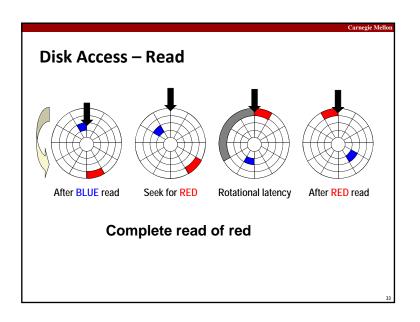

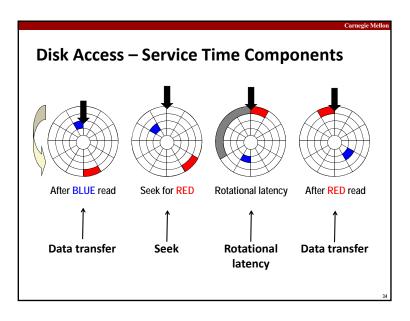

Disk Access Time

- Average time to access some target sector approximated by :
 - Taccess = Tavg seek + Tavg rotation + Tavg transfer
- Seek time (Tavg seek)
 - Time to position heads over cylinder containing target sector.
 - Typical Tavg seek is 3—9 ms
- Rotational latency (Tavg rotation)
 - Time waiting for first bit of target sector to pass under r/w head.
 - Tavg rotation = 1/2 x 1/RPMs x 60 sec/1 min
 - Typical Tavg rotation = 7200 RPMs
- Transfer time (Tavg transfer)
 - Time to read the bits in the target sector.
 - Tavg transfer = 1/RPM x 1/(avg # sectors/track) x 60 secs/1 min.

Disk Access Time Example

Given:

- Rotational rate = 7,200 RPM
- Average seek time = 9 ms.
- Avg # sectors/track = 400.

Derived:

- Tavg rotation = 1/2 x (60 secs/7200 RPM) x 1000 ms/sec = 4 ms.
- Tavg transfer = 60/7200 RPM x 1/400 secs/track x 1000 ms/sec = 0.02 ms
- Taccess = 9 ms + 4 ms + 0.02 ms


Important points:


- Access time dominated by seek time and rotational latency.
- First bit in a sector is the most expensive, the rest are free.
- SRAM access time is about 4 ns/doubleword, DRAM about 60 ns
 - Disk is about 40,000 times slower than SRAM,
 - 2,500 times slower then DRAM.


Logical Disk Blocks


- Modern disks present a simpler abstract view of the complex sector geometry:
 - The set of available sectors is modeled as a sequence of b-sized logical blocks (0, 1, 2, ...)
- Mapping between logical blocks and actual (physical) sectors
 - Maintained by hardware/firmware device called disk controller.
 - Converts requests for logical blocks into (surface,track,sector) triples.
- Allows controller to set aside spare cylinders for each zone.
 - Accounts for the difference in "formatted capacity" and "maximum capacity".


I/O Bus CPU chip Register file ALU System bus Memory bus Main Bus interface bridge memory I/O bus other devices such as network adapters. USB Graphics Disk controller adapter controller Mouse Keyboard Monitor Disk

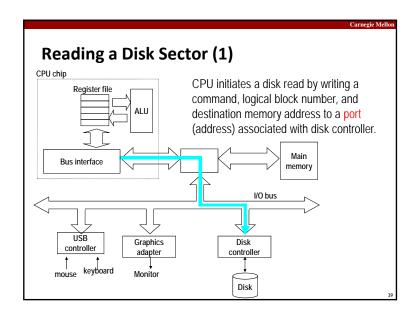


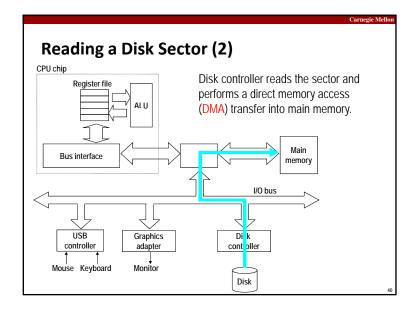

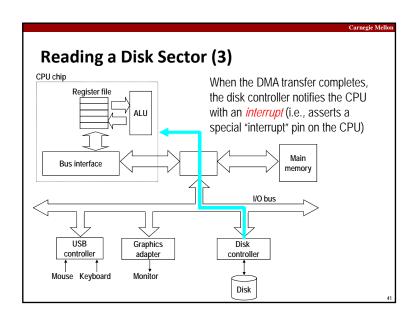


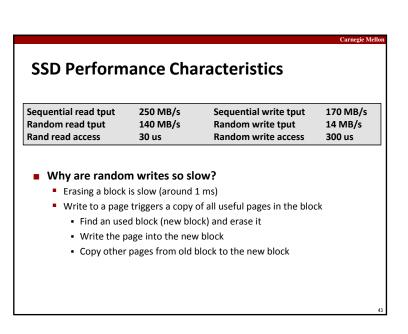


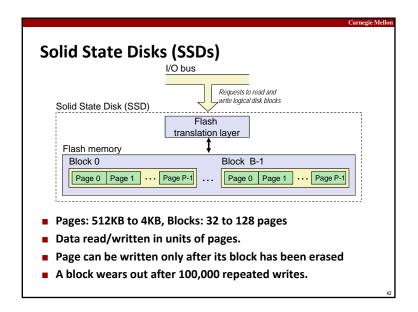


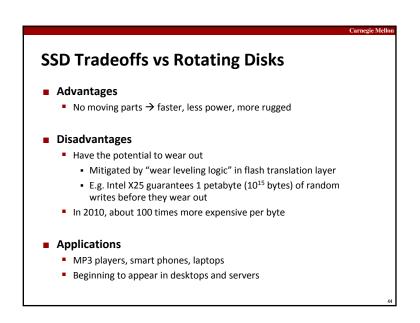

								Carnegie Mell		
Storage Trends										
SRAM Metric	1980	1985	1990	1995	2000	2005	2010	2010:1980		
\$/MB access (ns)	19,200 300	2,900 150	320 35	256 15	100 3	75 2	60 1.5	320 200		
DRAM Metric	1980	1985	1990	1995	2000	2005	2010	2010:1980		
\$/MB access (ns) typical size (MB)	8,000 375 0.064	880 200 0.256	100 100 4	30 70 16	1 60 64	0.1 50 2,000	0.06 40 8,000	130,000 9 125,000		
Disk Metric	1980	1985	1990	1995	2000	2005	2010	2010:1980		
\$/MB access (ms) typical size (MB)	500 87 1	100 75 10	8 28 160	0.30 10 1,000	0.01 8 20,000	0.005 <i>4</i> 160,000	0.0003 3 1,500,00	1,600,000 29 10 1,500,000		

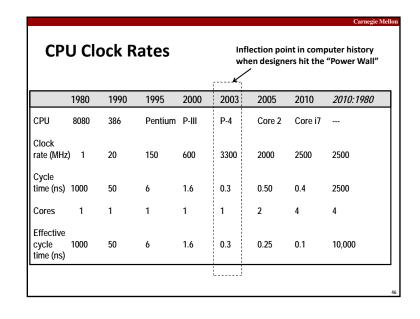


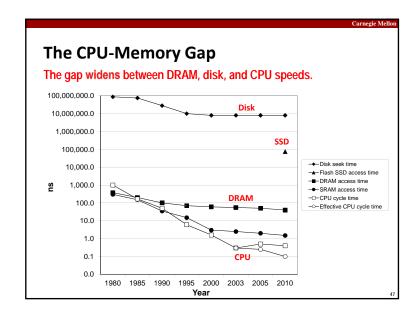

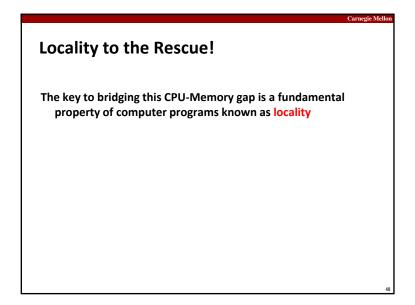

Today

Storage technologies and trends
Locality of reference
Caching in the memory hierarchy

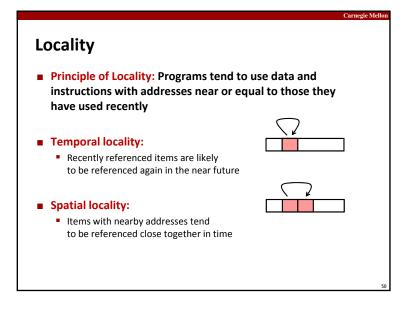

Locality Example sum = 0;for (i = 0; i < n; i++) sum += a[i]; return sum; Data references • Reference array elements in succession **Spatial locality** (stride-1 reference pattern). • Reference variable sum each iteration. **Temporal locality** Instruction references • Reference instructions in sequence. **Spatial locality** Cycle through loop repeatedly. **Temporal locality**

Qualitative Estimates of Locality

Claim: Being able to look at code and get a qualitative sense of its locality is a key skill for a professional programmer.

Question: Does this function have good locality with respect to array a?

int sum_array_rows(int a[M][N])
{
 int i, j, sum = 0;
 for (i = 0; i < M; i++)
 for (j = 0; j < N; j++)
 sum += a[i][j];
 return sum;
}</pre>

Locality Example

Question: Does this function have good locality with respect to array a?

```
int sum_array_cols(int a[M][N])
   int i, j, sum = 0;
   for (j = 0; j < N; j++)
       for (i = 0; i < M; i++)
           sum += a[i][j];
   return sum;
```

Locality Example

Question: Can you permute the loops so that the function scans the 3-d array a with a stride-1 reference pattern (and thus has good spatial locality)?


```
int sum_array_3d(int a[M][N][N])
    int i, j, k, sum = 0;
    for (i = 0; i < M; i++)
       for (j = 0; j < N; j++)
            for (k = 0; k < N; k++)
                sum += a[k][i][j];
    return sum;
```


Memory Hierarchies


- Some fundamental and enduring properties of hardware and software:
 - Fast storage technologies cost more per byte, have less capacity, and require more power (heat!).
 - The gap between CPU and main memory speed is widening.
 - Well-written programs tend to exhibit good locality.
- These fundamental properties complement each other beautifully.
- They suggest an approach for organizing memory and storage systems known as a memory hierarchy.


Today


- Storage technologies and trends
- Locality of reference
- Caching in the memory hierarchy

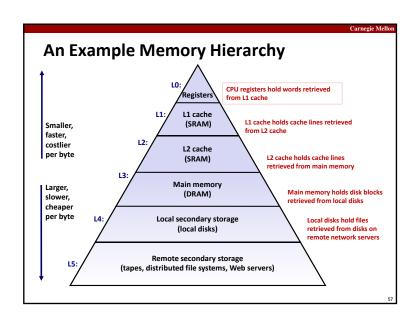

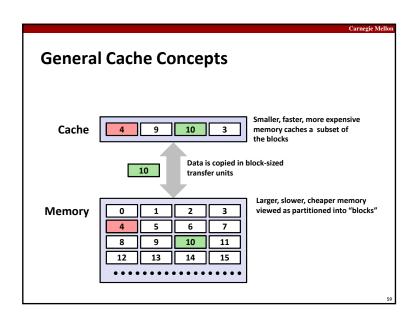

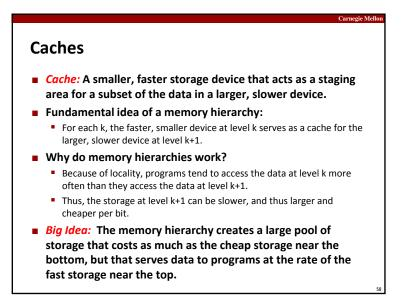

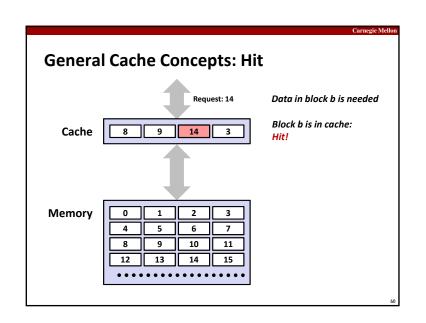

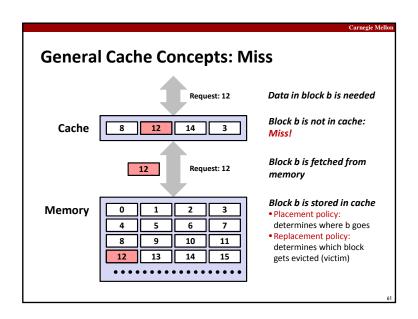

Examples of Caching in the Hierarchy								
Cache Type	What is Cached?	Where is it Cached?	Latency (cycles)	Managed By				
Registers	4-8 bytes words	CPU core	0	Compiler				
TLB	Address translations	On-Chip TLB	0	Hardware				
L1 cache	64-bytes block	On-Chip L1	1	Hardware				
L2 cache	64-bytes block	On/Off-Chip L2	10	Hardware				
Virtual Memory	4-KB page	Main memory	100	Hardware + OS				
Buffer cache	Parts of files	Main memory	100	os				
Disk cache	Disk sectors	Disk controller	100,000	Disk firmware				
Network buffer cache	Parts of files	Local disk	10,000,000	AFS/NFS client				
Browser cache	Web pages	Local disk	10,000,000	Web browser				
Web cache	Web pages	Remote server disks	1,000,000,000	Web proxy server				

General Caching Concepts: Types of Cache Misses

■ Cold (compulsory) miss

Cold misses occur because the cache is empty.

Conflict miss

 Most caches limit blocks at level k+1 to a small subset (sometimes a singleton) of the block positions at level k.

• E.g. Block i at level k+1 must be placed in block (i mod 4) at level k.

 Conflict misses occur when the level k cache is large enough, but multiple data objects all map to the same level k block.

• E.g. Referencing blocks 0, 8, 0, 8, 0, 8, ... would miss every time.

Capacity miss

 Occurs when the set of active cache blocks (working set) is larger than the cache.

Carnegie Mello

Summary

 The speed gap between CPU, memory and mass storage continues to widen.

■ Well-written programs exhibit a property called locality.

 Memory hierarchies based on caching close the gap by exploiting locality.

16