



SHERWOOD INDUSTRIES IS AN ENVIRONMENTALLY RESPONSIBLE COMPANY. THIS MANUAL IS PRINTED ON RECYCLED PAPER.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE



Westgate

LUXURY FIREPLACES

This publication is intended as a guide for installers to help with the assembly of the log set only.

Please refer to the Westgate DV62 Owner's Manual for specific, detailed and complete information on installation and operation.




DV62 Log Set Installation



SHERWOOD INDUSTRIES LTD

LOG SET INSTALLATION:


Each log is numbered 1 through 10 to assist in the log set assembly. (Logs are not assembled in # sequence.)

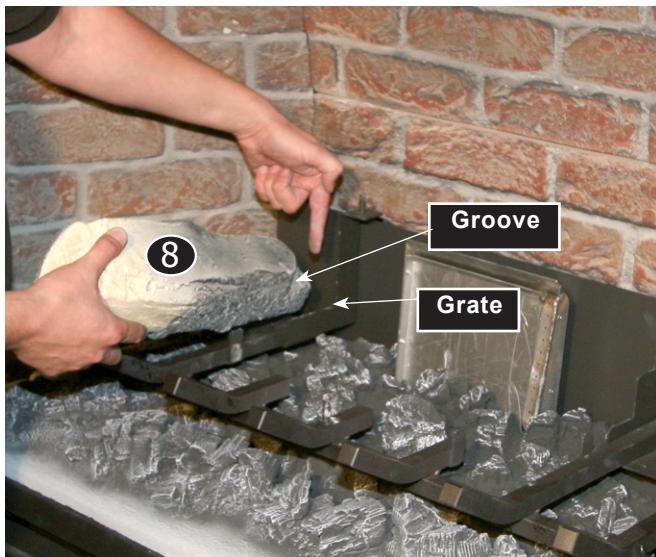


1. Install Log #8. Place the locating groove on the rear end of log #8 onto the grate. Insert the pin hole on the front end of log #8 into the pin tab at the center of the grate



Log #8 in position

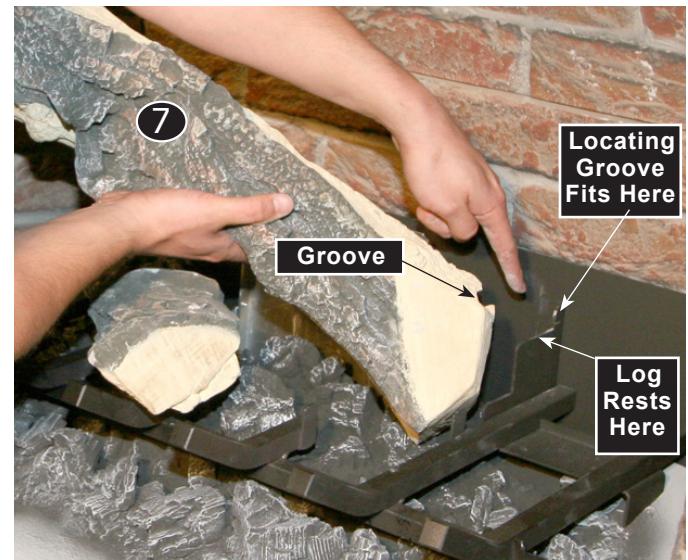

2. Install Log #7. Place the locating groove on the rear end of log #7 onto the grate.

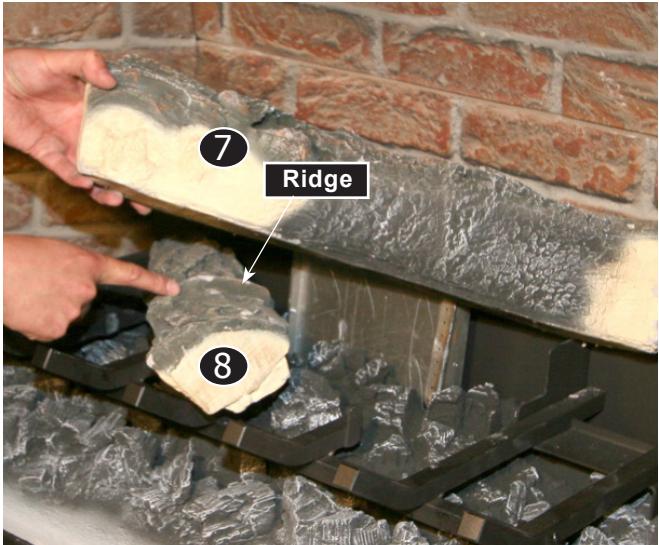

Lean the front end of Log #7 up against the ridge on Log #8.



3. Install Log #9. Place the locating hole on the left side of log #9 onto the locating pin on the grate.



Place the right side of Log #9 onto the flat surface on the rear of Log #7.





Log #9 in position



Log #9 in position



The bottom of Log #9 should be parallel to the top of the riser.

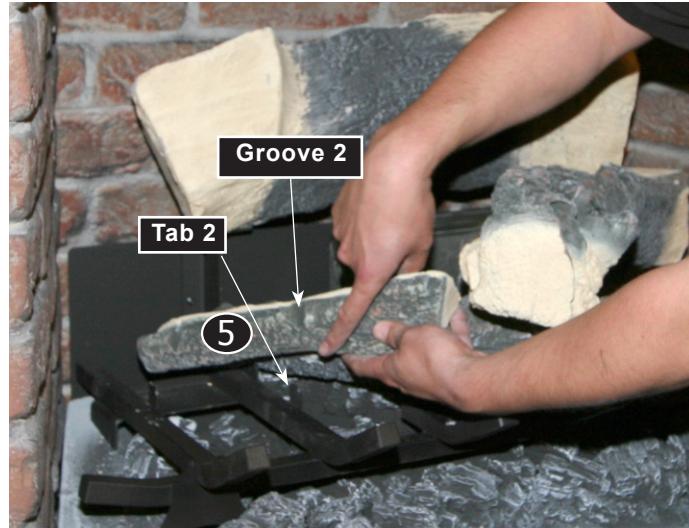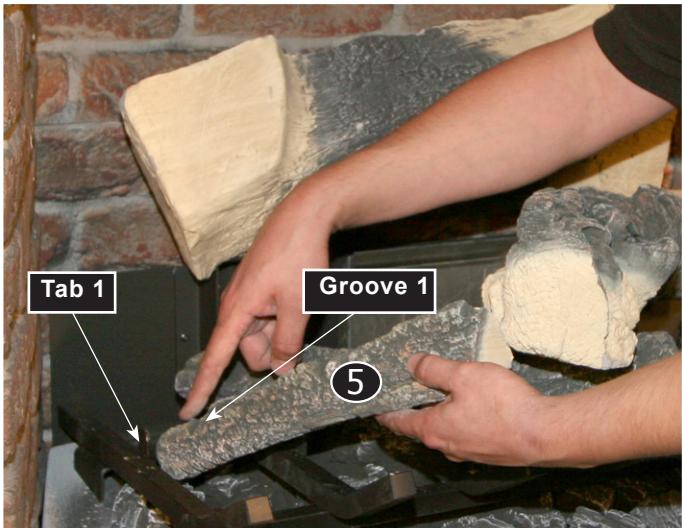

4. Install Log #5. Fit the 2 locating grooves on Log #5 onto the 2 tabs on the left side of the grate.



Log #5 in position



5. Install Log #6. Fit the 2 locating grooves on Log #5 onto the 2 tabs on the right side of the grate.



Log #6 in position



6. Install Log #10. Fit the rear of Log #10 onto the groove at the rear of Log #8. Place the front of Log #10 onto the notch in Log #7.




7. Install Log #2. Place the bottom of Log #2 onto the grate.



Rest the top of Log #2 onto Log #9.




Log #2 in position

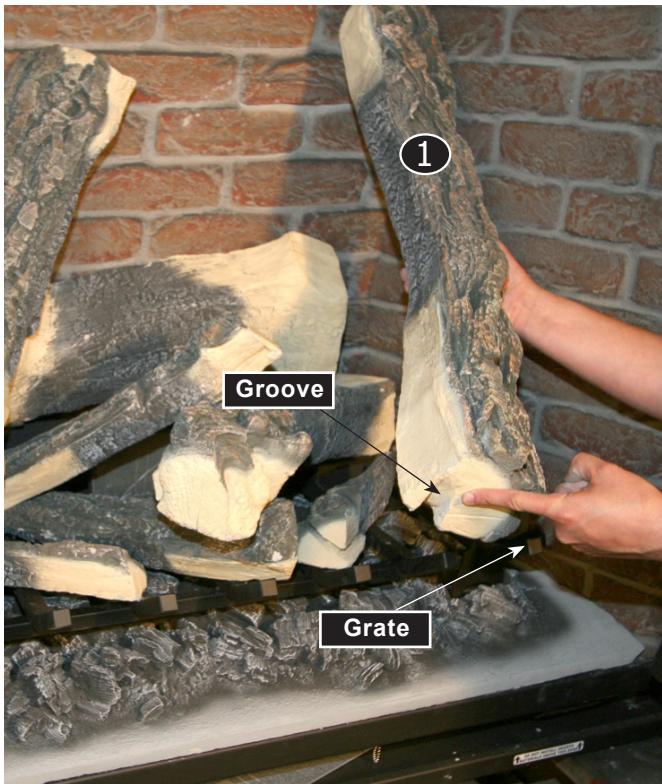

8. Install Log #1. Place the groove on the bottom of Log #1 onto the grate.



Rest the top of Log #1 onto Log #9.

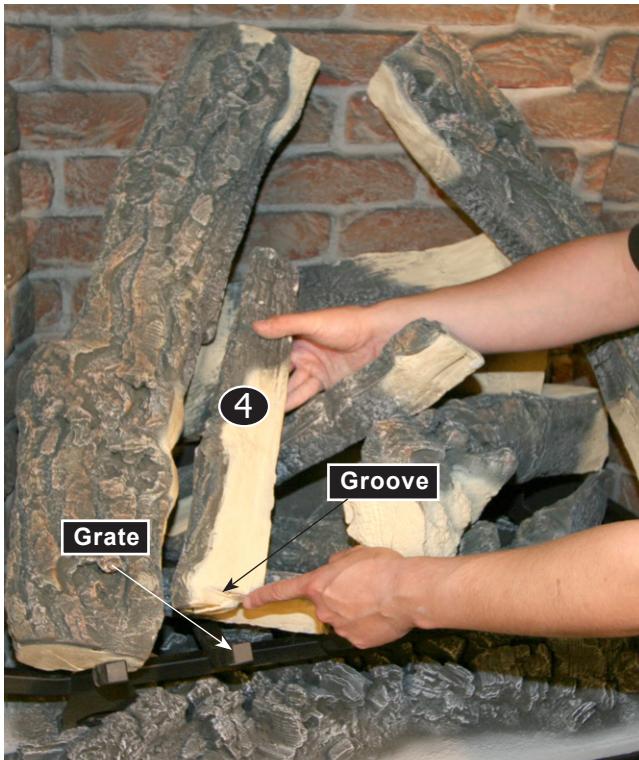


9. Install Log #4. Place the groove on the bottom of Log #4 onto the grate.



Place the top of Log #4 into the groove of Log #10



Log #4 in position

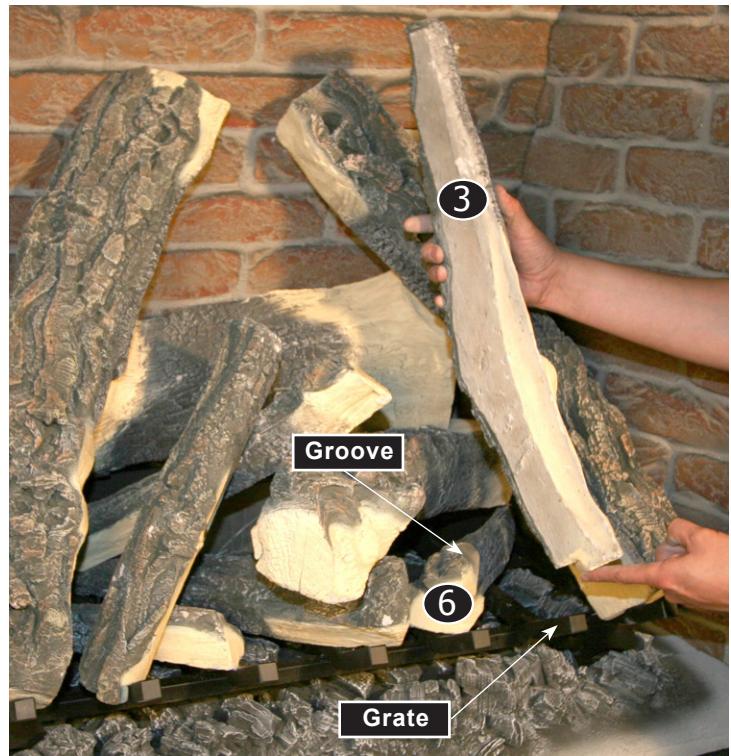

10. Install Log #3. Place the groove on the bottom of Log #3 onto the grate. Rest the top of Log #3 onto the logs behind it.



Log #3 in position



Completed Log Set

