



Wrench can be found inside door of vertical START cabinet.

Run long **CAT 5** cable from Start unit to Finish unit through mouse hole in corner of door. Run **power** supply plug out through same mouse hole.

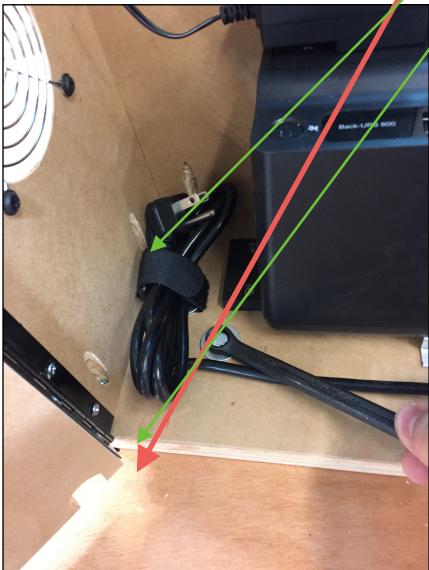


Remove bolts from table and bolt to cabinet to table as shown, with monitor facing as




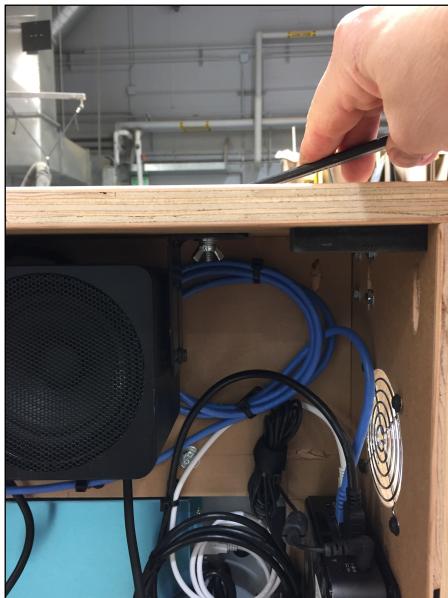


Unbolt speaker and reattach to top of cabinet.

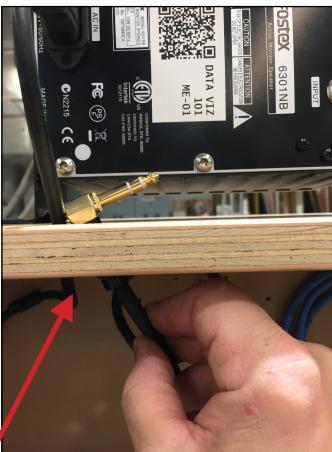


Pass power and audio cord through hole in top and connect to speaker.

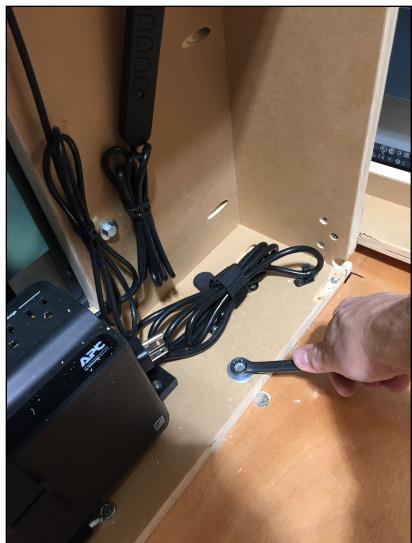


Bolt large side of Finish box to table

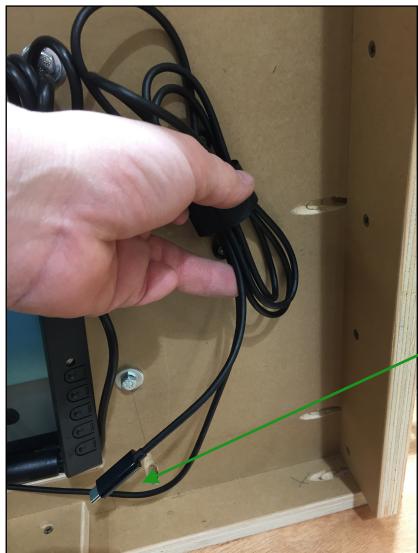


Undo and then connect USB cable from skinny box to computer in large box of Finish component.

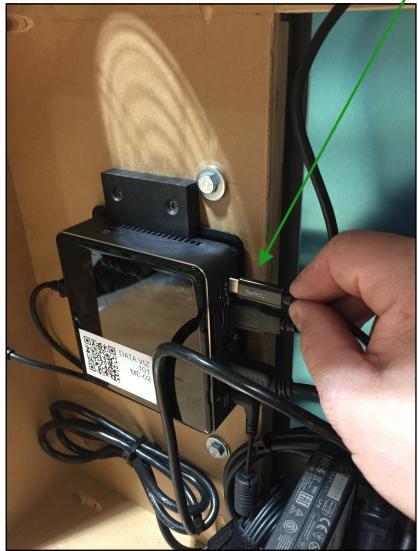

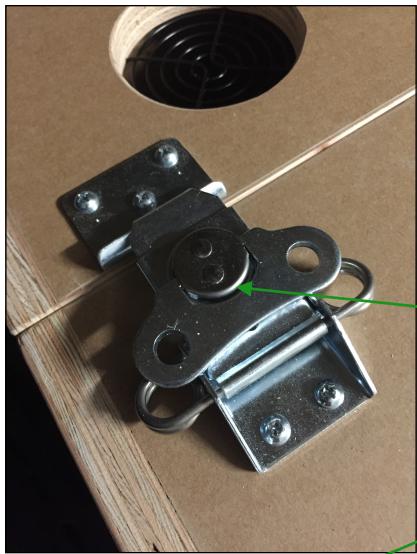



Separate horizontal finish box by unlatching **4 butterfly latches** to access computers, plugins and motion sensor.



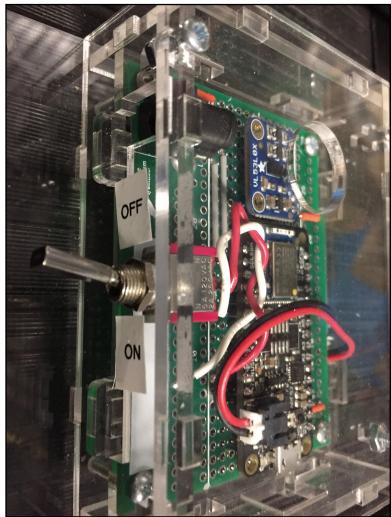


Slide remote Motion Sensor from cabinet and place appropriately for Finish line.

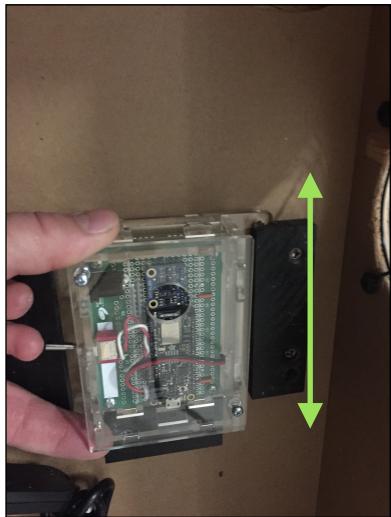

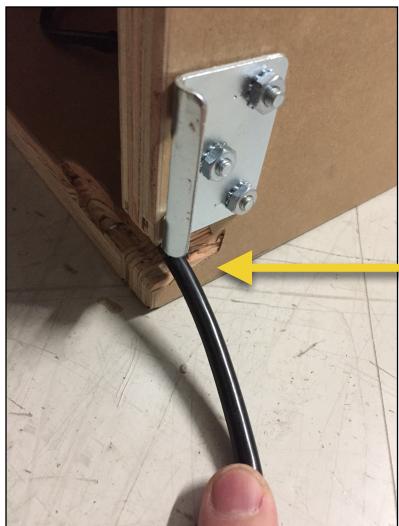

Chase power cord for Finish box out mouse hole at side of cabinet as shown.

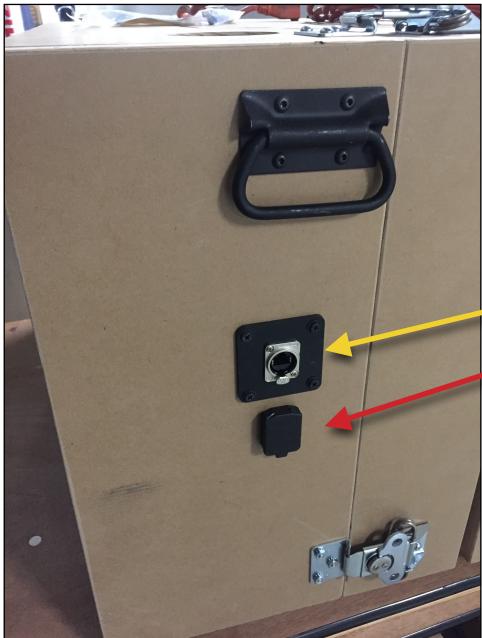

Locate external pass thru ports located on sides of each unit.

Finish Unit:

Cat 5
USB



Start Unit:

USB



Vertical Start Unit



Horizontal Finish Unit