

程序代写代做 CS编程辅导



PHY FUNDAMENTALS II

Wireless Signal Propagation

WeChat: cstutores
Assignment Project Exam Help

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

程序 Overview 编程辅导

1. Antenna
2. Reflection, Diffraction, Scattering
3. Fading, Shadowing, Multipath
4. Inter-symbol Interference
5. Path loss model (Frii's, 2-ray)
6. MIMO (Diversity, Multiplexing, Beamforming)
7. Orthogonal Frequency Division Multiplexing (OFDM)
8. Orthogonal Frequency Division Multiple Access (OFDMA)
9. Effect of Frequency

<https://tutorcs.com>



Tutor.CS

WeChat: cstutorcs

Assignment Project Exam Help

Email: tutors@163.com

QQ: 749389476


Antenna

程序代写代做CS编程辅导


- Transmitter converts electrical energy to electromagnetic waves
- Receiver converts magnetic waves to electrical energy
- Same antenna is used for transmission and reception
- Omni-Directional: Power radiated in all directions
- Directional: Most power in the desired direction
- Isotropic antenna: Radiates in all directions *equally*
- Antenna Gain = Power at particular point/Power with Isotropic
Expressed in dBi (Email:tutorcs@163.com)

QQ: 749389476


<https://tutorcs.com>

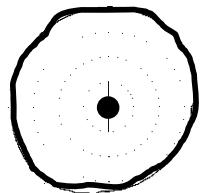

Omni-Directional

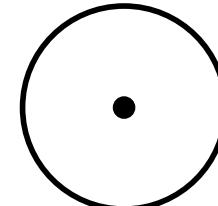

Directional

Isotropic

Example 程序代写代做CS编程辅导

Question: How much stronger a 17 dBi antenna effectively receives (transmits) the signal compared to the isotropic antenna?



Solution

Let

WeChat: cstutorcs

Power of isotropic antenna = P_{iso}

Power of 17 dBi antenna = Assignment Project Exam Help

We have

$$17 = 10\log_{10}(P/P_{iso})$$

Email: tutorcs@163.com

Thus $P/P_{iso} = 10^{1.7} = 50.12$, i.e., the 17 dBi antenna will *effectively receive* (transmit) the signal **50.12** times stronger than the isotropic antenna albeit using the same *actual* transmit power.

QQ: 749389476
<https://tutorcs.com>

Relationship between antenna size and frequency



- ❑ Antennas are designed to transmit or receive a specific frequency band
 - Cannot use a TV antenna for wireless router, or vice-versa (why?)
- ❑ End-to-end antenna length = $\frac{1}{2}$ wavelength
 - So that electrons can travel back and forth the antenna in one cycle
- ❑ If dipole (two rods), each rod is $\frac{1}{4}$ wavelength

QQ: 749389476

<https://tutorcs.com>

Reflection, Diffraction, Scattering

程序代写代做 CS 编程辅导



Reflection, Diffraction and Scattering (Cont)

- **Reflection:** Surface layer thickness $\ll \lambda$ relative to wavelength (λ) of signal
 - May have phase shift or change in signal
 - May cancel out original signal or increase/strengthen it at receiver
- **Diffraction:** Edge of impenetrable body; large relative to λ
 - Receiver may receive signal even if no line-of-sight (LOS) to transmitter
- **Scattering**
 - Obstacle size on order of wavelength. Lamp posts etc.
 - Reflection/diffraction are more directional; scattering in many directions
- If LOS, diffracted and scattered signals not significant (LOS dominates)
 - Reflected signals may be significant
- If no LOS, diffraction and scattering are primary means of reception

<https://tutorcs.com>



Assignment Project Exam Help

Email: tutorcs@163.com

QQ: [749389476](#)

Path Loss

程序代写代做CS编程辅导

- ❑ Received power (P_R) :  The receiver location is only a fraction of the total power used by the transmitter to transmit the signal (P_T)
- ❑ Path loss = $P_T - P_R$
 - Depends on distance separation between Tx-Rx
- ❑ Need to estimate path loss to design wireless links
- ❑ How to estimate path loss?
- ❑ There are well-known path loss models

Assignment Project Exam Help

➢ Frii's model: designed for free-space (no reflections); frequency dependent

Email: tutorcs@163.com

➢ 2-Ray model: reflections considered, but frequency-independent
(antenna heights are important)

QQ: 749389476


<https://tutorcs.com>

Free Space Path Loss (Friis's Law) 辅导



- Tx and Rx placed in empty space
 - No absorbing/reflecting obstacles
- Received power (P_R) decreases as *inverse square of distance (d⁻² law)*

$$P_R = P_T G_T G_R \left(\frac{\lambda}{4\pi d} \right)^2$$

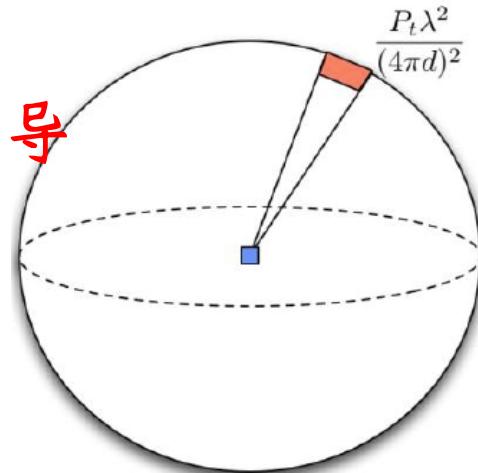

➤ Where G_T = Tx antenna gain, G_R = Rx antenna gain

➤ For isotropic antennas, $G_T=G_R=1$ ("unit gain antennas" or 0 dB)


Email: tutorcs@163.com

- For isotropic antennas: $P_R = P_T \left(\frac{c}{4\pi d} \right)^2$
QQ: 749389476

<https://tutorcs.com>

Free-space path loss (cont)

- A factor of 10 increase in distance → 20dB more path loss (20dB/decade)
 - 2.4 GHz path loss at 1m = 40.04dB, 10 meter = 60.04dB
- The higher the frequency, the greater the path loss at fixed distance
 - At 10 meter, 2.4GHz = 60.04dB, 5GHz = 67.25dB

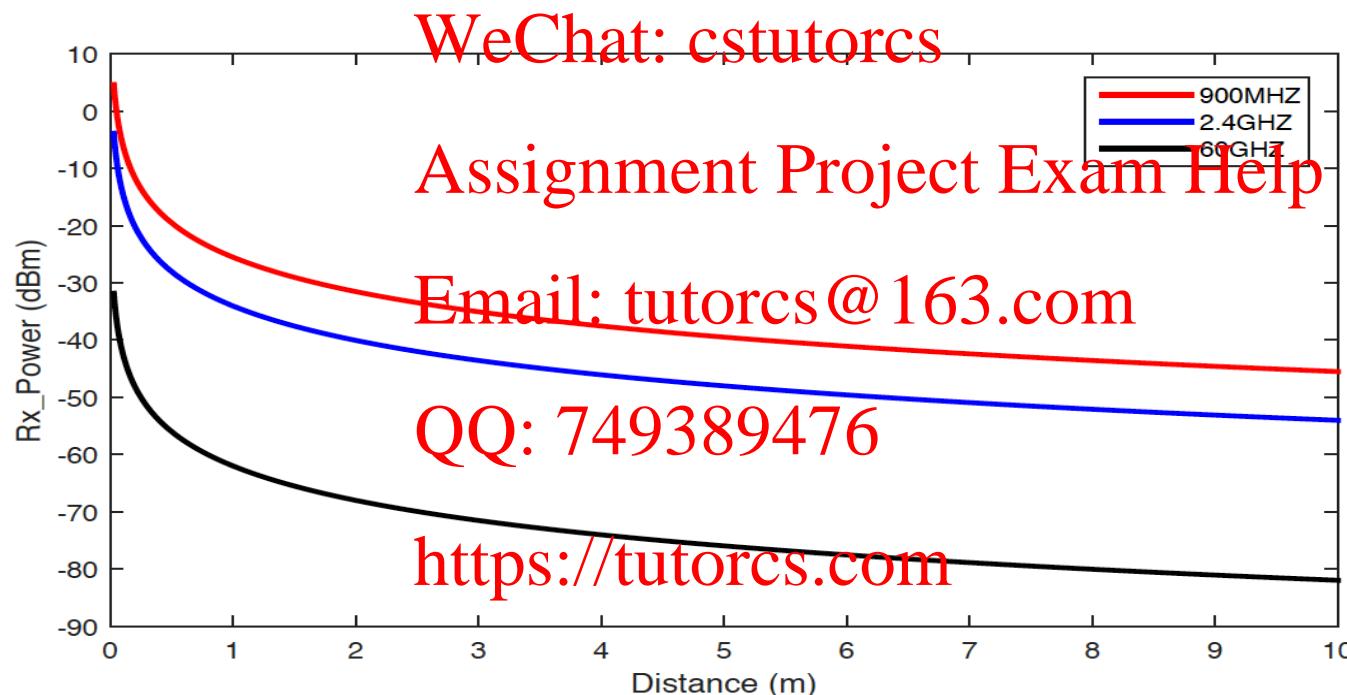

程序代写 Examples 编程辅导

Question: If 50W power is emitted at a 900 MHz frequency at a transmitter, find the receive power at a distance of 100 meter from the transmitter (assume free space path loss with no antenna gains).



Solution

Unit antenna gain means: $G_T = G_R = 1$.

We have $d = 100\text{m}$, $f = 900 \times 10^6 \text{ Hz}$, $P_T = 50\text{W}$, $c = 3 \times 10^8 \text{ m/sec}$, and $\pi = 3.14$

$$P_R = P_T \left(\frac{c}{4\pi f d} \right)^2 = 3.5 \mu\text{W}$$

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

Example 程序代写代做CS编程辅导

Question: What is the received power in dBm at 10 meter from a 2.4GHz WiFi router transmitting with 100mW power (assume free space path loss and isotropic antennas).



Solution

WeChat: cstutorcs

For isotropic antennas: $G_T = G_R = 0 \text{ dBm}$.

We have $d = 10 \text{ m}$, $f = 2.4 \times 10^9 \text{ Hz}$, $P_T = 100 \text{ mW} = 20 \text{ dBm}$, $c = 3 \times 10^8 \text{ m/sec}$, and $\pi = 3.14$

$$\text{Pathloss(dB)} = 20 \log_{10} \left(\frac{4\pi f d}{c} \right) \text{ dB} = 40 \text{ dB} \text{ (approx.)}$$

Or, we can use the other path loss expression as follows:

$$\text{PL}_{\text{dB}} = 20 \log_{10}(d) + 20 \log_{10}(f) - 147.55 = 40 \text{ dB} \text{ (approx.)}$$

<https://tutorcs.com>

$$P_R = P_T - \text{pathloss} = 20 - 40 = -20 \text{ dBm} \text{ (approx.)}$$

Receiver Sensitivity 程序代写 代码编程辅导



- The received power (signal strength or RSS) has to be greater than a **threshold** for the receiver to decode information correctly (with low error probability)
 - To achieve a minimum signal-to-noise ratio (SNR)
- Different hardware/standard/equipment specify different values
 - Depends on channel bandwidth and receiver noise figure (and temperature)
 - Larger bandwidth → larger minimum power (and vice versa)
 - Larger receiver noise → larger minimum power (and vice versa)
- Examples (for room temperature)
 - LTE: -52 dBm [roughly]
 - Bluetooth: -70 dBm [roughly]

WeChat: cstutorcs
Assignment Project Exam Help
Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

Example

程序代写代做CS编程辅导

- To increase the coverage by transmit power, a manufacturer produced Bluetooth chipsets with a sensitivity of -80 dBm. What is the maximum communication range that could be achieved for this chipset for a transmit power of 1 mW? Free Space Path Loss with unit antenna gains.

WeChat: cstutorcs

Bluetooth frequency $f = 2.4 \text{ GHz}$, $P_T = 1 \text{ mW}$, $P_R = -80 \text{ dBm} = 10^{-8} \text{ mW}$

We have $P_R = P_T \left(\frac{c}{4\pi df} \right)^2$

Email: tutorcs@163.com

$$d = \frac{c}{4\pi f} \sqrt{P_T / P_R}$$


Or, QQ: 749389476

= 99.5 meter

<https://tutorcs.com>

Multipath

程序代写代做 CS编程辅导

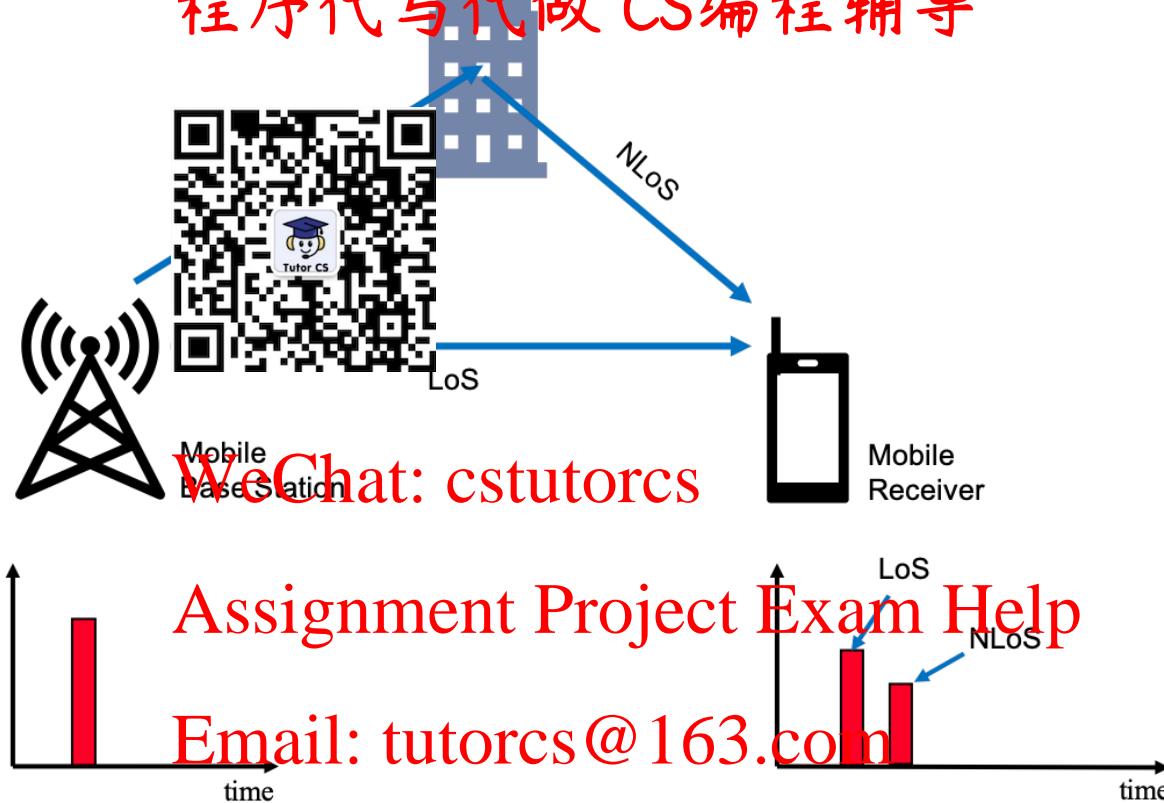

- Multiple copies of the signal received (LoS + reflected NLoS) **QQ: 749389476**
- The LoS signal reaches the receiver first followed by the NLoS copy (NLoS has longer path length compared to the LoS path) **<https://tutorcs.com>**
- RSS(LoS) > RSS(NLoS). NLoS signal travels further and hence attenuates more compared to the LoS.

Inter-Symbol Interference


程序代写代做CS编程辅导




- Multipath effect: receiver continues to receive the signal (its reflections) even after the transmitter completes symbol transmission
- As a result, symbols become wider; two consecutively transmitted symbols overlap and interfere with each other
- Longer bit intervals or symbol lengths are required to avoid ISI
 - Limits the number of bits/s (data rate *inverse* of symbol length)

Delay Spread

程序代写代做 CS编程辅导

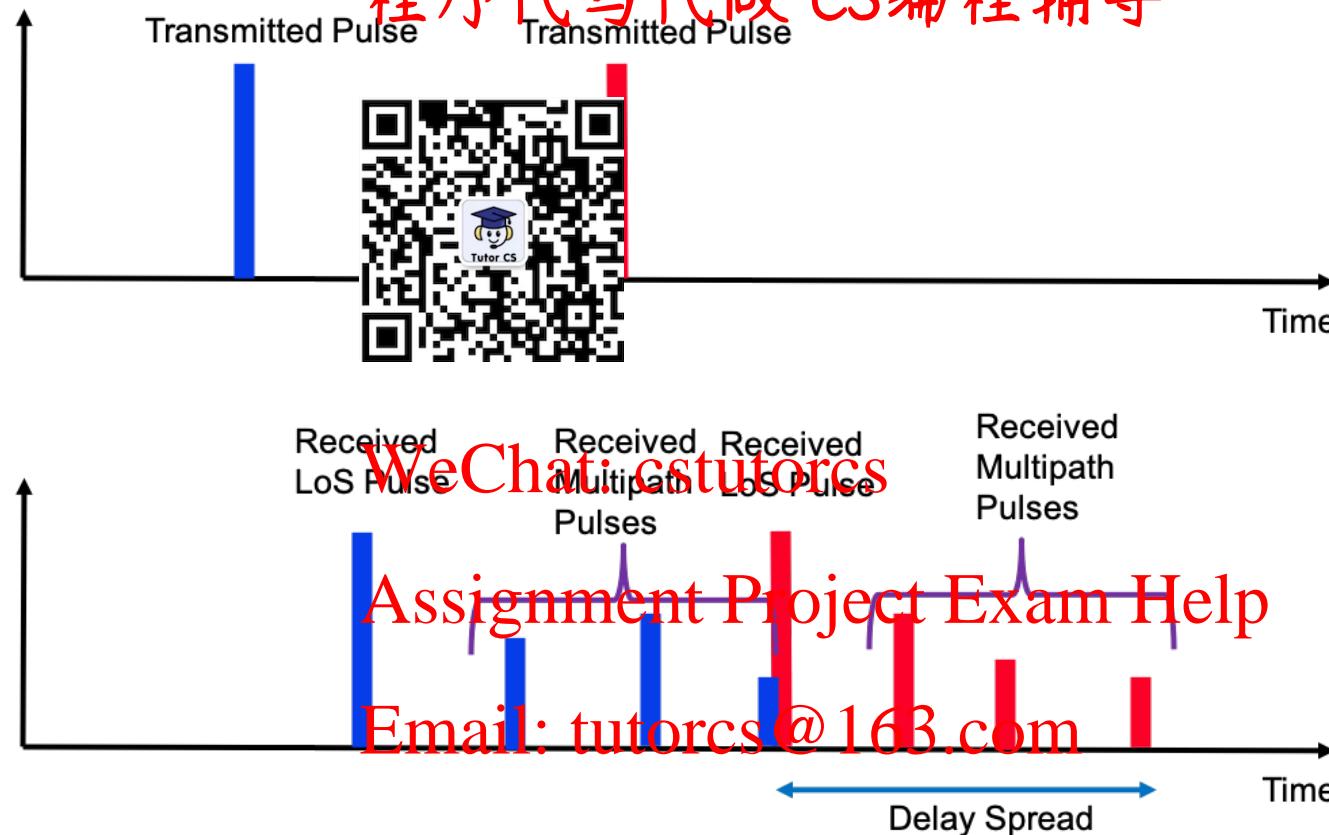

- How long to wait to avoid ISI?
- RSS of late arrivals fluctuate, but consistently diminish on average
- **Delay Spread** = Time between the first (LoS) and the last copy of NLoS
 - $\text{RSS}(\text{last copy of NLoS}) < \text{RSS}_{\text{threshold}}$ (so next symbol can still be decoded)

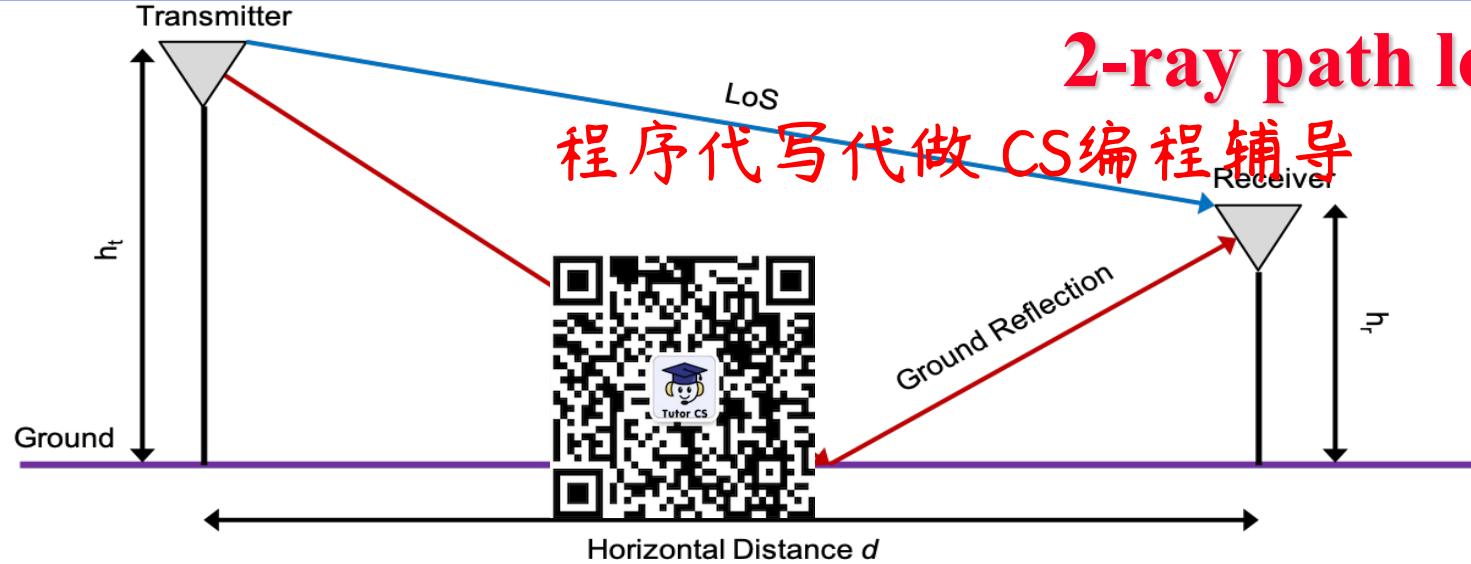

2-ray path loss model

程序代写代做 CS 编程辅导

WeChat: cstutorcs

$$P_R = P_T G_T G_R \left(\frac{h_t h_r}{d^2} \right)^2$$

Assignment Project Exam Help

- pathloss (dB) = $40\log_{10}(d) - 20\log_{10}(h_t h_r)$ [unit gain antenna]
 - Where, h_T and h_R are heights of transmit and receive antennas
 - 1 LoS ray and 1 reflected from the ground
- It is valid for distances larger than $d_{\text{break}} = 4h_T h_R / \lambda$
- Note that the received power becomes *independent of the frequency*.
- Higher the transmit antenna, better the signal at receiver (explains why BSs are installed at a higher location than the ground)

QQ: 749389476

Email: tutorcs@163.com
<https://tutorcs.com>

Example

程序代写代做CS编程辅导

Question: A 2m tall user is holding his smartphone at half of his height while standing 500m from a 10m tall base station. The base station is transmitting a 1.8GHz signal using a transmit power of 30dBm. What is the received power (in dBm) at the smartphone? Assume *unit gain* antennas.



We have $h_t = 10\text{m}$, $h_r = 2\text{m}$, $d = 500\text{m}$, $f = 1.8 \times 10^9 \text{Hz}$, $P_T = 30\text{dBm}$, $c = 3 \times 10^8 \text{ m/sec}$

$$d_{break} = \sqrt[4]{\frac{h_t h_r f}{c}} = \sqrt[4]{\frac{10 \cdot 2 \cdot 1.8 \times 10^9}{3 \times 10^8}} = 480\text{m}$$

This means that the 2-ray model can be applied to estimate the pathloss at 500m.

Email: tutorcs@163.com

$$\text{pathloss} = 20 \log_{10} \left(\frac{d^2}{h_t h_r} \right) = 81.94\text{dB}$$

The received power = $30 - 81.94 = -78.94\text{dBm}$

Path loss exponent

程序代写代做 CS编程辅导

- Empty/free space (no obstacles) → d^{-2} law (Frii's)
 - $PL(dB) = 10\log_{10}(d^2) + C = 10x2x\log_{10}(d) + C$ (a straight line with slope = 2)
- 2-ray model → d^{-4} law
 - $PL(dB) = 10\log_{10}(d^4) + C = 10x4x\log_{10}(d) + C$ (a straight line with slope = 4)
- Measurements in real environments → d^{-n} ($n = 1.5$ to 5.5 , typically 4)
 - $PL(dB) = 10\log_{10}(d^n) + C = 10n\log_{10}(d) + C$ (a straight line with slope = n)

WeChat: cstutorcs
Assignment Project Exam Help

Email: tutorcs@163.com

C is a constant; frequency related (Free-space)


or antenna height related (ray)

<https://tutorcs.com>

Small Scale Fading

程序代写代做 CS 编程辅导

- ❑ Multipath has phase change (due to reflection and different path to travel)
- ❑ Fading: the signal amplitude can change significantly by moving a few centimeters (called *small scale fading*) on small time scale): *half-wavelength path distance can cause 180 degree phase shift!*
 - ❑ **Constructive:** increased amplitude due to alignment of phase
 - ❑ **Destructive:** reduced amplitude due to misaligned phase

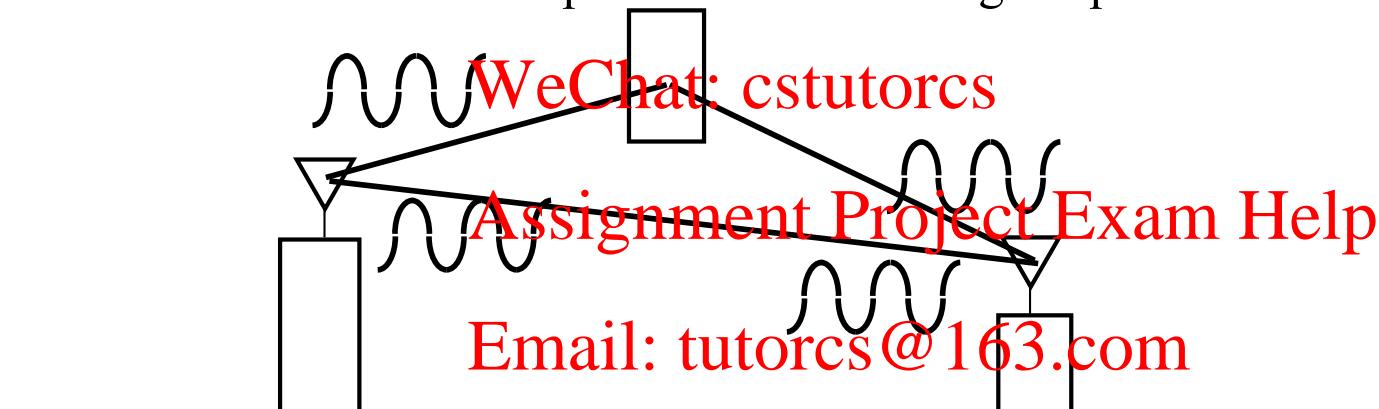


$$\text{Constructive} + \text{Constructive} = \text{Constructive}$$

QQ: 749389476
<https://tutorcs.com>


$$\text{Destructive} + \text{Destructive} = \text{Destructive}$$

Shadowing (large scale fading)

- Shadowing gives rise to *large scale* fading
 - Mobile may be in **shadows** of a building (fading) for *several meters*
 - RSS drops when it is in a shadow

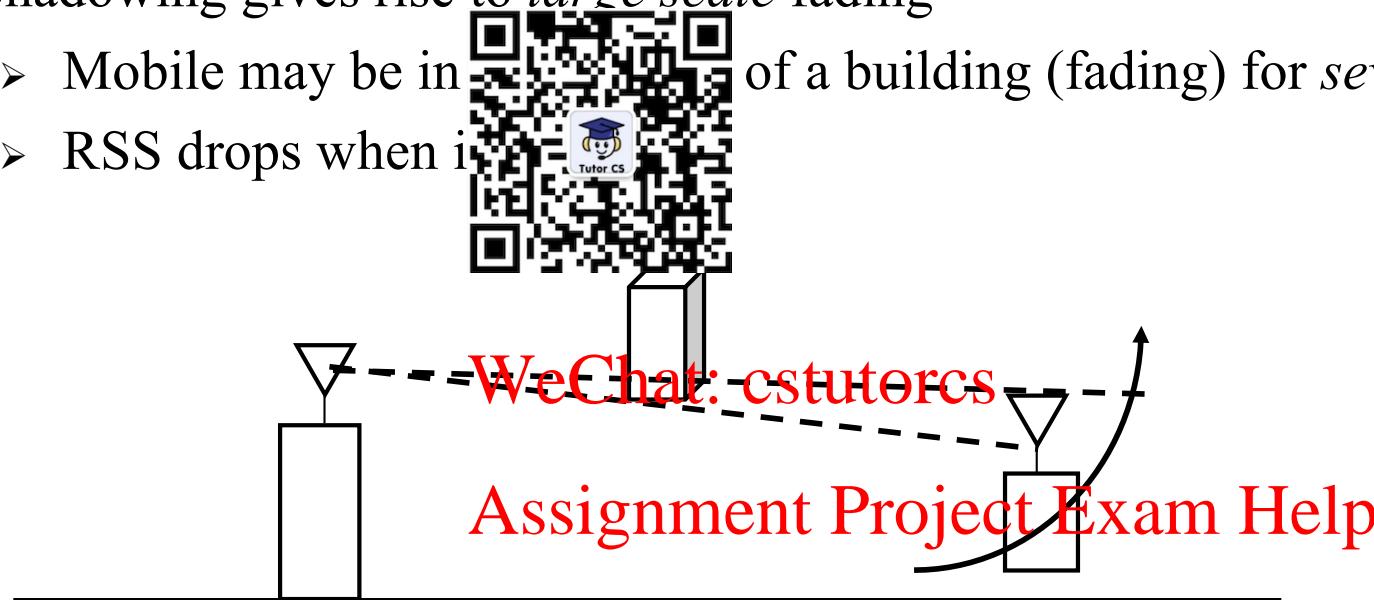

Email: tutorcs@163.com

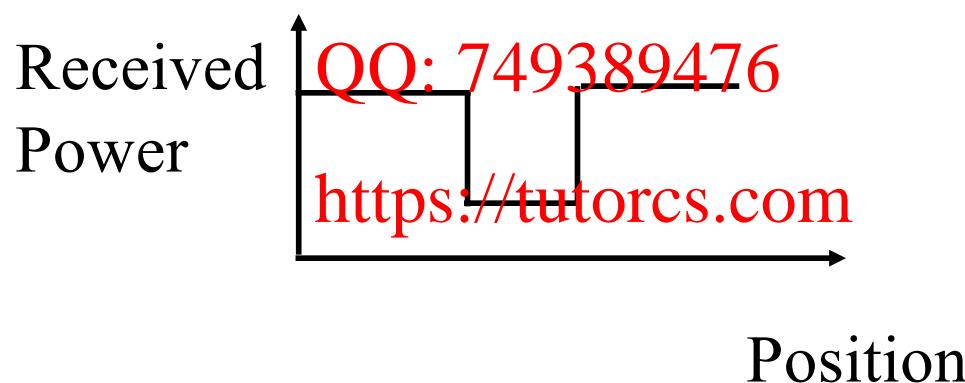

Total Path Loss



Path Loss Alone

Shadowing and Path Loss

Multipath, Shadowing, and Path Loss

WeChat: cstutorcs

Assignment Project Exam Help

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>



MIMO 程序代写代做CS编程辅导



- Traditionally, single antennas were used
- Multiple antennas are increasingly being used to boost quality/reliability and capacity of wireless communications
 - E.g., most recent WiFi routers have multiple antennas
- Multiple input (multiple antennas at the *transmitter*)
- Multiple output (multiple antennas at the *receiver*)
- MIMO – multiple input multiple output

Assignment Project Exam Help
Email: tutorcs@163.com
QQ: 749389476

<https://tutorcs.com>

MIMO Antenna Configurations



- SISO – single input (1 Tx antenna) single output (1 Rx antenna)
- SIMO – single input (1 Tx antenna) multiple output (>1 Rx antenna)
- MISO – multiple input (1 Tx antenna) single output (1 Rx antenna)
- MIMO – multiple input (>1 Tx antenna) multiple output (>1 Rx antenna)
 - 2x2 MIMO – 2 input & 2 output (2 Tx antennas & 2 Rx antennas)
 - 4x2 MIMO – 4 input & 2 output (4 Tx antennas & 2 Rx antennas)
 - 1000x2 MIMO – 1000 input & 2 output (1000 Tx antennas & 2 Rx antennas)

WeChat: cstutorcs

Assignment Project Exam Help

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

Why Multiple Antennas Can Improve Performance? 多天线为什么能改善性能？

- Multi-path scenario: If antennas are spaced $>\lambda/2$ apart, multipath signals from different antennas can be **uncorrelated**
 - multiple (*spatial*) channels using the same frequency!
 - More channels means opportunity to improve *signal quality* and *data rate* WeChat: cstutorcs
- Line-of-Sight (LOS) scenario: multiple antennas at the transmitter can be used to realize *virtual directional antennas* (beamforming)
Assignment Project Exam Help
Email: tutorcs@163.com
 - Increase *coverage* and *signal strength* at a particular direction of choice
<https://tutorcs.com>


Spatial Channels

程序代写代做CS编程辅导



WeChat: cstutorcs

Assignment Project Exam Help

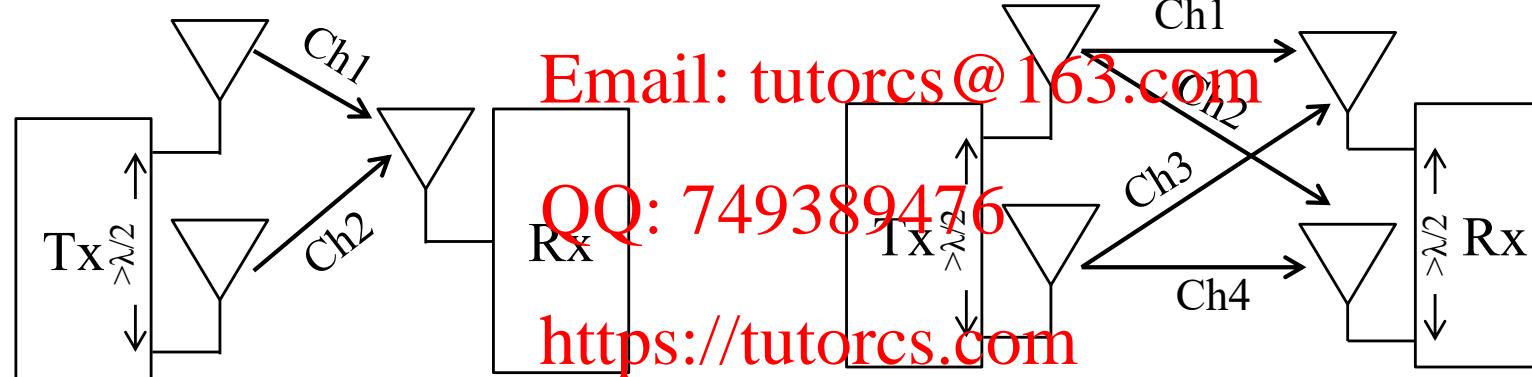

MIMO Techniques

程序代写代做CS编程辅导

- Spatial Diversity (a.k.a. Diversity)
 - Improve *reliability* by exploiting spatial channels
- Spatial Multiplexing (a.k.a. Multiplexing)
 - Improve *data rate* by exploiting spatial channels
- Beamforming
 - Assignment Project Exam Help
 - Increase *coverage* and *signal strength* by exploiting multiple Tx antennas to focus the beam at a narrow angle

<https://tutorcs.com>



Diversity 程序代写代做CS编程辅导

- Total # of independent paths = $N_T \times N_R$
 - N_T = # of transmitter antenna, N_R = # of receive antenna
- Send same data (common information) over $N_T \times N_R$ redundant paths
- Increases reliability – probability that all paths will suffer bad fading at the same time is low
 - SNR at receiver

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

Example 程序代写代做CS编程辅导

- A base station is equipped with an *antenna array* consisting of 100 elements. What is the maximum number of spatial channels that could be received from this base station to an ordinary mobile device equipped with a *single* antenna?

WeChat: cstutorcs

Answer: It is a 100x1 MIMO. 100 spatial channels are possible.

Assignment Project Exam Help

Email: tutorcs@163.com


QQ: 749389476

<https://tutorcs.com>

Multiplexing

程序代写 R 做 CS 编程辅导

- Send different bits  on different channels
- The combined data rate increased due to multiplexing
- Overall multiplexing limited by *degrees of freedom*
- Degrees of freedom = $\min(N_T, N_R)$
WeChat: cstutorcs

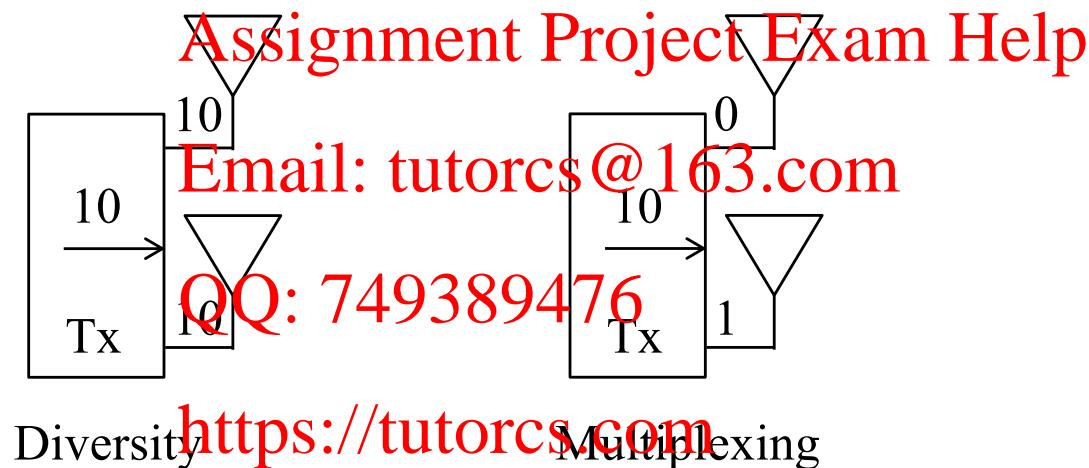

Example

程序代写代做CS编程辅导

- What is the *degrees of freedom* for an 802.11ac WiFi system with the access point having 8 antennas and communicating with a client equipped with 2 antennas?

WeChat: cstutorcs


- Answer: degrees of freedom = $\min(8,2) = 2$

Assignment Project Exam Help

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

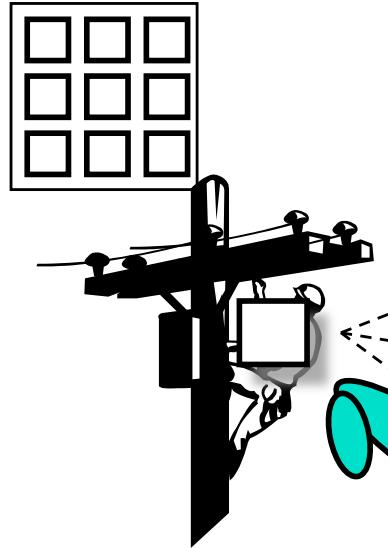

Beamforming

程序代写代做 CS编程辅导



WeChat: cstutorcs



- Phased Antenna Arrays:
Assignment Project Exam Help
Transmit the same signal using multiple antennas
- By phase-shifting various signals → Focus on a narrow directional beam
(increased SNR and long-distance coverage)
- Receiver does the same i.e., focus its reception from a particular BS
- Used when LOS

<https://tutorcs.com>

QFDM 程序代与代做CS编程辅导

- Orthogonal Frequency Division Multiplexing
- Ten 100 kHz channels instead of one 1 MHz Channel



Assignment Project Exam Help

- Frequency band is divided into 256 or more sub-bands.
 - Orthogonal: Peak of one at null of others
- Each carrier is modulated independently with a BPSK, QPSK, 16-QAM, 64-QAM etc. depending on the fading in the channel (frequency selective fading means different channel has different fading and requires different modulation and coding)
- Used in newer generation of WiFi and 4G/5G

Advantages of QEDM


程序代写代做CS编程辅导

- ❑ Robustness against frequency selective burst errors
- ❑ Allows adaptive modulation and coding of subcarriers
- ❑ Robust against narrowband interference (affecting only some subcarriers)
- ❑ Allows pilot subcarriers for channel estimation

WeChat: cstutorcs

Assignment Project Exam Help

Email: tutorcs@163.com

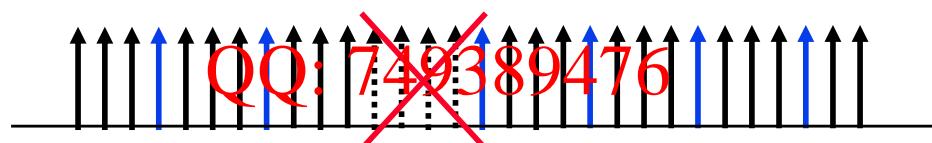

<https://tutorcs.com>

OFDM: Design considerations

程序代写代做CS编程辅导


- Subcarrier spacing
Bandwidth/Number of subcarriers
- Large number of carriers
Smaller data rate per carrier
⇒ Larger symbol duration ⇒ Less inter-symbol interference
- Reduced subcarrier spacing
WeChat: cstutorcs
Assignment Project Exam Help



QEDMA 程序代写代做CS编程辅导

- ❑ Orthogonal Frequency Multiple Access
- ❑ Each user has a subset of users for a few time slots
- ❑ OFDM systems use TDM (in WiFi)
- ❑ OFDMA allows Time + Freq DMA \Rightarrow 2D Scheduling

WeChat: cstutorcs

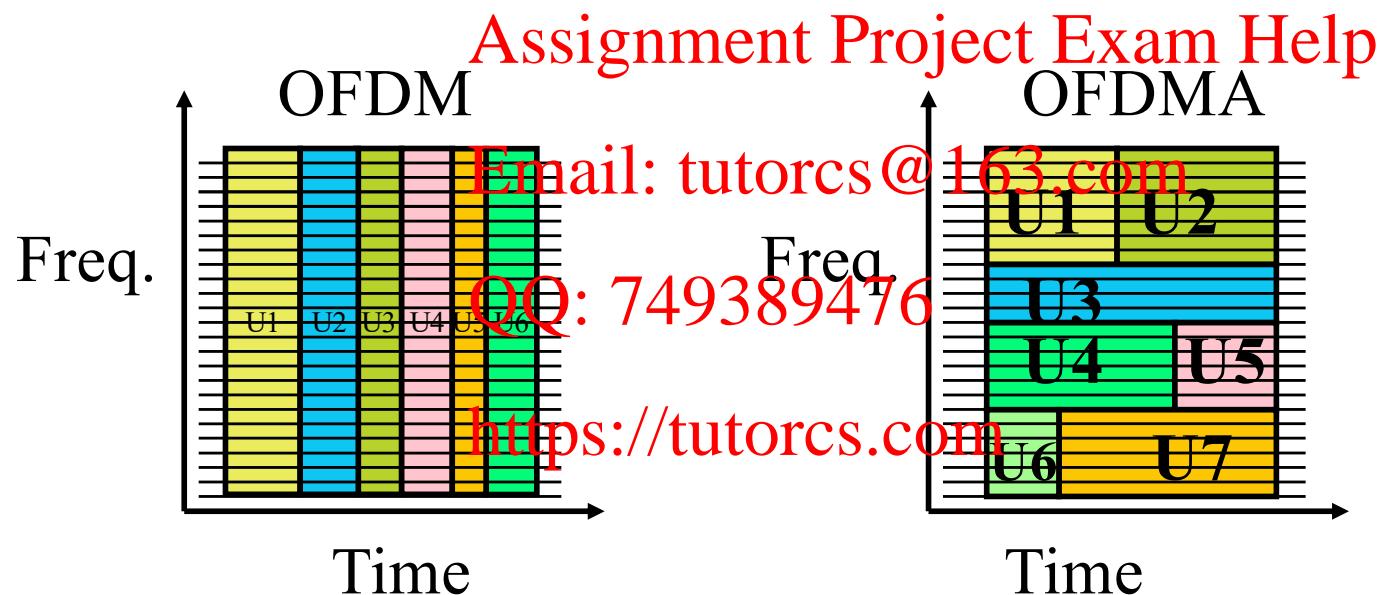

Example

程序代写代做CS编程辅导

- With a subcarrier spacing of 10 kHz, how many subcarriers will there be in an OFDM system with 20 MHz channel bandwidth?

WeChat: cstutorcs

Number of subcarriers = channel bandwidth/subcarrier spacing
= $20 \times 10^6 / 10 \times 10^3 = 2000$ Assignment Project Exam Help

Email: tutorcs@163.com


QQ: 749389476

<https://tutorcs.com>



Effect of Frequency

程序代写代做CS编程辅导

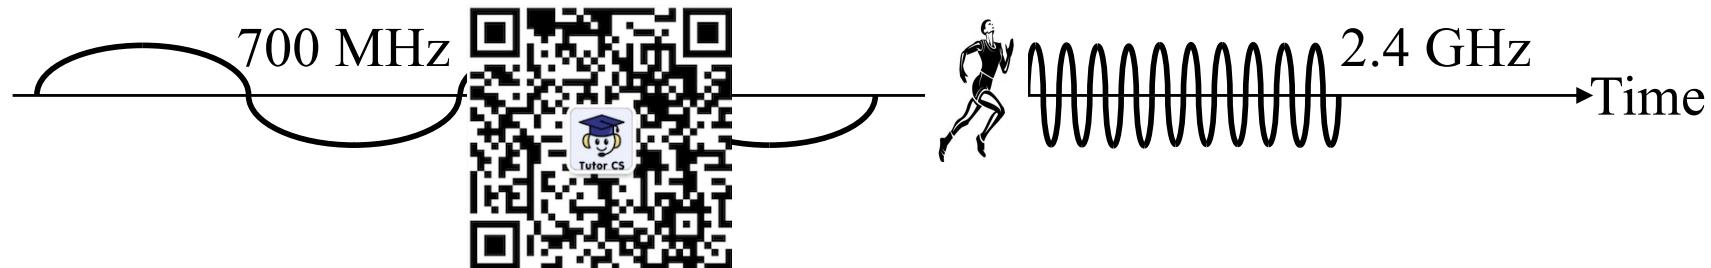

- Higher Frequencies have higher attenuation,
e.g., 18 GHz has 20 dB/m more than 1.8 GHz
WeChat: cstutorcs Assignment Project Exam Help Email: tutorcs@163.com QQ: 749389476
- Higher frequencies need smaller antenna
 $\text{Antenna} \geq \text{Wavelength}/2$, 800 MHz $\Rightarrow 6$
- Higher frequencies are affected more by weather
Higher than 10 GHz affected by rainfall
60 GHz affected by absorption of oxygen molecules
- Higher frequencies have more bandwidth and higher data rate
- Higher frequencies allow more frequency reuse
They attenuate close to cell boundaries. Low frequencies propagate far.

Effect of Frequency (Cont)

- Lower frequencies
⇒ Longer Cell Range
⇒ Good for rural areas
⇒ Smaller number of towers
⇒ Longer battery life
- Lower frequencies require larger antenna and antenna spacing
⇒ MIMO difficult particularly on mobile devices
- Lower frequencies
⇒ Need aggressive MCS, e.g., 256-QAM
- Doppler shift = $v_f/c = \text{Velocity} \times \text{Frequency}/(\text{speed of light})$
⇒ Lower Doppler spread at lower frequencies
- Mobility ⇒ Below 10 GHz



Summary

程序代写代做ES编程辅导



1. Path loss increases at a power of 2 to 5.5 with distance.
WeChat: cstutorcs
2. Fading = Changes in power with changes in position
3. Multiple Antennas: Receive diversity, transmit diversity, multiplexing, and beamforming
Email: tutorcs@163.com
4. OFDM splits a band into many orthogonal subcarriers.
OFDMA = FDMA + TDMA

<https://tutorcs.com>

Acronyms

程序代写代做CS编程辅导

<input type="checkbox"/> BPSK	Binary Phase Shift Keying
<input type="checkbox"/> BS	Base Station
<input type="checkbox"/> dB	DeciBel
<input type="checkbox"/> dBi	DeciBel in Isotropic Radiator
<input type="checkbox"/> dBm	DeciBels milliwatt
<input type="checkbox"/> DFT	Discrete Fourier Transform
<input type="checkbox"/> DMA	Direct Memory Access
<input type="checkbox"/> DSP	Digital Signal Processing
<input type="checkbox"/> DVB-H	Digital Video Broadcast handheld
<input type="checkbox"/> FDMA	Frequency Division Multiple Access
<input type="checkbox"/> FFT	Fast Fourier Transform
<input type="checkbox"/> IDFT	Inverse Discrete Fourier Transform
<input type="checkbox"/> IFFT	Inverse Fast Fourier Transform
<input type="checkbox"/> ISI	Inter-symbol interference
<input type="checkbox"/> kHz	Kilo Hertz
<input type="checkbox"/> LoS	Line of Sight



WeChat: cstutorcs

Assignment Project Exam Help

Email: tutores@163.com

QQ: 749389476

<https://tutores.com>

Acronyms (Cont.)

程序代写代做CS编程辅导

- MHz Mega Hertz
- MIMO Multiple Input Multiple Output
- MS Mobile Station
- OFDM Orthogonal Frequency Division Multiplexing
- OFDMA Orthogonal Frequency Division Multiple Access
- QAM Quadrature Amplitude Modulation
- QPSK Quadrature Phase-Shift Keying
- RF Radio Frequency
- SNR Signal to Noise Ratio
- SS Subscriber Station
- STBC Space Time Block Codes
- TDMA Time Division Multiple Access

WeChat: cstutorcs
Assignment Project Exam Help

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

