

程序代写代做 CS编程辅导



IoT

WeChat: cstutorcs
LoRa-LoRaWAN
Assignment Project Exam Help

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

程序代写 Overview 编程辅导



1. IoT

2. Low Power WANNs

3. LoRa

WeChat: cstutorcs

4. LoRaWAN


Assignment Project Exam Help

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

Internet of Things (IoT): What are *things*?

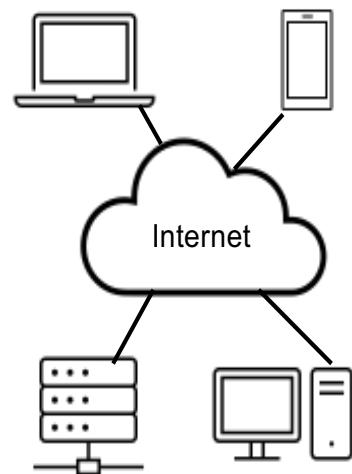

<1% of
the things are
connected

Email: tutorcs@163.com

Anything not a computer is a thing
QQ: 749389476

<https://tutorcs.com>

Why IoT Now? 程序代写代做CS编程辅导

- ❑ To be smart, things need computing, and wireless communications
- ❑ Advancements in sensing technology
 - Many varieties of small form factor, low-power, and low-cost
- ❑ Advancements in computing
 - low-cost micro-computing platforms, e.g., Raspberry Pi, Intel Curie, etc.
 - Cloud computing has become affordable (things can offload computing to the cloud)
- ❑ Advancements in wireless communications
 - Open-source micro-OS, e.g., Tiny Core Linux etc.
 - Low-power wireless communications: extensions of Bluetooth, WiFi, cellular, as well as new technologies, e.g., LoRa and LoRaWAN

<https://tutorcs.com>

IoT Applications and Business Opportunities

- ❑ Digitize all processes as much as possible; requires things to sense, compute and communicate useful data
- ❑ Massive data helps us to gain valuable knowledge, which in turn helps make more intelligent decisions. IoT thus helps businesses to be more efficient, more profitable, more eco-friendly, and so on.
- ❑ All sectors are expected to benefit from IoT: agriculture, health, transport, homes, industry **Assignment Project Exam Help**
- ❑ IoT is the next big evolution of the Internet as it aims to connect hundreds of billions of things in a matter of few years from now **Email: tutorcs@163.com**
- ❑ IoT is touted as the next (4th) industrial revolution: **Industry 4.0** **QQ: 749389476**

<https://tutorcs.com>



Wireless Standards for IoT

程序代写代做 CS编程辅导



Low Power WAN

程序代写代做CS编程辅导

- ❑ Cellular is the current technology for long range (wide area) communication
- ❑ Cellular is high power and high data rate technology (*large battery and very short battery life-time*)
- ❑ Many IoT applications require long-range communications
 - Sensor data collection, meter reading, ...
- ❑ IoT requires low power and low data rate (*small battery lasting for years*)
- ❑ Significant momentum in standardizing new protocols for this new space (**Assignment Project Exam Help (Low Power WAN or LPWAN)**)
 - New cellular standards for 5G, NB-IoT and LTE-M
 - New WiFi standards: IEEE 802.11ah
 - New industry-alliance standards: LoRaWAN

<https://tutorcs.com>



WeChat: cstutorcs

Assignment Project Exam Help
(Low Power WAN or LPWAN)

Email: tutors@163.com

QQ: 749389476

Cellular LPWAN

程序代写代做 CS 编程辅导

- NB-IoT/LTE-M for low-data rate, intermittent connectivity, massive device density
- Massive connectivity of a BS with signalling overhead even at low data rates; thus, handover etc. not supported with NB-IoT/LTE-M
- NB-IoT: 180kHz gives 28dB enhanced coverage; 128 times retransmission allowed
- LTE-M allows higher bandwidth and higher mobility than NB-IoT
- New equipment class and air interface for NB-IoT/LTE-M to allow the same BS connect both existing and IoT devices




WeChat: cstutorcs

Assignment Project Exam Help

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

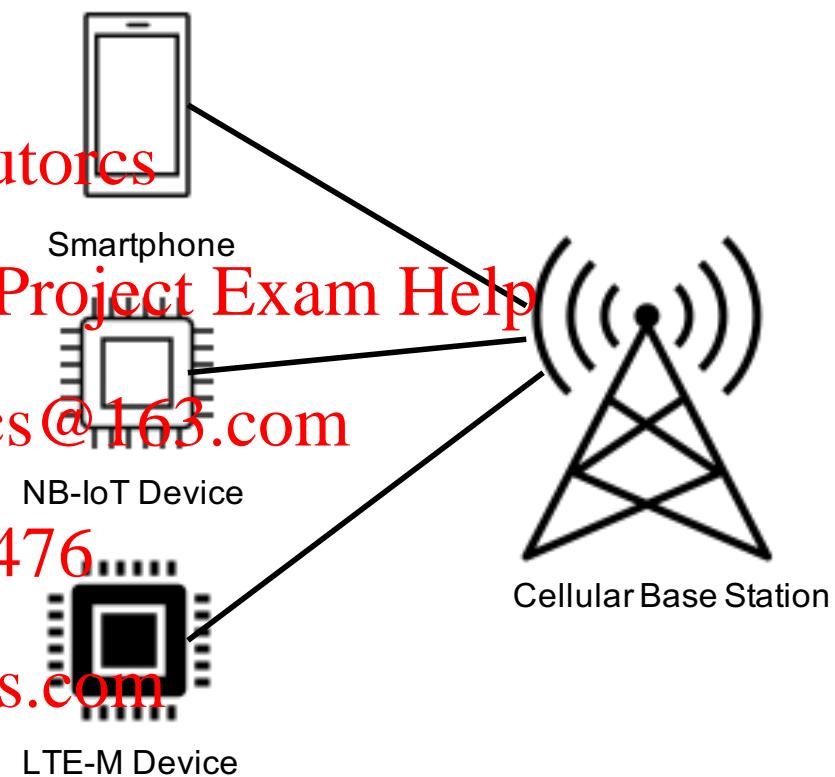

LoRa 程序代写与代做CS编程辅导

- LoRa-LoRaWAN is a rapidly growing IoT communications standard
- Patented PHY technology
- Original company: Chipcon (Silicon Labs); later acquired by Semtech Corp; later formed LoRa alliance with over 500+ members
- Really long range: up to 15km in rural and 5km in urban
- Sub-GHz ISM (license-exempt) band
 - 915 MHz in US. Power limit. No duty cycle limit.
 - 868 MHz in Europe. 1% and 10% duty cycle limit
 - 433 MHz in Asia
- Very narrow channels: 125kHz or 500kHz
- Modulation: Chirp spread spectrum

WeChat: cstutorcs
Assignment Project Exam Help


Email: tutorcs@163.com

QQ: 749389476


<https://tutorcs.com>



Chirps 程序代写代做CS编程辅导

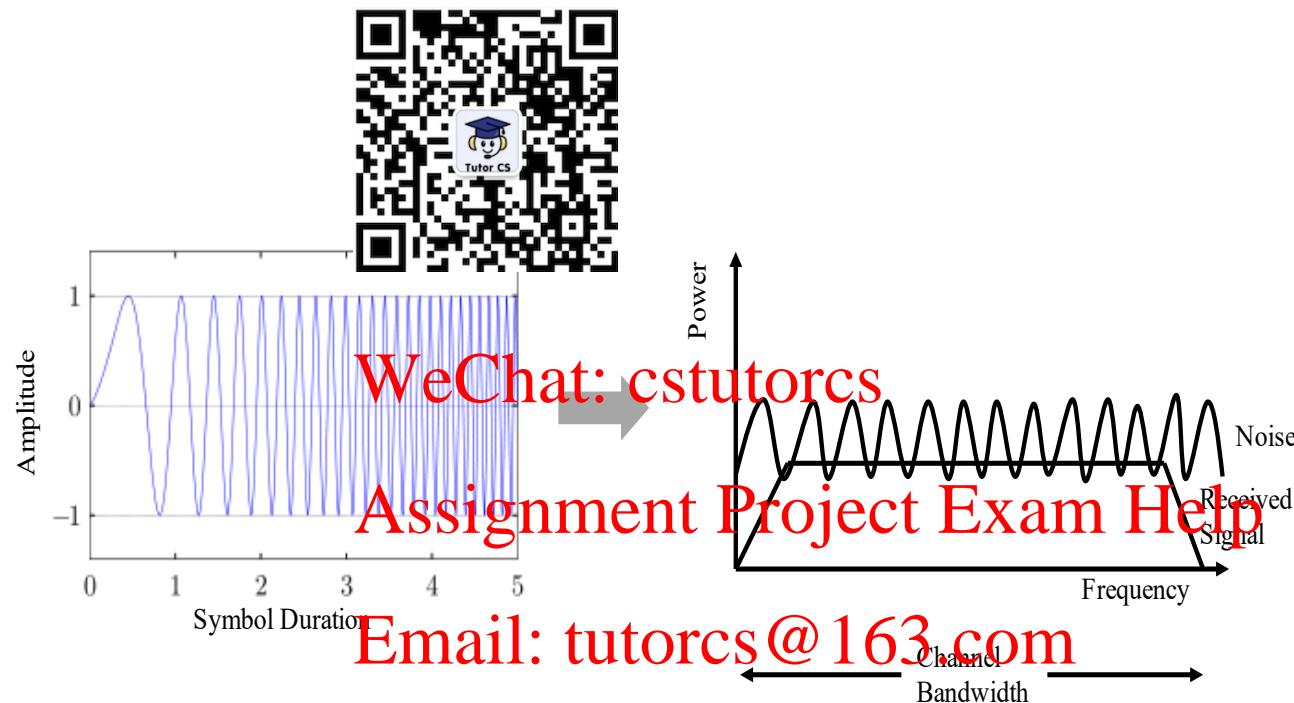

Up Chirp 程序代写 Down Chirp CS 编程辅导

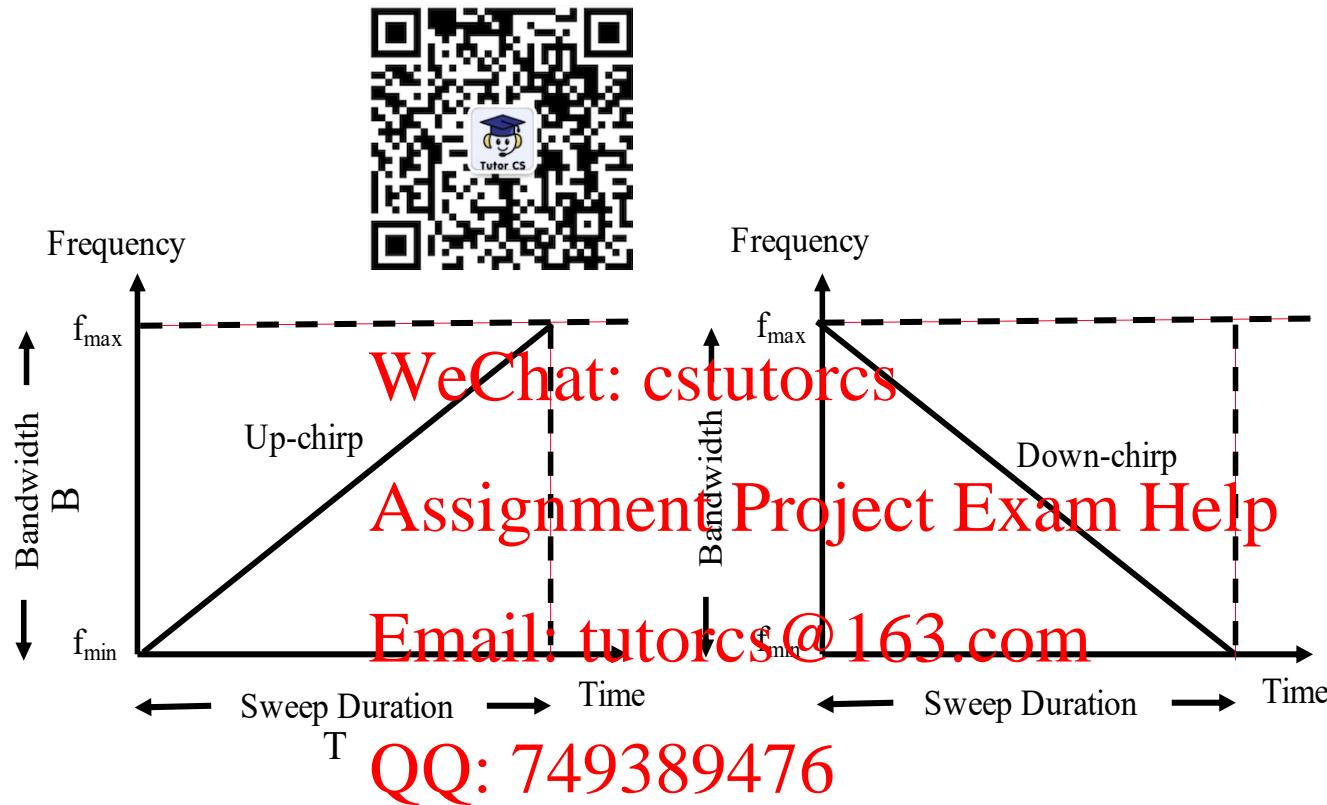

- Frequency increases/decreases linearly
- Frequency sweeping speed (k) = B/T Hz/sec

Example 程序代写代做CS编程辅导

- How long does it take for a 1 MHz/s *linear* chirp to sweep the entire bandwidth of a 500 kHz channel?



WeChat: cstutorcs

$$T = B/k = (500 \times 10^3)/10^6 = 500 \text{ ms}$$

Assignment Project Exam Help

Email: tutorcs@163.com

QQ: 749389476


<https://tutorcs.com>

LoRa Modulation with Chirps


程序代写代做 CS 编程辅导

- Upchirps for uplink and downchirps for downlink
- 1 chirp = one symbol: symbol duration = chirp duration
- Shifts the starting frequency by Δf for each chirp

4-ary modulation
4 different shifts
 $\log_2(4) = 2$ bits per symbol or chirp
For non-zero shift, chirp is 'broken' into 2 pieces

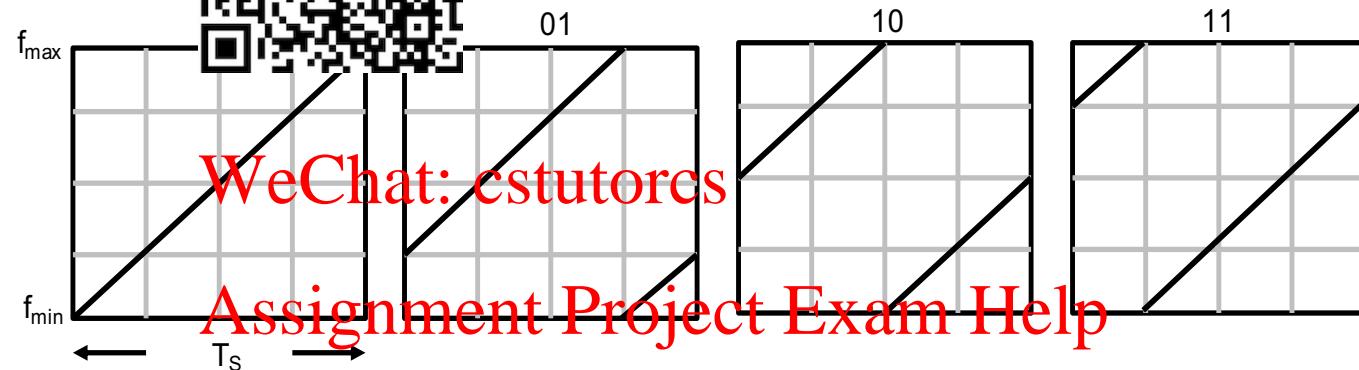

WeChat: cstutorcs
Assignment Project Exam Help
Email: tutorcs@163.com


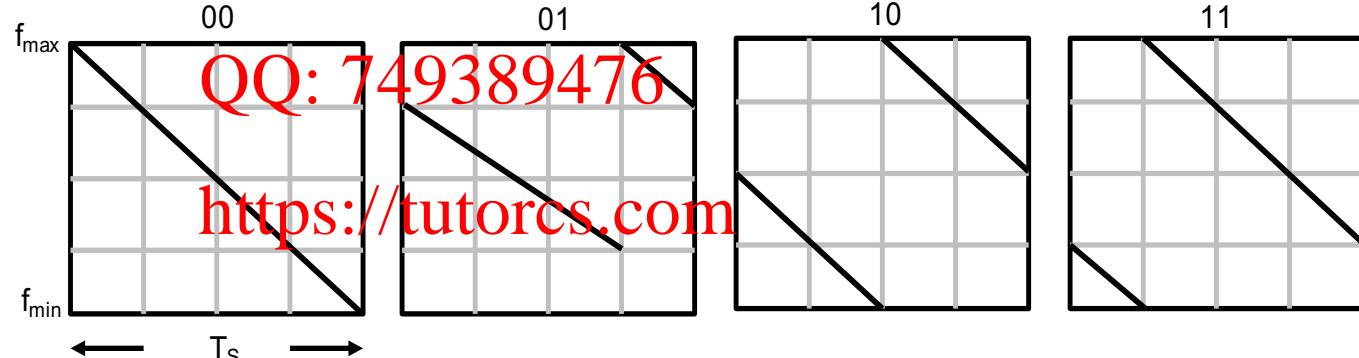


(b) Downchirps

Spreading Factor (SF)

程序代写代做 CS 编程辅导

- SF, an integer, controls the modulation order and the symbol duration
- SF bits per symbol; Modulation order (M) = 2^{SF} ; $SF = \log_2(M)$
- Symbol/chirp duration = $2^{SF}/B$
- Increasing SF by 1 would double the modulation order and also double the symbol duration
- Orthogonality: two transmissions with different SF would not interfere even using the same channel/frequency

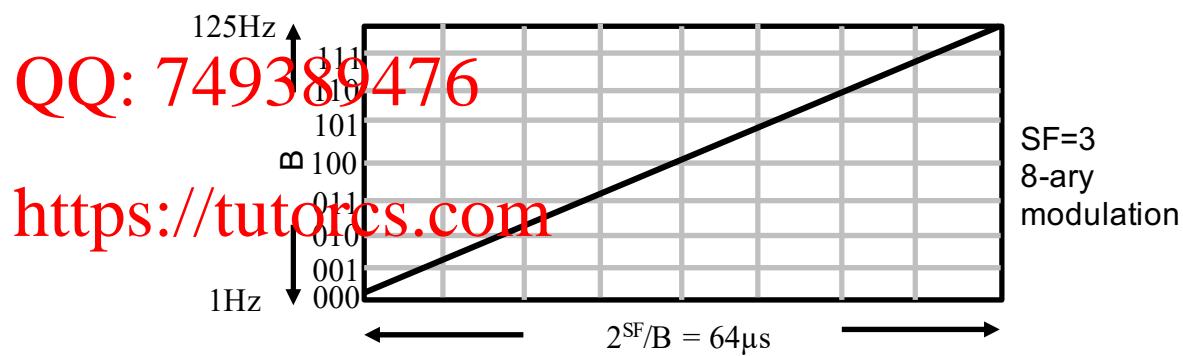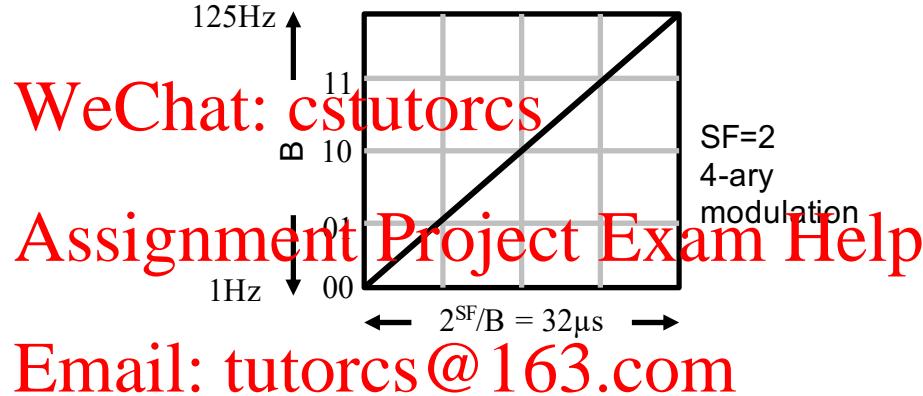

Example

程序代写代做CS编程辅导



How long a LoRa module would take to transmit one symbol over a 125 kHz channel if it was configured with SF=10?

WeChat: cstutorcs

Solution:

Assignment Project Exam Help

$$T_s = 2^{SF}/B = 2^{10}/125 \text{ ms} = 8.192 \text{ ms}$$

QQ: 749389476

<https://tutorcs.com>

LoRa Data Rate

程序代写代做CS编程辅导

- In contrast to most wireless networks, data rates for LoRa decreases with increasing SF, i.e., increasing the number of bits per symbol does not increase data rate because the symbol duration is also increasing exponentially



$$\text{Data rate} = \text{bits per symbol} \times \text{symbol rate} \times \text{coding rate} = SF \times \frac{B}{2^{SF}} \times CR \text{ bps.}$$

WeChat: cstutorcs

Where B is in Hz and CR is the FEC ratio between actual data bits and the total encoded bits

Assignment Project Exam Help

- CR options: 4/5, 4/6, 4/7, or 4/8
- SF is the control knob to trade-off between range and data rate
- SF options: 7, 8, 9, 10, 11 or 12

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

Example 程序代写代做CS编程辅导



A LoRa sensor is attached to a 125kHz uplink channel. What would be its effect on the data rate if it is forced to use a spreading factor of 10 and 50% redundancy for forward error correction?

WeChat: cstutorcs

Solution:

Assignment Project Exam Help

Email: tutorcs@163.com

$SF=10; 2^{SF}=1024; CR=0.5$

Symbol rate = $B/2^{SF}$ sym/s ~~QQ: 749389476~~ $125,000/1024$ sym/s

Effective data rate $= 10 \times 125000/1024 \times 0.5 = \sim 610$ bps

<https://tutorcs.com>

LoRa Energy Consumption

- ❑ SF affects energy consumption of LoRa messages
- ❑ Energy consumed = transmission power x message air-time
- ❑ Shorter SF would consume less energy (higher data rate and hence shorter message air-time), and vice versa
- ❑ LoRa implements adaptive data rate to select the minimum possible SF depending on the channel
- ❑ Devices closer to the BS (LoRa gateway) would use shorter SF and enjoy longer battery life compared to the ones far away from the BS


Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>


LoRaWAN: protocol stack

- LoRa (PHY) is patented
- LoRaWAN (MAC) is open

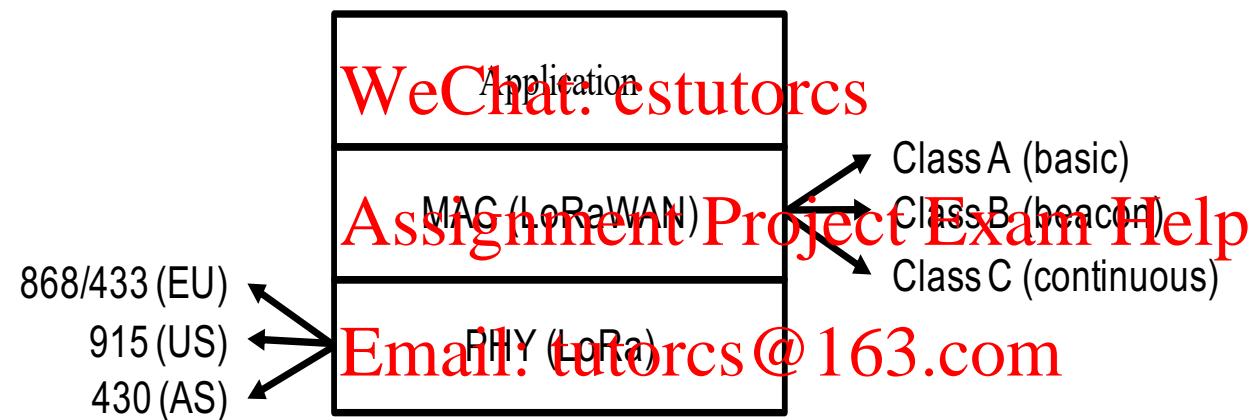

LoRaWAN End-to-end Network

- LoRa gateways operate at P1
- Network server runs the M

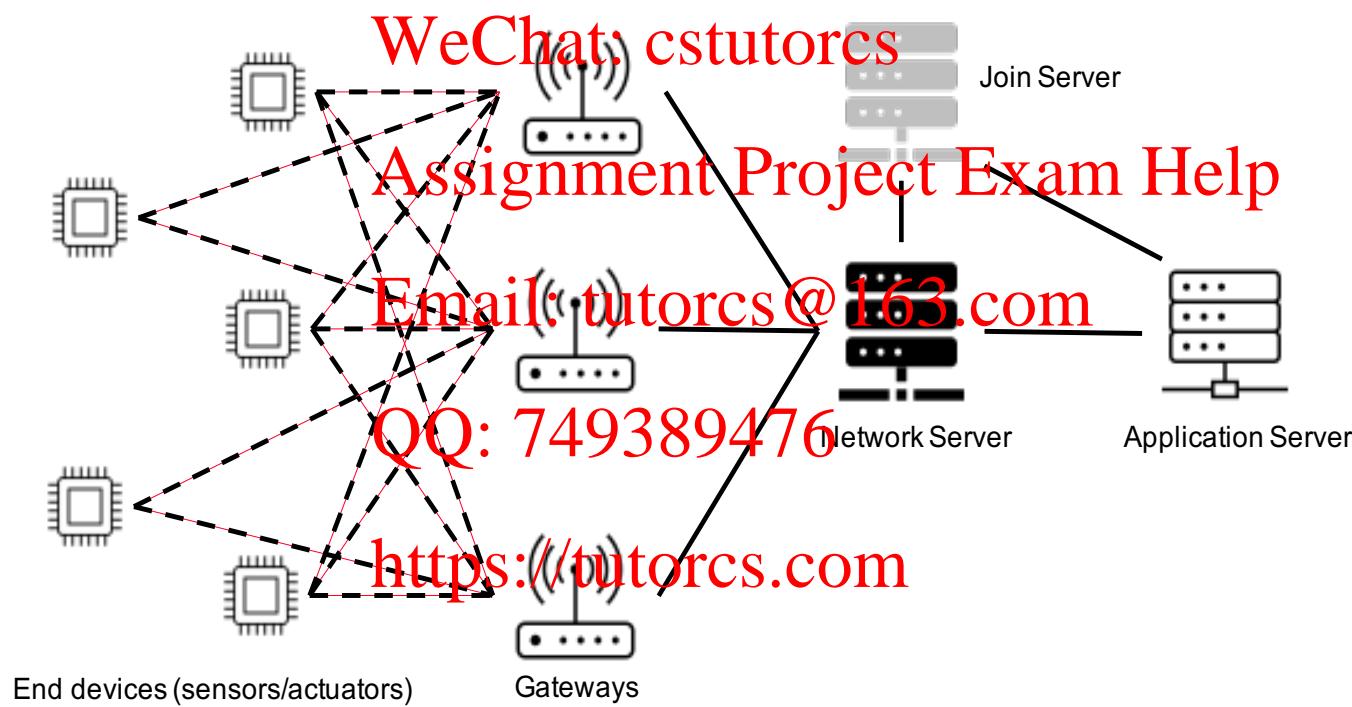


LoRa Packet Format

程序代写代做 CS 编程辅导


- ❑ Preamble: few upchirps a few down chirps; synchronises clocks at transmitter and receiver
- ❑ Header is optional: auto configuration of payload length, coding rate, use of CRC
- ❑ Header would consume more energy; manual configuration at start of each session would eliminate the need for the header

WeChat: cstutorcs

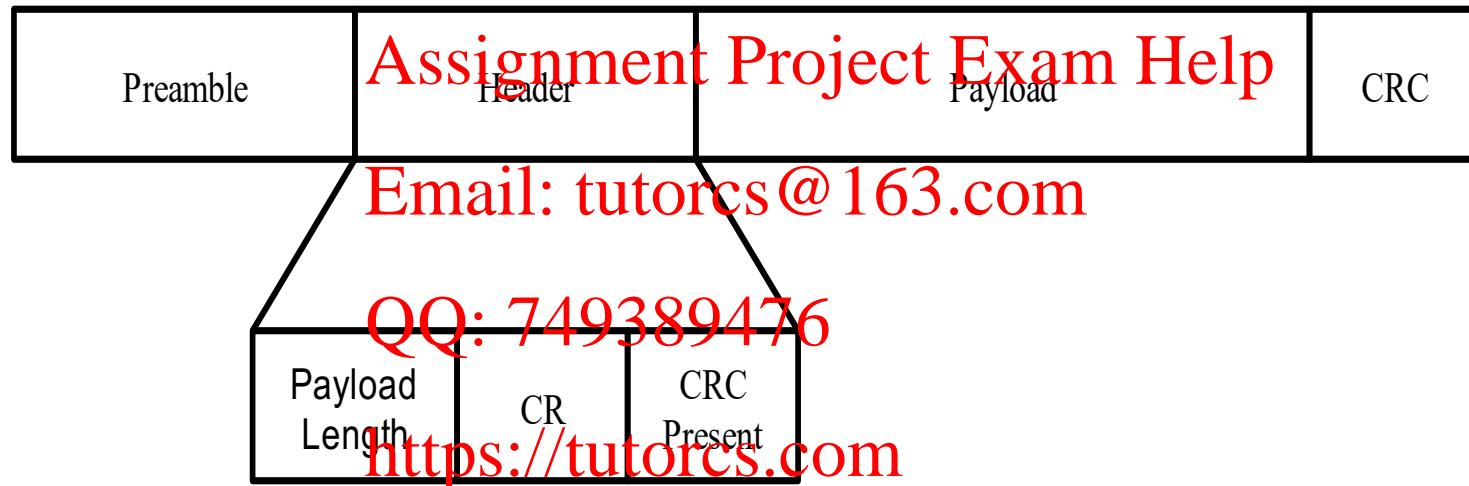

LoRa Device Classes

- **Class A:** Uplink transmission followed by 2 short downlinks; sleeps most of the time; lowest traffic and lowest energy consumption. Pure Aloha (contention-based) for channel access, performs well under light traffic - but under saturated traffic efficiency = $18.4\% = 1/2e$
- **Class B:** Class A + extra receive window at scheduled time following the beacon from Gateway; suits devices that require more frequent communication from the server, e.g., sensors with actuation functions as well
- **Class C:** Can receive anything while transmitting. Almost always awake and typically connected to the grid.

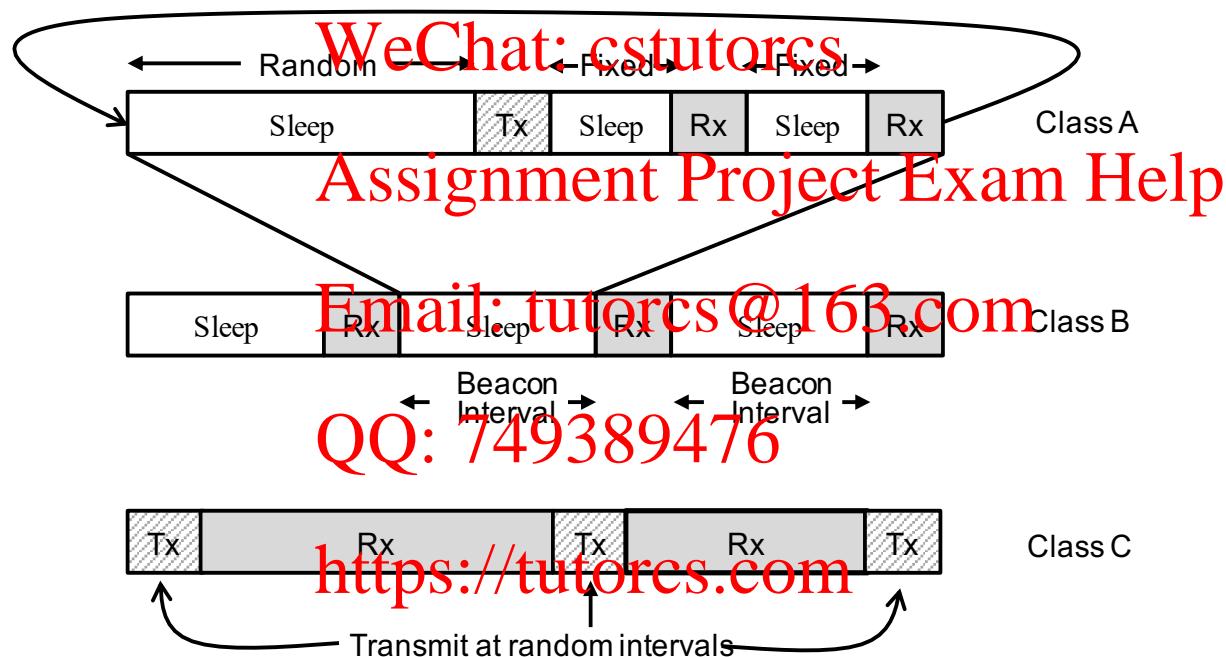

LoRa-LoRaWAN: Summary

程序代写代做 CS 编程辅导

1. LoRa is designed to work with narrow bandwidth channels, long symbols, and low data rates; data rate is sacrificed for longer range.
2. LoRa modulation is a variation spectrum where the modulation order as well as the frequency sweeping speed of the signal is controlled by an integer variable called spreading factor (SF).
3. For a given bandwidth B Hz and a spreading factor SF, modulation order = 2^{SF} and symbol duration = $2^{\text{SF}}/B$. In communications, increasing the modulation order actually decreases the data rate in LoRa.
4. For a given bandwidth, the larger the SF, the longer the symbol duration and longer the range at the expense of reduced data rates.
5. Orthogonality of the SF enables transmission of multiple LoRa chirps at the same frequency channel and at the same time slot.
6. There are 6 valid SF values in LoRa: 7 to 12.
7. LoRa data contains either all upchirps or all downchirps depending on the direction of communication (uplink vs. downlink); upchirps and downchirps are never mixed within the same LoRa packet except for the preamble field.
8. LoRa end devices broadcast to all gateways within range. The gateway with the best connectivity replies back.
9. LoRa gateways are only PHY-layer devices; all MAC processing is done at the network server.
10. LoRa supports 3 classes of devices. Class A devices can sleep most of the time to conserve energy but allow most restricted access from the network. Class B devices can be accessed more frequently by the network at the expense of higher energy consumption. Class C devices are usually powered by the mains; they never sleep and hence can be reached by the network at any time without delay.



WeChat: cstutorcs

Assignment Project Exam Help

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>