

程序代写代做 CS编程辅导



PHY FUNDAMENTALS I

Coding and Modulation

WeChat: cstutorcs
Assignment Project Exam Help

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

程序代写代做CS编程辅导

1. Frequency, Wavelength, Amplitude, and Phase
2. Electromagnetic Waves
3. Time and Frequency Domains
4. Decibels
5. Coding and modulation
6. Channel Capacity (Nyquist's and Shannon's Theorems)
7. Hamming Distance and Error Correction
8. Multiple Access Methods (TDMA, FDMA, CDMA)
9. Spread Spectrum (Frequency Hopping and Direct Sequence)
10. Doppler Shift, Doppler Spreading, Coherence Time
11. Duplexing



WeChat: cstutorcs

Assignment Project Exam Help


Email: tutorcs@163.com

<https://tutorcs.com>

QQ: 749389476

Frequency, Period, and Phase

- A Sin($2\pi ft + \phi$), A = Amplitude, f=Frequency,
 ϕ = Phase, Period T = $1/f$.
Frequency is measured in sec or Hertz

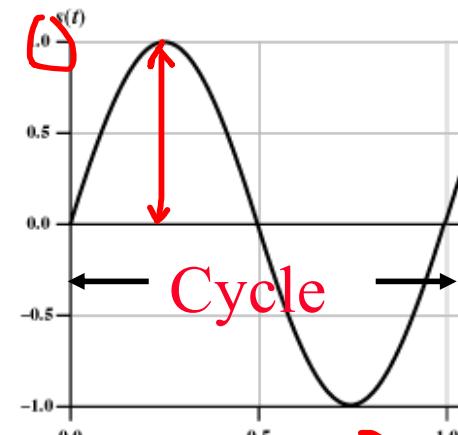

WeChat: cstutorcs

Assignment Project Exam Help

$$\pi = 180^\circ$$



$$\frac{\pi}{2} = 90^\circ$$

$$\frac{\pi}{4} = 45^\circ$$

Email: tutorcs@163.com

QQ: 749389476

<https://tutores.com>

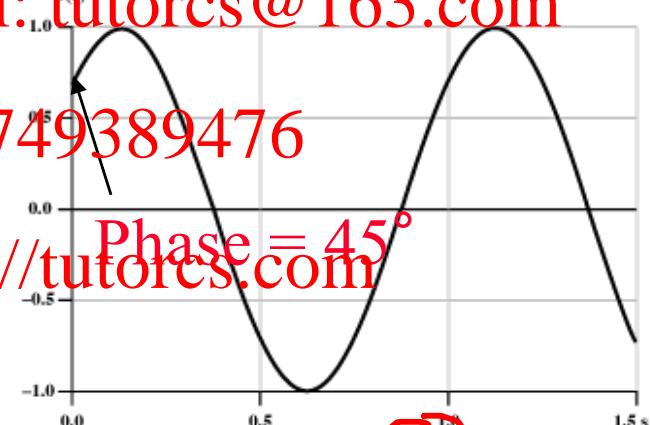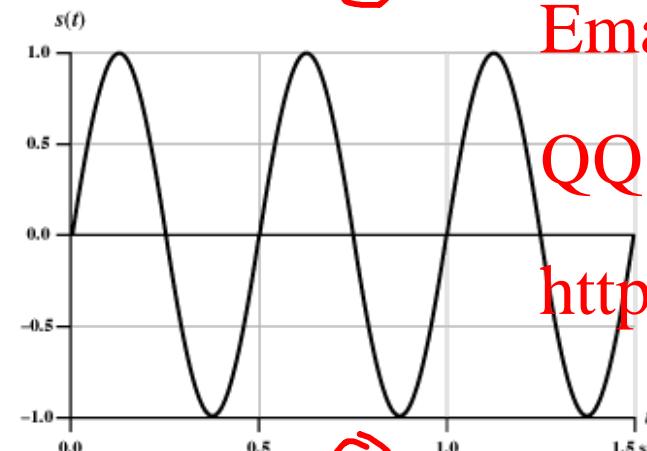

Phase and Amplitude: 2D Representation


- Sine wave with a phase of 45°

程序代写代做 CS 编程辅导

$$A=1 \sin\left(2\pi ft + \frac{\pi}{4}\right) = \cos\left(\frac{\pi}{4}\right) + \cos(2\pi ft) \sin\left(\frac{\pi}{4}\right)$$
$$= \cos\left(\frac{\pi}{4}\right) + \frac{1}{\sqrt{2}} \cos(2\pi ft)$$


$$Q = \cos(2\pi ft)$$

In-phase component I + Quadrature component Q

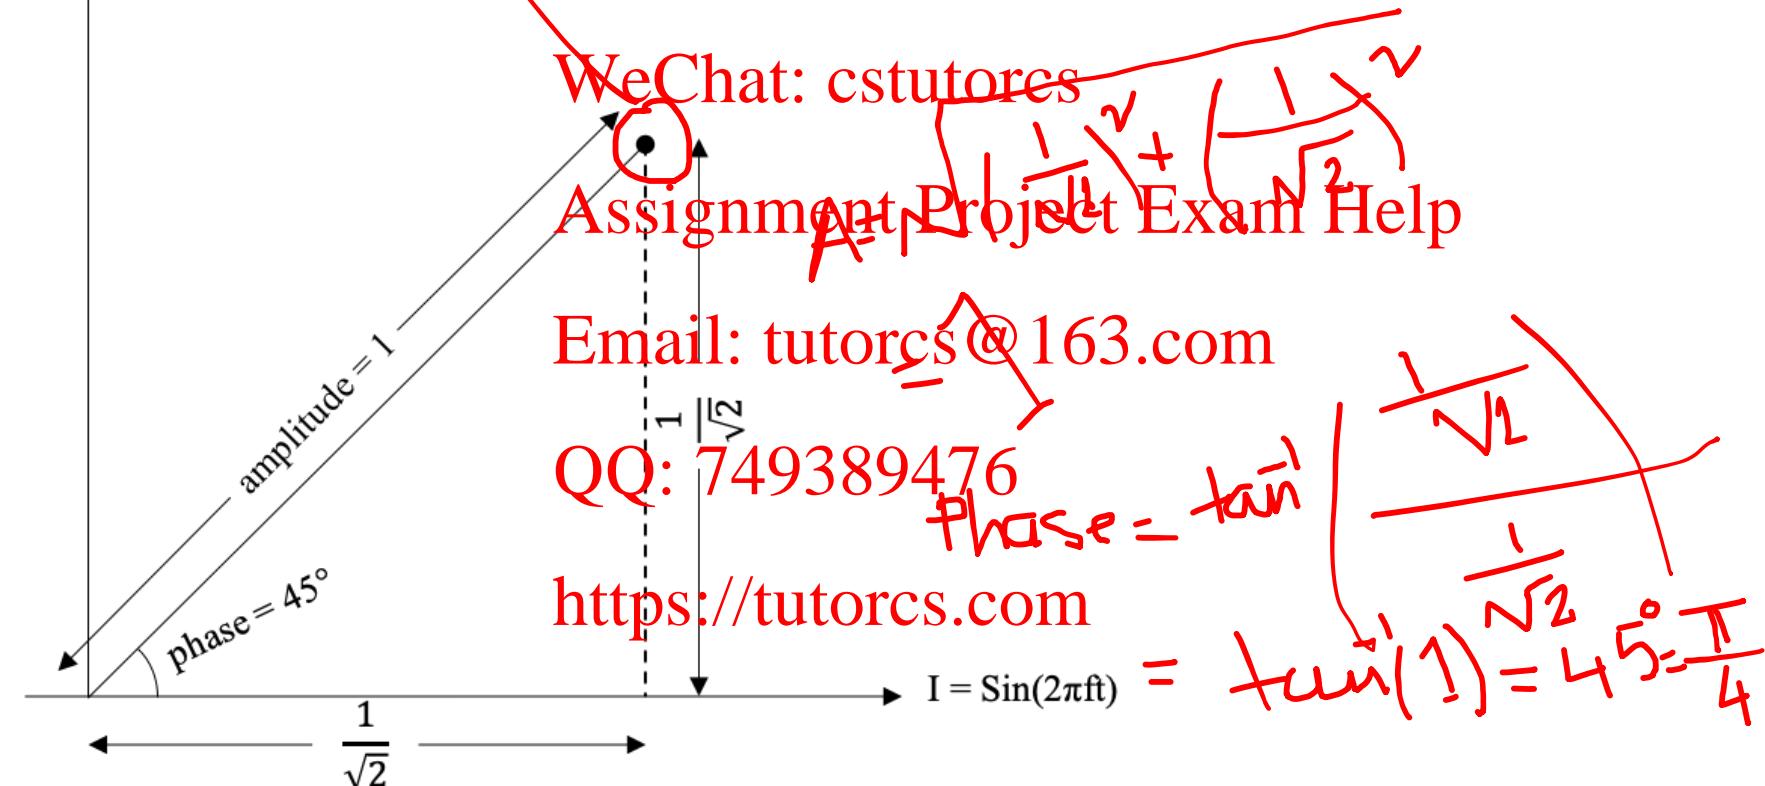

Wavelength

程序代写代做 CS 编程辅导

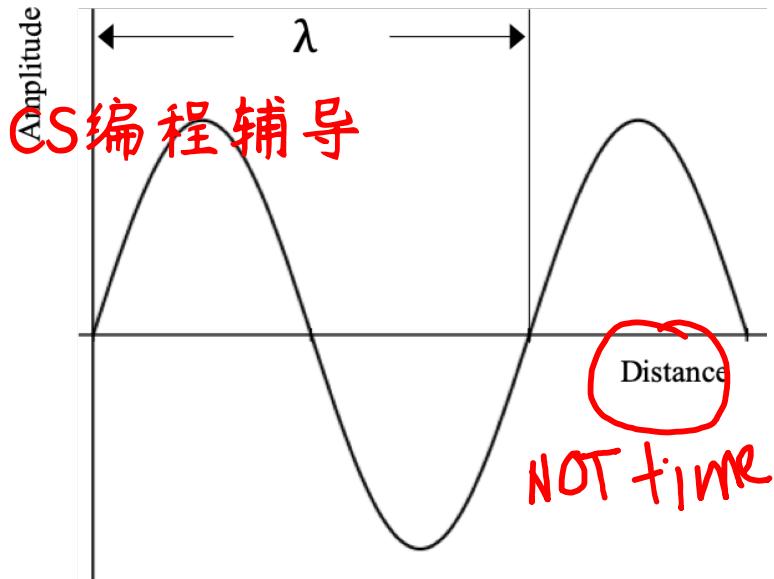

- Distance occupied by one cycle
WeChat: cstutorcs
- Distance between two points of corresponding phase in two consecutive cycles
Assignment Project Exam Help
- Wavelength = λ
- Assuming signal velocity v
 - $\lambda = vT$ **Email: tutorcs@163.com**
 - $\lambda f = v$ **QQ: 749389476**
 - $c = 3 \times 10^8 \text{ m/s}$ (speed of light in free space) = **$300 \text{ m}/\mu\text{s}$**

Example: converting frequency to wavelength

□ Frequency = 2.4

Wavelength =



WeChat: cstutorcs
300 m/ μ s

$$2.5 \times 10^9 = \frac{1}{120 \times 10^3} = 120 \text{ mm} = 12 \text{ cm}$$

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

Example: converting wavelength to frequency

- Wavelength = λ



Frequency

m)

$$= \frac{(3 \times 10^8 \text{ m/s})}{(5 \times 10^{-3} \text{ m})}$$

$$= \frac{(300 \times 10^9)}{5} = 60 \text{ GHz}$$

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

Well-known frequencies & wavelengths



- The higher the frequency, the smaller the wavelength
- 900 MHz has a wavelength of 33.33 cm
- 2.4 GHz has a wavelength of 12.5 cm
- 60 Ghz has a wavelength of only 5 mm (this technology is called *millimeter wave or mmWave*)

WeChat: cstutorcs


Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

Time and Frequency Domains

©2020 Mahbub Hassan

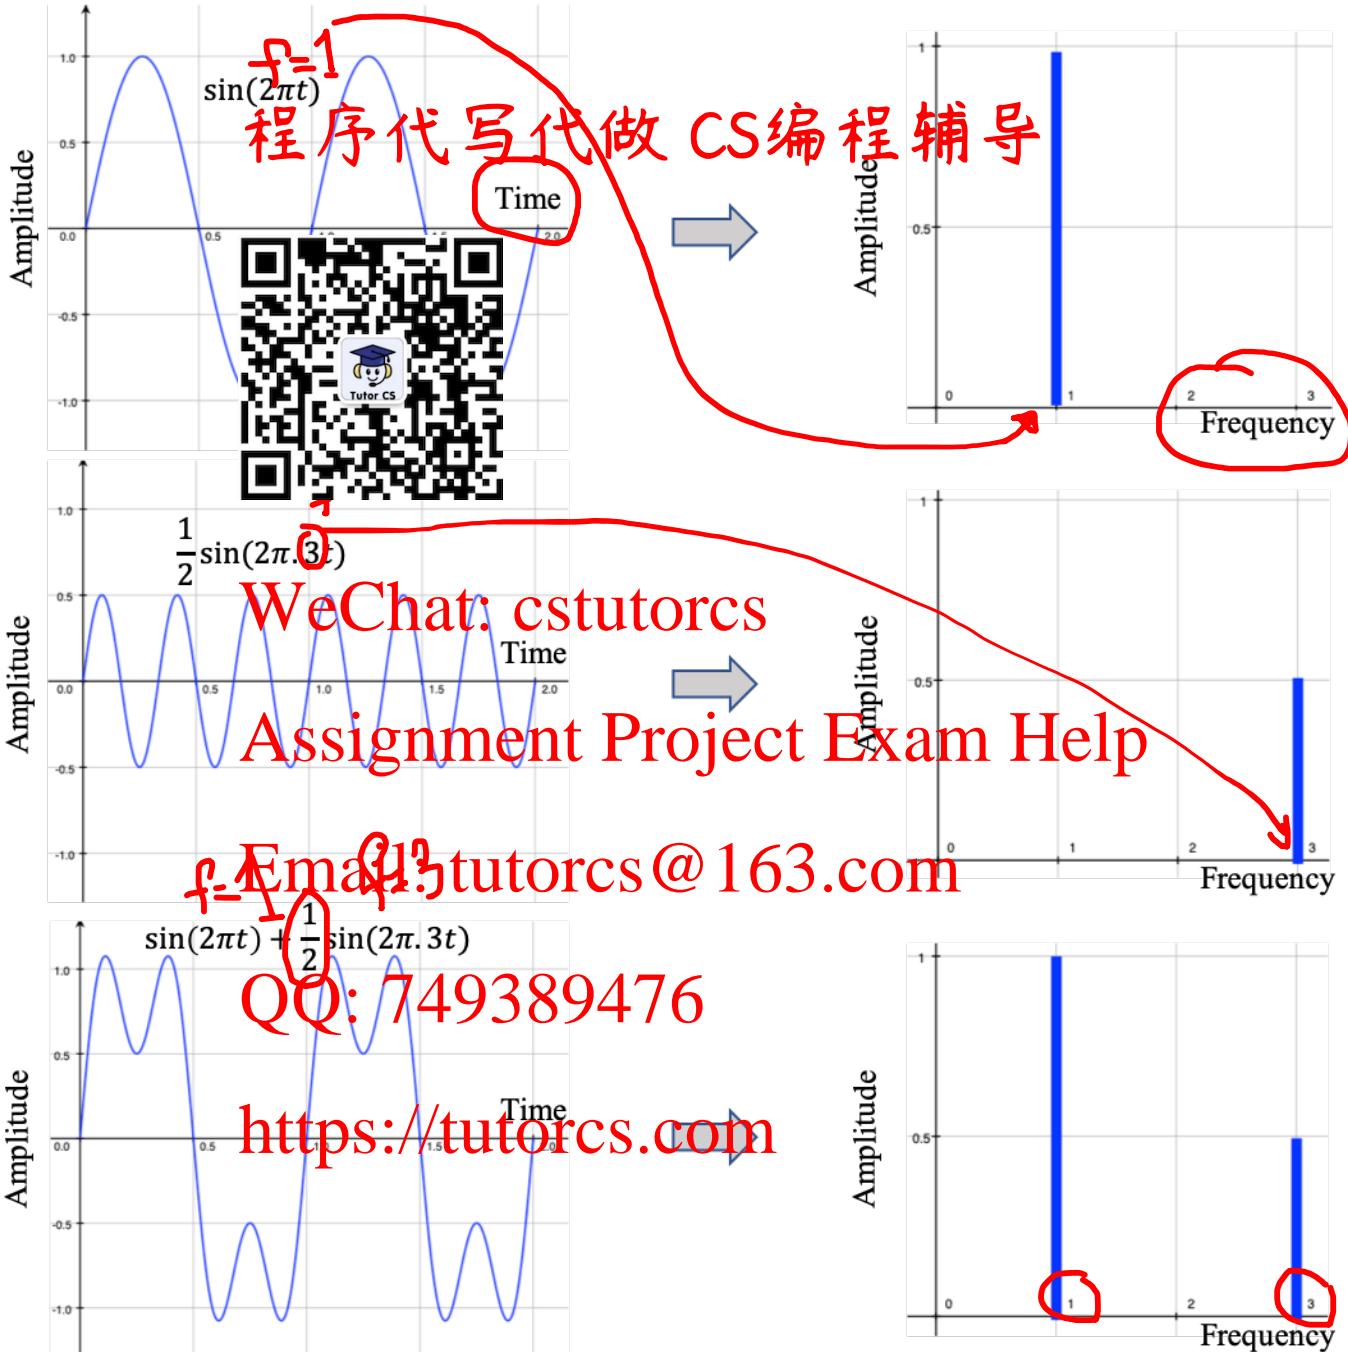


Electromagnetic Spectrum

- Wireless transmission via the airwaves
 - Airwaves are frequencies
- Useful frequencies constitute the Spectrum
- Spectrum is 'virtual'
WeChat: cstutorcs
 - We cannot touch and feel
- A gift from nature (the force field)
Assignment Project Exam Help
 - Has been there ever since earth was created
- A (limited) natural resource
Email: tutorcs@163.com
QQ: 749389476

<https://tutorcs.com>




Electromagnetic Spectrum

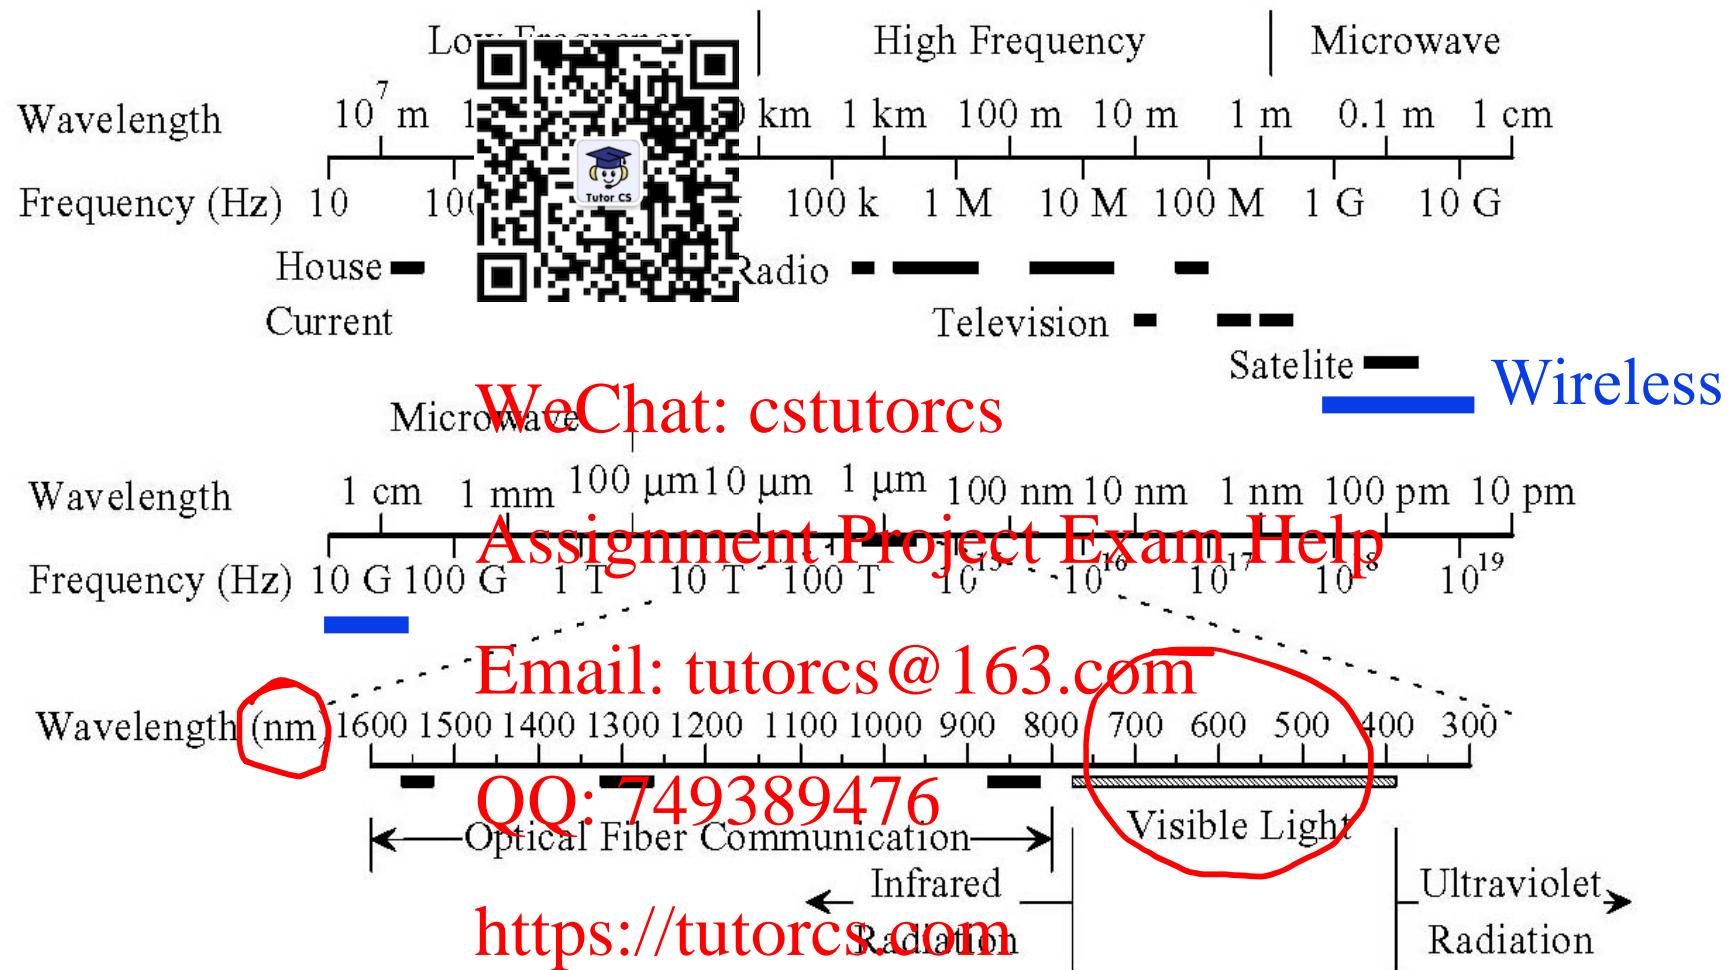

- Wireless communication mostly uses 100 kHz to 6 GHz
- > 6 GHz are currently being explored and 60 GHz is used in some latest WiFi products

©2020 Mahbub Hassan

Spectrum use by TV and cellular services

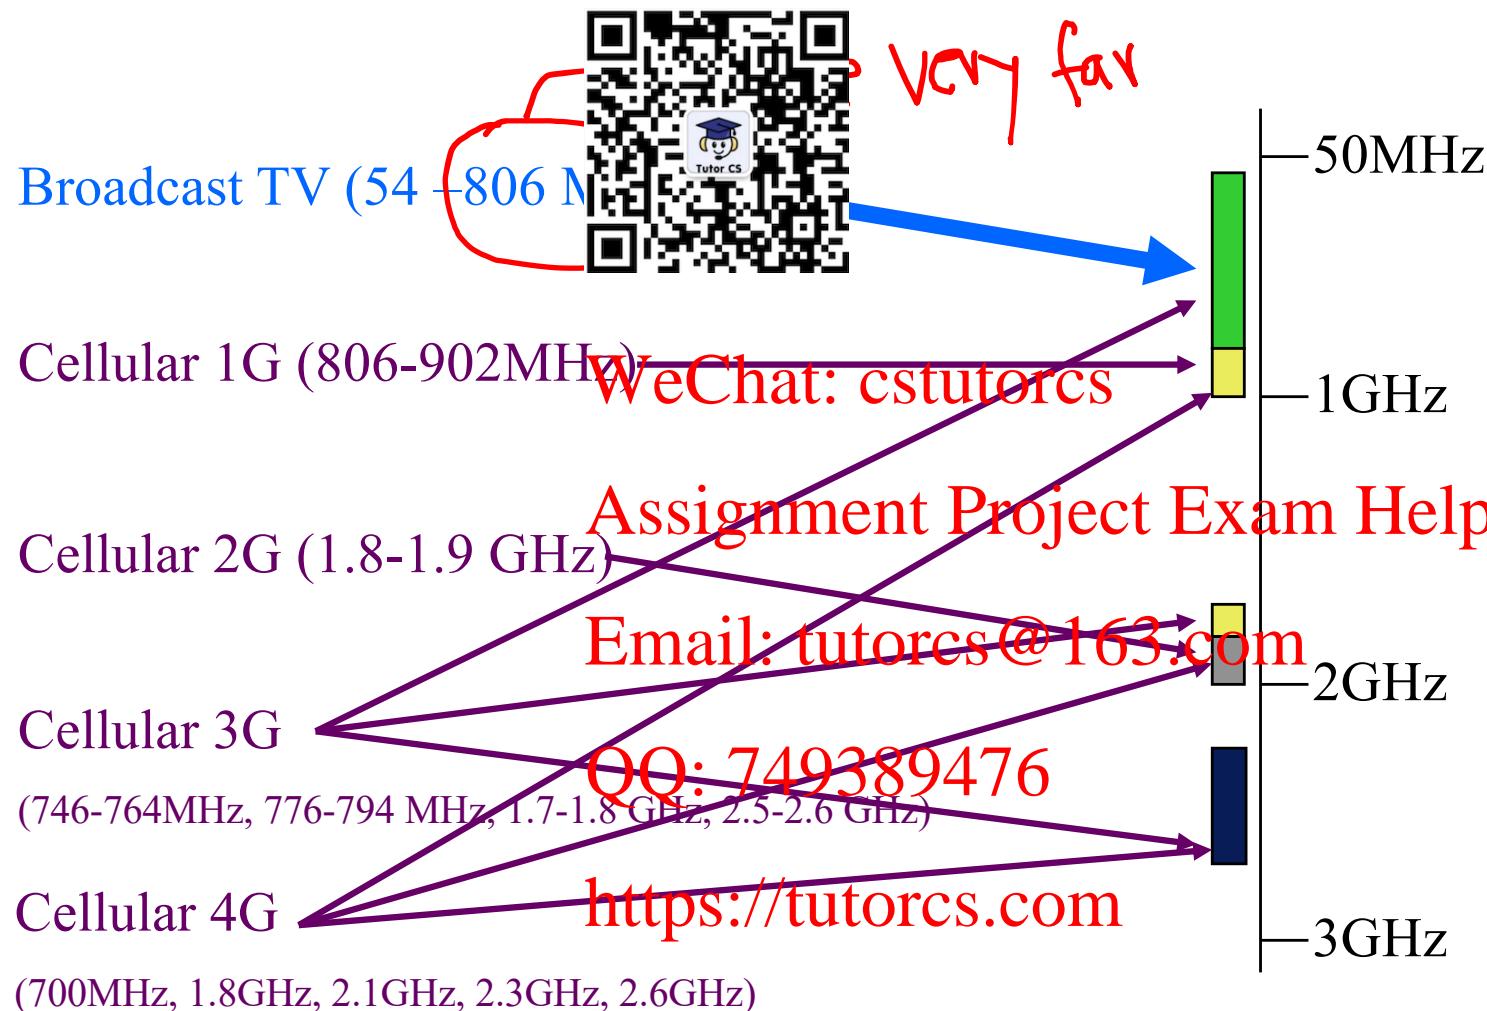

UNITED STATES FREQUENCY ALLOCATIONS

THE RADIO SPECTRUM



ALLOCATION USAGE DESIGNATION

SERVICE	EXAMPLE	DESCRIPTION
Primary	FIXED	Capital Letters
Secondary	Mobile	1st Capital with lower case letters

This chart is a graphic representation of the Table of Frequency Allocations set by the FCC and NTIA. As such, it does not completely reflect all aspects, i.e., technical and usage changes made to the Table of Frequency Allocations. Therefore, for complete information, users should consult the Table in the current issue of the FCC's *Proceedings*.

U.S. DEPARTMENT OF COMMERCE
National Telecommunications and Information Administration
Office of Spectrum Management
October 2003



Spectrum regulation and licensing



- Many users use the commonspace
 - Recipe for collision
 - No one would get anything useful done
- Spectrum use is highly regulated
 - By govt. authorities (eg FCC in the USA)
- Spectrum is often licensed
 - By big companies, eg Telstra
 - Gives exclusive rights to certain freq. bands
 - Interference avoidance by regulation

Email: tutorcs@163.com

QQ: [749389476](https://wx.tutorcs.com)

Assignment Project Exam Help

<https://tutorcs.com>

Spectrum allocation

程序代写代做 CS 编程辅导

- ❑ Bulk of it reserved for government use

- Scientific exploration
- Public safety
- Military



WeChat: cstutorcs

- ❑ Some for commercial services

- TV broadcast
- Mobile phone

Assignment Project Exam Help

Email: tutorcs@163.com

- ❑ Some for free-to-use

- High-speed wireless local area network (WiFi)
- Cordless phone handsets at home
- Can you name a few more?

QQ: 49389476

<https://tutorcs.com>

程序代写代做CS编程辅导 Key principles of spectrum allocation



- Maximize spectrum utilization
- Spectrum management to new technologies and services
 - Adapt to new market needs
- Fair licensing
 - Assignment Project Exam Help
- Promote competition: tutorcs@163.com
- Ensure spectrum availability for public safety, health, defense, scientific experiments...
 - QQ: 749389476

<https://tutorcs.com>

Free/unregulated/license-exempt spectrum

- Not subject to license
- Has rules for power limitation (*power limitation*)
- More frequencies are being released as license-exempt
- Some current license-exempt frequencies

➤ 900 MHz

Assignment Project Exam Help

➤ 2.4 GHz ISM band (WiFi, Microwave etc.)

➤ 5.2/5.3/5.8 GHz (WiFi, Cordless phone etc.)

➤ Can you identify more?

QQ: 749389476

<https://tutorcs.com>



Decibel

程序代写代做 CS 编程辅导



- Tx power for practical systems vary by many orders of magnitude
 - 100kW or kilowatt (radio station)
 - 500mW or milliwatt (base station tx power)
 - 2.5mW (Bluetooth with ~10m range)
 - 100pW or picowatt (typical WiFi rx threshold)
 - Femto watt? (nanosensor communication)
 - $1 \text{ W} = 10^3 \text{ mW} = 10^6 \mu\text{W} = 10^9 \text{ nW} = 10^{12} \text{ pW}$
- Decibel is a more convenient (logarithmic scale) unit to compare these powers, which are many orders of magnitude apart
- Also path loss (attenuation) can be many orders of magnitude
 - Path loss therefore is usually expressed in decibels

WeChat: cstutorcs

Assignment Project Exam Help

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

Decibel (dB) Formula



- In Honour of Graham Bell
- The number of decibels expresses the logarithm to base 10 of the ratio of two power quantities ($dB = 10\log_{10}(P_1/P_2)$)
 - The quantity “Bel” would be $\log_{10}(P_1/P_2)$, but not used
- Decibel can be used for different purposes
 1. Path Loss: To express path loss or attenuation: [P₁ = transmit power; P₂ = receive power]
 2. SNR: To express signal (P₁) to noise (P₂) ratio at the receiver
 3. Signal Power: To express signal power (P₁), which can be either transmit or receive power, to a reference power (P₂)

Assignment Project Exam Help

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

Decibel Examples for Path Loss

程序代写代做 CS 编程辅导

- Example 1: $P_t = 10 \text{ mW}$ (power reduced by half)

Attenuation (path loss) = $10 \log_{10} (10/5) = 10 \log_{10} 2 = 3 \text{ dB}$



- Example 2: $P_t = 100 \text{ mW}$ (power reduced by a factor of 100)

Attenuation = $10 \log_{10} (100/1) = 10 \log_{10} 100 = 20 \text{ dB}$

WeChat: cstutorcs

Power Ratio	Assignment Project	dB	Exam Help
10,000,000,000 (ten billion times)		100 (10 × 10)	
1,000,000 (1 million times)	Email: tutorcs@163.com	60 (10 × 6)	
10 (ten times)	QQ: 749389476	10 (10 × 1)	
0.001 (10^{-3})		-30 (10 × -3)	
0.0001 (10^{-4})	https://tutorcs.com	-40 (10 × -4)	

Decibel Examples for Signal-to-Noise Ratio

- Example 1: $P_{\text{signal}} = 1 \text{ mW}$ (Received signal strength), $P_{\text{noise}} = 100 \mu\text{W}$

$$\text{SNR} = 10 \log_{10} (1000) \text{ dB} = 30 \text{ dB}$$



- Example 2: Received signal strength is measured at 10 mW. What is the noise power if SNR = 10 dB?

$$\text{SNR} = 10 \text{ dB} = 10 \log_{10} (10 \text{ mW}/P_{\text{noise}})$$

$$P_{\text{noise}} = 1 \text{ mW}$$

Assignment Project Exam Help

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

Expressing Power in dBm

程序代寫代做CS編程輔導



- dBm is in reference to milliwatt
- First, express power in milliwatt
- Then apply the following formula to obtain dBm

m stands for milliwatt

Assignment Project Exam Help

Email: tutorcs@163.com

Power in dBm = $10 \log (\text{power in milliwatt})$
QQ: 749389476

<https://tutorcs.com>

Conversion to dBW



- dBW is in reference to watt
- First express power in watt
- Then apply the formula to obtain dBW

Assignment Project Exam Help

Email: tutorcs@163.com

Power in dBW = $10 \log_{10} (\text{power in watt})$
QQ: 749389476

<https://tutorcs.com>

Relationship between dBm & dBW



- Note that $1 \text{ W} = 1000 \text{ mW}$
- This gives us following relationship
 - Note $\log(axb) = \log(a) + \log(b)$

Assignment Project Exam Help

$\text{dBm} = \text{dBW} + 30$

QQ: 749389476

If you've calculated <https://tutordb.com>, you can simply derive the equivalent dBm by adding 30 to dBW, and vice versa.

Examples for converting Watt to dBm/dBW

- Example 1: Energy conversion from mW power in units of dBm




WeChat: cstutorcs

Assignment Project Exam Help

$$10 \log(1) = 10 \times 0 = 0 \text{ dBm}$$

QQ: 749389476

So, ZERO dBm does not mean there is no power !
<https://tutorcs.com>

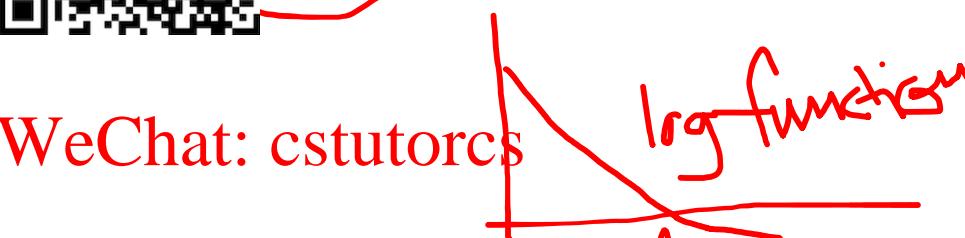

Example (2) 程序代写代做 CS 编程辅导

- Example 2: Express 50W in
 - (a) dBW
 - (b) dBm



WeChat: cstutorcs

$$(a) P(\text{dBW}) = 10 \log(50) = 17 \text{ dBW}$$

$$(b) P(\text{dBm}) = 10 \log(50 \times 1000) \text{ dBm}$$

Email: tutorcs@163.com

$$\begin{aligned} &= 10 \log(50) + 10 \log(1000) \text{ dBm} \\ &\quad \text{QQ: 749389476} \\ &\quad \text{https://tutorcs.com} \\ &= 17 + 30 = 47 \text{ dBm} \end{aligned}$$

Coding Terminology

程序代写代做 CS 编程辅导




- **Symbol:** the smallest unit of a signal with a given amplitude, frequency, and phase that can be detected
- **Modulation Rate:** $= 1/\text{symbol_duration} = \text{Baud rate}$ (or symbol rate)
WeChat: cstutorcs
- **Data Rate:** Bits per second (bps) Project Exam Help
- A symbol may carry multiple bits
 - A binary signal with only two different symbols would carry 1 bit per symbol (baud rate = data rate)
 - For an M-ary signal, data rate = baud rate $\times \log_2(M)$

Modulation

程序代写代做 CS 编程辅导

- Digital version of modulation is called **keying**
 - **Amplitude Shift Keying (ASK)**
 - **Frequency Shift Keying (FSK)**
 - **Phase Shift Keying (PSK)**

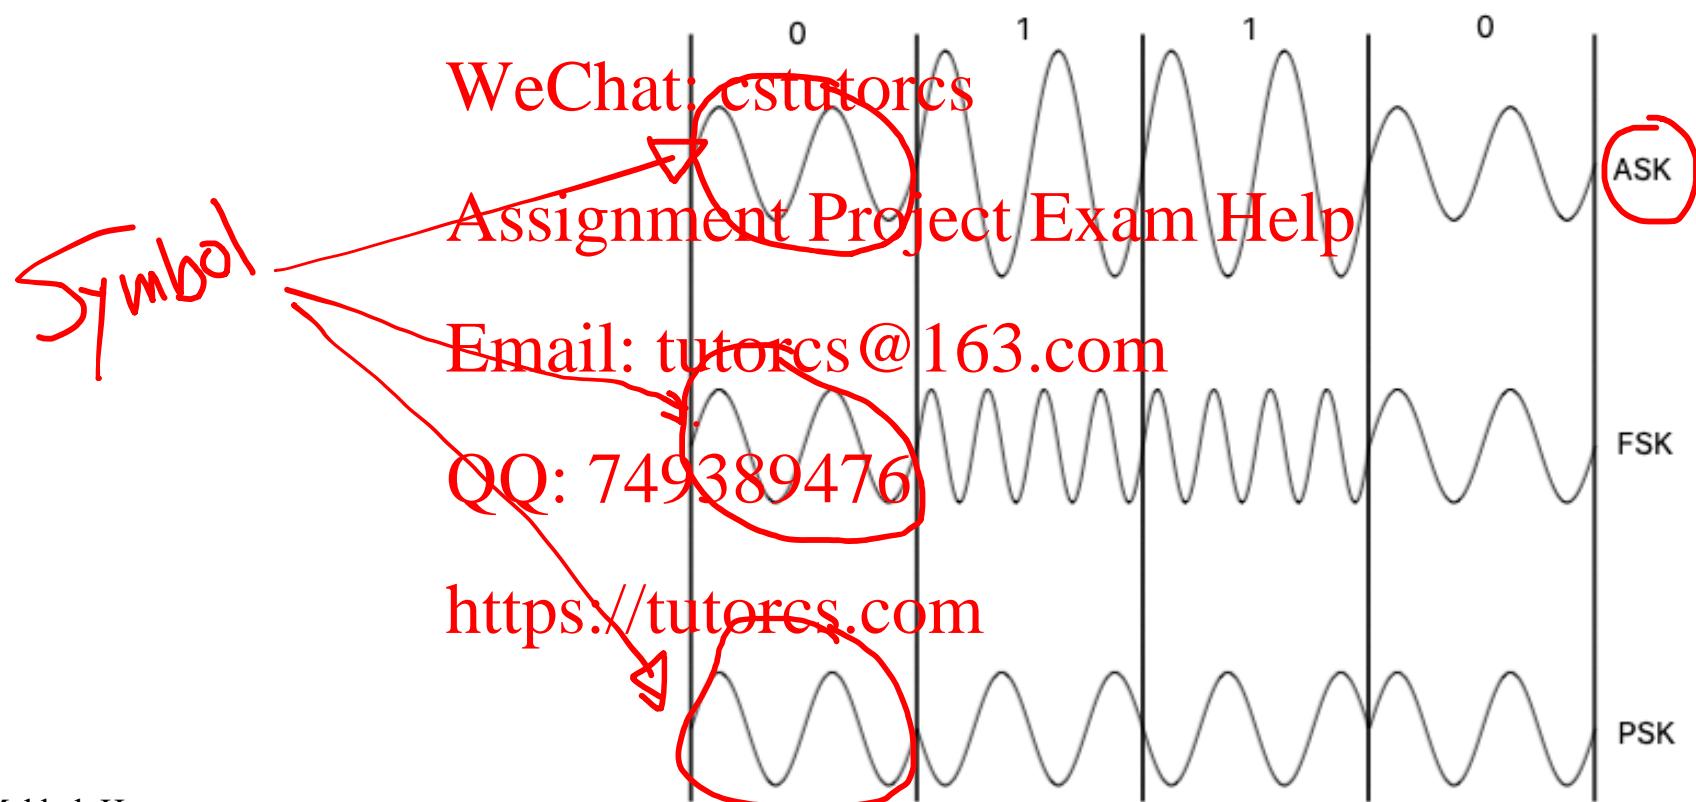

Modulation (Cont)

程序代写代做 CS 编程辅导



- Differential BPSK:
- Quadrature Phase Shift Keying (QPSK)



quire reference signal

difference


No difference

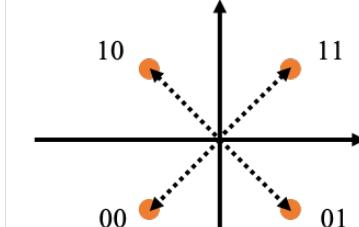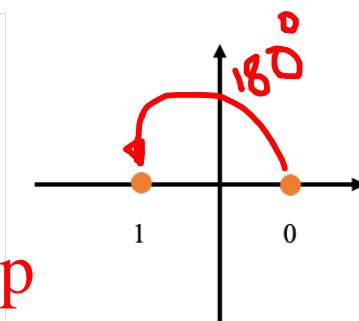


Constellation

QAM 程序代写代做CS编程辅导


- Quadrature Amplitude and Phase Modulation
- 4-QAM, 16-QAM, 64-QAM, ...
- Used in DSL and wireless links
- Constellation diagram (combinations of amplitudes and phases)

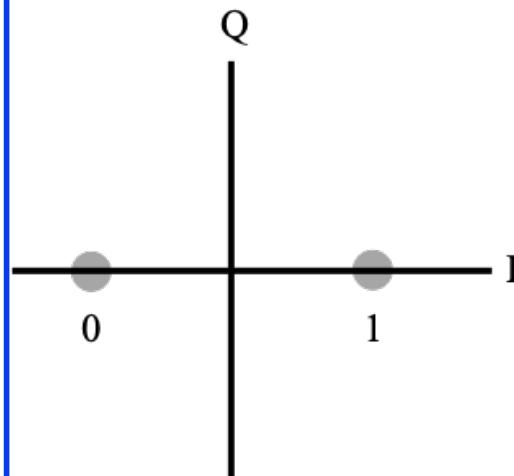

Binary (1 amplitude, 2 phases)

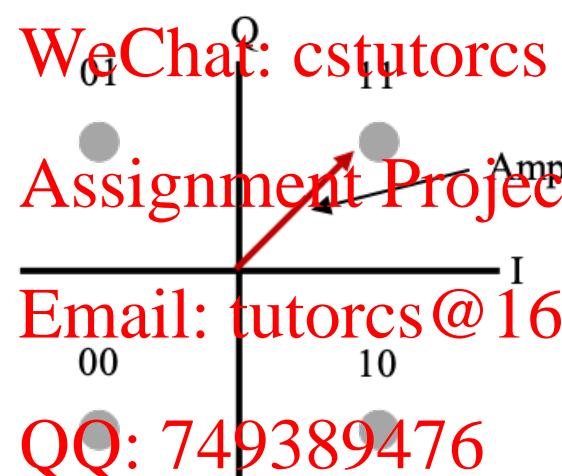

4-QAM (1 amplitude, 4 phases)
<https://tutorcs.com>

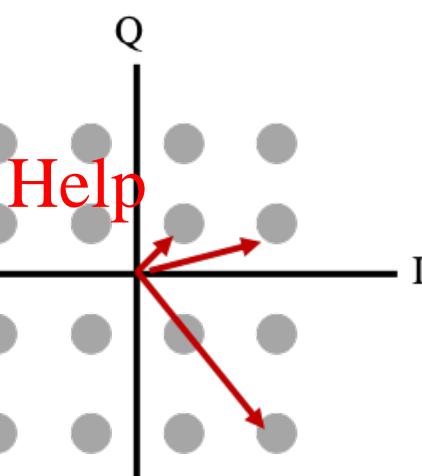

16-QAM (3 amplitudes, 12 phases)

- 4-QAM \Rightarrow 2 bits/symbol, 16-QAM \Rightarrow 4 bits/symbol, ...

QAM in Action

程序代写与做CS编程辅导



Wireless Technology	QAM Supported
4G	256 QAM
5G	1024 QAM
WiFi 802.11n	16 QAM, 64 QAM
WiFi5 802.11ac	Email: tutorcs@163.com
WiFi6 802.11ax	QQ: 749380476

10 bits per symbol

<https://tutorcs.com>

Channel Capacity

程序代写代做CS编程辅导

- Capacity = Maximum data rate (bps) for a channel
- Nyquist Theorem** (for lossless channel): Bandwidth = B Hz
Max. Data rate $\leq 2 B$
- Bi-level Encoding: Max. Data rate = $2 \times \text{Bandwidth}$

WeChat: cstutorcs

5V
0

Assignment Project Exam Help

Late

- Multilevel: Capacity = $2 \times \text{Bandwidth} \times \log_2 M$

M = Number of levels

QQ: 749389476

<https://tutorcs.com>

Example: M=4, Capacity = $4 \times \text{Bandwidth}$

Example

程序代写代做CS编程辅导

Assume that you have discovered a novel material that has negligible electrical noise. What is the maximum data rate that this material could achieve over a phone wire having a bandwidth of 3100 Hz if data was encoded with 64-QAM?



Solution

WeChat: cstutorcs

We have $B = 3100$ $M = 64$

~~Assignment Project Exam Help~~
Data rate = $2 \times 3100 \times \log_2 64 = 37,200 \text{ bps}$

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

Shannon's Theorem

程序代写代做CS编程辅导
(noisy channel)

- Bandwidth = B
- Signal-to-noise S/N
- Maximum number of bits/sec = $B \log_2 (1+S/N)$ [error free communication]
- Example: Phone wire bandwidth = 3100 Hz

[Assignment](#) [Project](#) [Exam](#) [Help](#)

$$10 \log_{10} S/N = 30$$

Email: tutorcs@163.com

$$\log_{10} S/N = 3$$

QQ: [749389476](#)

$$S/N = 10^3 = 1000$$

$$\text{Capacity} = 3100 \log_2 (1+1000) = 30,894 \text{ bps}$$

Hamming Distance

程序代写代做CS编程辅导

- Hamming Distance
= Number of bits which they disagree
- Example:



110001
WeChat: cstutorcs

Assignment Project Exam Help
101010 → Distance = 3

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>

Error Correction Example

- 2-bit words transmitted as 5-bit/word

Data	Code Word
00	00000
01	00100
10	11001
11	11110



11001

WeChat: cstutorcs

Received = 00100 \Rightarrow Not one of the code words \Rightarrow Error

Distance (00100,00000) = 1 Distance (00100,00111) = 2

Distance (00100,11001) = 4 Distance (00100,11110) = 3

\Rightarrow Most likely 00000 was sent. Corrected data = 00

b. Received = 01010 Distance(...,00000) = 2 = Distance(...,11110)
Error detected but cannot be corrected

c. Three-bit errors will not be detected. Sent 00000, Received 00111.

Multiple Access Methods

程序代写代做 CS编程辅导



WeChat: cstutorcs
Time Division Multiple Access

(communicating groups are taking turns)
Assignment Project Exam Help



Code Division Multiple Access

(all communicating groups are talking at the same time)

Multiple Access

FDMA (程序设计与代数CS辅导)



CDMA 程序代写代做CS编程辅导



- Each communication is using a different “code”
- You can understand a conversation only if you know the code used in that conversation
- Much like a *multilingual party*, where people from different languages are all talking at the same time (code=language)
- Two popular coding methods for CDMA
 - Frequency hopping spread spectrum (FHSS)
 - Direct sequence spread spectrum (DSSS)

<https://tutorcs.com>

Frequency Hopping Spread Spectrum

程序代写代做 CS 编程辅导



WeChat: cstutorcs

- Transmit over a narrowband, but continuously switch (hop) frequency over a wide spectrum
 - Spreads the transmission (power) over a wide spectrum
⇒ [□ Spread Spectrum](#)
- Pseudo-random frequency hopping (both transmitter and receiver use the same pseud-random number sequence)
~~00:749389476~~
 - Developed initially for military
 - Patented by actress Hedy Lamarr (idea came while playing a piano; tone changes continuously)

Assignment Project Exam Help

[Email: tutorcs@163.com](#)

<https://tutorcs.com>

FHSS Advantages and Disadvantages

程序设计与代做 CS 编程辅导

□ Advantages

- Difficult to intercept (as random ‘blips’)
- Narrowband interference can’t jam



□ Disadvantages


- Requires increased bandwidth (ability to randomly hop between 1000 frequencies → 1000 more bandwidth)
- Both time and frequency synchronization

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>


Direct-Sequence Spread Spectrum

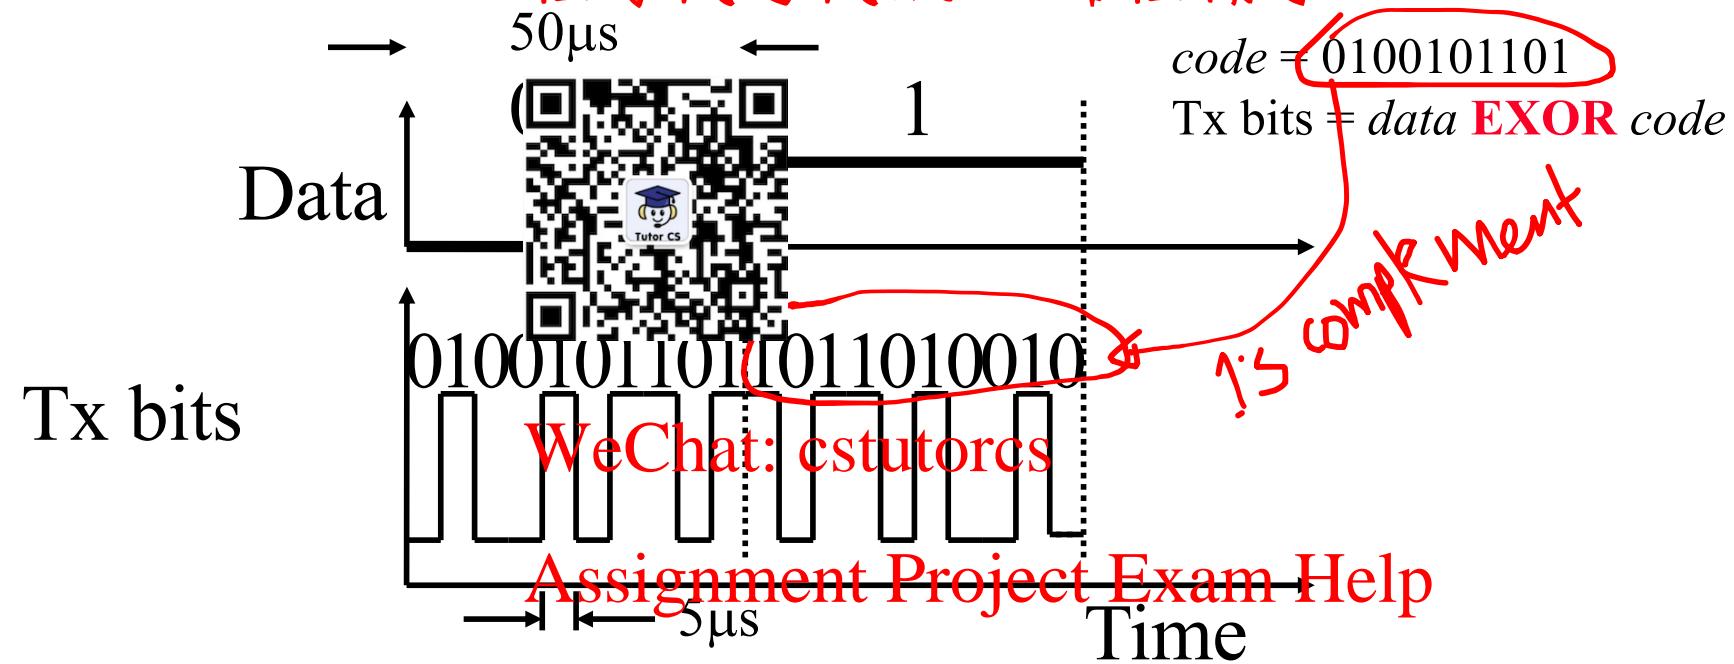

- Many bits are transmitted for each data bit
Email: tutorcs@163.com
- Spreading factor = Code bits/data bit, 10-100 commercial (Min 10 by FCC), 10,000 for military
QQ: 749389476
- Signal bandwidth $>10 \times$ data bandwidth
- Code sequence synchronization <https://tutorcs.com>
- Correlation between codes \Rightarrow Interference (Orthogonal to avoid interference)

Doppler Shift

程序代写代做 CS 编程辅导

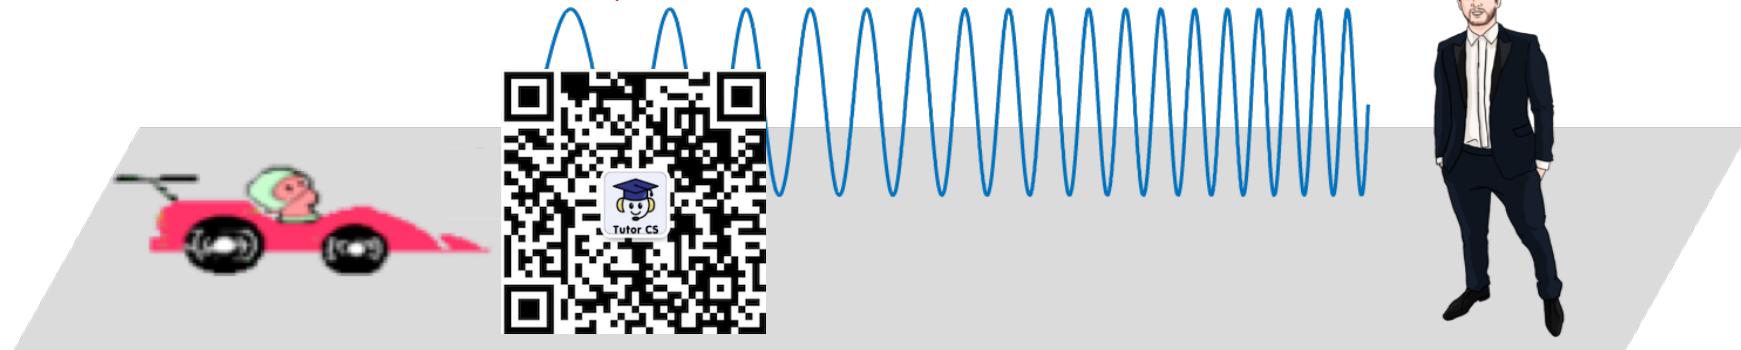

- If the transmitter or receiver or both are mobile the frequency of received signal changes
- Moving towards each other \Rightarrow Frequency increases
- Moving away from each other \Rightarrow Frequency decreases

Frequency difference = velocity/Wavelength = v/λ = vf/c

QQ: 749389476


Example: 2.4 GHz $\Rightarrow \lambda = 3 \times 10^8 / 2.4 \times 10^9 = 0.125\text{m}$

$$v = 120\text{km/hr} = 120 \times 1000 / 3600 = 33.3 \text{ m/s}$$

$$\text{Freq diff (Doppler shift)} = 33.3 / 0.125 = 267 \text{ Hz}$$

Doppler Spread and Coherence Time

程序设计与代数CS编程辅导

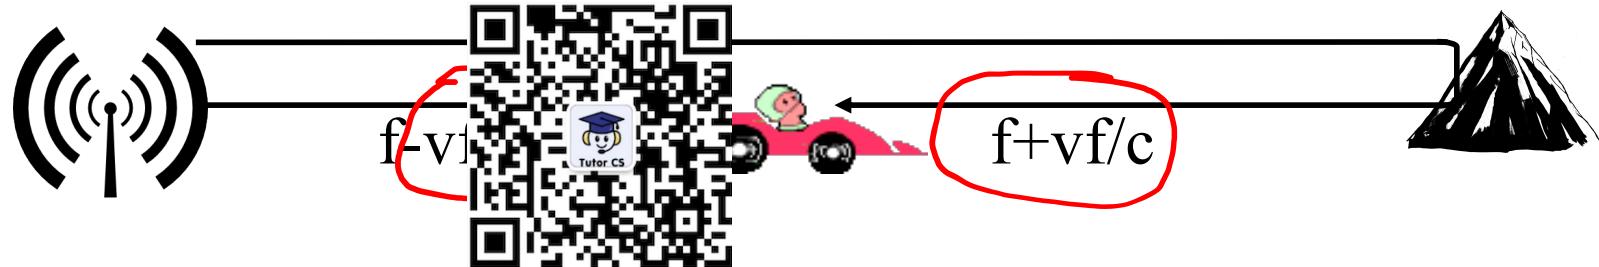

- Two rays will be received (~~WeChat: or tutorcs reflection~~)
- **Doppler Spread** = $2vf/c = 2 \times$ Doppler shift ~~Assignment Project Exam Help~~
- They will add or cancel-out each other as the receiver moves
- **Coherence time**: Time during which the channel response is constant = $1/\text{Doppler spread} = c/2vf = \lambda/2v$ ~~Email: tutorcs@163.com
QQ: 749389476~~

<https://tutorcs.com>

Example

程序代写代做CS编程辅导

- What is the coherence time for a 2.4 GHz wifi link connecting a car moving at 72 km/hr?



$$V = (72 \times 1000) / 3600 = 20 \text{ m/s}$$

WeChat: cstutorcs

$$\text{Doppler spread} = 2vf/c = (2 \times 20 \times 2.4 \times 10^9) / (3 \times 10^8) = 320 \text{ Hz}$$

$$\text{Coherence time} = 1/320 = 0.003125 \text{ s} = 3.125 \text{ ms}$$

Email: tutorcs@163.com


QQ: 749389476

<https://tutorcs.com>

Duplexing

程序代写代做 CS 编程辅导

- ❑ Duplex = Bi-Directional communication
- ❑ Frequency division duplexing (FDD) (Full-Duplex)

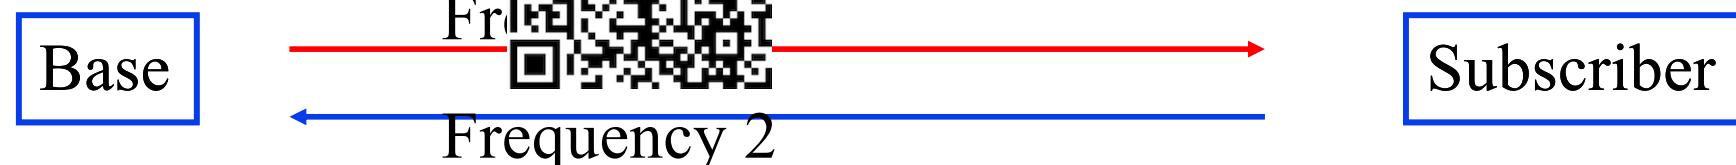

- ❑ Time division duplex (TDD): Half-duplex




- ❑ Many LTE deployments will use TDD.

- Allows more flexible sharing of DL/UL data rate
- Does not require paired spectrum
- Easy channel estimation <https://tutorcs.com> ⇒ simpler transceiver design
- Con: All neighboring BS should time synchronize

Summary

程序代写代做 CS编程辅导

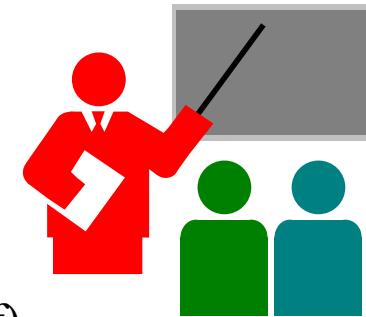

1. Electric, Radio, Light, X-R
2. Wavelength and frequency
3. Historically, wireless communication has mostly used frequencies below 6 GHz, but beyond 6 GHz is actively explored in
4. Hertz and bit rate are related by Nyquist and Shannon's Theorems
5. Nyquist's theorem explains capacity for noiseless channels
6. Shannon's capacity takes SNR into consideration
7. By spreading the original signal bandwidth over a much wider band, spread spectrum can provide better immunity against interference and jamming as well allowing multiple parties to communicate over the same frequency at the same time.
8. FHSS and DSSS are two fundamental methods of realizing spread spectrum
9. Doppler effect explains the shift in frequency experienced by mobile objects
10. Doppler spread is twice the Doppler shift
11. Channel coherence time is inversely proportional to doppler spread
12. FDD and TDD are two fundamental methods of resource allocation between the transmitter and the receiver so they both can exchange information with each other

WeChat: cstutorcs

Assignment Project Exam Help

Email: tutorcs@163.com

QQ: 749389476

<https://tutorcs.com>