Braces (Calipers)

Braces are aids that help hold legs or other parts of the body in useful positions. They usually serve one or both of **2 purposes**:

 To provide support or firmness to a weak joint (or joints). For example, this child had polio:



This brace keeps his knee from bending forward



2. To help prevent or correct deformity or contracture. For example, this child had a club foot:



He was born with a club foot.



His club foot was corrected with a cast.





CAUTION: The need for braces should be carefully evaluated. Braces should be used only if they will help the child move better and become more independent. Too much bracing may actually weaken *muscles* and cause greater *disability*. As a general rule, **try to use as little and as light bracing as possible to help the child function better.** (See Chapter 56.)

Different braces for different needs

The main lower-limb brace types are:

Foot brace

usually made of molded plastic



Below-knee braces (ankle brace)

for weakness or deformities in the lower leg, ankle, and foot



Above-knee brace (long-leg brace)

for weakness in the upper leg and knee possibly also ankle and foot



for severe weakness in hips and legs



Less commonly used types (described on p. 547 and p. 558) include:

Leg-separating braces

for dislocated hips or damaged head of thigh bone (see p. 158).



for holding the feet, legs, and hips at a set angle when they tend to turn in



Body brace or corset

for curve of the spine



Body brace with leg braces

for body and back weakness together with hip and leg weakness



Different materials and ways to make braces

As we discussed in Chapter 56, an ideal brace should:


- serve its purpose well (help the child walk or function better)
- be comfortable
- be lightweight yet strong
- be as attractive as pos-sible
- be easy to put on and take off
- do no harm

- be low cost
- be easy and quick to make with local tools and limited skills
- use local or easily available materials
- be easy to repair and adjust as the child grows or develops
- be long lasting

Unfortunately, no brace will meet all these requirements. As much as possible, **try to put the child's needs first.**


In this chapter we give ideas for making different braces using various materials. When deciding how to make a brace, carefully evaluate both the child's needs and the available resources (see Chapter 56).

Sometimes it is wise to start with a simple lowcost temporary brace or splint to see how well it works and what the problems are.

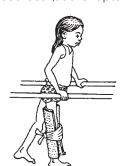


Keep old and outgrown braces for testing on new children before final braces are made.

But take care not to discourage the child by making him use braces that do not fit him well.

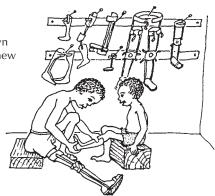

Examples of very simple, low-cost braces and splints:

A temporary leg splint of cardboard, folded paper, or the thick curved stem of a dried banana leaf, or palm leaf.



Aluminum tube finger splint






)+()+()-<u>)</u>

Mango seed finger splint

Remove the woody coat of a mango seed, and wrap the coat firmly onto the finger. It will dry into a firm splint. To change its shape, first soak it in water.


Bamboo ankle splint A piece of seasoned l

A piece of seasoned bamboo can be heated and bent.






a small child.

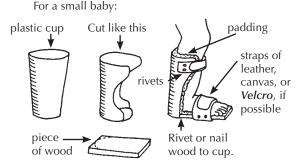

Plastic cup ankle braces for night or temporary use on

For a child:

3 cups cut and riveted together



Or cut the foot piece from a flat plastic

bottle.



Add straps





Metal or plastic braces

Modern, high-quality braces are usually made out of metal or molded plastic.

The best metal is a mix or 'alloy' of aluminum and steel which is both light and strong. However, this is very costly and often hard to get. Pure aluminum is very light, but breaks easily, especially when you try to bend it. Steel is cheaper and easier to bend and weld, but is much heavier.

The best plastic for braces is probably polypropylene, which is strong, light, and fairly easy to shape when hot.



plastic below-knee brace

Pre-formed metal parts for making these braces are sold at *orthopedic* supply stores. Unfortunately, they are usually much too expensive for a community program. However, sometimes you can get large orthopedic centers to donate old braces, from which locking knee joints and other pieces can be used to build high-quality metal or plastic braces. Also, many broken or outgrown braces are lying in the corners of thousands of homes. A campaign to get families to donate these can greatly reduce the costs of making high-quality braces.



metal below-knee brace with wood *clog*

Low-cost metal or plastic braces can be made in a village shop. They can be made simply, with or without joints. Since children grow quickly, they often need a larger brace every 3 to 6 months. Therefore, keeping cost low and work simple is essential (see Chapter 56, p. 527).

Metal and plastic braces each have advantages and disadvantages. We discuss these on p. 542 and 550.

In Mexico, we have found that for most children who need below-knee braces, plastic works best. And the children (and parents) like it more.

However, a child with a lot of muscle tightness (due to **spasticity** or contractures) which pulls his foot a lot to one side, like this,


may need a metal brace with an ankle strap.
After the brace is on, the strap is tightened to pull the foot into a better position.



Above-knee braces can be made using a combination of plastic and metal.



Whenever possible, equip your village shop to make both plastic and metal braces. That way, you can make what seems most appropriate for each child.

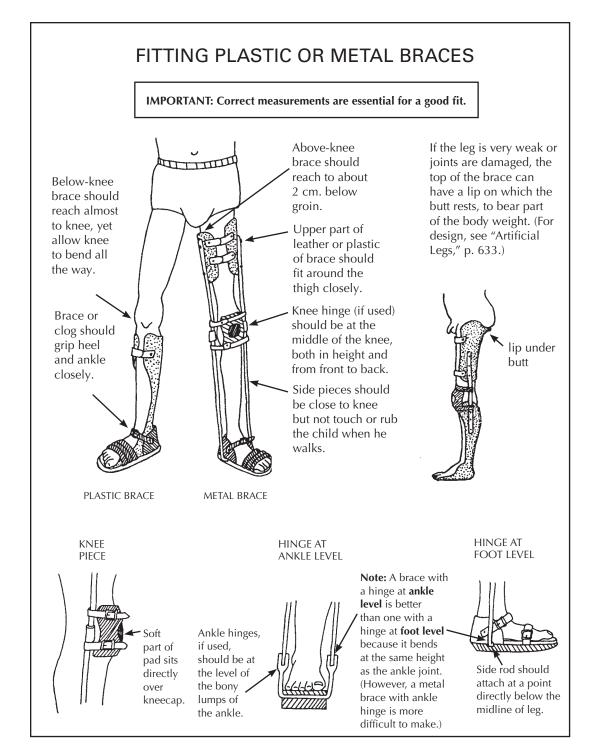


METAL BRACES

The **advantages** of simple metal braces are that they are quick, easy, and cheap to make. They often last longer, and, if used with sandals or clogs, in hot weather they are cooler than plastic. However, they also have **disadvantages**: because a shoe, sandal, or wood 'clog' must be built or attached to the brace, there is additional work and cost. Also, they are heavy, clumsy, and more noticeable. In hot or wet weather, leather or cloth, or even the metal starts to rot. Shoes or boots which the child cannot change, even when they get wet, begin to stink.



METAL ROD BRACES* using 're-bar' (reinforcing rod for use in cement building construction)

For a brace shorter than 50 cm. (20 inches) you can use rod that is 5 mm. thick. For a longer brace, the rod should be thicker—up to 8 mm.

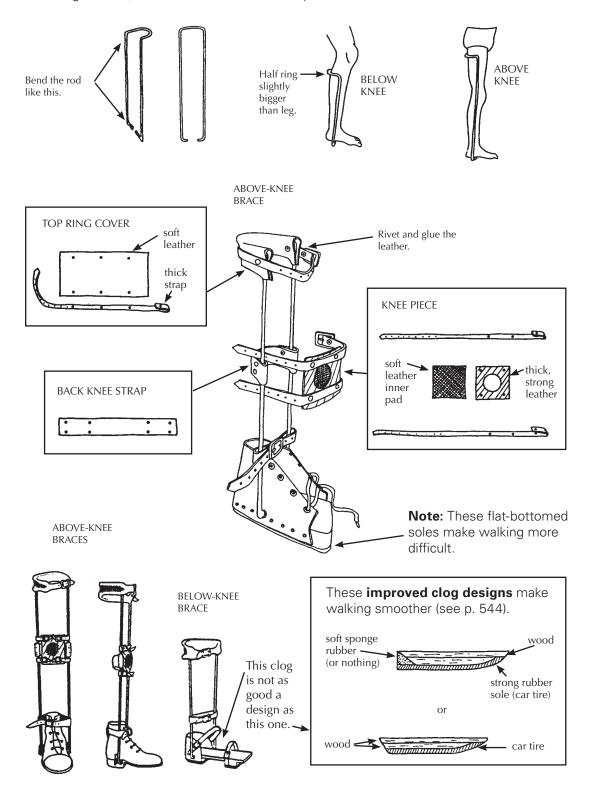

^{*}Much of the information on metal braces, on this and the following pages, is taken or adapted from **Poliomyelitis** by Huckstep, and *Simple Prosthesis Manufacture* by Chris Dartnell.

SHOES AND CLOGS FOR METAL BRACES

High-top leather shoes often work best, especially in communities where children usually wear shoes.





Shoes are easier to put on when the whole top can open wide. It may help to cut off the front part of the shoe.

Leaving the toes open to 'breathe' is also important if a child is not likely to wear (or wash) stockings.


For adding thicker soles and making other changes, it helps to buy shoes **with** soles that are sewed on. (Today, many shoes have plastic or rubber soles that are glued on or molded with the shoe. These are much harder to work with.)

Unfortunately, leather shoes are costly. Also, they may not last long in rain and mud. So, you may want to make simple, low-cost wooden-soled shoes, or clogs. This design is from *Simple Prosthesis Manufacture*.

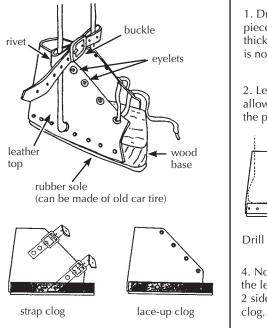

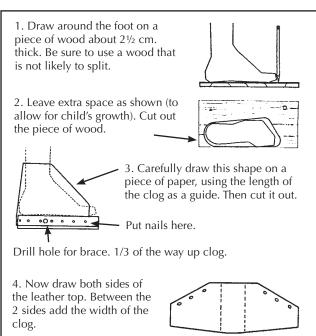

In communities where most children go barefoot, a disabled child may prefer more open clogs. This design is adapted from Huckstep's **Poliomyelitis**, and the 'Jaipur Sandal'.

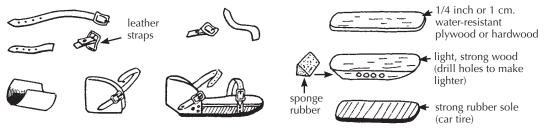

Note: These open clogs are hard to fit on deformed feet or feet with tiptoe contractures. In such cases, high-top clogs or boots work better. Or use plastic braces molded to fit the foot.



HOW TO CONTROL UP AND DOWN MOVEMENT OF FOOT

CONTROLLING FOOTDROP AND TIPTOE DEFORMITIES


A child with 'footdrop' or a floppy foot that hangs down so that she has to lift her leg high with each step,




needs a brace that holds the foot up. Use a plastic brace,



or a metal brace with a backstop that lets the foot bend up, but not down.



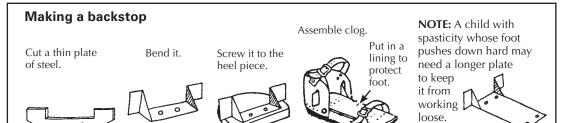

Toe-raising spring

Another way to help prevent footdrop is with a toe-raising spring.



This is a simpler design.



CONTROLLING FOOT-RISE AND UNWANTED KNEE-BEND




may (or may not) be helped by a brace that prevents the foot from bending up as much. If possible, use a stiff plastic brace.




Or use a metal brace with a stop placed in front of the upright

bars.

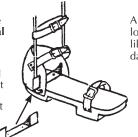

A strong stop with a long plate will be less likely to work loose or damage the clog.



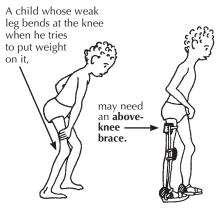


But sometimes a below-knee brace that stops the foot from bending up will help push the knee back enough so that the child can support his weight on it (see p. 557).

The brace can be of stiff plastic, or metal with stops to prevent foot-rise.



If a brace with an ankle joint is used to prevent the ankle from bending up, the base piece will need a long strong forward plate.




The joint can be adjusted to allow only the desired range of motion.

KNEE HINGES

Braces with locking knee hinges permit the child to bend her knees for sitting or squatting.



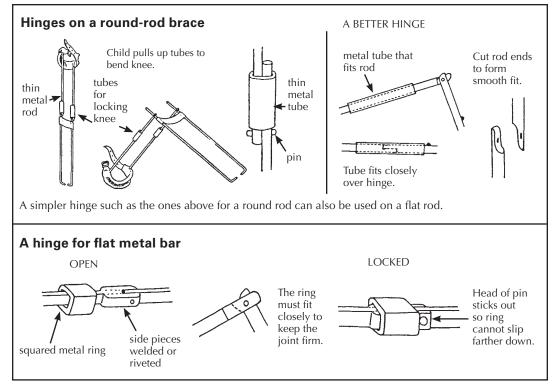


BRACES THAT FOLLOW THE SHAPE OF THE LEG


Flat metal bar can be bent to fit the shape of the leg more closely. This is not always necessary but if done well the brace will fit better—especially when the bar is used with molded plastic.

Instructions for bending and fitting the rod are on p. 557.

ADJUSTABLE BRACES


As the child grows, a brace made like this can be lengthened. Teach family members how to do this.





HIP BANDS


Braces with a hip band may be needed for the child:

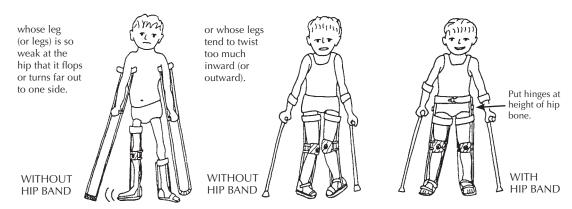


A common problem with hip bands is that the low back bends forward and the butt sticks out. This can cause back problems, and hip contractures.




If necessary, add an elastic strap here. The back of the hip band can be made of thin metal lined with leather, or of strong plastic.



On plastic braces the side bars and hinges can also be made of thick, strong plastic. This adds some flexibility, which will be better for some children but not provide enough support for others.

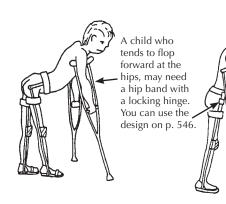


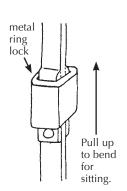




Braces with plastic hip band and locking plastic hip hinges. (PROJIMO)


Hip band without lock

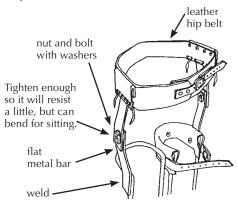


Hip band with lock

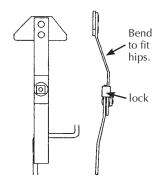


For a young child whose feel turn in a lot, a night brace to hold the feet (and hips) turned outward may help. It can be made from a thin metal bar or from wood.

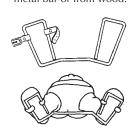


KNEE PIECES (Use the design on p. 543.)

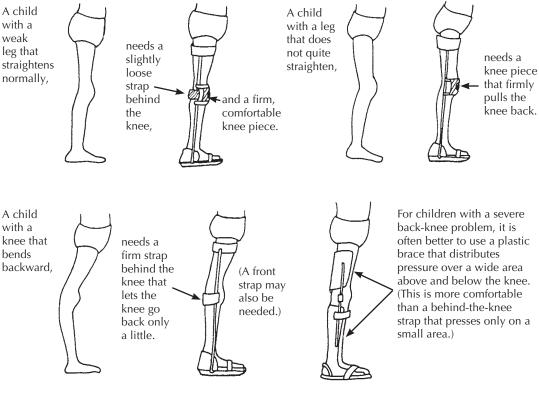

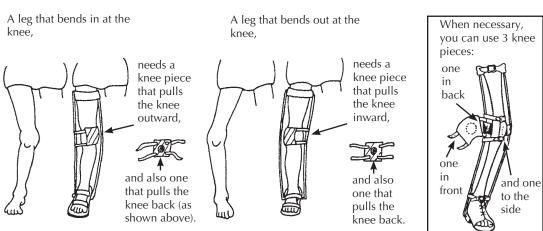


ANKLE STRAPS

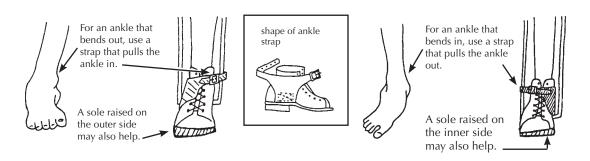

RAISED SOLES OR 'LIFTS' for one leg that is shorter

(For instructions on measuring leg length difference and for homemade measuring instruments, see p. 34.)


For a child who has one leg shorter than the other:

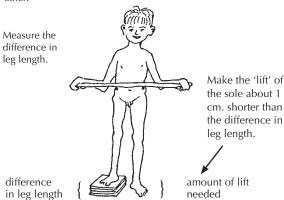

IMPORTANT: Before putting a permanent lift on a shoe or sandal, test it by tying or taping on a **temporary lift**. Watch the child walk and ask how he likes it. You may want to try several heights before deciding on the one that works best.

NOTE: Almost all children have one leg that is a little shorter than the other, and this does not usually affect how they walk. Raised soles ('lifts') are usually not needed if the difference in leg length is less than 2 cm.


However, a child who drags a foot because his hips tilt down on that side may be helped by a small lift on the other side—even if that leg is the same length or longer (see p. 163).




Material used for lifts should be as lightweight as possible. You can use cork or a light, porous rubber. If the material is heavy but strong, to make it lighter you can drill holes through it. Put a thin, strong sole on the bottom.




For a lift with a stiff-ankle brace, the child can often walk more smoothly with a 'rocker-bottom' sole.

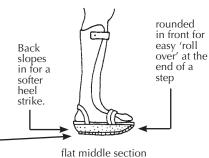

for firm standing

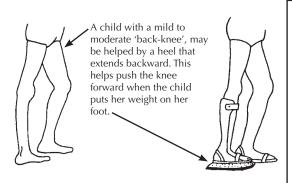

For a more severe back-knee, the child may need a long-leg brace (See p. 67 and 548.)

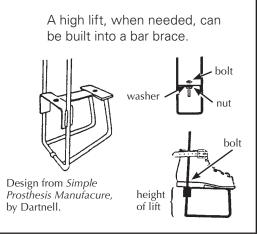


Ask a local shoe or sandal maker to teach you how to fasten on the soles and lifts.

PLASTIC BRACES

Below the knee

For most children who need a below-knee brace, plastic braces molded to fit the leg and foot of the individual child have many **advantages**:

- They are lightweight and often more comfortable than metal braces.
- They fit the child comfortably and exactly (if made well).
- They can be worn with ordinary shoes or sandals, which can be easily changed when they get worn out or wet. Shoes can be changed for school and for work.
- They are water resistant and easy to clean.
- They are less noticeable than metal braces.
 If desired, socks can be worn over them to hide them.
- Children usually prefer them and are more likely to keep wearing them.

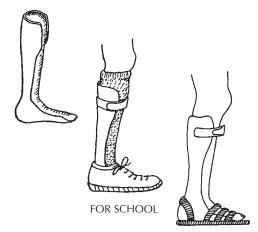

FOR WORK

Although a little more equipment and skill are needed to make plastic braces, once a village worker has learned the basic technique, they can be made as quickly and easily as a simple metal brace with a clog.

A disadvantage to plastic braces is that usually after a year or two the plastic 'gets tired' and breaks. However, growing children need larger braces fairly often. It is wise to keep the plaster mold of each child's brace so that a new brace can be easily made if needed.


A suggestion to save time and money:



Keep the mold of the child's foot—or have the family keep it.

The biggest expense in making plastic braces is the plaster bandage used for casting a mold of the leg. The cost can be reduced a lot by making your own plaster bandage material (see p. 569).

Plastic braces can feel uncomfortable in hot weather and can lead to skin irritation and fungus **infections** if care is not taken. They can be made cooler by drilling 'breathing holes' in them. Or cut out a hole in the back.

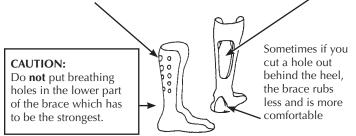

To prevent skin irritation, it is important to bathe daily. It also helps to wear cotton (not nylon) stockings under the brace and to use clean stockings every day.



This design of plastic brace supports the knee from the front and pushes it back (see p. 545 and 557).



How to make plastic braces

Here we describe 2 methods for making molded plastic braces:

The first method uses **old plastic buckets** or containers, and needs less equipment. Unfortunately, these braces tend to break easily when used for walking. However, they make excellent, low-cost night braces (to wear while sleeping).


The second method uses sheets of polypropylene plastic. Additional equipment (such as a vacuum sweeper) is needed, and it is a little more expensive. However, the result is a high-quality brace that can last for months or sometimes years.

Method 1: Plastic bucket braces


Equipment and materials needed:













other buckets or water containers



single-edged razor blade



saw or strong scissors for cutting plastic



 a piece of soft rope about 1/2 meter long



an oven (wood, gas, or electric)



a piece of old reinforcing rod, pipe, or iron, bent to fit inside the foot cast



large metal cooking tray or sheet of metal



fast-setting building plaster for the solid plaster mold



thick gloves or potholders




small soldering iron



if possible, a gas burner, torch, or 'heat gun' to 'spot heat' the plastic. (Note: A hair dryer does not give enough heat.)



2 pieces of wood nailed together to form a rack to hold cast in this position



drill and bits



hand or electric



several long rubber 🛷 strips cut from car




 tools for smoothing plaster and plastic: file or rasp, piece of broken glass, piece of wire screen



strap and buckle or Velcro (plastic straps, one with barbs and the other with hairs so that they stick to each other)

glue or rivets or both






Making the plastic-bucket brace consists of 3 main steps:

- A. Making a hollow plaster cast of the child's leg
- B. Making a solid plaster mold of the leg
- C. Heat-molding the plastic-bucket brace

A. Making the hollow cast

1. Tie a knot in the end of a soft rope.



2. Put the rope on top of the leg with the knot between the toes.



3. Put the stocking tightly on the foot with the rope inside (or wrap it with a thin cloth). Avoid wrinkles.

Make sure the rope stays very straight.




4. Wet a plaster bandage and squeeze out the extra water.



5. Wrap on a thin cast (about 3 layers) while someone else holds the foot in a good position. Be sure the heel is covered with several lavers.

6. While the plaster is still wet, smooth it gently with moist hands, and press the cast gently



7. Before the plaster becomes firm, place the foot in exactly the position that you want the brace to hold it in. Sometimes it works well to hold the foot in your hands. But often it works best to have the child step firmly on the floor, or on a padded board.



Be sure to position the leg straight up, from side view and front view.

8. Draw some lines over the front of the cast



9. When the cast is almost firm but still damp (usually in 5 to 10 minutes), carefully cut through the plaster over the rope. Take care not to cut the child.



10. Then gently remove the cast without changing its shape.




11. Quickly (before it is fully hard) close the cast, line up the lines you drew, and tie it shut with cloth or string.

12. Tie a cloth tightly over the opening of the toes.



B. Making the solid plaster mold


1. Put a bent piece of rod into the hollow cast.




2. Hold the cast in a standing positionperhaps in a box of



3. Mix the plaster: Put water in a container, enough to fill the cast.



2. Quickly pour the mix into the cast. Jiggle the rod and tap the cast to be sure the mix fills all spaces.




5. Hold the rod in the middle until the plaster is firm.





7. Being careful not to change the shape or size of the mold, use fresh plaster to fill in any holes or pits that are not caused by the shape of the foot. Add a little fresh plaster over bony places





(so final brace will not rub).

C. Heat-molding the plastic-bucket brace 1. Mark on 2. Take 3. Draw an outline on 4. Mark the pattern the child's measurements paper, according to the on the plastic. leg the shape as shown for measurements and cut of the brace. the width out the pattern. and length of the brace. 5. Cut out the 6. Make V-shaped 7. Heat the oven to at 8. Heat the plaster leg cast pattern with a saw cuts here to least 450° F (230° C). in the hot oven for 15 to 20 help bend the If you cannot measure or strong scissors. minutes. or control heat, put hot plastic a small piece of around heel. plastic into the oven and heat it until the plastic becomes soft and gooey. 9. Put the hot mold 10. Lightly sprinkle 11. Put the plastic form on tray and 12. Leave it on the rack. dry plaster or talc put the tray into the hot oven. in oven only on a metal sheet until plastic or tray. becomes somewhat flexible.* 14. With strips of 15. And put it back 16. Remove from hot oven 13. Take hot plastic into oven until plastic out of oven with rubber, wrap plastic and press forcefully (with gets softer.* gloves. Bend it tightly to force it gloves) to fuse overlapped over the hot mold. against the mold. plastic at heels. 17. Also press in any 18. While brace 20. When cool, trim 19. Unwrap cloth hollows around bones and is cooling, heal and smooth the edges from brace while on bottom of foot. Keep soldering iron. ot the brace. still warm and use pressing until plastic soldering iron to Heat to moderate begins to cool and smooth and weld heat-not red hot. stiffen. heel joint. 21. Glue or rivet For day use, NOTE: Braces made For easier a strap near the fastening, or use with from plastic buckets top of the brace. use Velcro sandals or or containers tend straps. shoes, only to break fairly easily For night splints, the upper if a larger child uses add 1 or 2 more Pad them for walking. strap is well. straps at the It is better to use needed. ankle and foot. polypropylene plastic (see next page).

^{*}Take care not to overheat the plastic, because the plastic used for many buckets and containers tends to wrinkle like bacon when it gets too hot.

Method 2: Polypropylene braces


Polypropylene is a special plastic available in large sheets from orthopedic supply stores and some plastic factories. For most braces, sheets 30 cm. by 60 cm. (1 foot by 2 feet) are large enough. Thickness should be 3 mm. (1/8 inch) for thinner, more flexible braces and 4 mm. to 5 mm. (3/16 inch) for stronger, less flexible braces.

Polypropylene, where available, is usually the best plastic for braces. It is flexible but strong. It is easy to stretch and mold when hot. Cost is US \$1.00 to \$2.00 per brace. **Polyethylene** can also be used but is more likely to wrinkle like bacon if it gets too hot. You can experiment with whatever plastic you find. A program in Pakistan uses **plastic bus windows,** although this hard clear plastic **(Plexiglas)** is more difficult to stretch and shape when hot.


This method is the one used by professional brace makers. Here we simplify it as much as possible. Equipment and materials needed are mostly the same as in Method 1 (see p. 551). However, high-quality braces can be made more easily with a few extra pieces of equipment (they are not absolutely necessary). This **extra equipment** includes:

special oven*


SIMPLE SHEET-METAL BOX OVEN (riveted or soldered together)

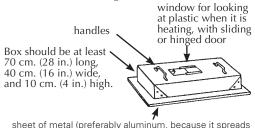

sheet of metal (preferably aluminum, because it spreads heat best) at least 6 mm. (1/4 in. to 1/2 in.) thick

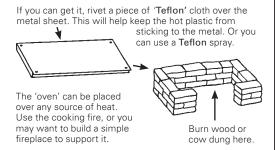


COMPLEX GAS OR ELECTRIC OVENS (designs from Huckstep's *Poliomyelitis*.

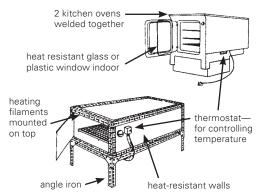

vacuum sweeper

(if electricity is available) or other form of suction. (The suction pulls the hot plastic tightly against the cast until it cools. However, this is not absolutely necessary.)





• metal pipe

Tape it to the end of the vacuum sweeper hose.

The pipe should be a little bigger than the rod used in the leg cast. By bending the rod slightly, it will fit very tightly into the pipe.


Figure out some way to clamp or bolt the pipe firmly to a strong bench or table.





electric cast-cutter

These are **very** expensive but a great help if you are making a lot of plastic braces.



If you do not have a cast-cutter you may have to use a hammer and chisel to cut the plastic. You can heat the chisel so that it will melt the plastic.




^{*}Some brace makers in Pakistan use no oven, but simply hold the plastic sheet over a 'chula' (earth pot) of hot coals. See photo on p. 538.


Making the polypropylene (or polyethylene) brace


Steps A and B are the same as described for Method 1 (see p. 552).

Step C. Heat-molding the plastic brace


- 1. Put the rod of the plaster mold into the vacuum pipe. Be sure it is very tight. (If not, take it out and bend the rod a bit more.)
- 2. Stretch stockinette or stocking tightly over the cast and tape it to the pipe.
- 3. Sprinkle dry plaster powder or talc over the entire foot and smooth it with your fingers.








4. Preheat the 'oven' and sprinkle plaster powder or talc evenly over the hot metal sheet.



5. Cut a piece of polypropylene plastic large enough to stretch around the entire toot, and put it into the oven to heat.



6. As the plastic gets hot enough to mold, it will turn clear so you can easily see through it. It often gets clear in the middle first.




7. To move the hot plastic, 2 persons must wear thick gloves. Sprinkle dry plaster powder, lime, or talc on them.




8. As the plastic is getting hot, turn on the suction (vacuum cleaner) and listen for a hissing sound where the pipe joins the cast. (This means




9. When the plastic is hot enough (clear and limp), remove the oven lid, lift the hot plastic by its 4 corners, and quickly stretch it over the whole cast.




10. Quickly pinch the edges of the plastic together along the bottom side of the leg and around the pipe. Squeeze together all edges to form a seal. You **must work quickly** to complete the seal before the plastic gets too cool.




As soon as the seal is complete, the suction should pull the hot plastic close against the cast. But if necessary, help by pushing it into the hollows.*






12. After it cools, draw the form of the brace on the plastic,




13. and cut it out either with a cast cutter.



or a hammer and chisel,

or a red hot soldering iron, or however you can.




Finish the brace in The way described under Method 1 (steps 20 and 21).

^{*} If no suction equipment is available, you can heat mold the plastic by stretching it over the cast and pushing in the hollows until it cools. With practice, this gives almost as good results, and you only need about half as much plastic.

Making sure plastic braces fit well and are comfortable


The most common problem with plastic braces is that they press on bony bumps. To avoid this,

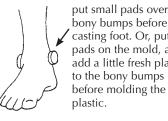


put small pads over bony bumps before casting foot. Or, put the pads on the mold, and add a little fresh plaster

When the child wears the plastic brace. if it presses too much on bony places, or elsewhere.


heat a small area over the spot where the bone presses, and with a smooth, rounded stick push the hollow deeper. (Use a heat gun if you have one.)

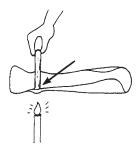


Soft padding inside the brace can make it more comfortable. Places that may need to be padded are:



For padding you can use a product called 'moleskin', or a special foam plastic material available from orthopedic supply stores. Or you can glue in pieces of cotton blanket or car inner tube (but make sure the child wears cotton stockings to avoid skin problems).

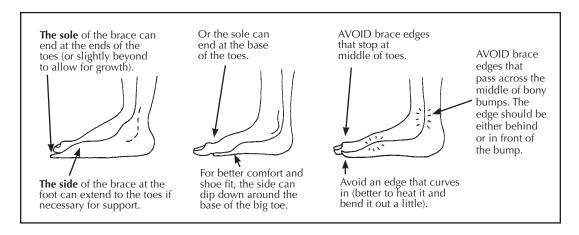


Deciding how wide or narrow to make the sides of the brace at different points will depend on the needs of the particular child.

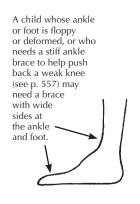

A child who needs only the ankle stabilized may walk better with a brace that lets the front of the foot bend up and down a little

Many children benefit by a brace that allows some up and down ankle movement but prevents sideways movement.



plastic on the back of the plaster mold before stretching the whole plastic over it.

This will be the weak point

in the brace. So, the plastic

must be extra thick here.

Different plastic brace models for different needs

In various places in this book we have shown different brace models and how they meet the particular needs of a child. See, for example, p. 66 to 73 and p. 116. Here are a few more ideas for different plastic braces:

Below-knee brace that gives knee support



The child with a weak upper leg whose knee cannot support her full weight, may be helped enough by a brace that pushes her knee back.

A strong stiff ankle on the brace, with the foot tilted down slightly (more than 90°), pushes the knee back when she steps. Front of brace presses against knee.

The simplest way to make this brace is to rivet the seam where the plastic joins in front (see photo, p. 550).



A similar brace can be made in 2 parts.

1. Make the lower part, and place it back on the plaster mold.



2. Place the mold like this and form the top part of the brace over the lower part.

When the child grows, this brace can be made longer by removing the rivets and separating the 2 ends more.



Side-support knee brace

A brace that supports the knee may help a child that has a sideway bend or partial dislocation of the knee.




Make the brace higher on the side that needs more support.

Also, make the brace higher on the side of the ankle that needs more support.



Above-knee plastic braces

The simplest kind of above-knee plastic brace is a single piece without a knee hinge. You can make it in the same way as a below-knee brace, with or without a footpiece. These braces are useful on small children.



To make a jointed above-knee brace:


- 1. Draw the shape of the child's leg on paper.
- 4. Temporarily pin or bolt the plastic pieces to the metal pieces. Then you can adjust the front-to-back angles with the brace on the child.
- hip bone crotch mid-knee

1. Mark the height of the

5. When the angles are right, mark the position, and after checking all aspects of fit, rivet the pieces together and add straps and knee supports.


ankle bone

After forming the plastic pieces on plaster molds, bend metal joint pieces so they fit the shape of the leg.



Hinged braces can also be made using the plastic itself for knee hinges, — and even ankle hinges.

However, these hinges may not last long with heavy use.



BODY SUPPORTS



In most cases, a body brace or body jacket probably does little or nothing to correct or prevent further curving of the spine. However, a child with a 'flail' spine that curves so much that it makes sitting difficult or awkward, may sit more comfortably and have more use of her arms if she has a body brace.



Making a plastic body brace

1. Put small pads over upper outer corners of hipbone.




2. Put a stockinette or old tight-fitting shirt on the child.

Tie a cloth band or soft rope tightly over the hip bones so that it pulls in the waist.



3. Cast the child's body with plaster bandage while holding her in a sitting position.*

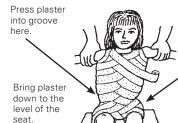

While the plaster dries, hold the child as straight as you can.

This 'shelf' over the hip bones becomes a base for the final brace to hold her body upright.


4. Cut the cast into 2 halves and remove.



5. Tape or tie the 2 halves of the cast together and put it into a plastic bag.



6. Make a solid plaster mold inside the cast (see p. 552).



You can make it lighter and save plaster by mixing sawdust or bits of plastic foam into the

plaster.

7. Remove the plaster mold and smooth it carefully to keep its shape, especially the waist and hip curves.



8. Stretch hot plastic over the mold as described on p. 555. If your oven or sheets of plastic are not big enough, you may have to mold it in 2 halves, front and back.



9. Mark and cut the plastic. Leave a little room under arms.

Cut breathing holes and perhaps a large central hole over the stomach. 10. Try it on the child. Make adjustments. Smooth edges. Add padding and straps.



The bottom of the brace should just touch the seat when the child sits.

A body brace attached to leg braces may be needed by a child whose body is weak from the chest down.



^{*}Casting can also be done with the child lying lengthwise over a wide strip of cloth stretched between two points.

