LEDCON Packaging Materials









7x7x3 Mailer

GreenWrap

Kraft Paper Sealing Tape

Packing Label

1. Assemble Mailer


Assemble 7x7x3 Mailer.



2. Place folded Greenwrap cushioning in bottom of Carton.

Cut 14" sheet of expanded Greenwrap from roll.

Fold sheet of expanded Greenwrap in half from side to side, and then top to bottom.

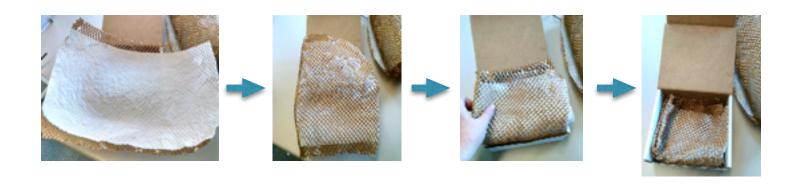

3. Place LEDCON on top of Greenwrap.




4. Tightly fill void around LEDCON with wadded Greenwrap.



5. Place folded Greenwrap cushioning on top of packed LEDCON.

Cut 14" sheet of expanded Greenwrap from roll.

Fold sheet of expanded Greenwrap in half from side to side, and then top to bottom.

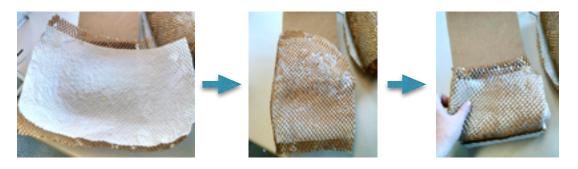

6. Close Mailer.



6. Apply Packing Label.

Turn Mailer 180 degrees so back is toward you. Apply Packing Label to back of box as shown.



7. Seal all seams with Kraft Paper Tape.



8. Apply Shipping Label

Apply Shipping Label to top of box as required by your designated shipper.