
# Contents


Controls ..... 2
- Layout overview ..... 2
- Non-layered inputs ..... 4
  - Top encoder section ..... 4
    - Normal mode ..... 4
    - Shift mode ..... 4
- Button matrix pages ..... 5
  - Layer Page - Menu ..... 5
    - Normal mode ..... 5
    - Shift mode ..... 5
  - Page A - Play Commands ..... 6
    - Normal mode ..... 6
    - Shift mode ..... 6
  - Page B - Slicer ..... 7
    - Normal mode ..... 7
    - Shift mode ..... 7
  - Page C - Loop Roll ..... 8
    - Normal mode ..... 8
    - Shift mode ..... 8
  - Page D - Key Cue ..... 9
    - Normal mode ..... 9
    - Shift mode ..... 9
  - Page E - Hotcue ..... 10
    - Normal mode ..... 10
    - Shift mode ..... 10
  - Page F - Cueloop ..... 11
    - Normal mode ..... 11
    - Shift mode ..... 11
  - Page I — Quick Filters 1–4 ..... 12
    - Normal mode ..... 12
    - Shift mode ..... 12
  - Page J — QFPro (default view) ..... 13
    - Normal mode ..... 13
    - Shift mode ..... 13

# Controls

## Layout overview

Roughly speaking, the top encoder section controls looping and beat jumps, the left rotary potentiometer section controls the stem EQ, the switch matrix section controls a range of deck and global controls, and the bottom rotary section control browser, pitch and UI views. Shift retains it's use of providing access to alternate controls for a lot of inputs, the layer button accesses other command layers

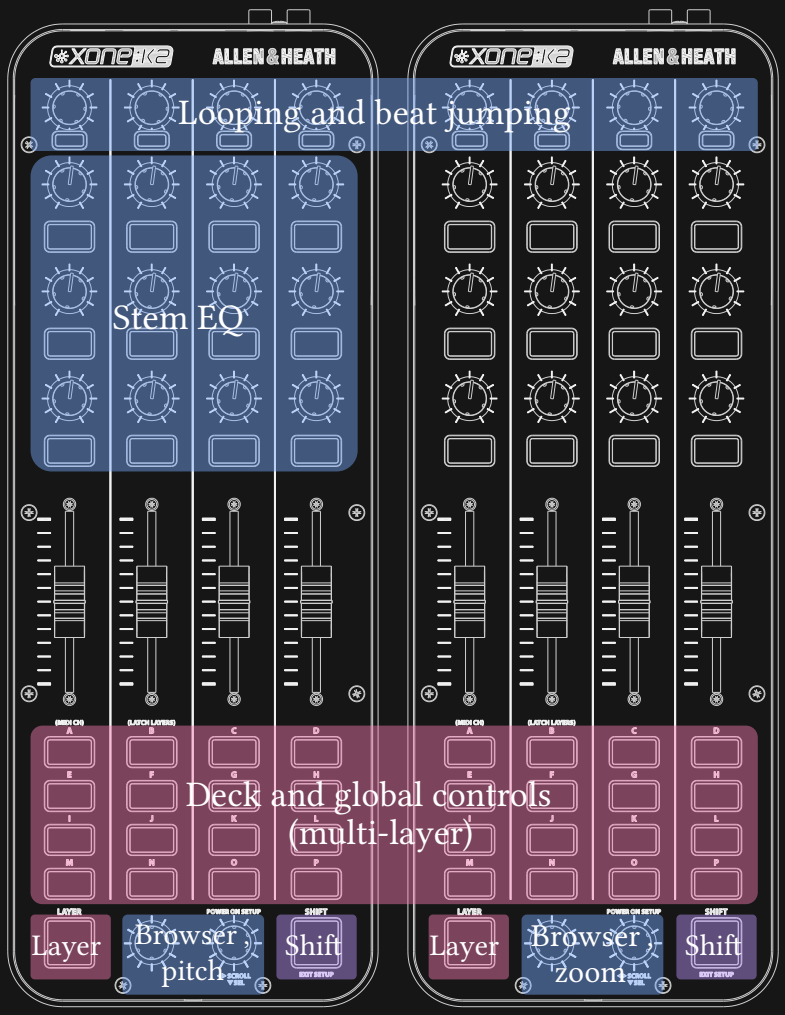



Latch layers functionality does not use inbuilt, hardware-side, layering system. It's written from the ground up in VirtualDJ and mimics inbuilt latch-layer setting 2. That is, the latch layer button changes the functionality of the button matrix A-P. However, instead of cycling through 3 layers by repeatedly pressing the latch layer button, the button brings you to a menu page where each of the buttons represents a unique layer. This makes for a total of 16 layers, with 16 more theoretically possible using the shift button.

Faders of both controllers and the rotary potentiometer section including the pot switches of the right controller are completely unmapped, allowing for custom user mapping in VirtualDJ or other software (e.g. channel faders in Ableton, controls of external FX, etc).


With the exception of the stem EQ, controls targeting individual decks are split across the two controllers.




left K2 switch matrix

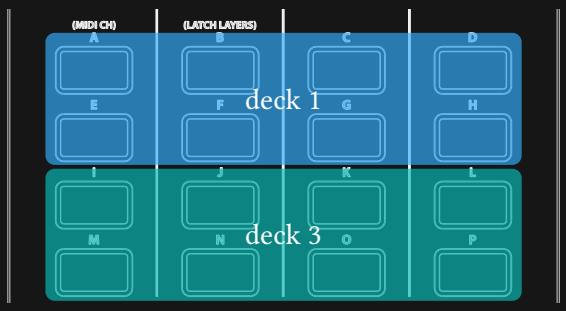


right K2 switch matrix

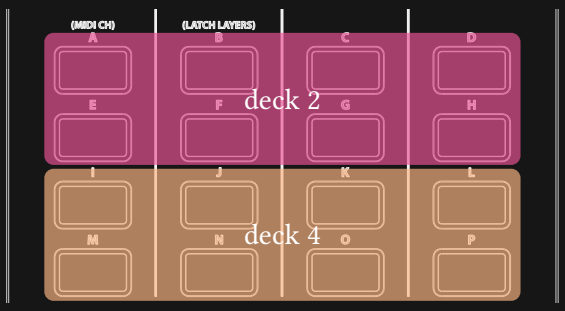


The arrangement mimics the way decks are shown in performance mode within VirtualDJ. Deck controls are thus “stacked” vertically, instead of being lined up in columns horizontally like in most other mappings.

left K2 top encoder section




right K2 top encoder section




The upper encoder section has the “top” deck on the left and the “bottom” deck on the right,

# Non-layered inputs

## Top encoder section

### Normal mode

#### Left controller

| | | | |
|---|---|---|---|
| ▼ jump length<br>global | ▼ set loop<br>deck 1 | ▼ N/A<br>N/A | ▼ set loop<br>deck 3 |
| ◀▶ jump long<br>deck 1 | ◀▶ loop size<br>deck 1 | ◀▶ jump long<br>deck 3 | ◀▶ loop size<br>deck 3 |

#### Right controller

| | | | |
|---|---|---|---|
| ▼ N/A<br>N/A | ▼ set loop<br>deck 2 | ▼ N/A<br>N/A | ▼ set loop<br>deck 4 |
| ◀▶ jump long<br>deck 2 | ◀▶ loop size<br>deck 2 | ◀▶ jump long<br>deck 4 | ◀▶ loop size<br>deck 4 |

### Shift mode

#### Left controller

| | | | |
|---|---|---|---|
| ▼ Non-shift<br>Non-shift | ▼ Non-shift<br>Non-shift | ▼ Non-shift<br>Non-shift | ▼ Non-shift<br>Non-shift |
| ◀▶ jump short<br>deck 1 | ◀▶ move loop<br>deck 1 | ◀▶ jump short<br>deck 3 | ◀▶ move loop<br>deck 3 |

#### Right controller

| | | | |
|---|---|---|---|
| ▼ Non-shift<br>Non-shift | ▼ Non-shift<br>Non-shift | ▼ Non-shift<br>Non-shift | ▼ Non-shift<br>Non-shift |
| ◀▶ jump short<br>deck 2 | ◀▶ move loop<br>deck 2 | ◀▶ jump short<br>deck 4 | ◀▶ move loop<br>deck 4 |

# Button matrix pages

## Layer Page - Menu

Pressing the layer button on any of the other pages takes you to this page. Pushing any of the switches A-P takes the user to the switch's associated page of commands.

### Normal mode

| Left controller | | | | Right controller | | | |
|---|---|---|---|---|---|---|---|
| A: play cntrl<br>deck 1 & 3 | B: slicer<br>deck 1 & 3 | C: beat roll<br>deck 1 & 3 | D: keycue<br>deck 1 & 3 | A: play cntrl<br>deck 2 & 4 | B: slicer<br>deck 2 & 4 | C: beat roll<br>deck 2 & 4 | D: keycue<br>deck 2 & 4 |
| E: hotcues<br>deck 1 & 3 | F: cueloop<br>deck 1 & 3 | G: blank page<br>N/A | H: blank page<br>N/A | E: hotcues<br>deck 2 & 4 | F: cueloop<br>deck 2 & 4 | G: blank page<br>N/A | H: blank page<br>N/A |
| I: quick filters<br>global | J: QFPro<br>global | K: blank page<br>N/A | L: blank page<br>N/A | I: quick filters<br>global | J: QFPro<br>global | K: blank page<br>N/A | L: blank page<br>N/A |
| M: blank page<br>N/A | N: blank page<br>N/A | O: blank page<br>N/A | P: blank page<br>N/A | M: blank page<br>N/A | N: blank page<br>N/A | O: blank page<br>N/A | P: blank page<br>N/A |

### Shift mode

| Left controller | | | | Right controller | | | |
|---|---|---|---|---|---|---|---|
| A: Non-shift<br>Non-shift | B: Non-shift<br>Non-shift | C: Non-shift<br>Non-shift | D: Non-shift<br>Non-shift | A: Non-shift<br>Non-shift | B: Non-shift<br>Non-shift | C: Non-shift<br>Non-shift | D: Non-shift<br>Non-shift |
| E: Non-shift<br>Non-shift | F: Non-shift<br>Non-shift | G: Non-shift<br>Non-shift | H: Non-shift<br>Non-shift | E: Non-shift<br>Non-shift | F: Non-shift<br>Non-shift | G: Non-shift<br>Non-shift | H: Non-shift<br>Non-shift |
| I: Non-shift<br>Non-shift | J: Non-shift<br>Non-shift | K: Non-shift<br>Non-shift | L: Non-shift<br>Non-shift | I: Non-shift<br>Non-shift | J: Non-shift<br>Non-shift | K: Non-shift<br>Non-shift | L: Non-shift<br>Non-shift |
| M: Non-shift<br>Non-shift | N: Non-shift<br>Non-shift | O: Non-shift<br>Non-shift | P: Non-shift<br>Non-shift | M: Non-shift<br>Non-shift | N: Non-shift<br>Non-shift | O: Non-shift<br>Non-shift | P: Non-shift<br>Non-shift |

# Page A - Play Commands

## Normal mode

| Left controller | | | | Right controller | | | |
|---|---|---|---|---|---|---|---|
| Cue<br>deck 1 | Set master<br>deck 1 | < nudge<br>deck 1 | nudge ><br>deck 1 | Cue<br>deck 2 | Set master<br>deck 2 | < nudge<br>deck 2 | nudge ><br>deck 2 |
| Play<br>deck 1 | Sync<br>deck 1 | slip<br>deck 1 | reverse<br>deck 1 | Play<br>deck 2 | Sync<br>deck 2 | slip<br>deck 2 | reverse<br>deck 2 |
| Cue<br>deck 3 | Set master<br>deck 3 | < nudge<br>deck 3 | nudge ><br>deck 3 | Cue<br>deck 4 | Set master<br>deck 4 | < nudge<br>deck 4 | nudge ><br>deck 4 |
| Play<br>deck 3 | Sync<br>deck 3 | slip<br>deck 3 | reverse<br>deck 3 | Play<br>deck 4 | Sync<br>deck 4 | slip<br>deck 4 | reverse<br>deck 4 |

## Shift mode

| Left controller | | | | Right controller | | | |
|---|---|---|---|---|---|---|---|
| jump start<br>deck 1 | master tempo<br>deck 1 | edit grid<br>deck 1 | load track<br>deck 1 | jump start<br>deck 2 | master tempo<br>deck 2 | edit grid<br>deck 2 | load track<br>deck 2 |
| Non-shift<br>Non-shift | pitch lock<br>deck 1 | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | pitch lock<br>deck 2 | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| jump start<br>deck 3 | master tempo<br>deck 3 | edit grid<br>deck 3 | load track<br>deck 3 | jump start<br>deck 4 | master tempo<br>deck 4 | edit grid<br>deck 4 | load track<br>deck 4 |
| Non-shift<br>Non-shift | pitch lock<br>deck 3 | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | pitch lock<br>deck 4 | Non-shift<br>Non-shift | Non-shift<br>Non-shift |

## Page B - Slicer

### Normal mode

| Left controller | | | | Right controller | | | |
|---|---|---|---|---|---|---|---|
| slicer pad 1<br>deck 1 | slicer pad 2<br>deck 1 | slicer pad 3<br>deck 1 | slicer pad 4<br>deck 1 | slicer pad 1<br>deck 2 | slicer pad 2<br>deck 2 | slicer pad 3<br>deck 2 | slicer pad 4<br>deck 2 |
| slicer pad 5<br>deck 1 | slicer pad 6<br>deck 1 | slicer pad 7<br>deck 1 | slicer pad 8<br>deck 1 | slicer pad 5<br>deck 2 | slicer pad 6<br>deck 2 | slicer pad 7<br>deck 2 | slicer pad 8<br>deck 2 |
| slicer pad 1<br>deck 3 | slicer pad 2<br>deck 3 | slicer pad 3<br>deck 3 | slicer pad 4<br>deck 3 | slicer pad 1<br>deck 4 | slicer pad 2<br>deck 4 | slicer pad 3<br>deck 4 | slicer pad 4<br>deck 4 |
| slicer pad 5<br>deck 3 | slicer pad 6<br>deck 3 | slicer pad 7<br>deck 3 | slicer pad 8<br>deck 3 | slicer pad 5<br>deck 4 | slicer pad 6<br>deck 4 | slicer pad 7<br>deck 4 | slicer pad 8<br>deck 4 |

### Shift mode

| Left controller | | | | Right controller | | | |
|---|---|---|---|---|---|---|---|
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |

## Page C - Loop Roll

### Normal mode

**Left controller**

| | | | |
|---|---|---|---|
| loop roll pad 1<br>deck 1 | loop roll pad 2<br>deck 1 | loop roll pad 3<br>deck 1 | loop roll pad 4<br>deck 1 |
| loop roll pad 5<br>deck 1 | loop roll pad 6<br>deck 1 | loop roll pad 7<br>deck 1 | loop roll pad 8<br>deck 1 |
| loop roll pad 1<br>deck 3 | loop roll pad 2<br>deck 3 | loop roll pad 3<br>deck 3 | loop roll pad 4<br>deck 3 |
| loop roll pad 5<br>deck 3 | loop roll pad 6<br>deck 3 | loop roll pad 7<br>deck 3 | loop roll pad 8<br>deck 3 |

**Right controller**

| | | | |
|---|---|---|---|
| loop roll pad 1<br>deck 2 | loop roll pad 2<br>deck 2 | loop roll pad 3<br>deck 2 | loop roll pad 4<br>deck 2 |
| loop roll pad 5<br>deck 2 | loop roll pad 6<br>deck 2 | loop roll pad 7<br>deck 2 | loop roll pad 8<br>deck 2 |
| loop roll pad 1<br>deck 4 | loop roll pad 2<br>deck 4 | loop roll pad 3<br>deck 4 | loop roll pad 4<br>deck 4 |
| loop roll pad 5<br>deck 4 | loop roll pad 6<br>deck 4 | loop roll pad 7<br>deck 4 | loop roll pad 8<br>deck 4 |

### Shift mode

**Left controller**

| | | | |
|---|---|---|---|
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |

**Right controller**

| | | | |
|---|---|---|---|
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |

## Page D - Key Cue

### Normal mode

| Left controller | | | | Right controller | | | |
|---|---|---|---|---|---|---|---|
| keycue pad 1<br>deck 1 | keycue pad 2<br>deck 1 | keycue pad 3<br>deck 1 | keycue pad 4<br>deck 1 | keycue pad 1<br>deck 2 | keycue pad 2<br>deck 2 | keycue pad 3<br>deck 2 | keycue pad 4<br>deck 2 |
| keycue pad 5<br>deck 1 | keycue pad 6<br>deck 1 | keycue pad 7<br>deck 1 | keycue pad 8<br>deck 1 | keycue pad 5<br>deck 2 | keycue pad 6<br>deck 2 | keycue pad 7<br>deck 2 | keycue pad 8<br>deck 2 |
| keycue pad 1<br>deck 3 | keycue pad 2<br>deck 3 | keycue pad 3<br>deck 3 | keycue pad 4<br>deck 3 | keycue pad 1<br>deck 4 | keycue pad 2<br>deck 4 | keycue pad 3<br>deck 4 | keycue pad 4<br>deck 4 |
| keycue pad 5<br>deck 3 | keycue pad 6<br>deck 3 | keycue pad 7<br>deck 3 | keycue pad 8<br>deck 3 | keycue pad 5<br>deck 4 | keycue pad 6<br>deck 4 | keycue pad 7<br>deck 4 | keycue pad 8<br>deck 4 |

### Shift mode

| Left controller | | | | Right controller | | | |
|---|---|---|---|---|---|---|---|
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |

## Page E - Hotcue

### Normal mode

| Left controller | | | | Right controller | | | |
|---|---|---|---|---|---|---|---|
| hotcue 1<br>deck 1 | hotcue 2<br>deck 1 | hotcue 3<br>deck 1 | hotcue 4<br>deck 1 | hotcue 1<br>deck 2 | hotcue 2<br>deck 2 | hotcue 3<br>deck 2 | hotcue 4<br>deck 2 |
| hotcue 5<br>deck 1 | hotcue 6<br>deck 1 | hotcue 7<br>deck 1 | hotcue 8<br>deck 1 | hotcue 5<br>deck 2 | hotcue 6<br>deck 2 | hotcue 7<br>deck 2 | hotcue 8<br>deck 2 |
| hotcue 1<br>deck 3 | hotcue 2<br>deck 3 | hotcue 3<br>deck 3 | hotcue 4<br>deck 3 | hotcue 1<br>deck 4 | hotcue 2<br>deck 4 | hotcue 3<br>deck 4 | hotcue 4<br>deck 4 |
| hotcue 5<br>deck 3 | hotcue 6<br>deck 3 | hotcue 7<br>deck 3 | hotcue 8<br>deck 3 | hotcue 5<br>deck 4 | hotcue 6<br>deck 4 | hotcue 7<br>deck 4 | hotcue 8<br>deck 4 |

### Shift mode

| Left controller | | | | Right controller | | | |
|---|---|---|---|---|---|---|---|
| delete hc 1<br>deck 1 | delete hc 2<br>deck 1 | delete hc 3<br>deck 1 | delete hc 4<br>deck 1 | delete hc 1<br>deck 2 | delete hc 2<br>deck 2 | delete hc 3<br>deck 2 | delete hc 4<br>deck 2 |
| delete hc 5<br>deck 1 | delete hc 6<br>deck 1 | delete hc 7<br>deck 1 | delete hc 8<br>deck 1 | delete hc 5<br>deck 2 | delete hc 6<br>deck 2 | delete hc 7<br>deck 2 | delete hc 8<br>deck 2 |
| delete hc 1<br>deck 3 | delete hc 2<br>deck 3 | delete hc 3<br>deck 3 | delete hc 4<br>deck 3 | delete hc 1<br>deck 4 | delete hc 2<br>deck 4 | delete hc 3<br>deck 4 | delete hc 4<br>deck 4 |
| delete hc 5<br>deck 3 | delete hc 6<br>deck 3 | delete hc 7<br>deck 3 | delete hc 8<br>deck 3 | delete hc 5<br>deck 4 | delete hc 6<br>deck 4 | delete hc 7<br>deck 4 | delete hc 8<br>deck 4 |

# Page F - Cueloop

## Normal mode

| Left controller | | | | Right controller | | | |
|---|---|---|---|---|---|---|---|
| cueloop 1<br>deck 1 | cueloop 2<br>deck 1 | cueloop 3<br>deck 1 | cueloop 4<br>deck 1 | cueloop 1<br>deck 2 | cueloop 2<br>deck 2 | cueloop 3<br>deck 2 | cueloop 4<br>deck 2 |
| cueloop 5<br>deck 1 | cueloop 6<br>deck 1 | cueloop 7<br>deck 1 | cueloop 8<br>deck 1 | cueloop 5<br>deck 2 | cueloop 6<br>deck 2 | cueloop 7<br>deck 2 | cueloop 8<br>deck 2 |
| cueloop 1<br>deck 3 | cueloop 2<br>deck 3 | cueloop 3<br>deck 3 | cueloop 4<br>deck 3 | cueloop 1<br>deck 4 | cueloop 2<br>deck 4 | cueloop 3<br>deck 4 | cueloop 4<br>deck 4 |
| cueloop 5<br>deck 3 | cueloop 6<br>deck 3 | cueloop 7<br>deck 3 | cueloop 8<br>deck 3 | cueloop 5<br>deck 4 | cueloop 6<br>deck 4 | cueloop 7<br>deck 4 | cueloop 8<br>deck 4 |

## Shift mode

| Left controller | | | | Right controller | | | |
|---|---|---|---|---|---|---|---|
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |

### Page I — Quick Filters 1–4

Triggers VirtualDJ's built-in Quick Filters. Resolved filter index = `button_number + @\$qfoffset`. `@\$qfoffset` is initialised in `ONINIT` (default `-1`) — change it there to shift the mapped range without editing each button.

#### Normal mode

| Left controller | | | | Right controller | | | |
|---|---|---|---|---|---|---|---|
| Quick Filter 1<br>global | Quick Filter 2<br>global | Quick Filter 3<br>global | Quick Filter 4<br>global | Quick Filter 1<br>global | Quick Filter 2<br>global | Quick Filter 3<br>global | Quick Filter 4<br>global |
| N/A<br>N/A | N/A<br>N/A | N/A<br>N/A | N/A<br>N/A | N/A<br>N/A | N/A<br>N/A | N/A<br>N/A | N/A<br>N/A |
| N/A<br>N/A | N/A<br>N/A | N/A<br>N/A | N/A<br>N/A | N/A<br>N/A | N/A<br>N/A | N/A<br>N/A | N/A<br>N/A |
| N/A<br>N/A | N/A<br>N/A | N/A<br>N/A | N/A<br>N/A | N/A<br>N/A | N/A<br>N/A | N/A<br>N/A | N/A<br>N/A |

#### Shift mode

| Left controller | | | | Right controller | | | |
|---|---|---|---|---|---|---|---|
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |
| Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift | Non-shift<br>Non-shift |

**Page J — QFPro (default view)**

QFPro stack/range across four banks: **E*nergy,** H*appy, **D*ance,** P*op. Each column is one bank; each row is one offset value from the master tag (stack adds only that value; range covers everything from master out to that value).

Labels show the **default** view (`@\$qfwin = 0`), with rows +3/+2/+1/0 from top. Either controller's bottom-right encoder cycles `@\$qfwin` 0↔3, sliding the visible 4-row window through the virtual 7-row layout (+3 down to −3). The row currently showing `0` blinks: green if range-0 engaged, orange if stack-0 engaged, red as a plain "this is 0" marker.

## Normal mode

| Left controller | | | | Right controller | | | |
|---|---|---|---|---|---|---|---|
| E +3<br>global | H +3<br>global | D +3<br>global | P +3<br>global | E +3<br>global | H +3<br>global | D +3<br>global | P +3<br>global |
| E +2<br>global | H +2<br>global | D +2<br>global | P +2<br>global | E +2<br>global | H +2<br>global | D +2<br>global | P +2<br>global |
| E +1<br>global | H +1<br>global | D +1<br>global | P +1<br>global | E +1<br>global | H +1<br>global | D +1<br>global | P +1<br>global |
| E 0<br>global | H 0<br>global | D 0<br>global | P 0<br>global | E 0<br>global | H 0<br>global | D 0<br>global | P 0<br>global |

## Shift mode

| Left controller | | | | Right controller | | | |
|---|---|---|---|---|---|---|---|
| E ≥3<br>global | H ≥3<br>global | D ≥3<br>global | P ≥3<br>global | E ≥3<br>global | H ≥3<br>global | D ≥3<br>global | P ≥3<br>global |
| E ≥2<br>global | H ≥2<br>global | D ≥2<br>global | P ≥2<br>global | E ≥2<br>global | H ≥2<br>global | D ≥2<br>global | P ≥2<br>global |
| E ≥1<br>global | H ≥1<br>global | D ≥1<br>global | P ≥1<br>global | E ≥1<br>global | H ≥1<br>global | D ≥1<br>global | P ≥1<br>global |
| E 0r<br>global | H 0r<br>global | D 0r<br>global | P 0r<br>global | E 0r<br>global | H 0r<br>global | D 0r<br>global | P 0r<br>global |