



Setting Up a Laptop On CLC Stage

Purpose

To provide clear instructions for setting up video and audio connections from a laptop to the stage projector and sound system, on stage.

NOTE: This only works on the FOH projectors and not the stage confidence screen.

Required Equipment

- SDI cable (stage left, near organ)
- SDI to HDMI converter (video control room)
- HDMI cable
- Power source (minimum 2 outlets)
- XLR cable(s)
- XLR-to-3.5mm (headphone jack) converter

Procedure

1. SDI Cable Setup (Video Signal)

1. Locate the **SDI cable** at the back of the stage (Stage Left, near the organ).
2. Run the SDI cable to the desired location on stage.
 - The cable is long enough to run along the floor if needed.
3. Ensure access to a **power source with at least two outlets**.


2. Retrieve Video Equipment

1. Go to the **video control room**.
2. Locate the **SDI to HDMI converter**:
 - Found on the **black Bookshelf, far left side**.

- One should always be available.
 - **Important:** Return the converter after use.
3. Locate and take a **short HDMI cable**.

3. Connect Video Equipment

1. Return to the stage area.
2. Connect:
 - HDMI cable → plug into **“IN”** on the converter.
 - SDI cable → plug into **“OUT”** on the converter.
3. The video signal path is now complete. See Picture below.

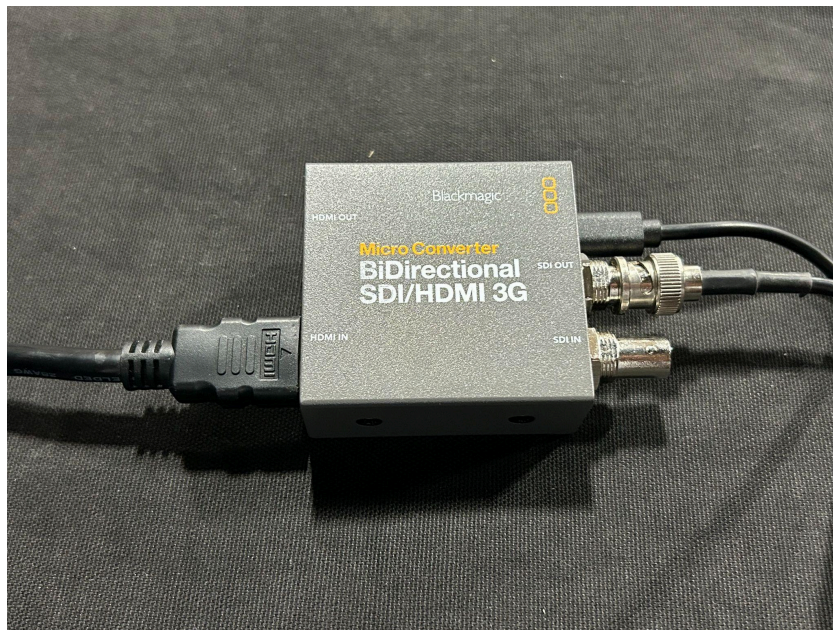

4. Audio Setup

1. Locate a **long XLR cable**.
 - If needed, connect multiple XLR cables together (daisy chain).
2. On stage (Stage Right), locate the **stage box**.
3. Plug the XLR cable into **Input 17** on the stage box.
4. Run the other end of the XLR cable to the laptop location.

5. Near the drum kit, find the **XLR-to-headphone jack converter**.
6. Connect:
 - XLR cable → into the converter
 - Converter → into the laptop headphone jack

5. Audio Check

1. On the soundboard, confirm the input is assigned to the **click channel**.
2. Play audio from the laptop.
3. Adjust **gain levels** as needed to ensure proper sound.
 - Make sure the sound is not clipping

6. Setting up Video Routing to FOH Projectors

1. Go to the **control room stream deck**.
2. Press the **“Projector Settings”** button.
3. Enter the password: **3788**
 - Enter exactly as shown.
 - No error message will appear if incorrect.
4. If entered incorrectly:
 - Press **“Go Back Home”**
 - Repeat steps above.
5. Press **“HDMI Setup”**.
 - When done with everything, please press **“Normal Setup”**

7. Final Check

- Confirm that the projector displays the laptop screen.
- Verify both **audio and video are functioning properly**.