


SIMULATION

.include lc_filter.cir


Caps above 2.2u Need Through Hole Pads,
Inductors need Through Hole Pads,
This is to align with available components in lab.

MASTER PCB

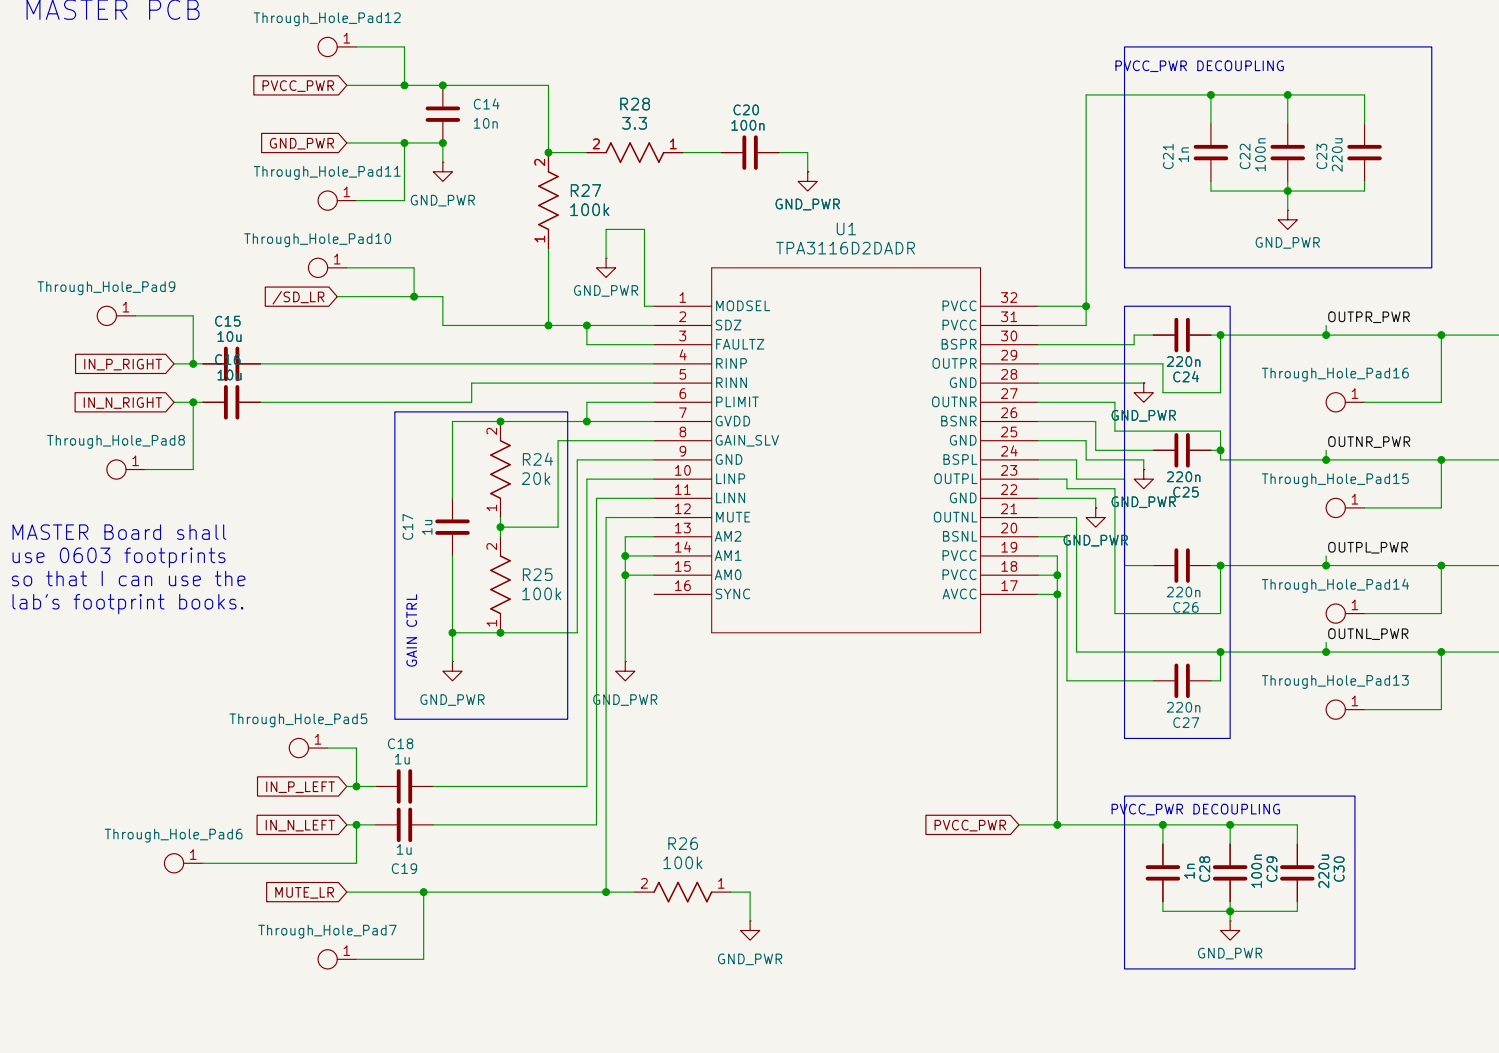


MASTER Board shall
use 0603 footprints
so that I can use the
lab's footprint books.

FILTERING

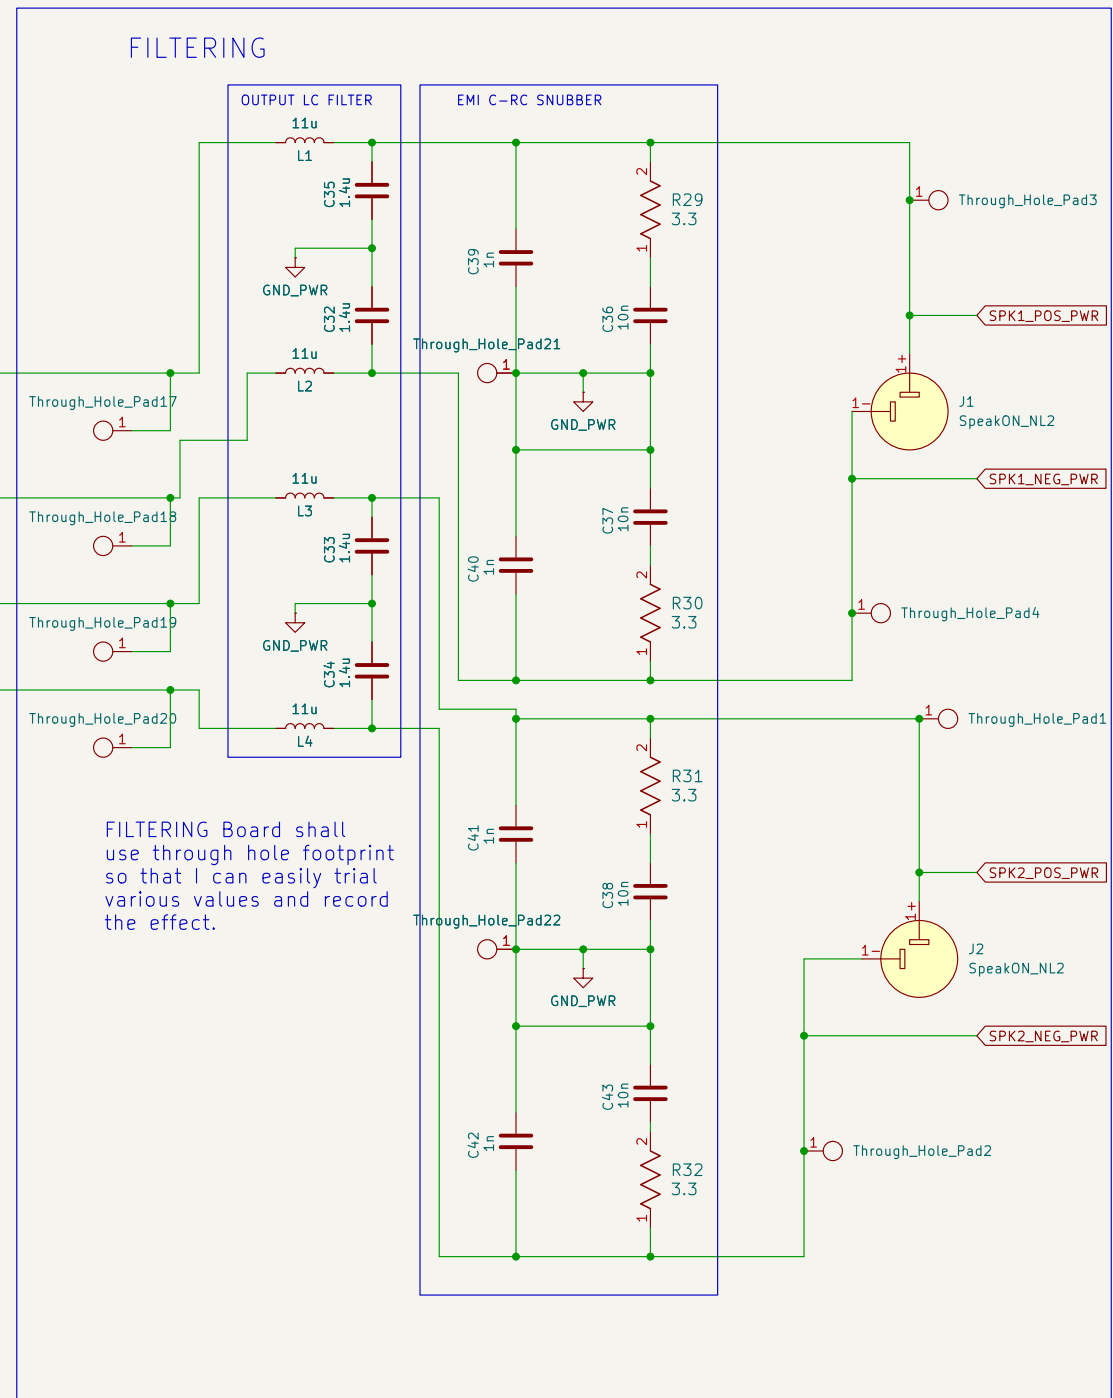

FILTERING Board shall
use through hole footprint
so that I can easily trial
various values and record
the effect.

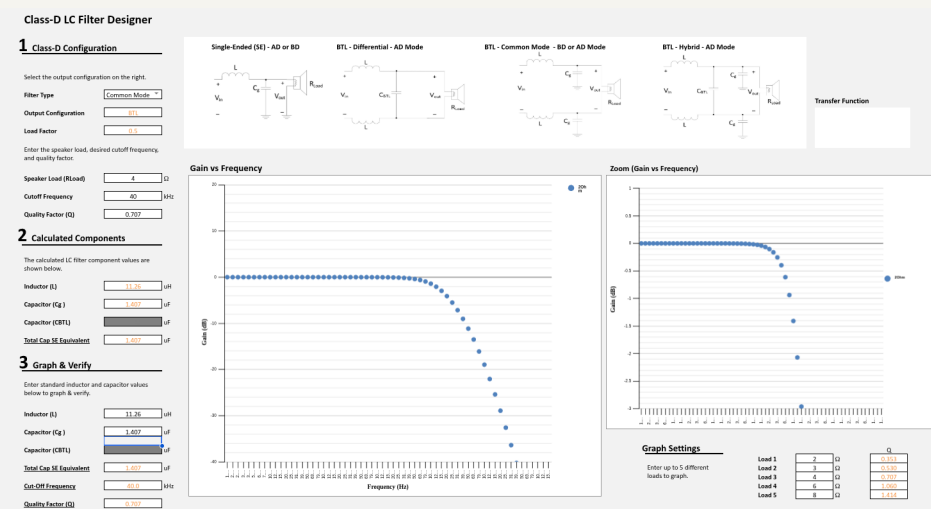

Sheet: /
File: STEREO_AMP_MODULE_V1.kicad_sch

Title:

Size: A3

Date:

Rev:

KiCad E.D.A. 10.0.5

Id: 1/1