


SLOT MACHINE DEPARTMENT

Paltronics Configurations


Technical Luke

January 1, 2025


- Open the One Link System (OLS) config application.
- Login to the application using the Username and Password provided

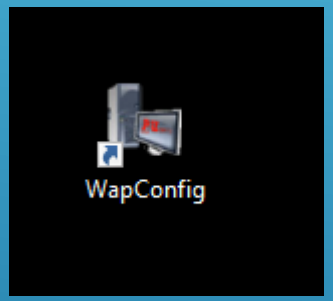



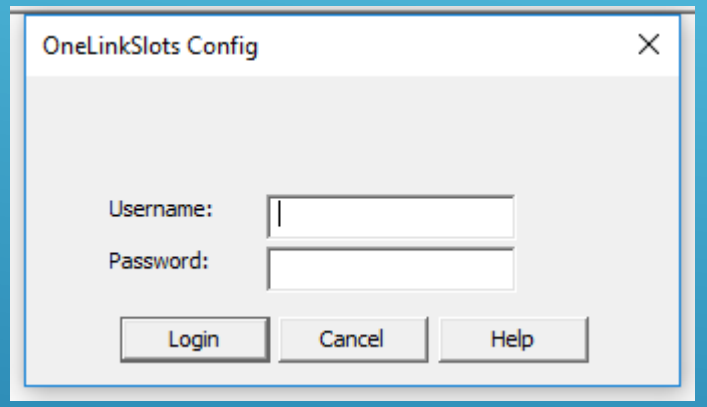

- Go to Levels.
- Add a new level.

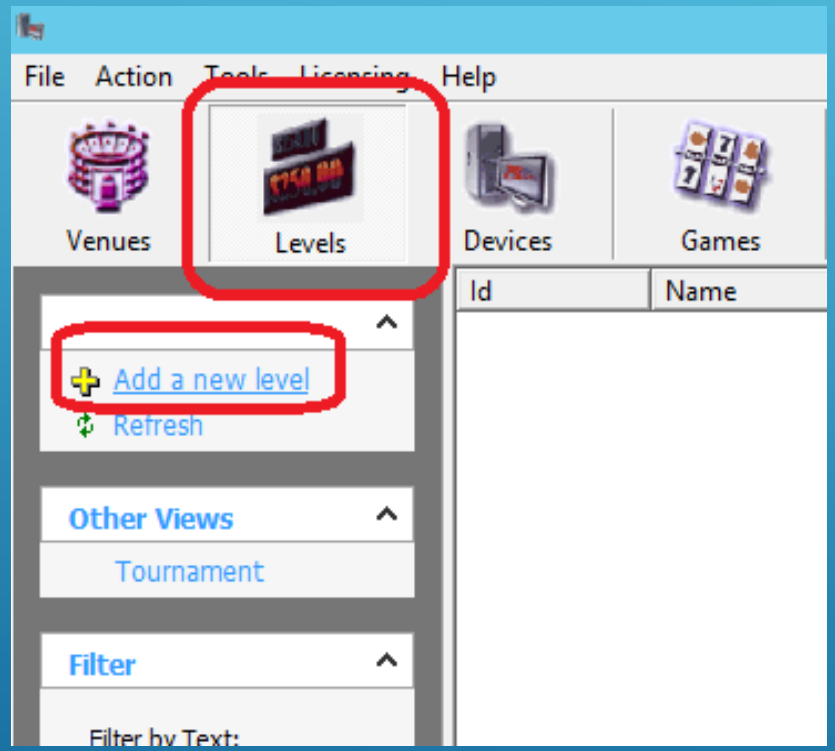

- Input the parameters on the Level Details page.1 then click "Next".

  - Jackpot Level Name: Level's name.

  - Jackpot Level Type: Standard for Progressive levels, Random for Mystery levels.

  - Maximum Offline Play Time (Minutes): Default is 0 means the system will not allow offline play.

  - Maximum Offline Turnover ($): Default is 0.00 means the system will not allow offline play.

  - Minimum Celebration Display Time (sec): The minimum celebration time.

  - Maximum Celebration Display Time (sec): The maximum celebration time.


  - Level Scope: Regional for Wide Area Levels (Only for regional venue) & Venue for local levels.

  - Choose Owner: Highlight/select the level owner.


  - Maximum amount to be autopaid: Maximum amount in dollar to be autopaid.

  - Delay in Autopay (second): recommended to be set as 0 for some EGM comparability


- Example - Level Details page 1
- Must enter the Jackpot Level Nam

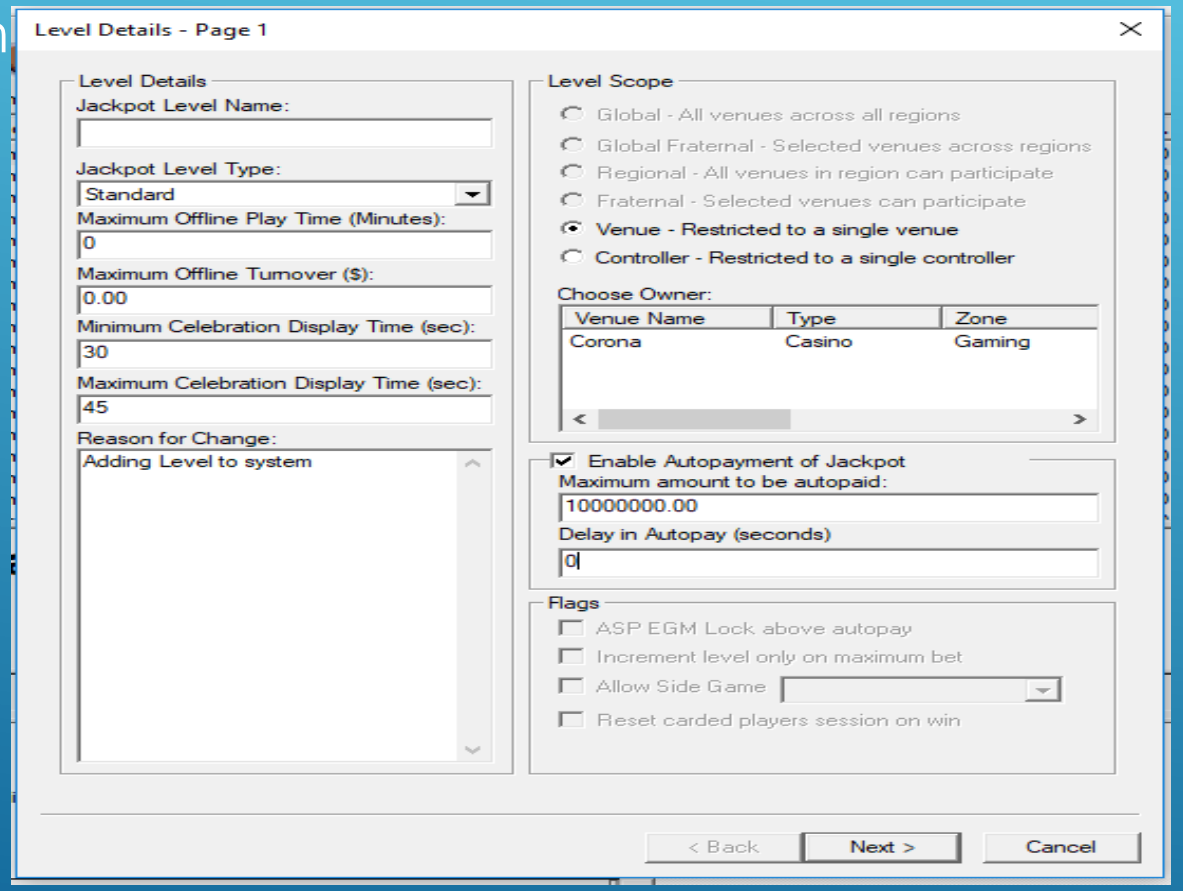


- Input the level's parameters than click "Finish", below is example.

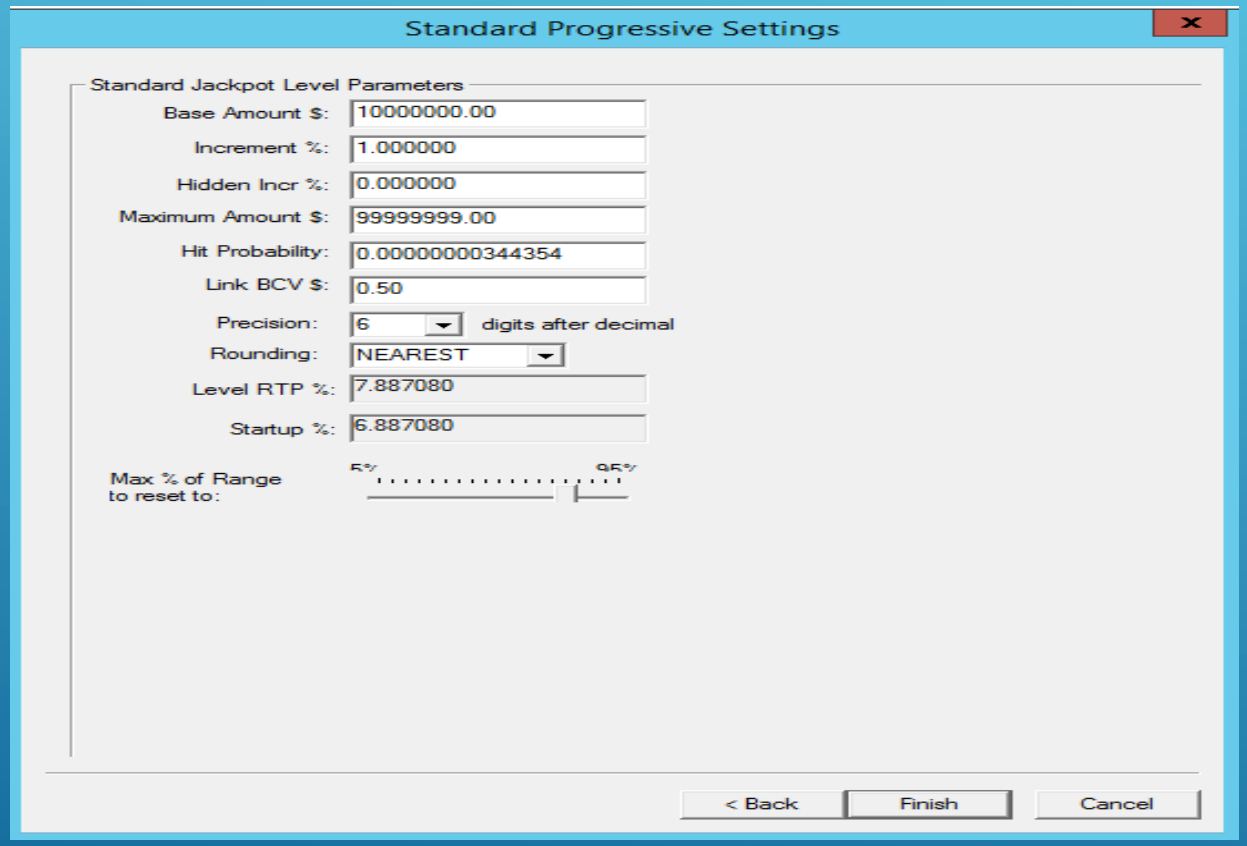


- Repeat above steps to add the other levels.

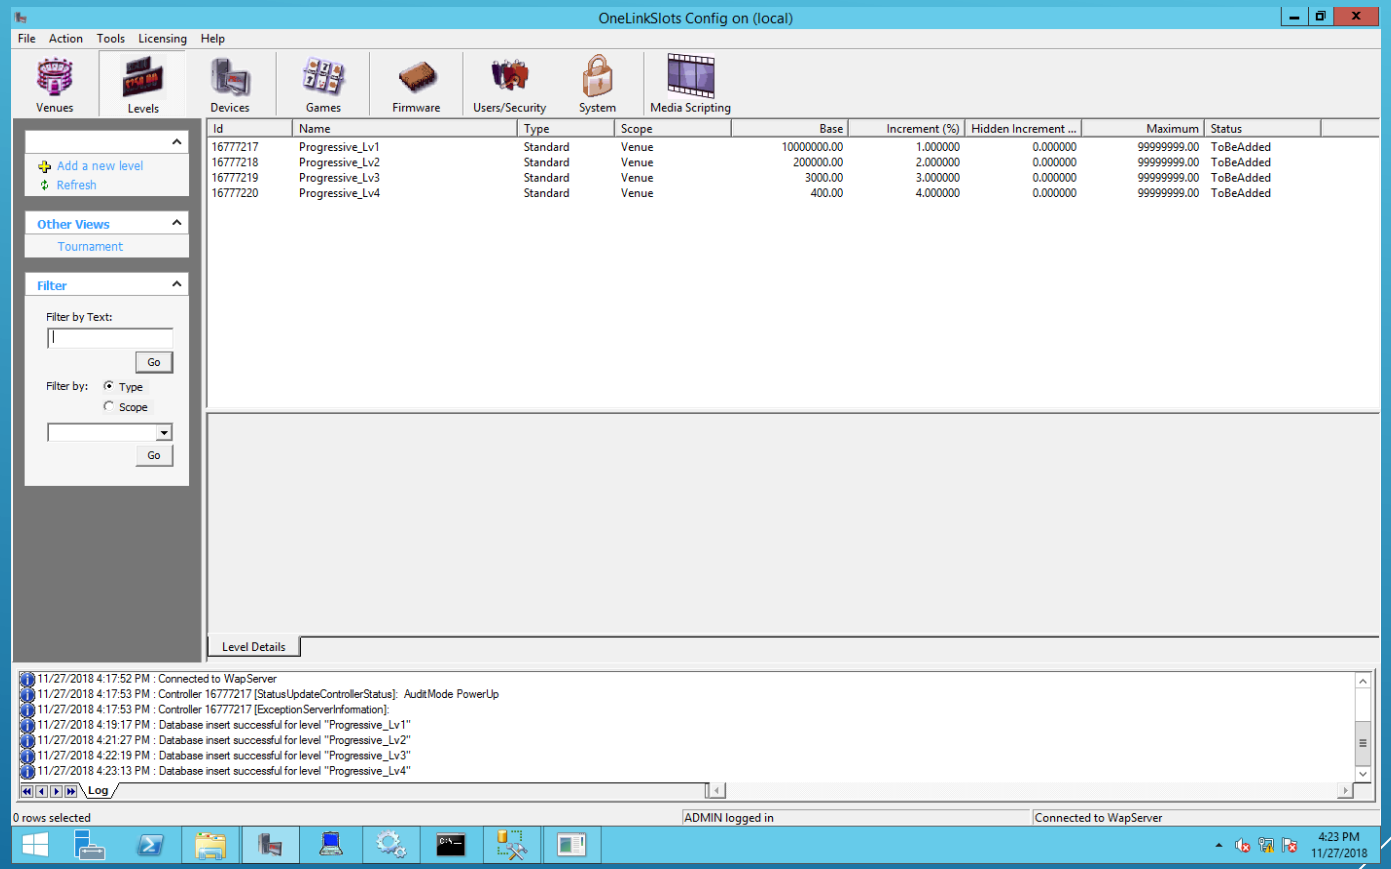



- Action > Commit Pending Changes > Yes

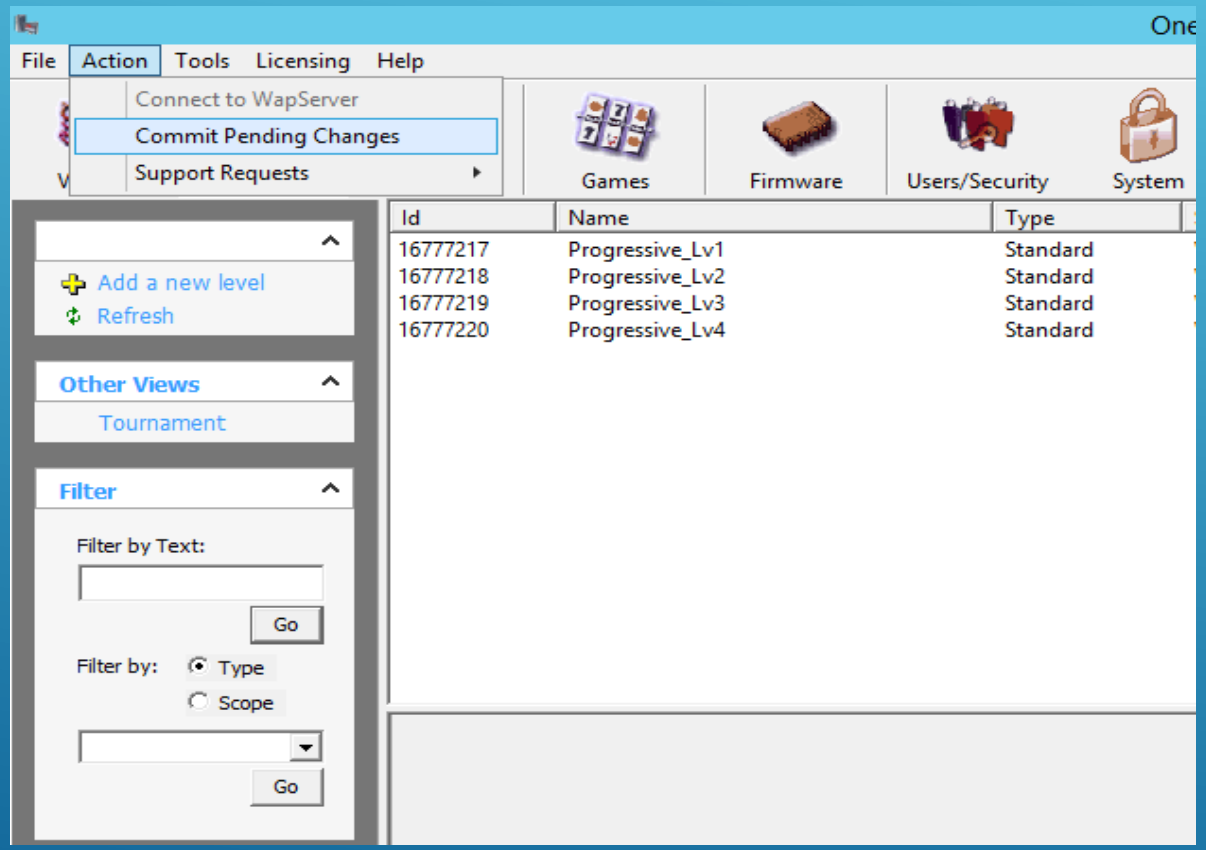

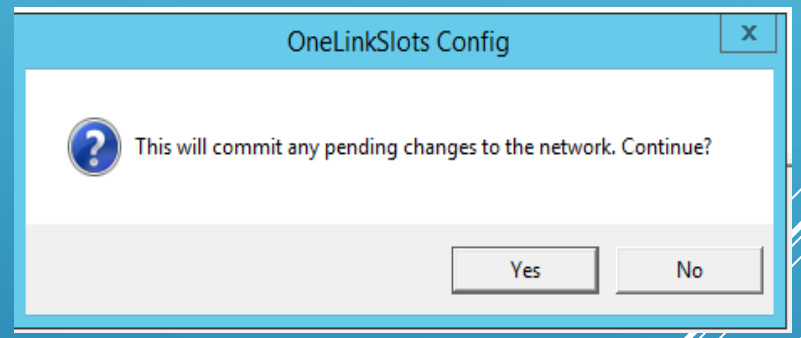


- Click OK > Type the Username and Password when being asked.
- * Make sure to use the user which has access for this task.

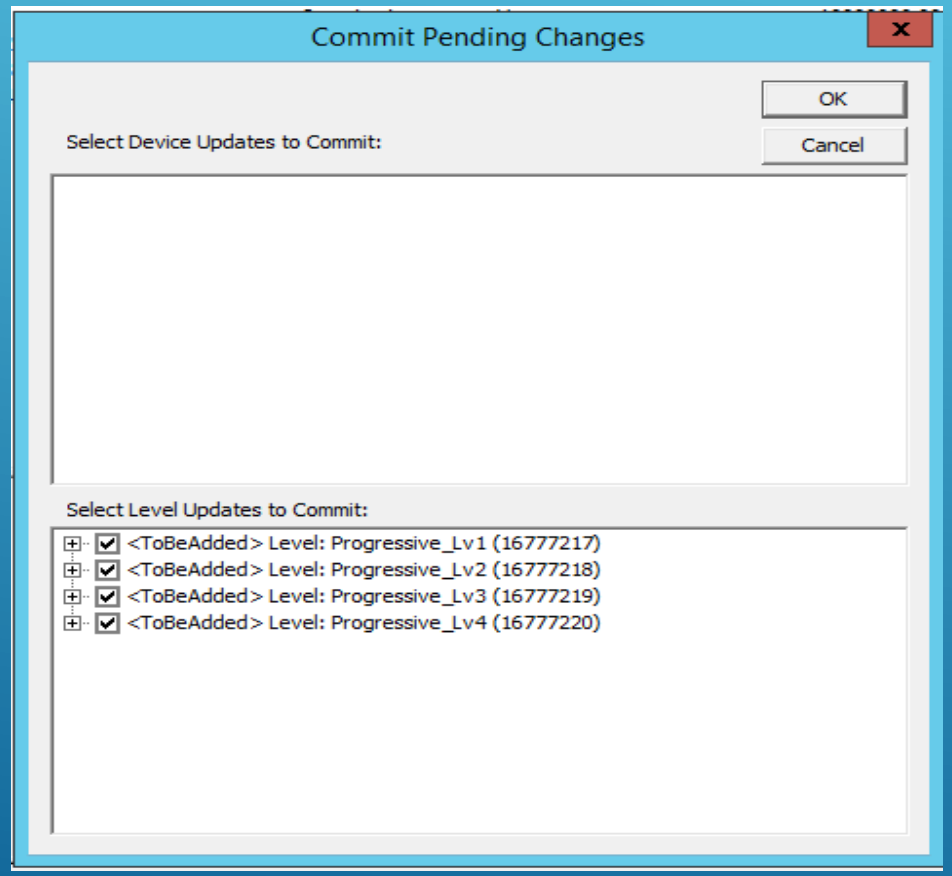


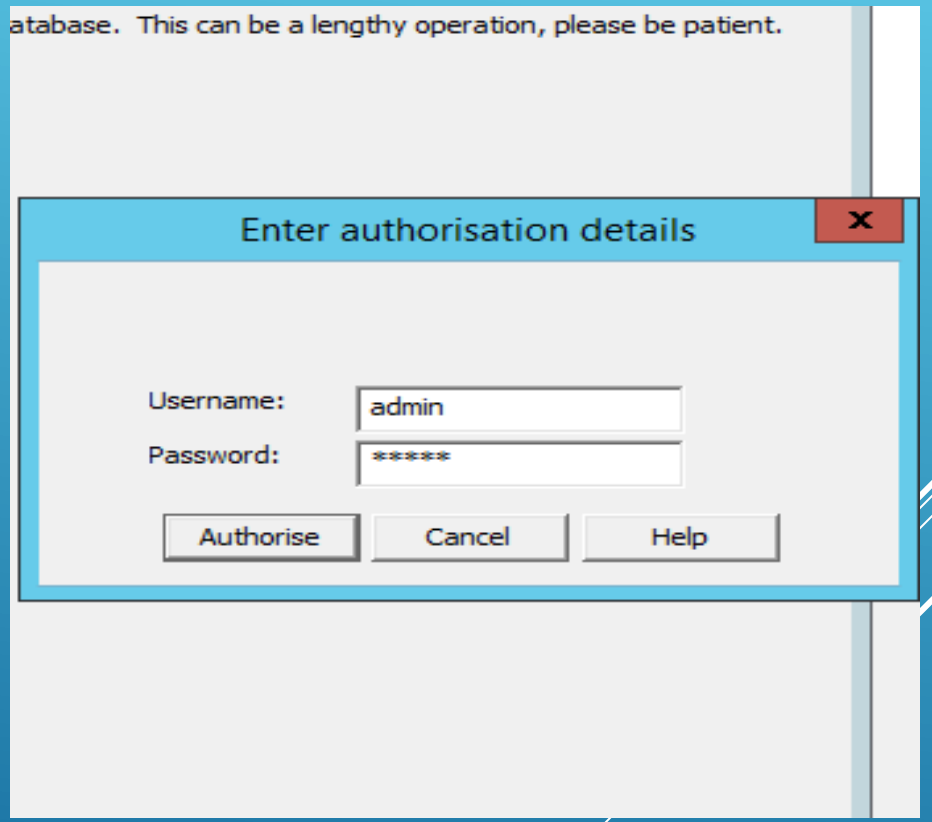


- Click OK when finished.

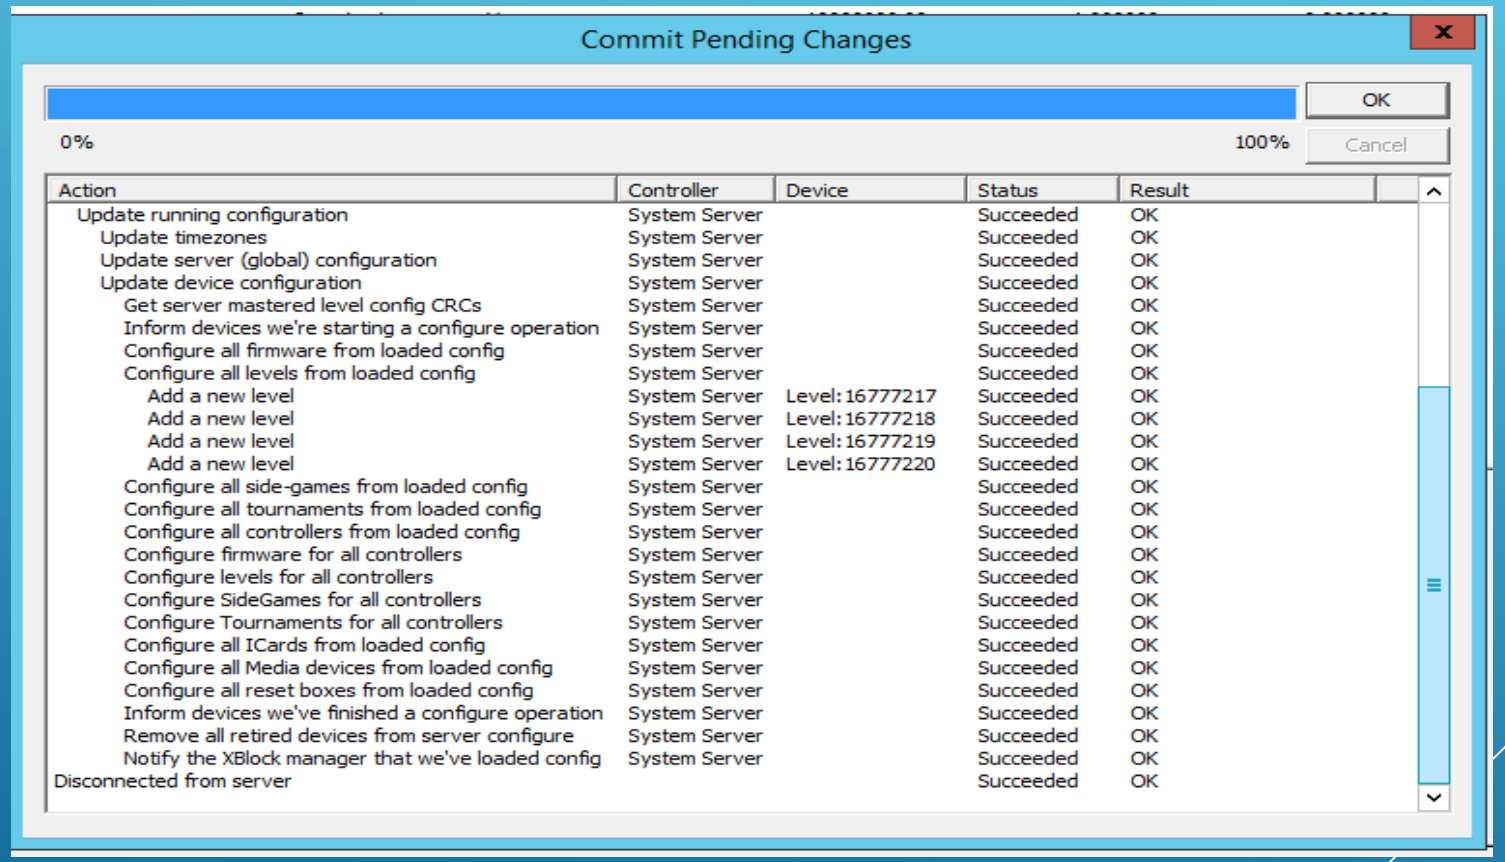


- Click Refresh then you should see the levels status become Active.

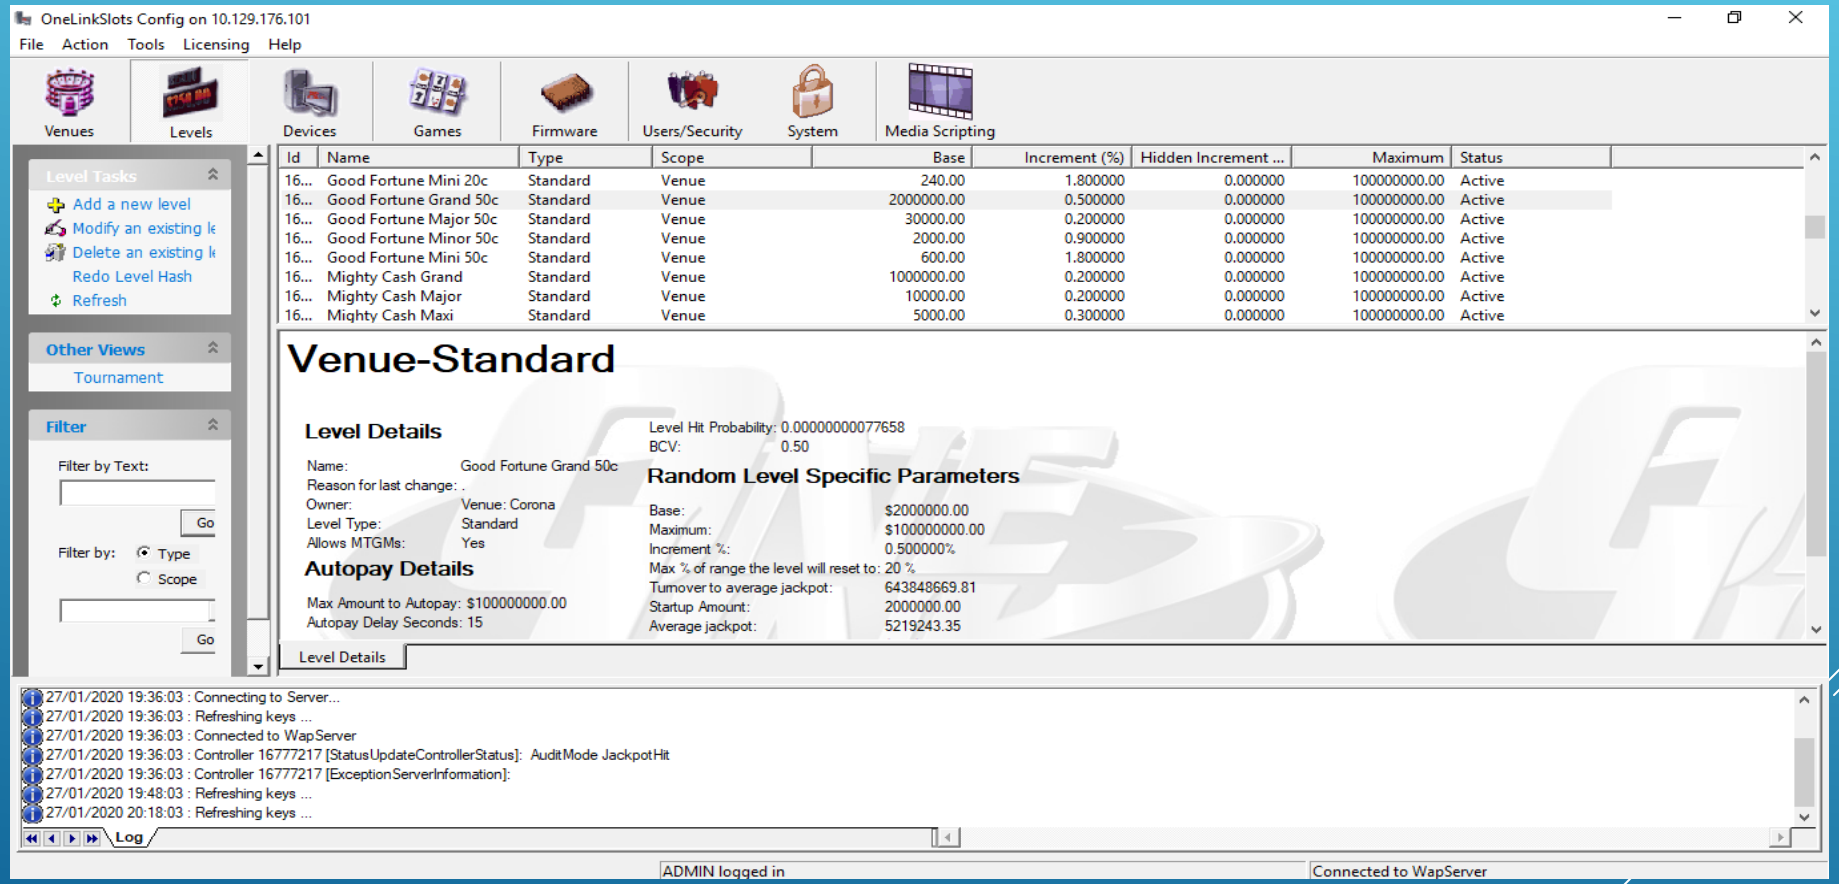


- Go to Devices > Machine.

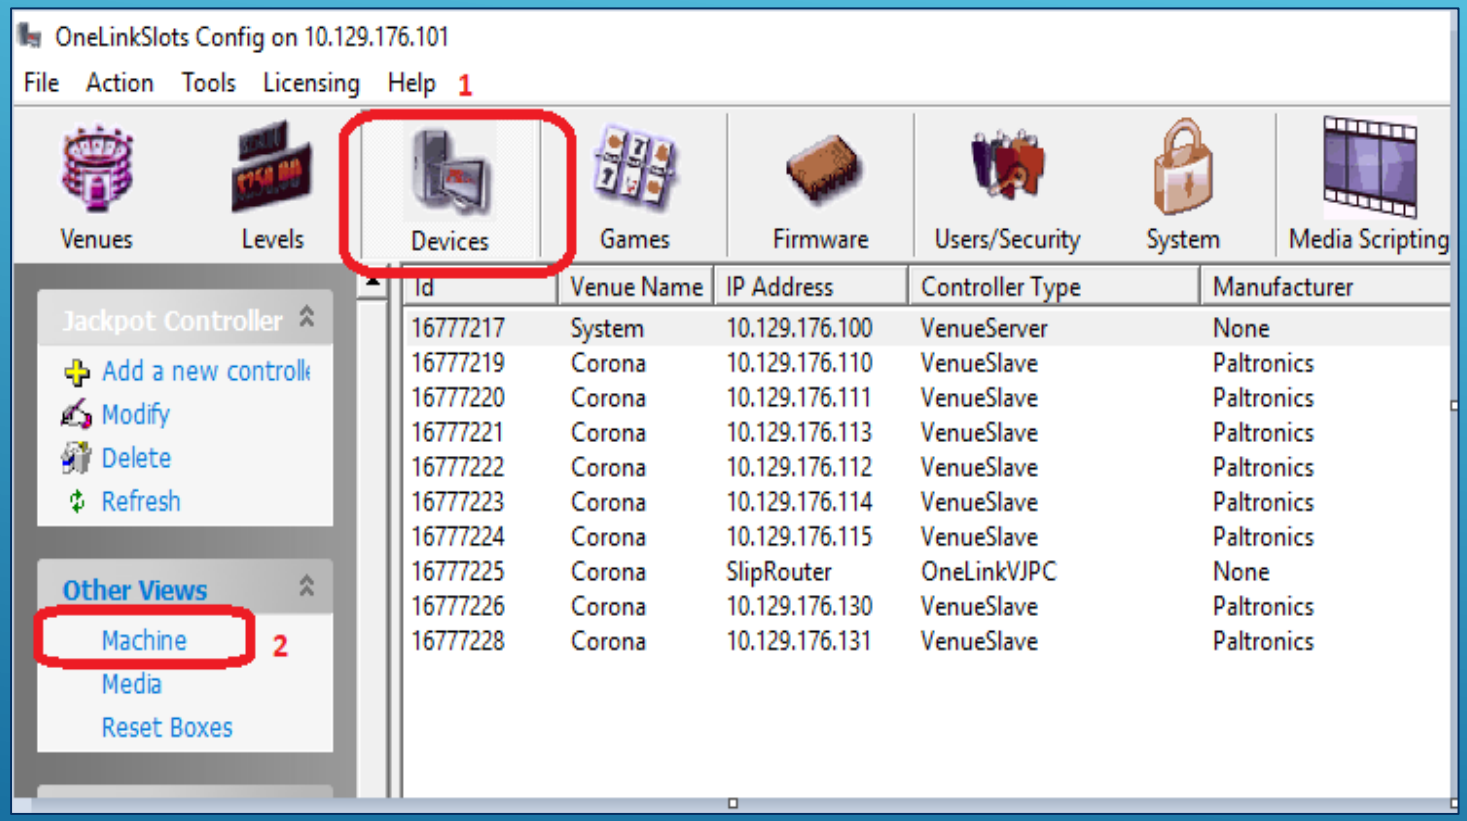


- Add a new machine > Choose Game Variation… > Select Game Variation from the list.
- * You can use the Filters to reduce the list.
- * Add the New Variation if needed by Games section.

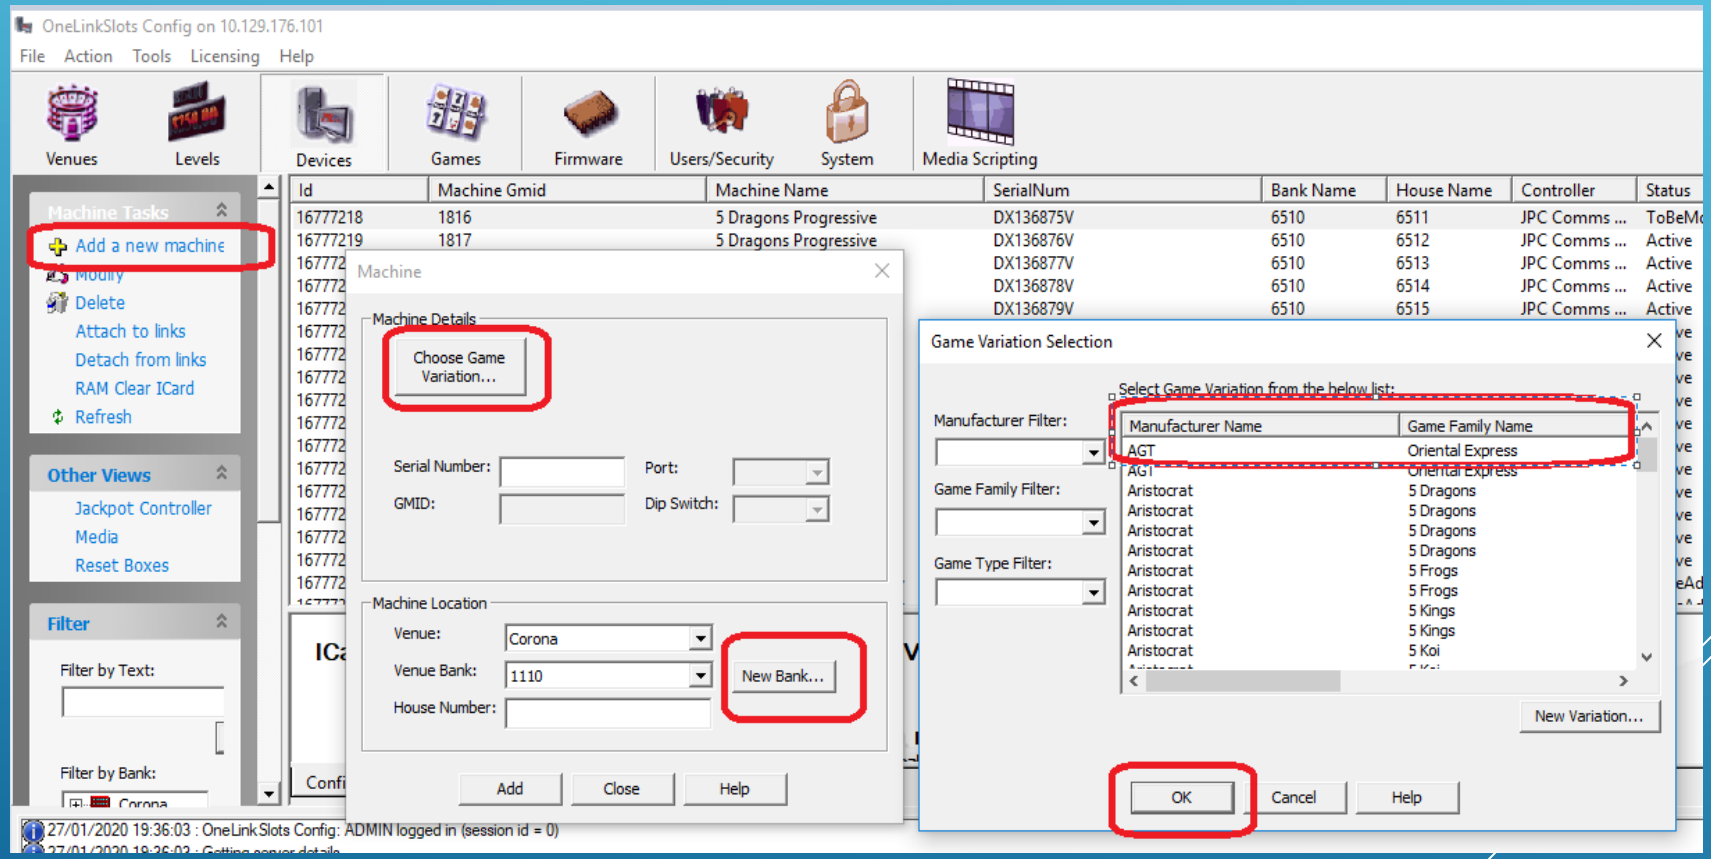


- Input the machine information than Add, click Close when finished.

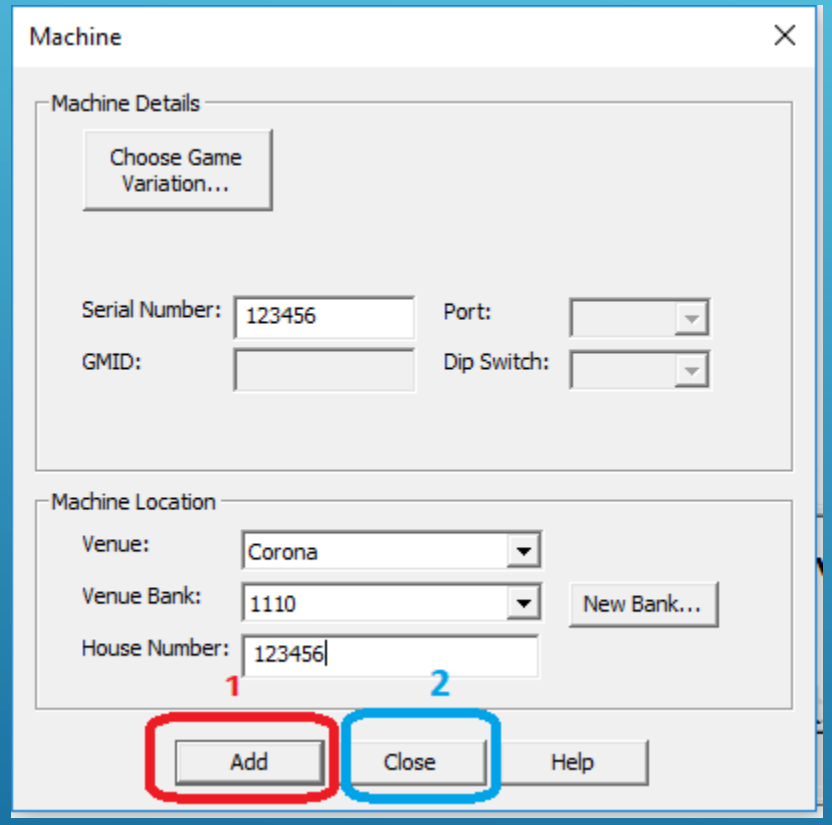


- After added all machines the system will like be this (ToBeAdded)

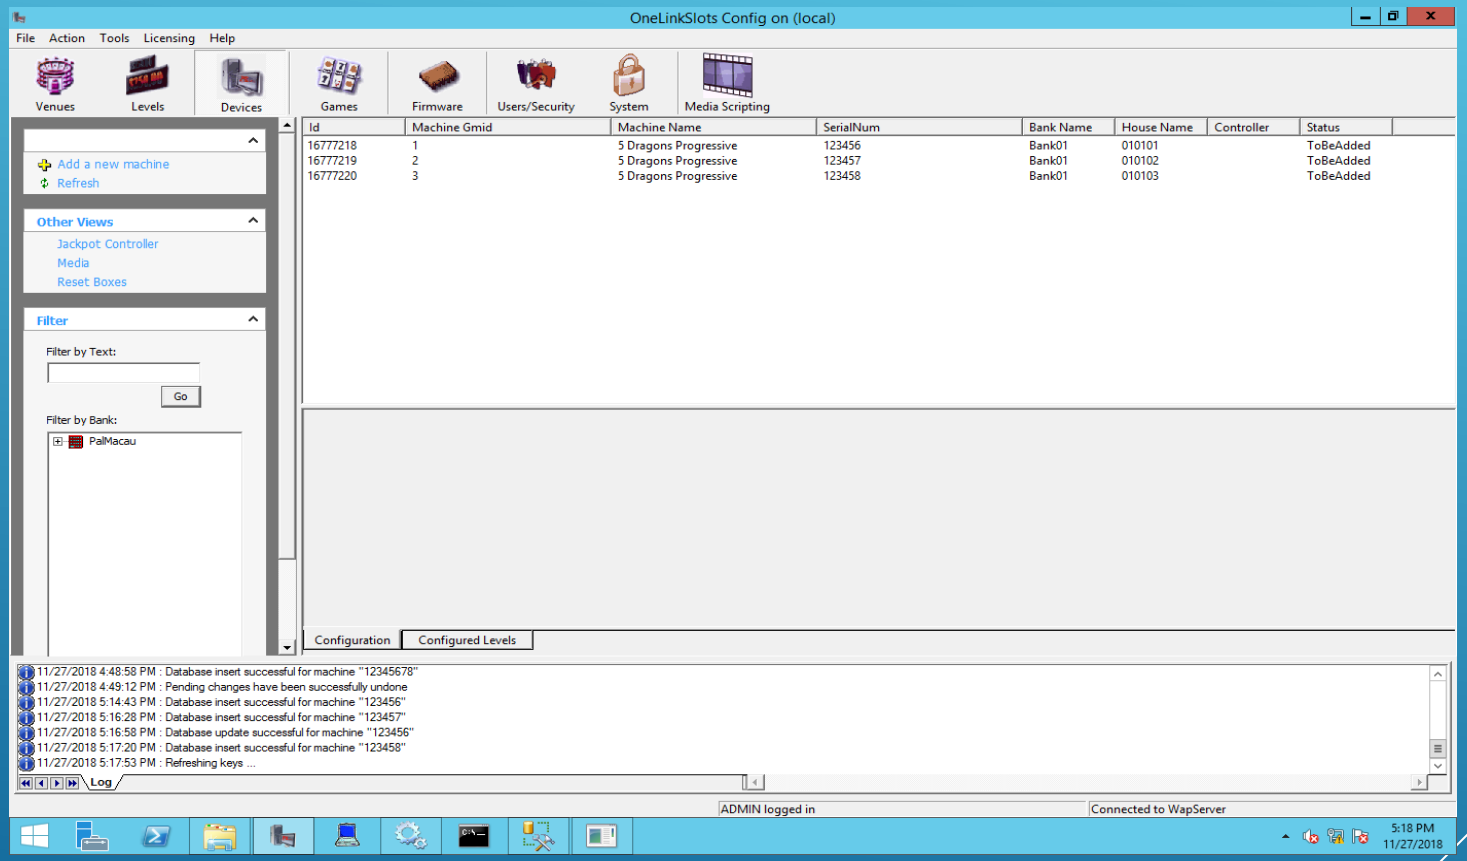


- Devices > Jackpot Controller > Select the Jackpot Controller which will be connected to target machines > Modify > Configured Levels > Select levels need to be using on this Jackpot Controller > Add.

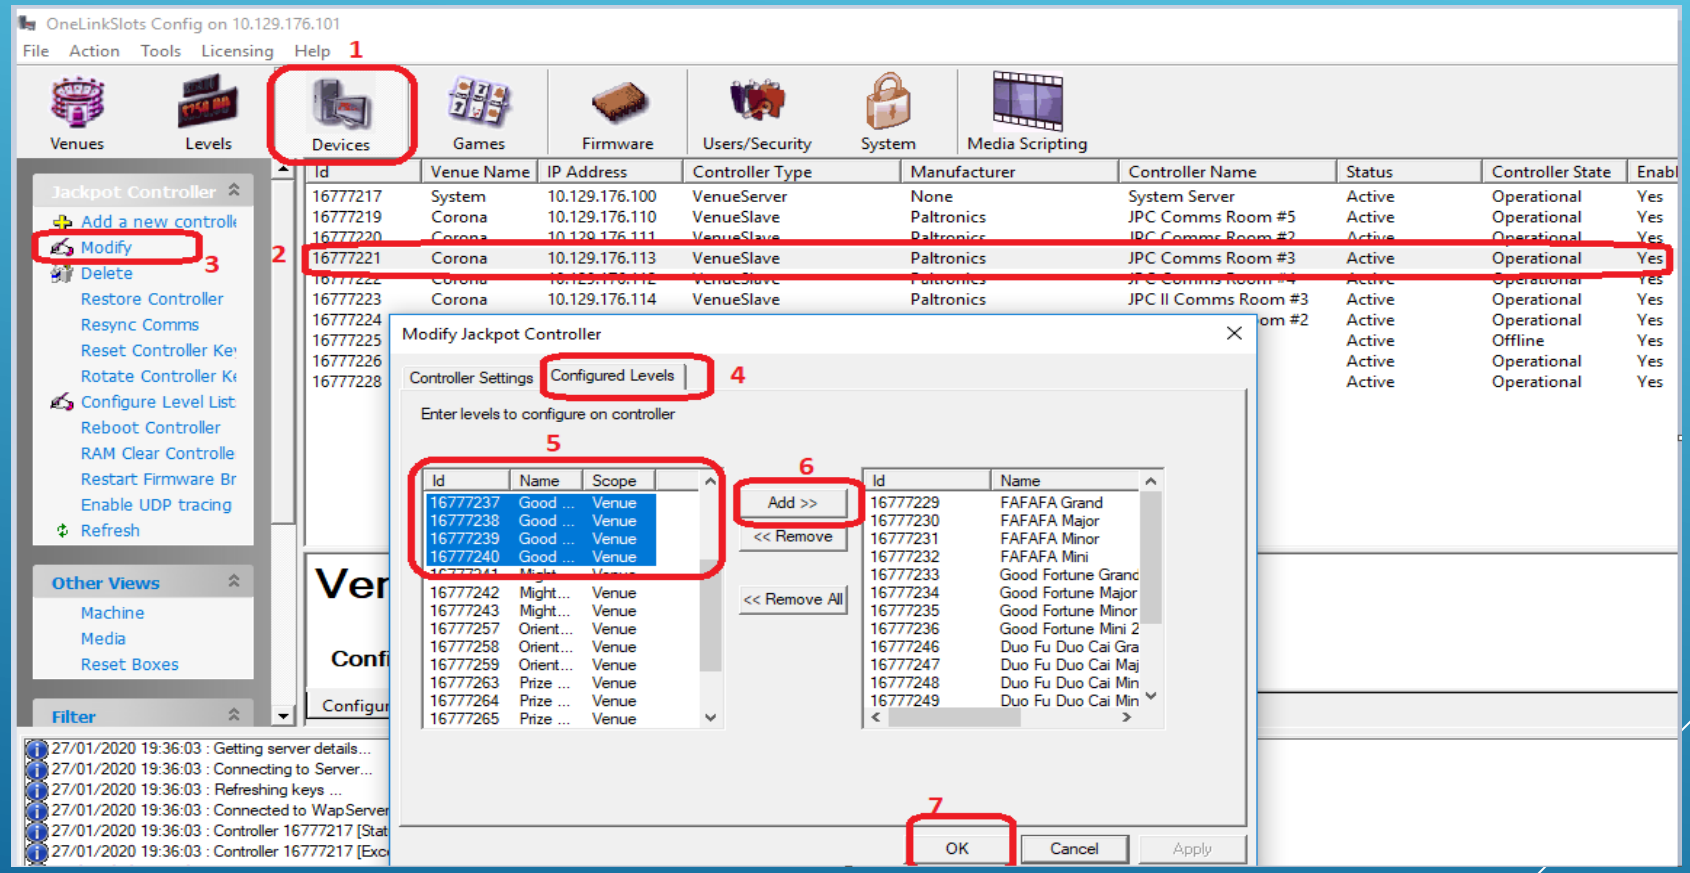


- Click OK to close the Window.

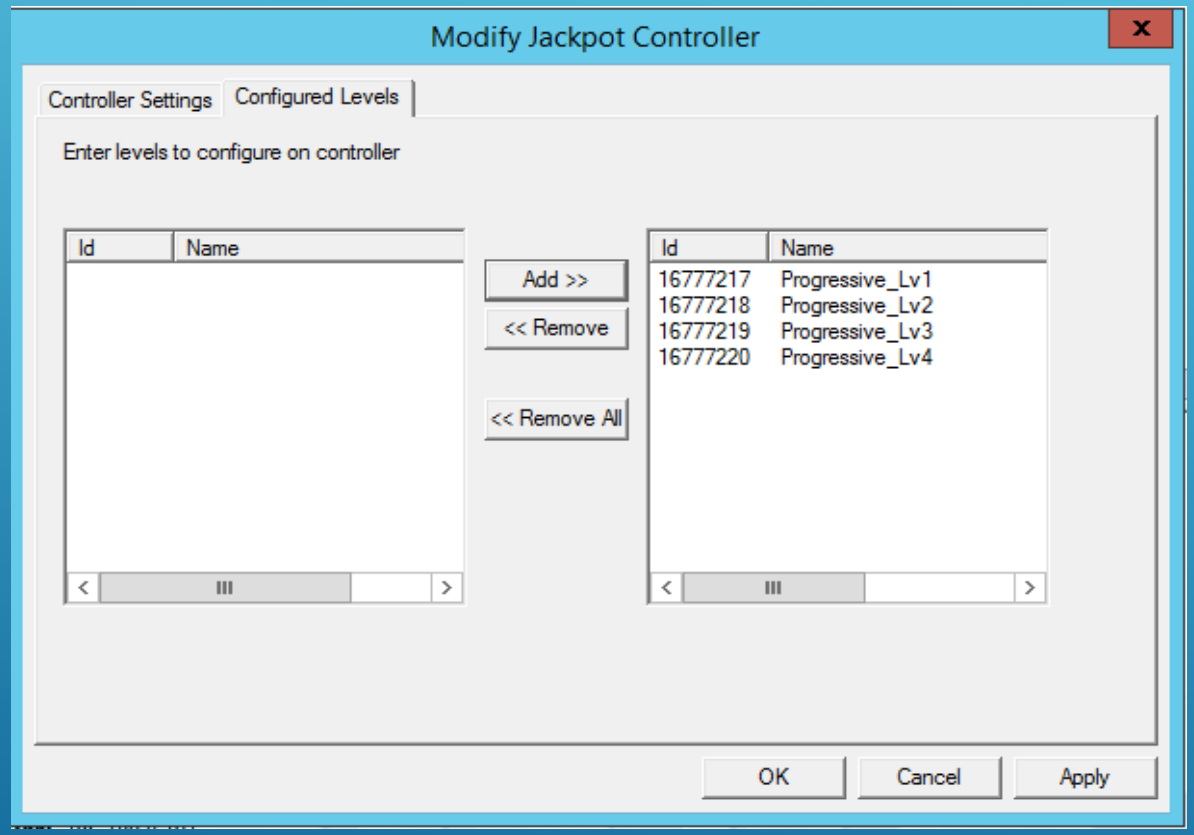


- Action > Commit Pending Changes.

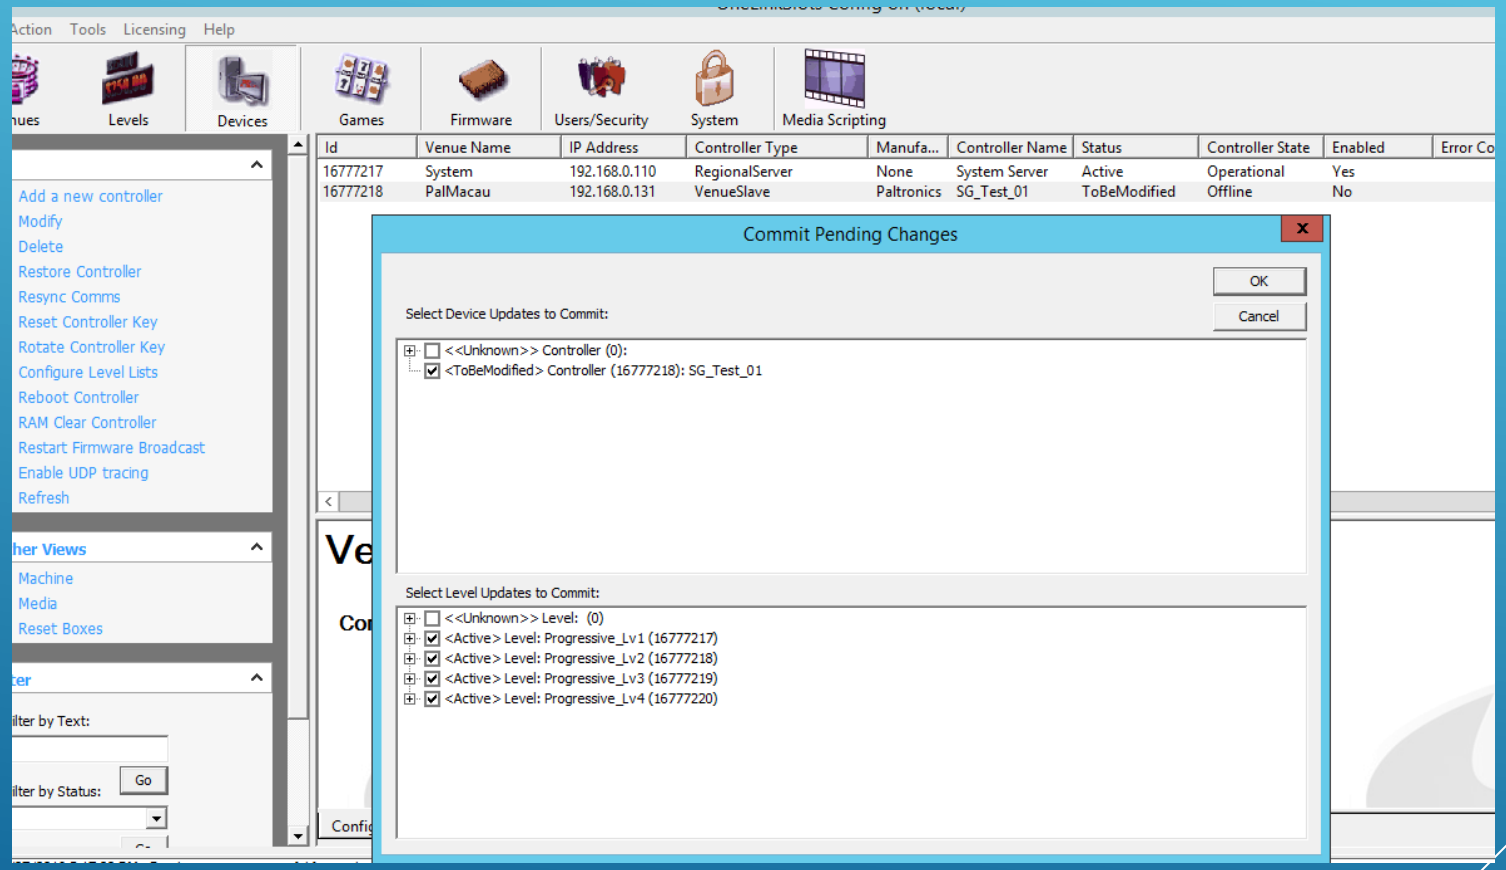


- Select the Jackpot Controller > Click Configured Levels > Fetch data to verify the new levels.

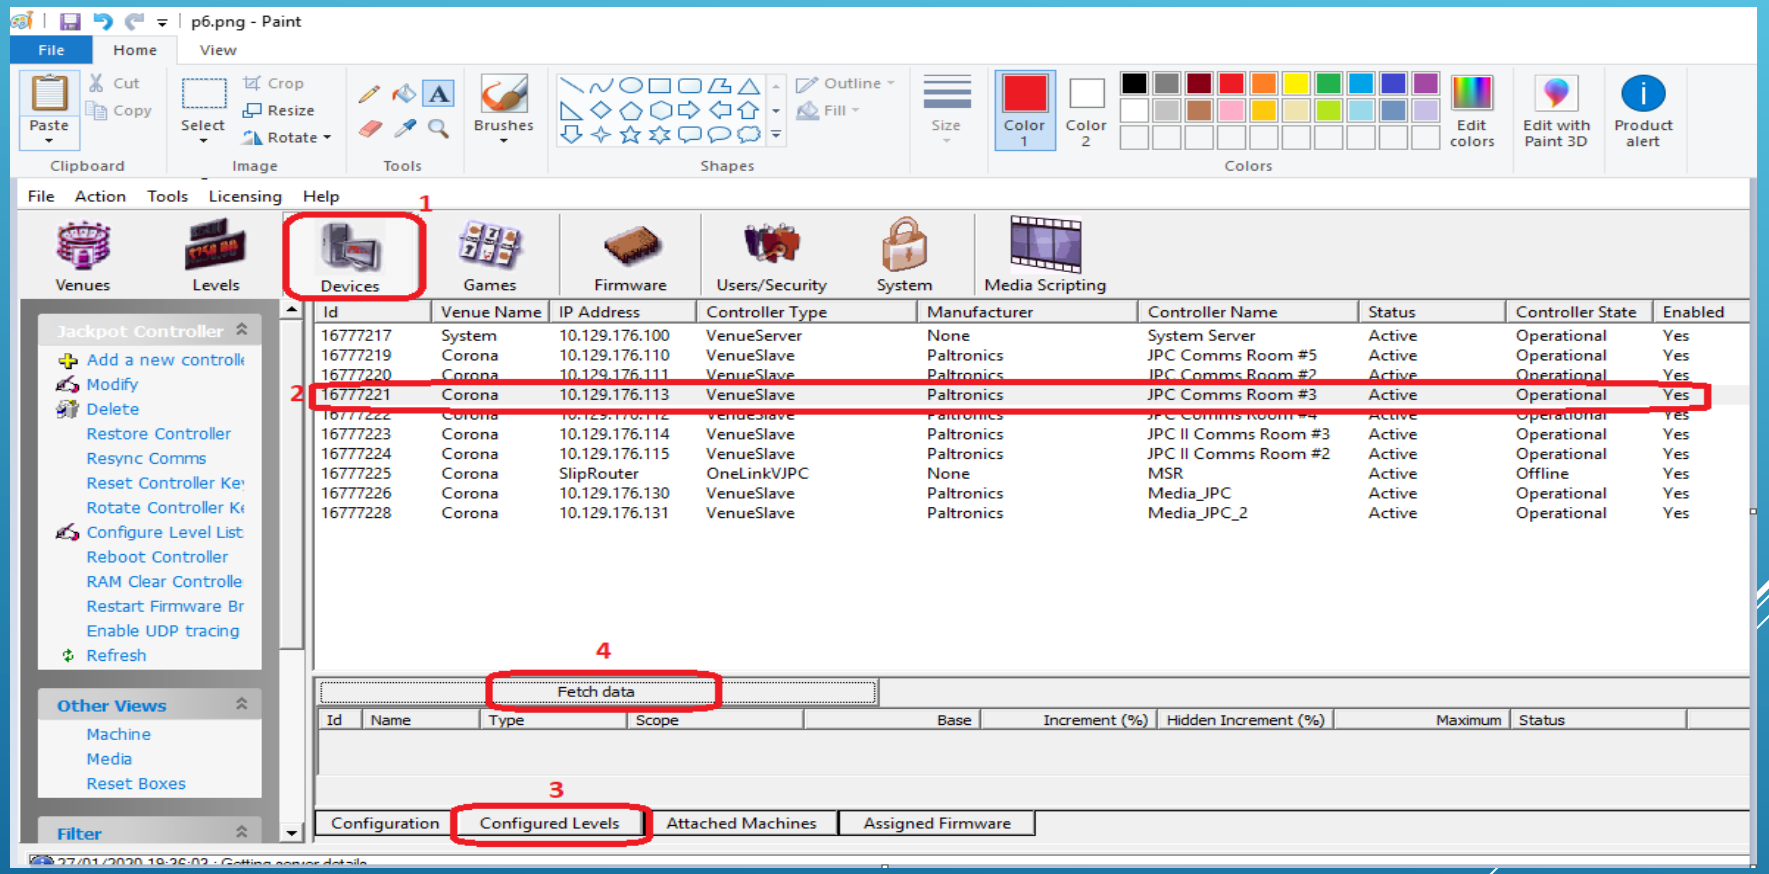


- Go back to Machine > Highlight/Select the machines > Attach to links > Select the target Jackpot Controller > Create List to open Configure Levels window > Input a name for the new Level List > Select the levels and click Add.

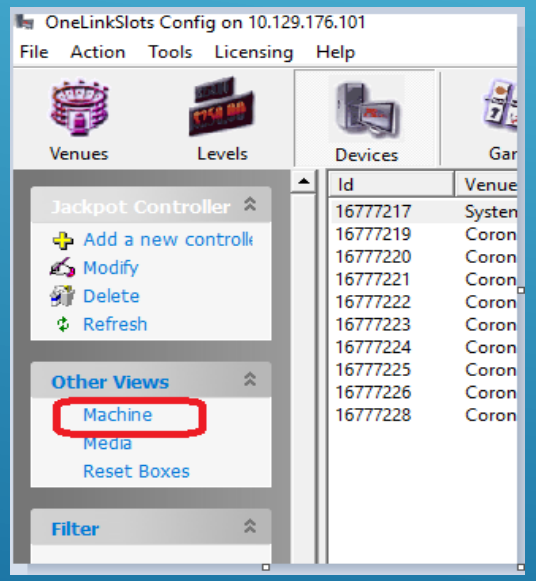


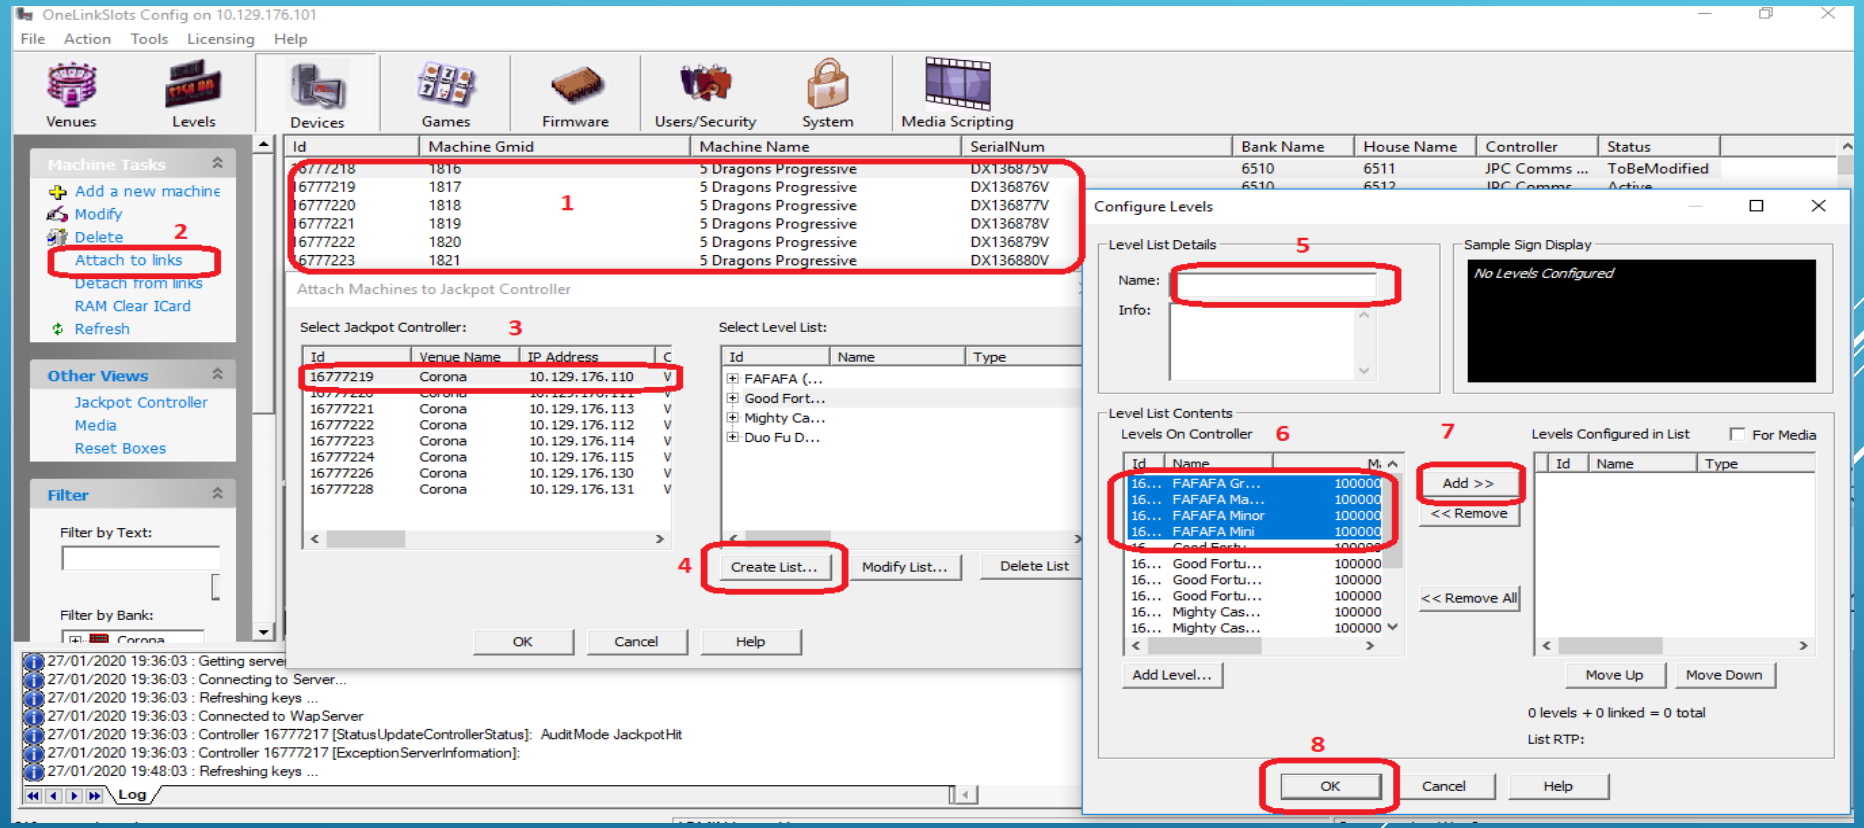


- Click OK to close the Window.

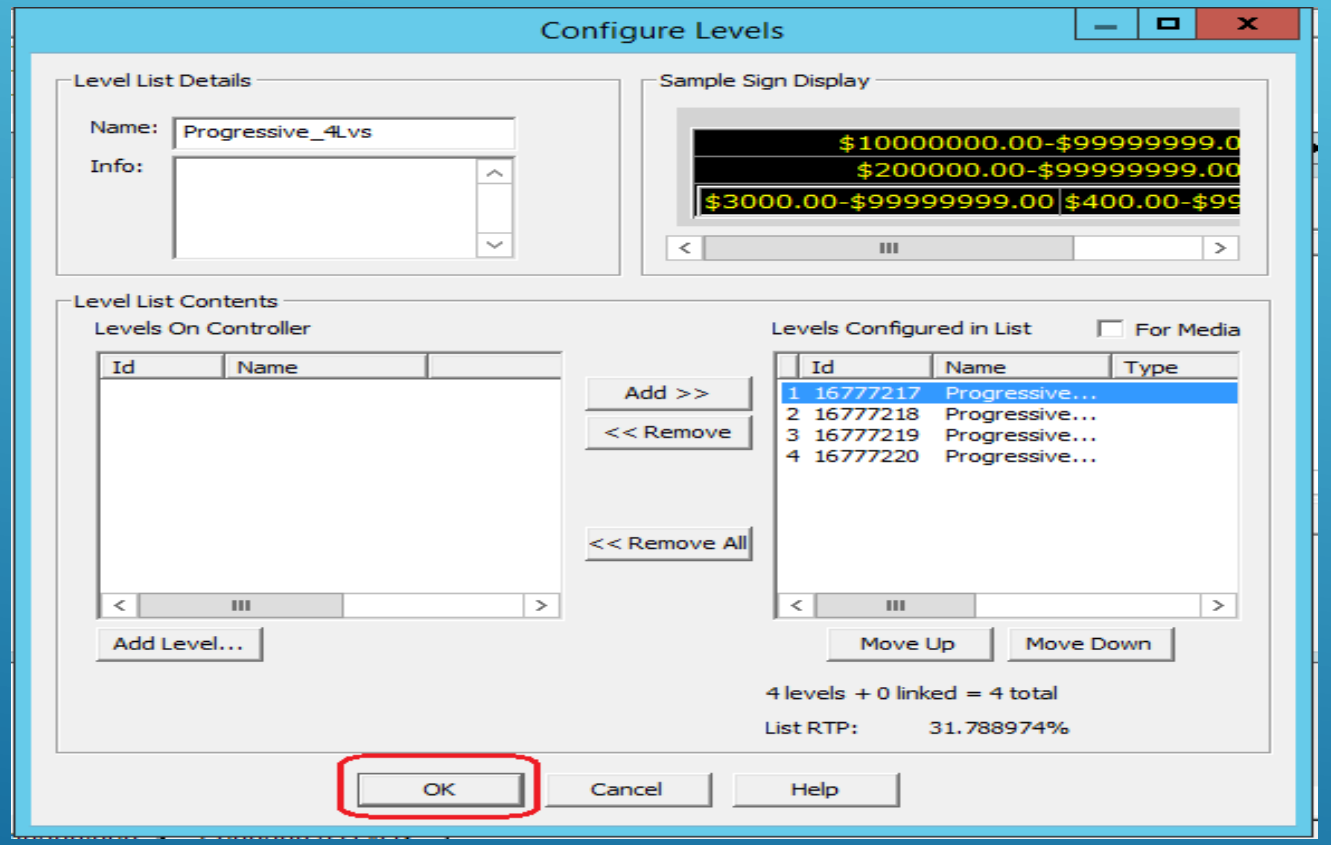


- Select the new created Level List > Click OK.

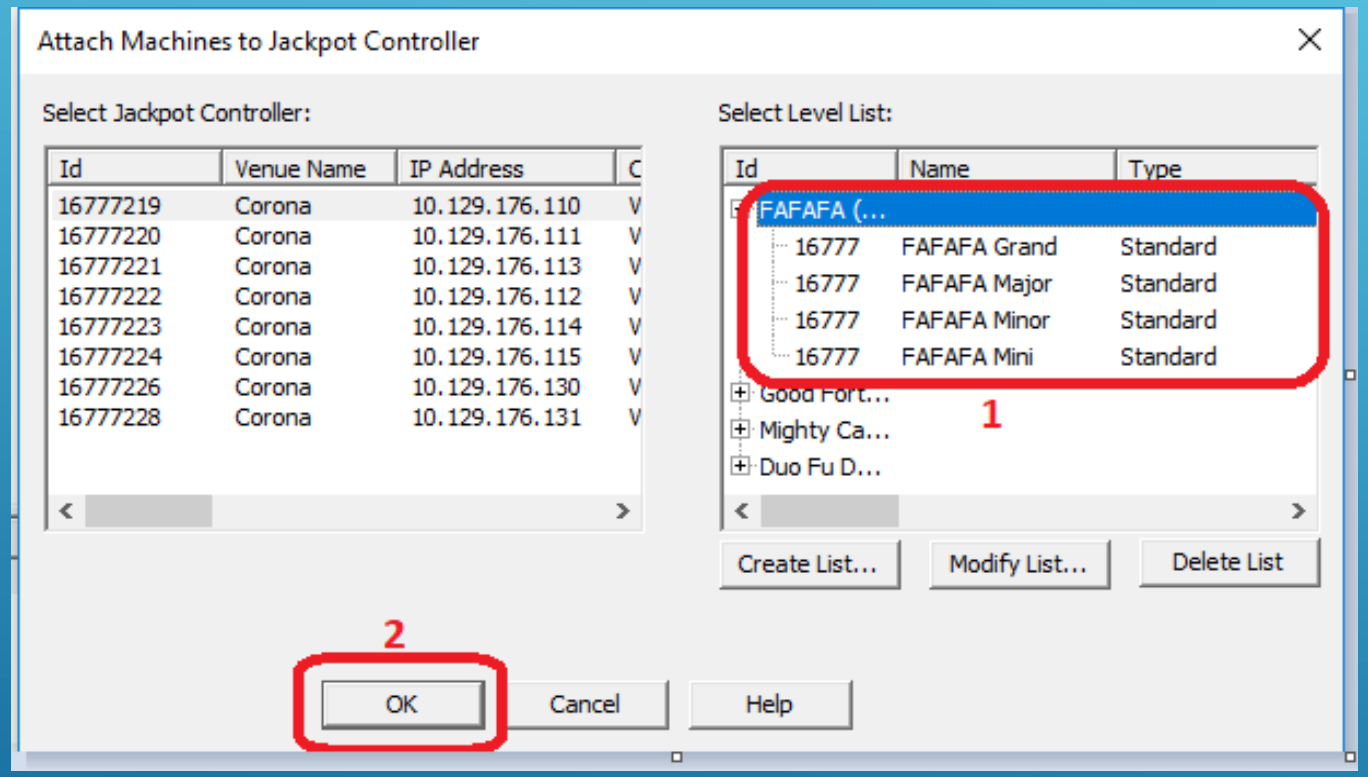


- Action > Commit Pending Changes.

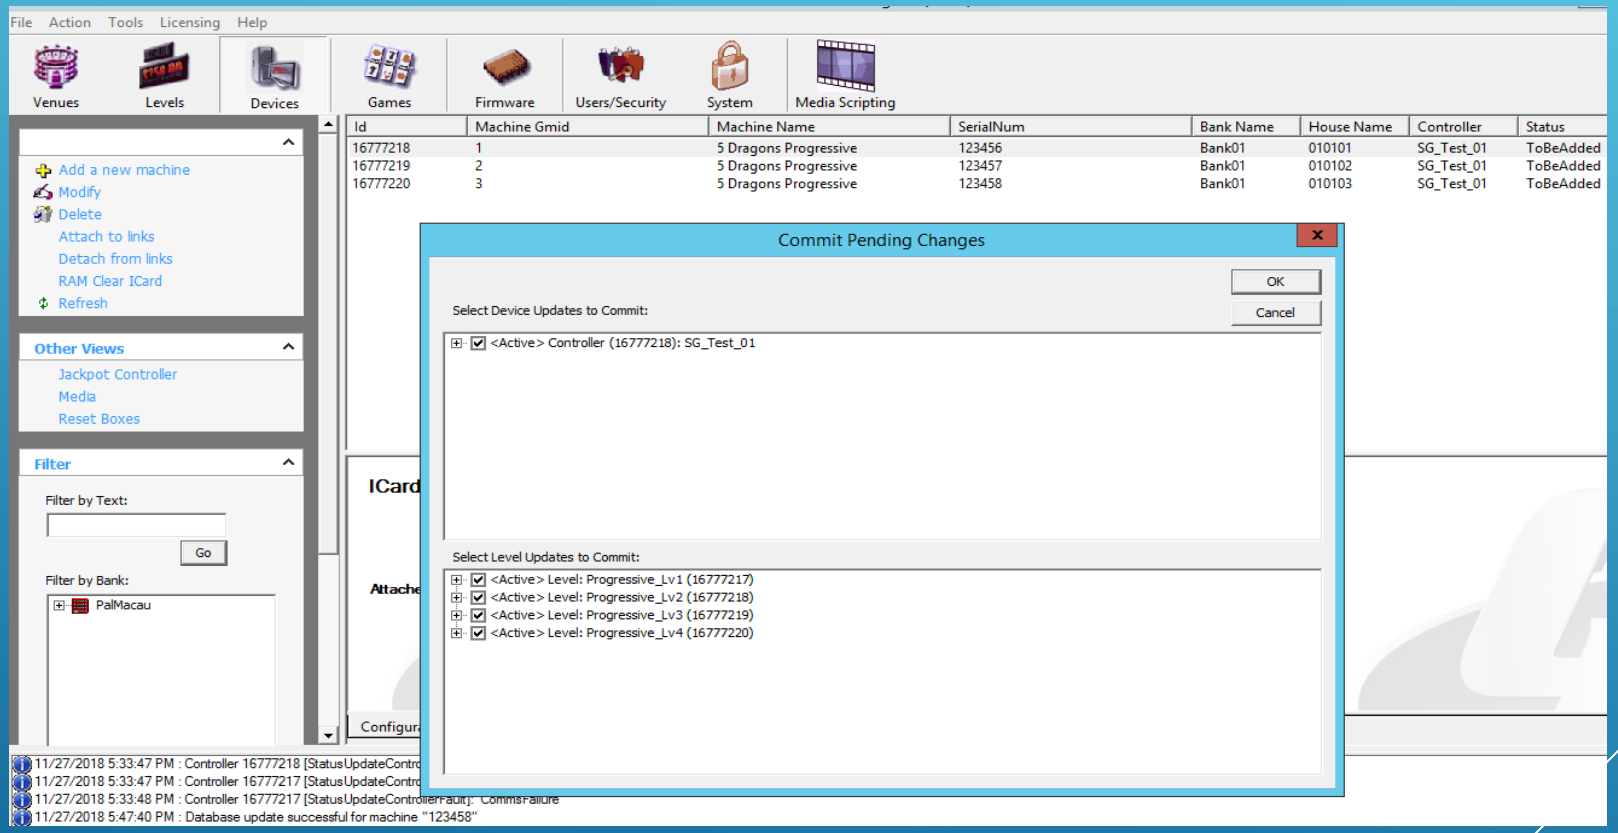


- Can verify the levels after Refresh the screen > select the machine > Configured Levels.

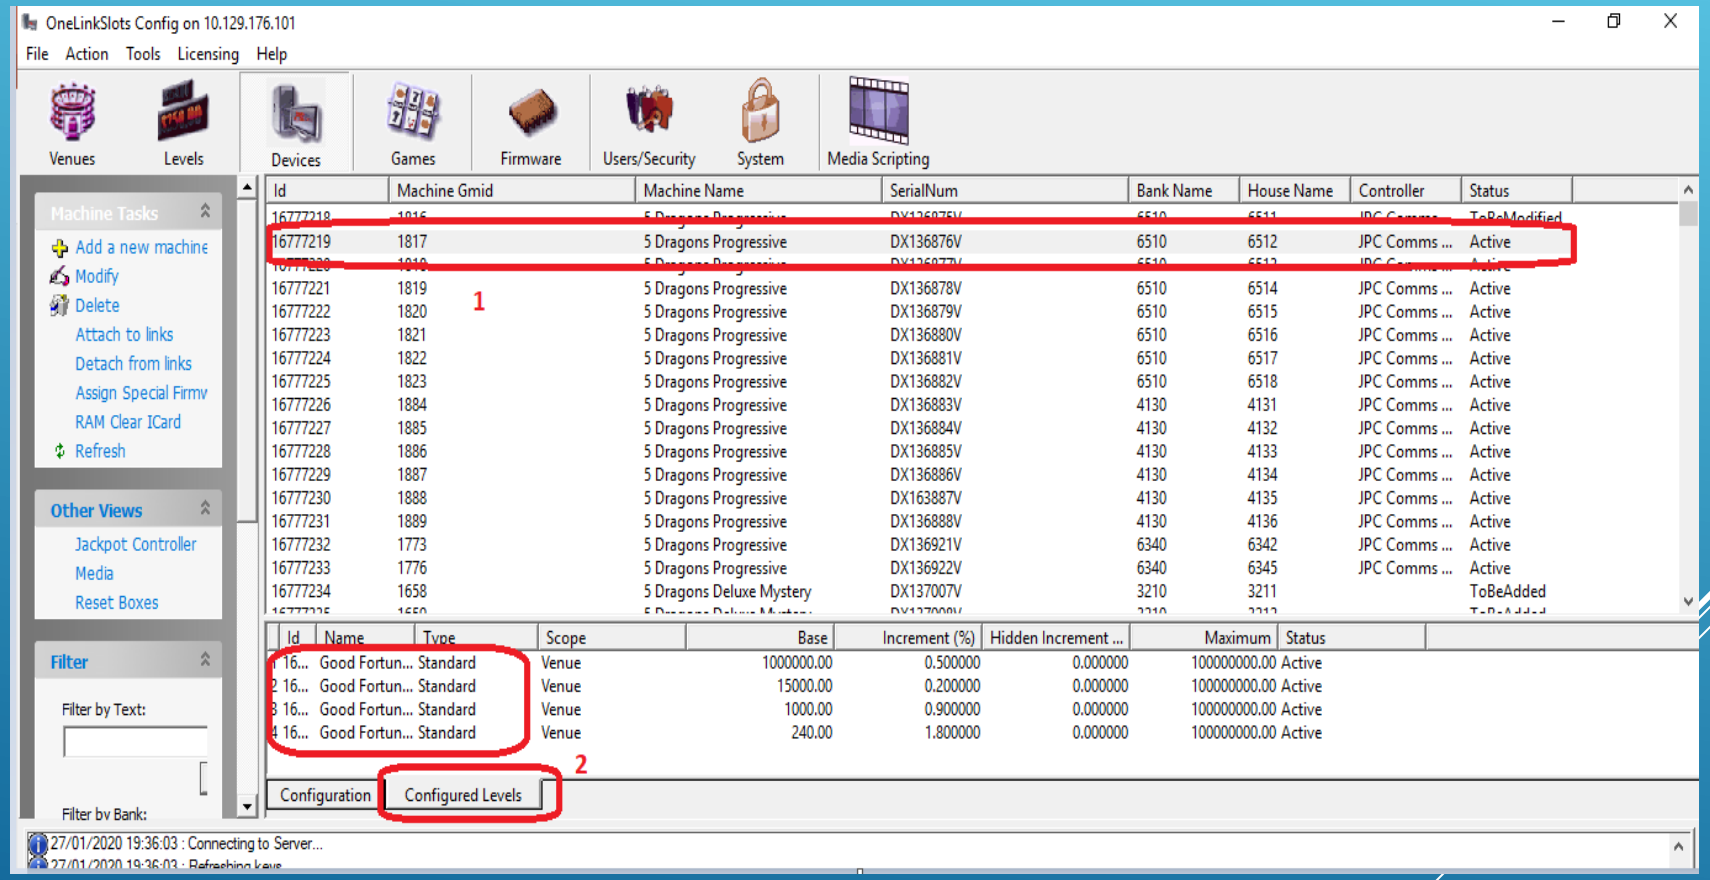


- To Detach from links > Select the machine you want to detach from links
- - Detach the EGMs from link (commit changes after that and will found the result as below once reflash the screen

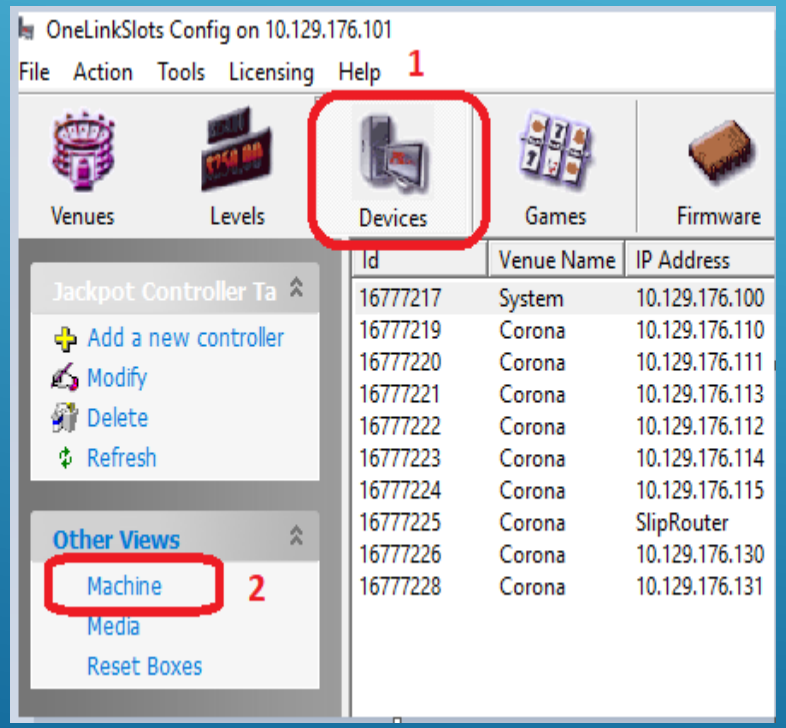

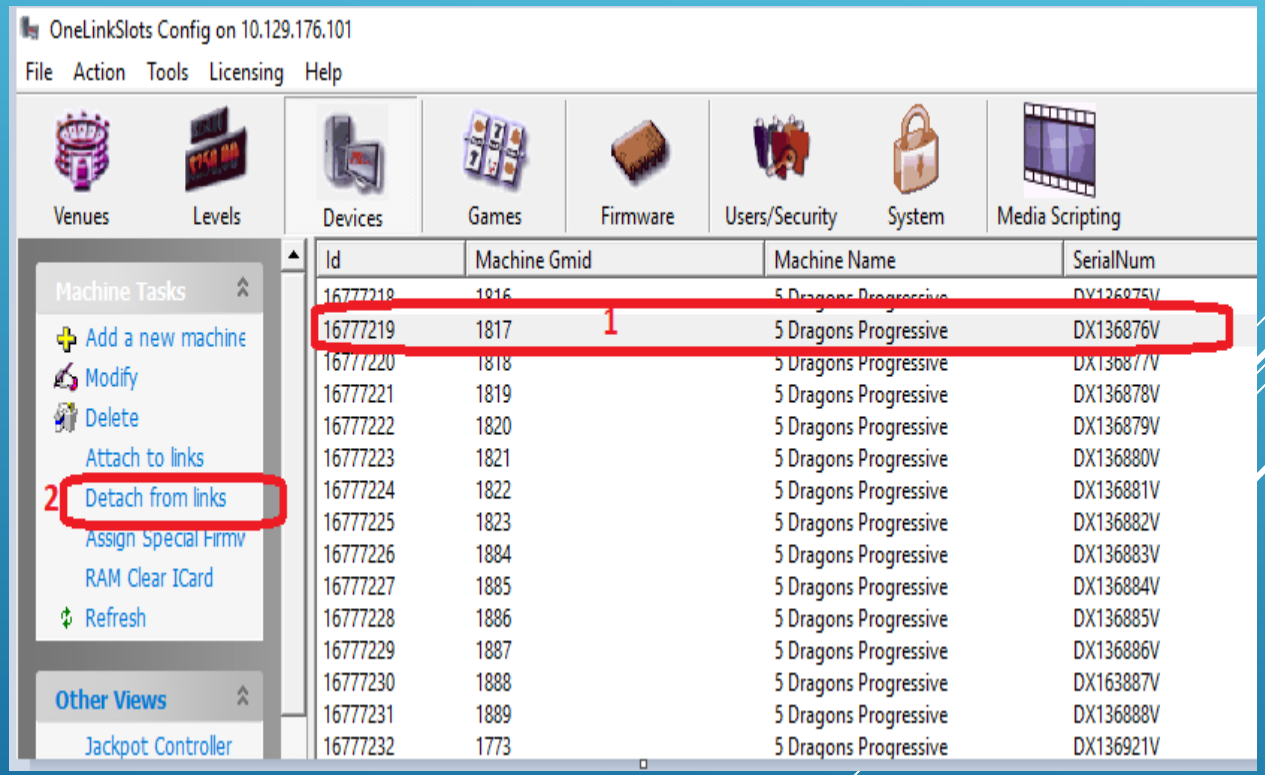

- Attach the EGMs to link (Select the target JPC on left and select the level list on the right, you will need to create a new list if needed). Don't forget to commit pending changes.

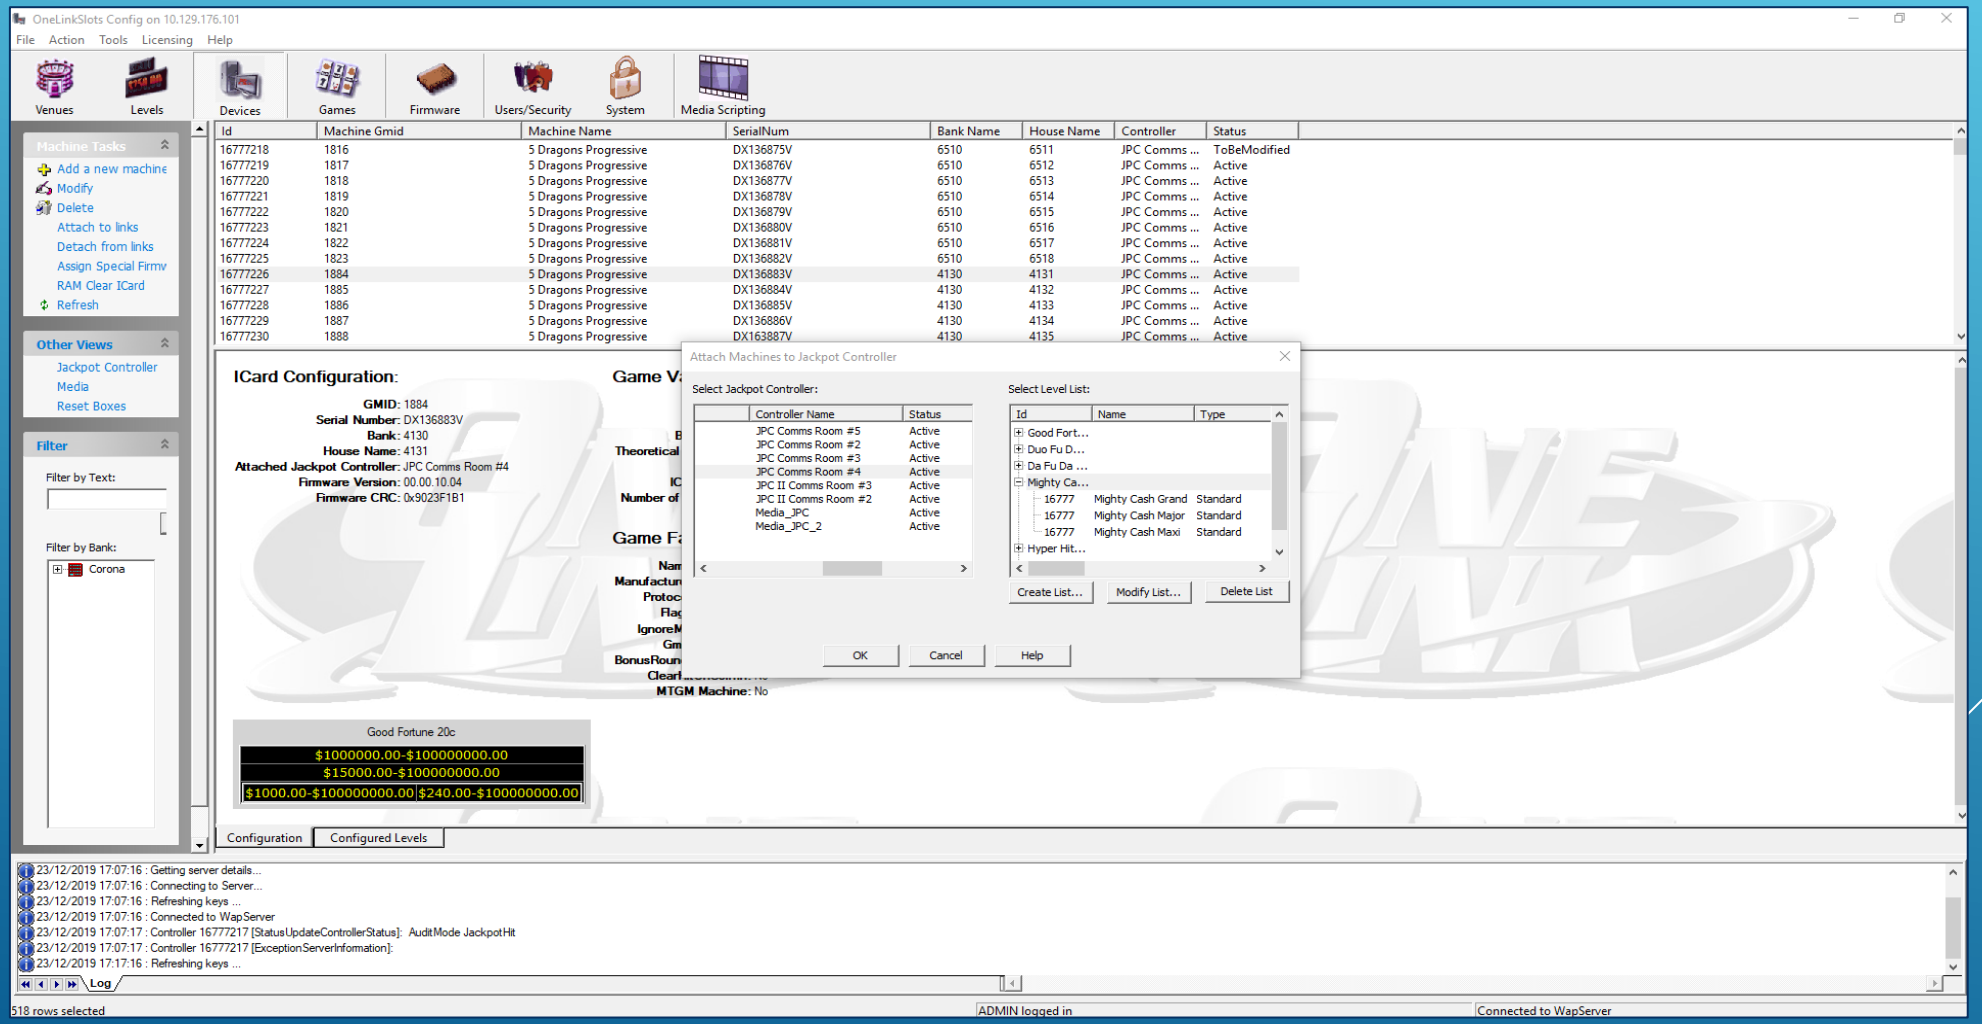

- Commit Pending Changes, that will reflash the screen.

