Novomatic FV310 F2 Superia Scorpion - RAM Clear Procedure

Technical Luke

February 1, 2025









Novomatic FV 310 F2 Cabinet

- **To RAM Clear:**
- **Open the main door of machine to access the logic box/MPU**
- **Turn off the main power switch**

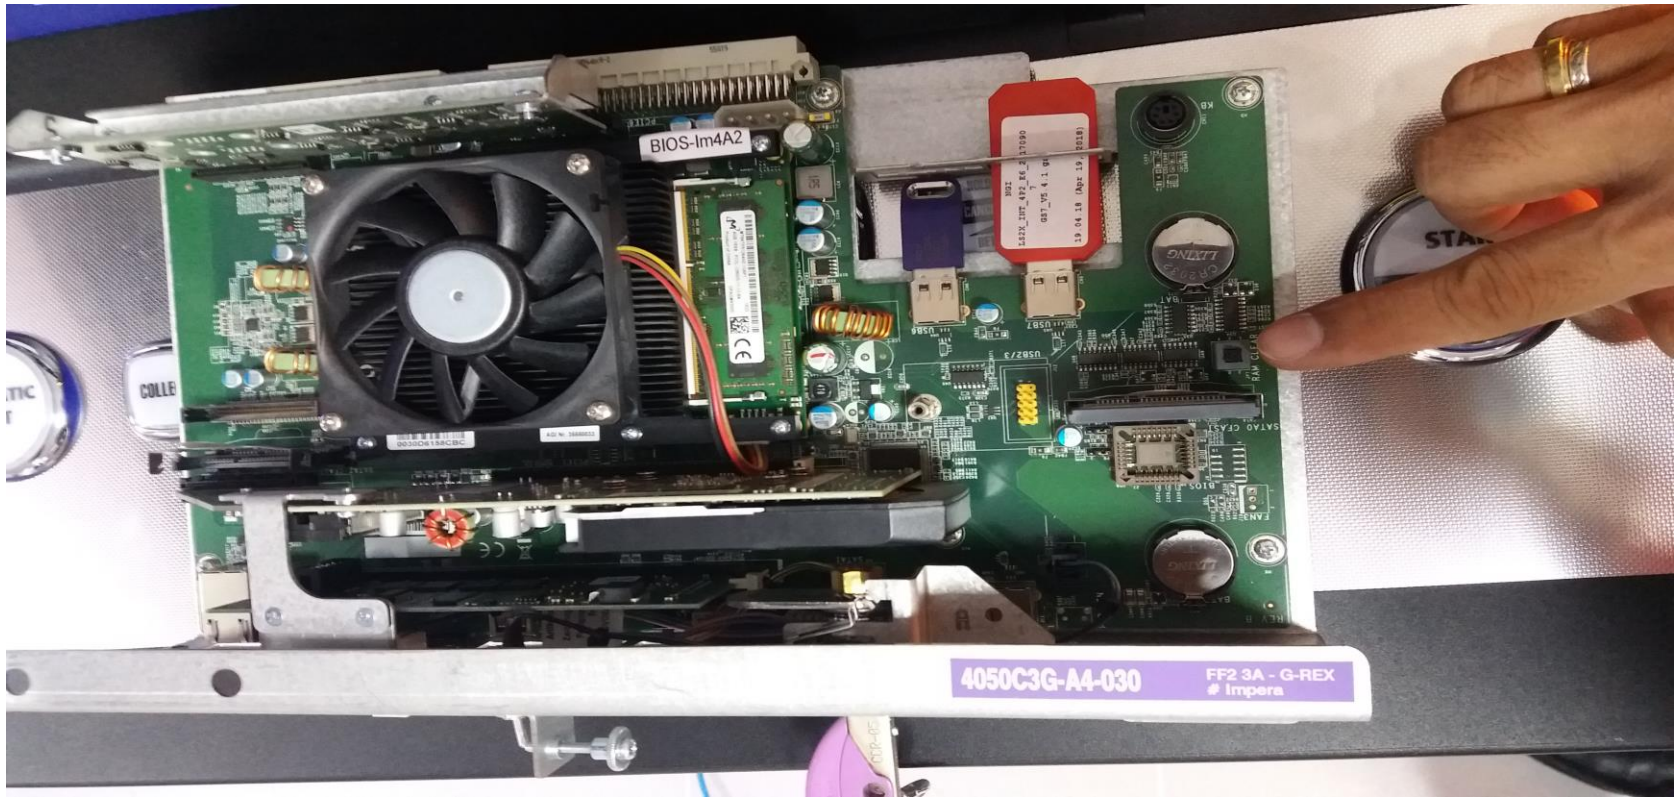

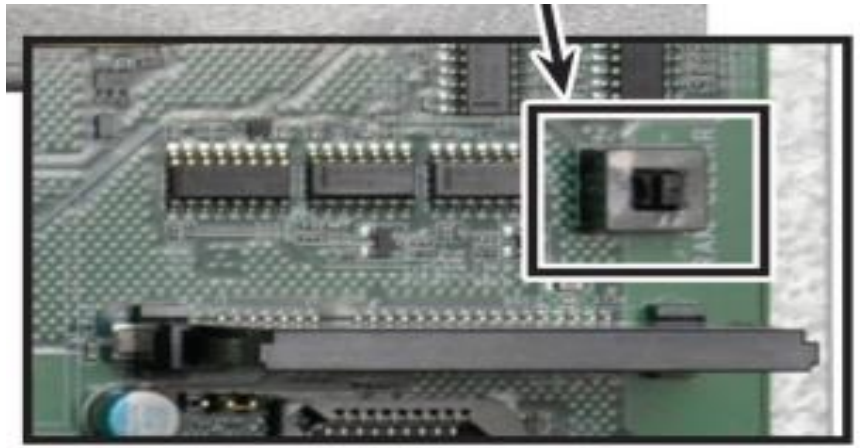



- **Locate the RAM Clear switch on located on mainboard of the logic box/MPU**
- **Press the button switch for 2 to 3 times to take effect the RAM Clear**






- **Put back Logic box/MPU into the machine and switch on the power switch**
- **You will see this Logo “OCTO GAMES”.**
- **After System loading percent from 0% to 5%, you need to turn the AUDIT KEY**

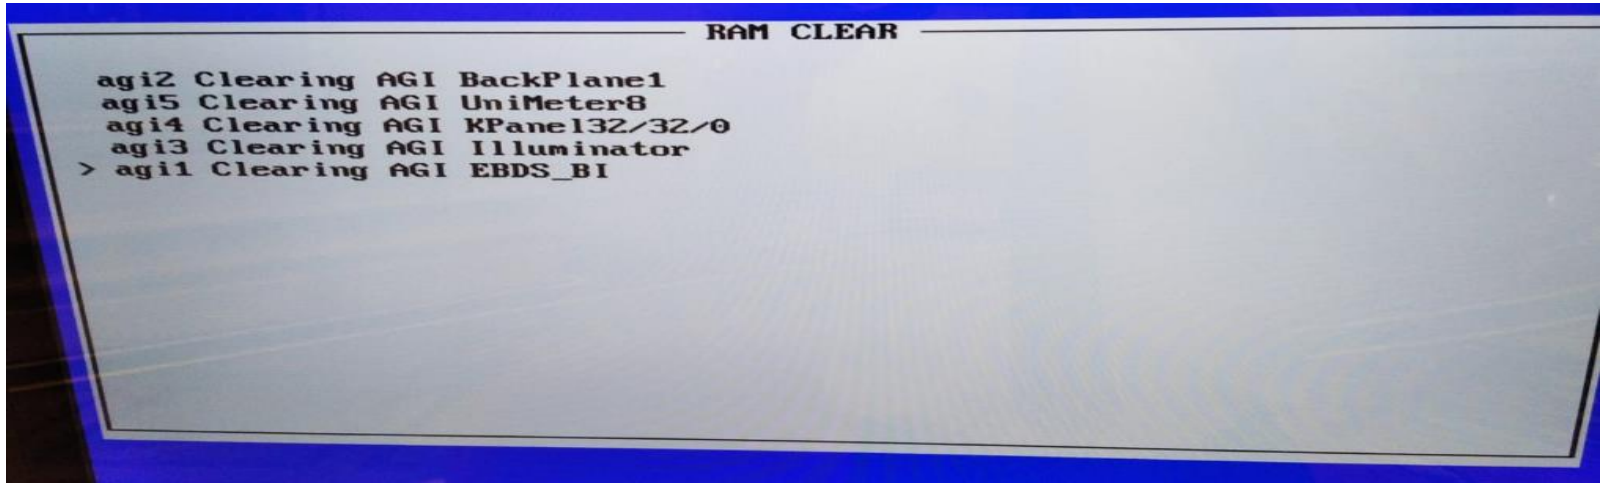

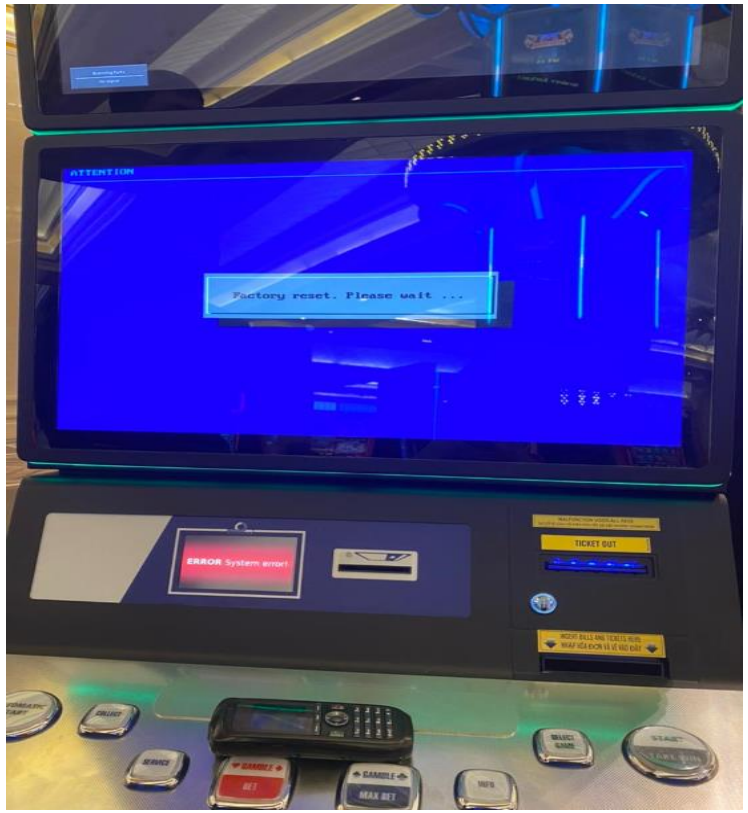




- It will prompt you this message RAM CLEAR on the screen.
- Then a Factory reset will show first.
- Factory reset done! message will show also after waiting to Ram clear.
- Wait to continue loading

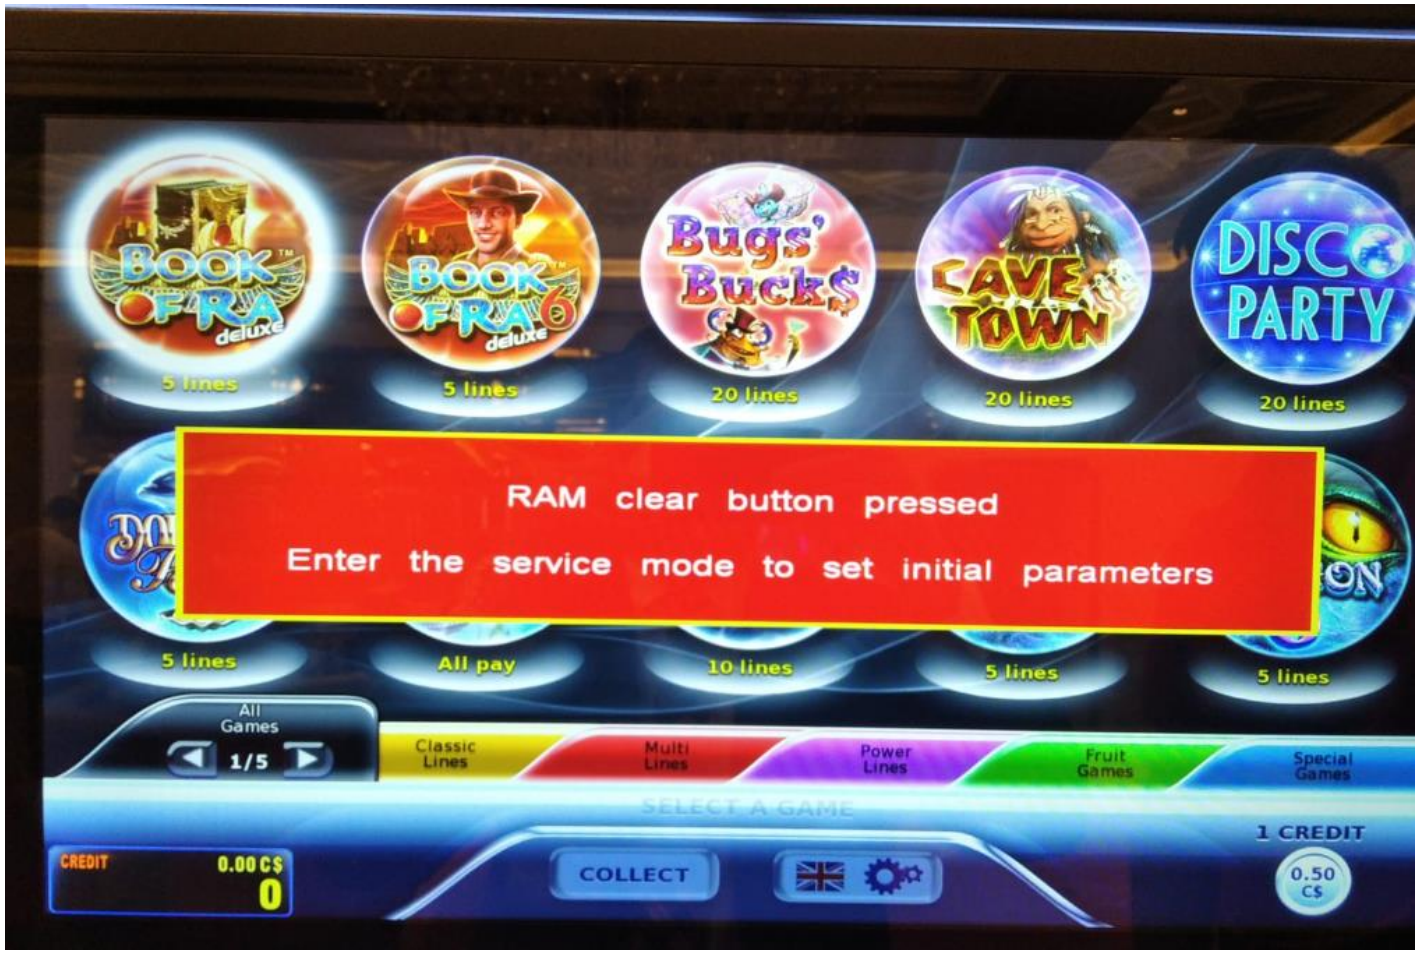



- After machine have been fully started then it will prompt a message “Ram clear button pressed”,”Enter the service mode to set initial parameters”
- Then turn Audit Key/Reset to set all the machine settings.

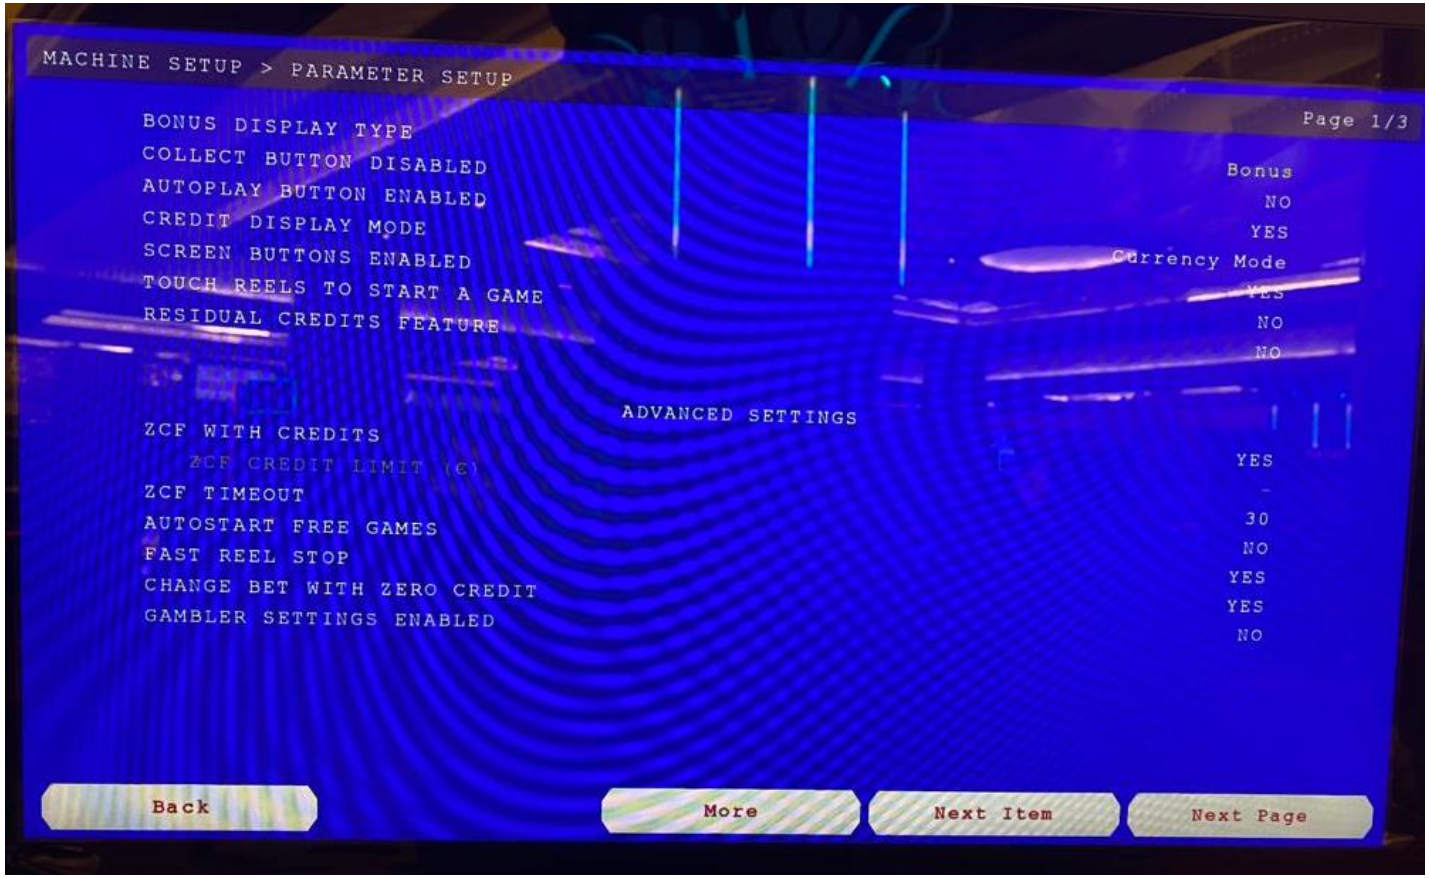

Machine will ask to set the Parameters


- **Parameter Set up - to set the:**
  - ✓ Bonus Display Type
  - ✓ Collect Button Disabled
  - ✓ Autoplay Button Enabled
  - ✓ Credit Display Mode
  - ✓ Screen Buttons Enabled
  - ✓ Touch Reels to Start a Game
  - ✓ Residual Credits Feature
- **Advanced Settings**
  - ✓ ZCF with credits
  - ✓ ZCF Time Out
  - ✓ Auto Start Free Games
  - ✓ Fast Reel Stop
  - ✓ Change Bet with Zero Credit
  - ✓ Gambler Settings Enabled set to No

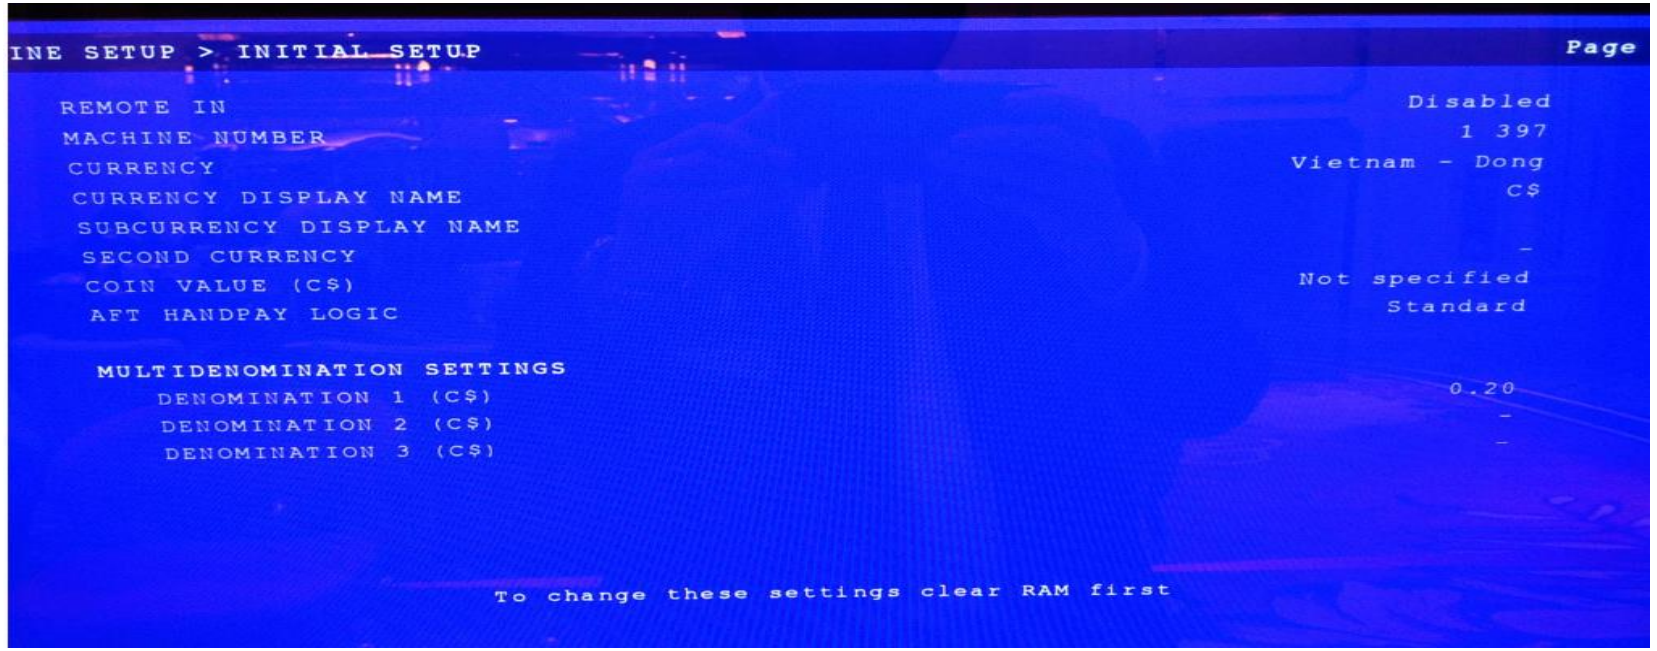

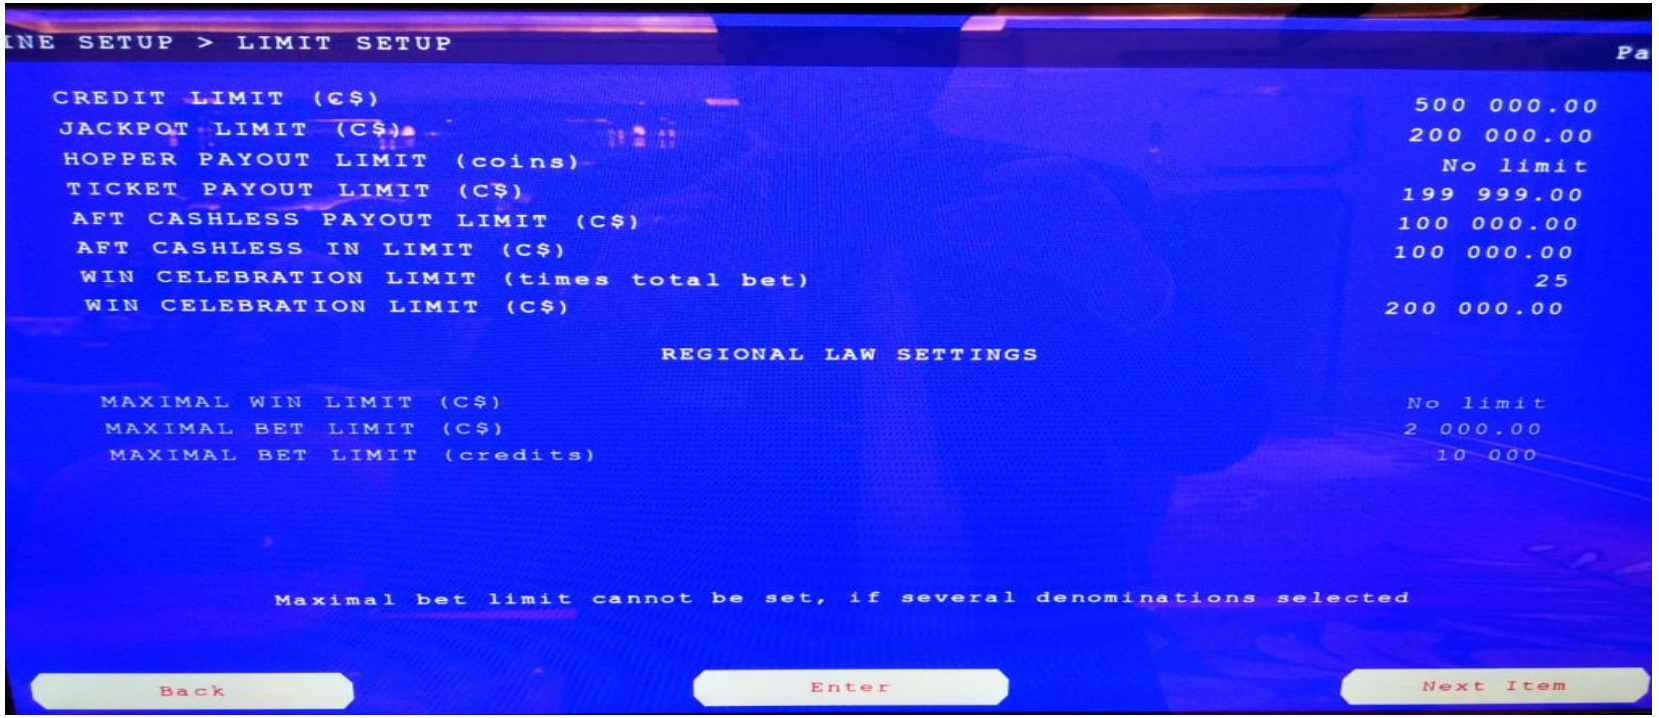


- **Initial Set up - to set the:**
  - ✓ **Remote In**
  - ✓ **Machine Number**
  - ✓ **Currency**
  - ✓ **Currency Display Name**
  - ✓ **AFT Handpay Logic**
  - ✓ **Denomination**

- **Limit Set up consist of:**
  - ✓ **Credit Limit**
  - ✓ **Jackpot Limit**
  - ✓ **Hopper Payout Limit**
  - ✓ **Ticket Payout Limit**
  - ✓ **AFT Cashless Payout Limit**
  - ✓ **AFT Cashless In Limit**
  - ✓ **Win Celebration Limit (times total bet)**
  - ✓ **Win Celebration Limit (C$)**
  - **REGIONAL LAW SETTINGS will not highlight during setting up**

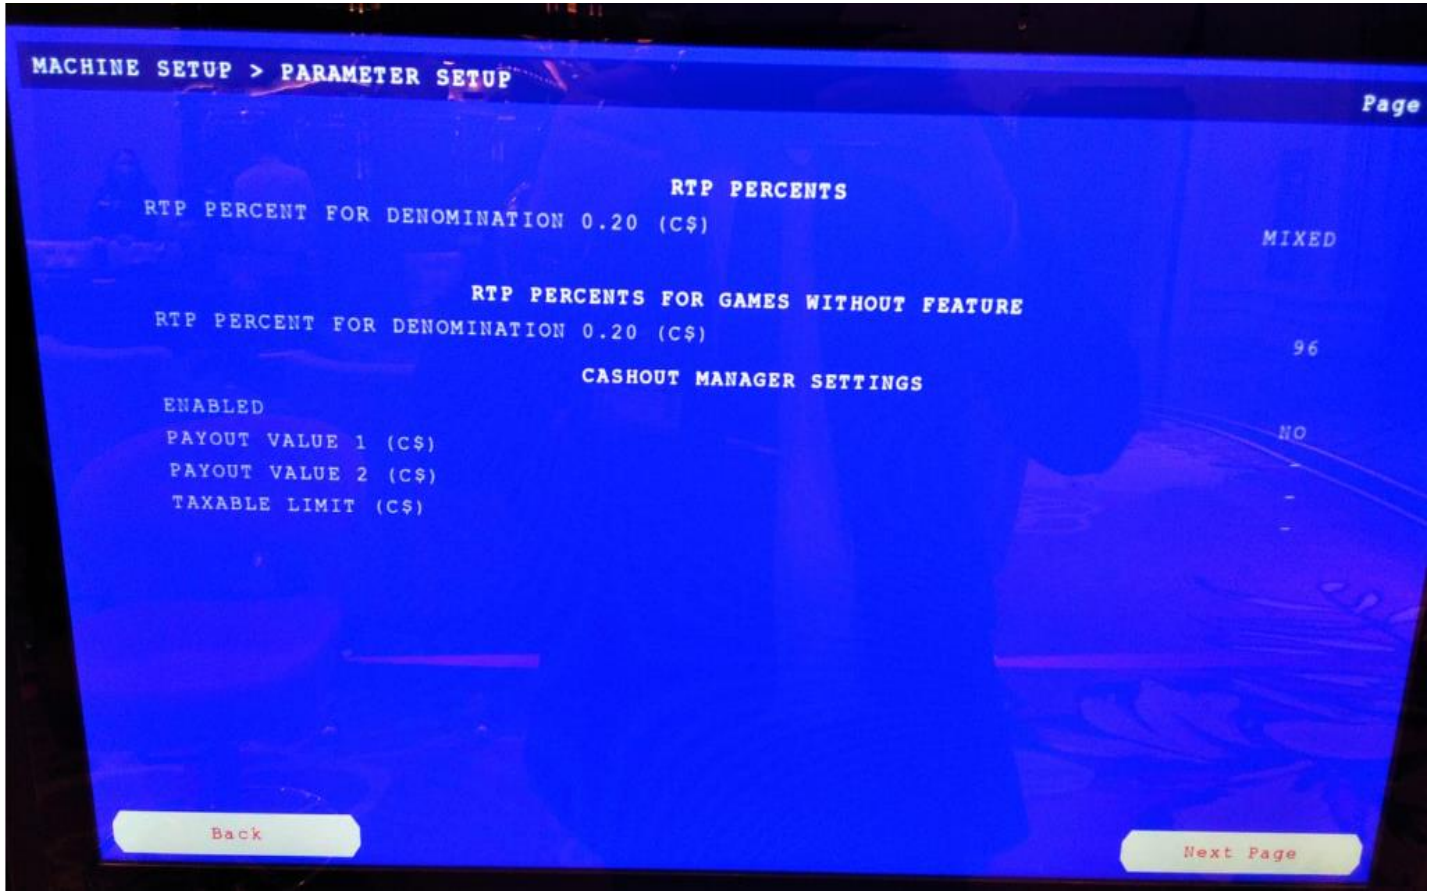

- **PARAMETER SETUP**
- **RTP Percents**
  - ✓ **RTP Percent fro Denomination (depends on the denomination set) – MIXED**
- **RTP Percents for Games Without Feature**
  - ✓ **RTP Percent fro Denomination (depends on the percentage set)**
- **Cashout Manager Settings**
  - ✓ **Enabled - No**
  - ✓ **Payout Value 1 (C$)**
  - ✓ **Payout Value (C$)**
  - ✓ **Taxable Limit**




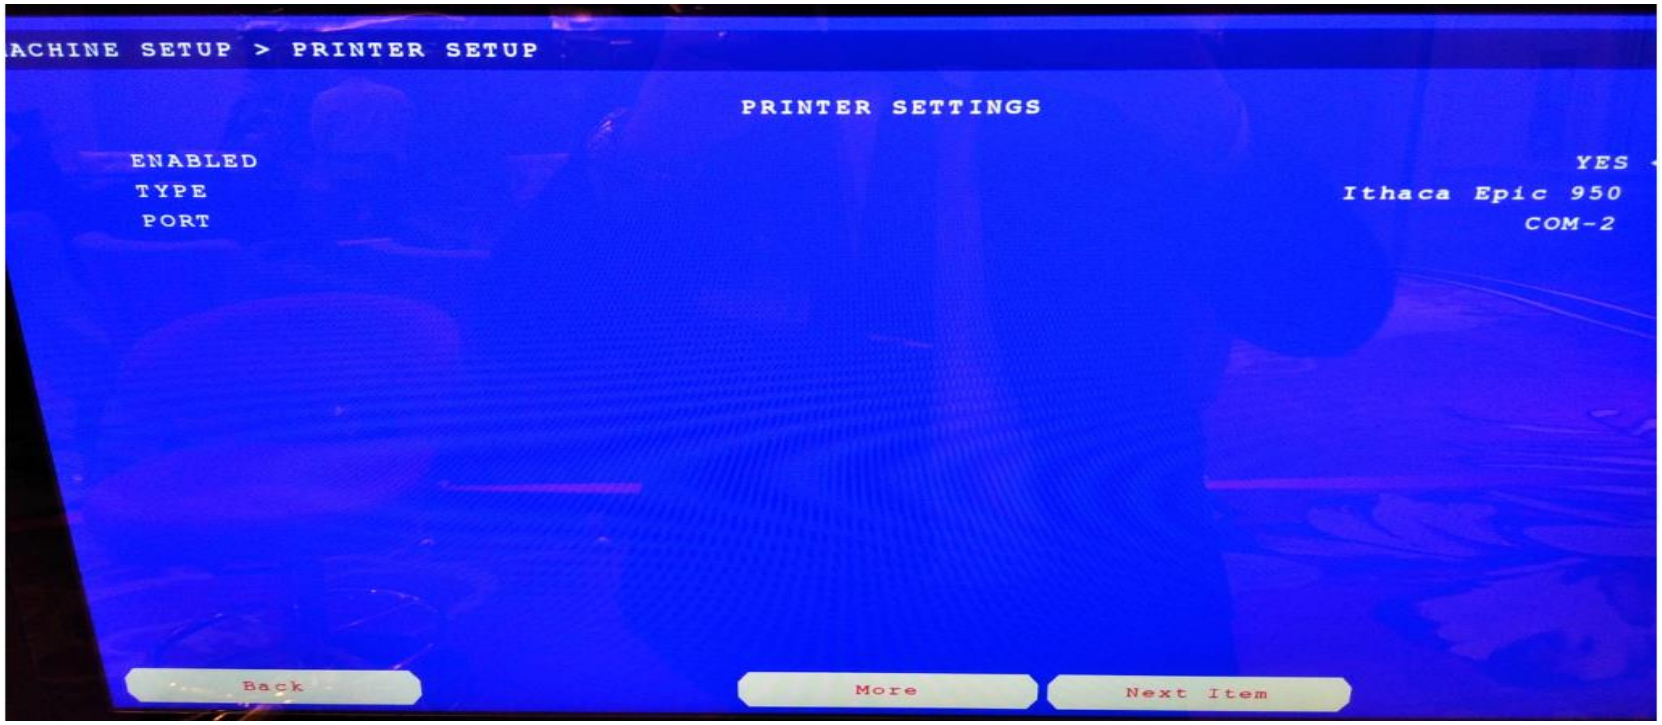

- **Bill Acceptor Setup**
  - ✓ **Set type as AGI USB Coin Acceptor**
  - ✓ **Set Enabled to No**

- **Printer Setup**
  - ✓ **Set Enabled to YES**
  - ✓ **Type mus be Ithaca Printer 950**
  - ✓ **Port should be COM-2**




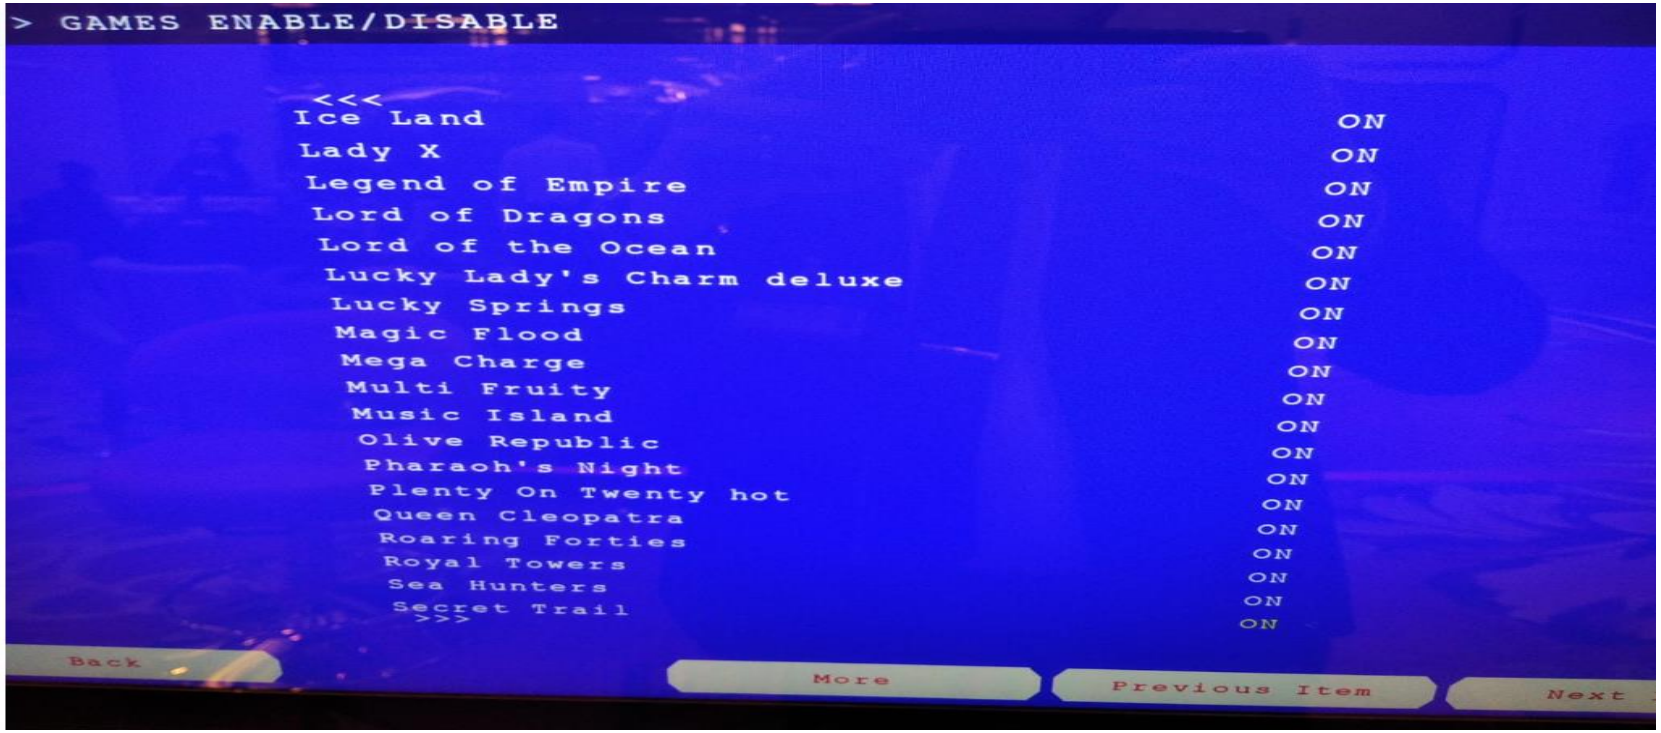


- **Date and Time Setup**
  - ✓ **This is a system generated so no need to worry about the settings**

Games Enable/Disable


- ✓ **From this options you can select Games that to be Enabled. Better yet copy the machines before you Ram Clear) to be specified.**

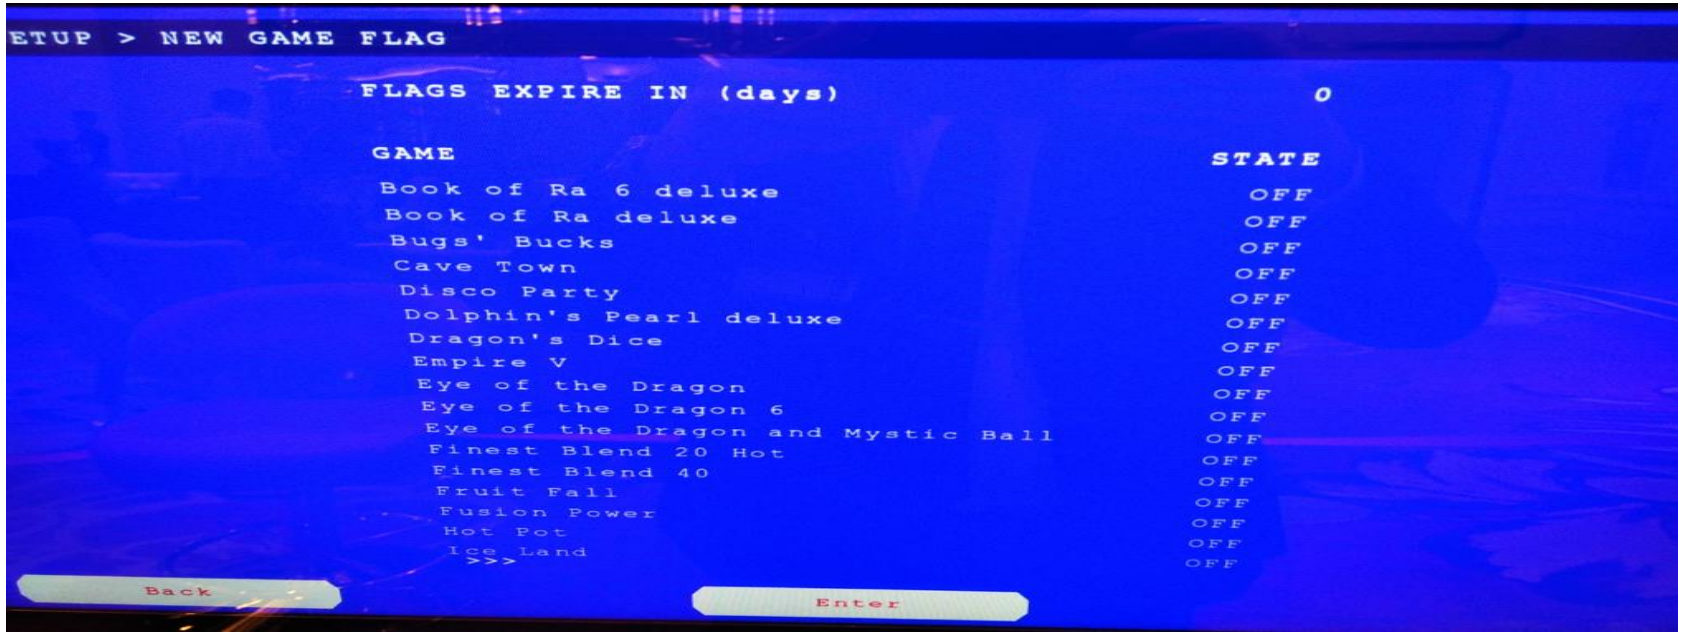

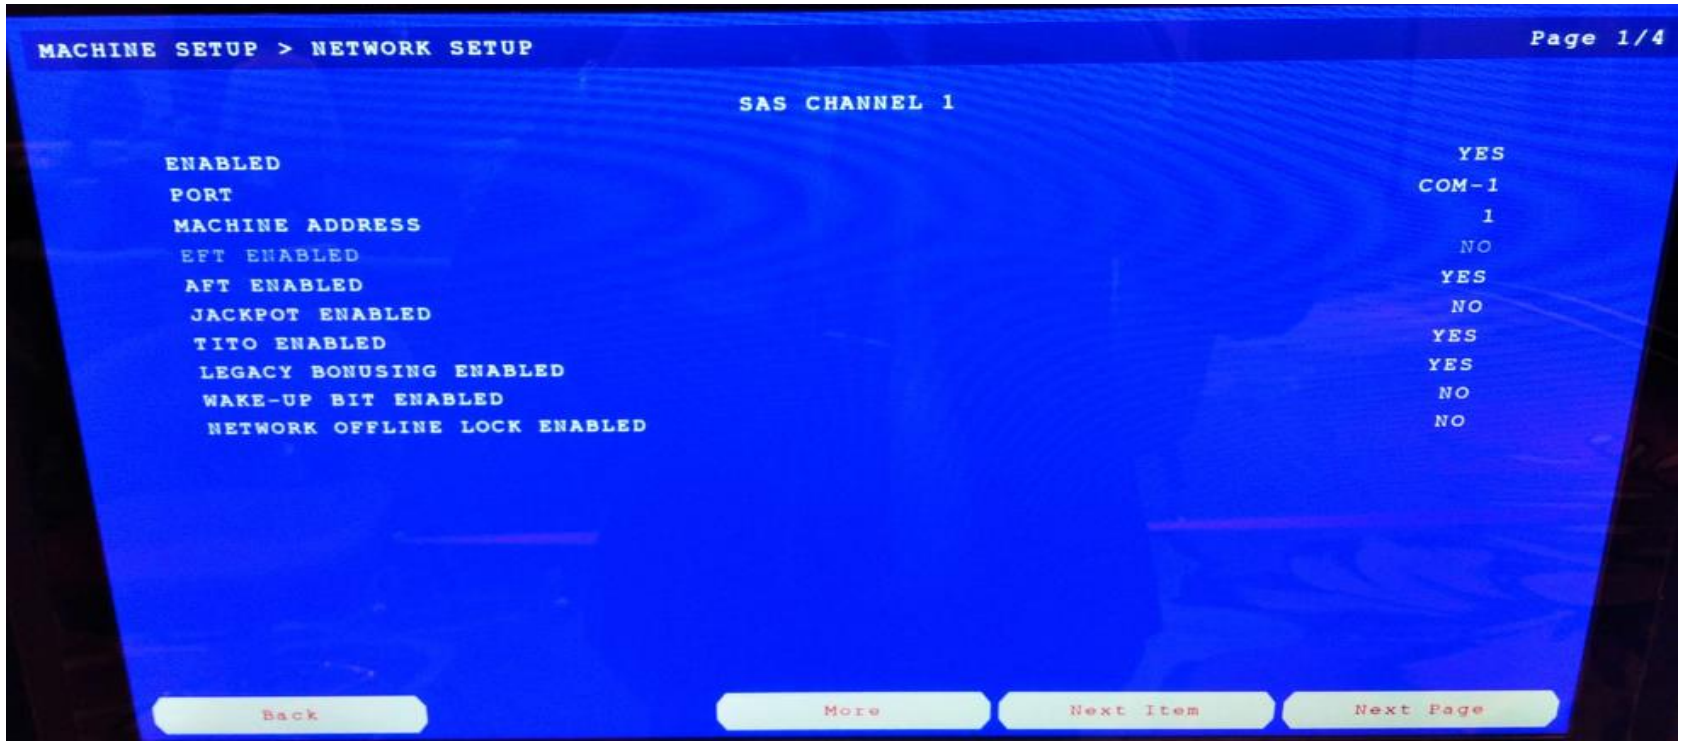


- **New Game Flag**
  - ✓ **Changes Flags Expire in (Days) to zero (0)**
  - ✓ **Then all the Games that have been selected will automatically sets to OFF**


- **Network Setup (Pages 1/4)**

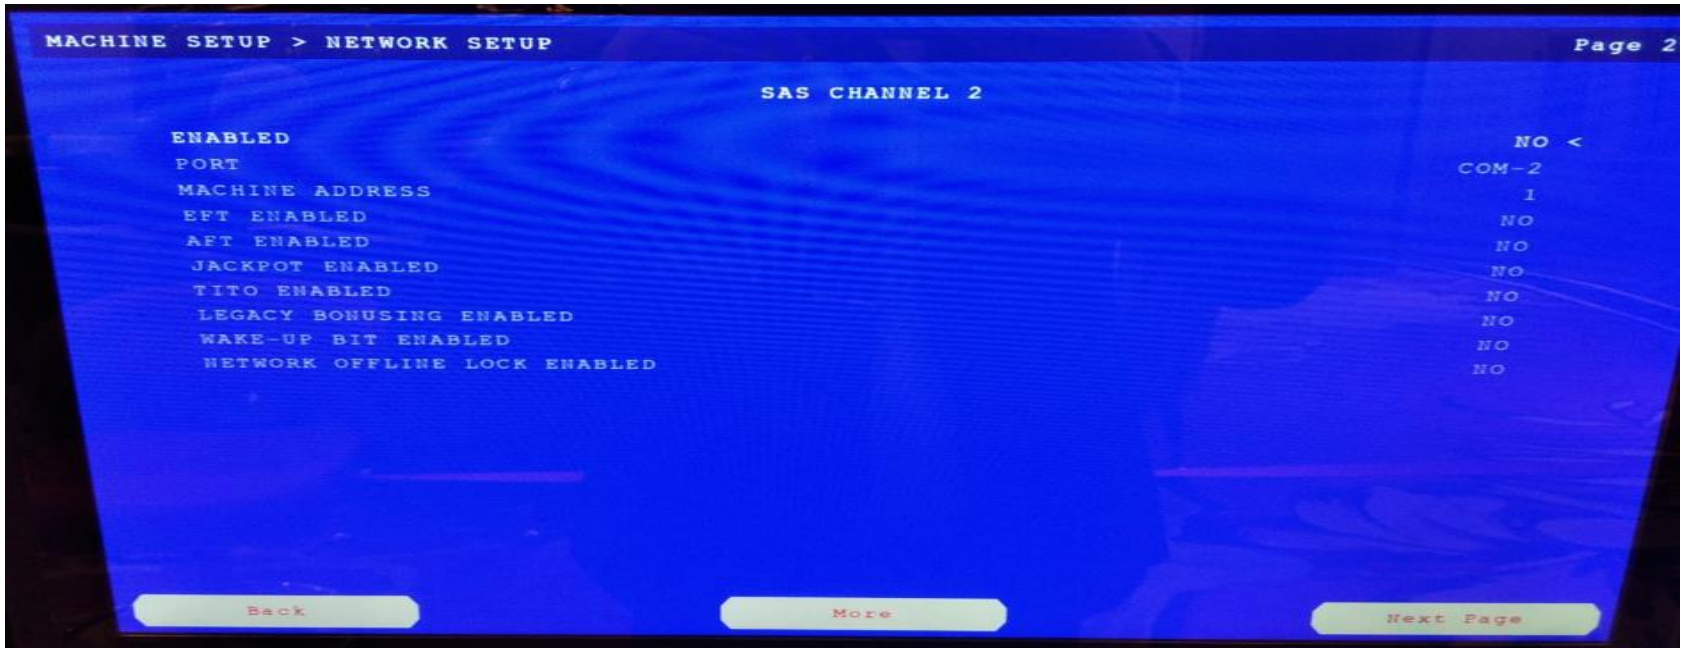

- **Network Setup (Pages 2/4)**

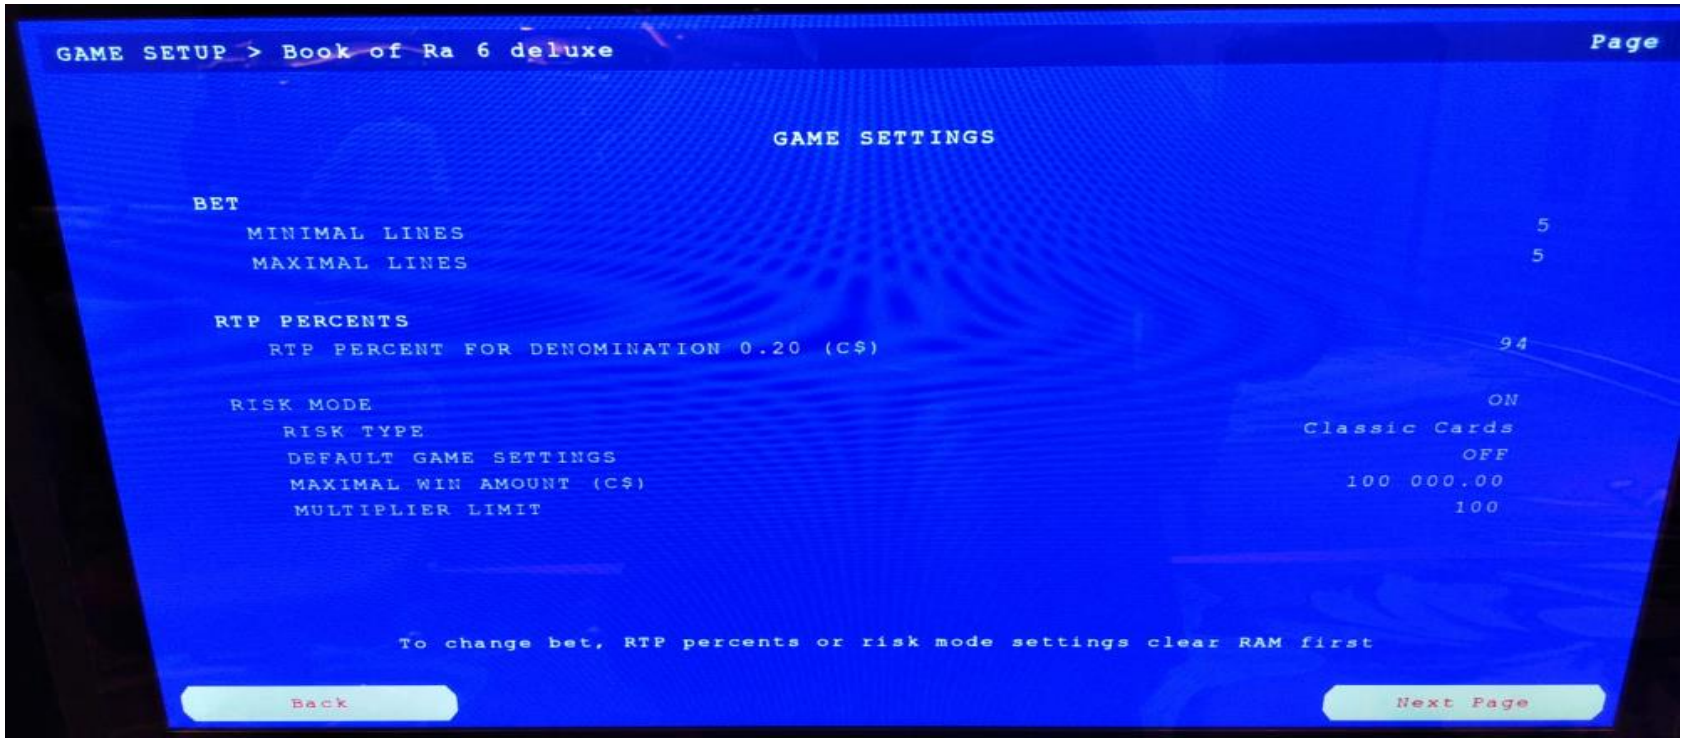

- **Network Setup (Pages 3/4)**

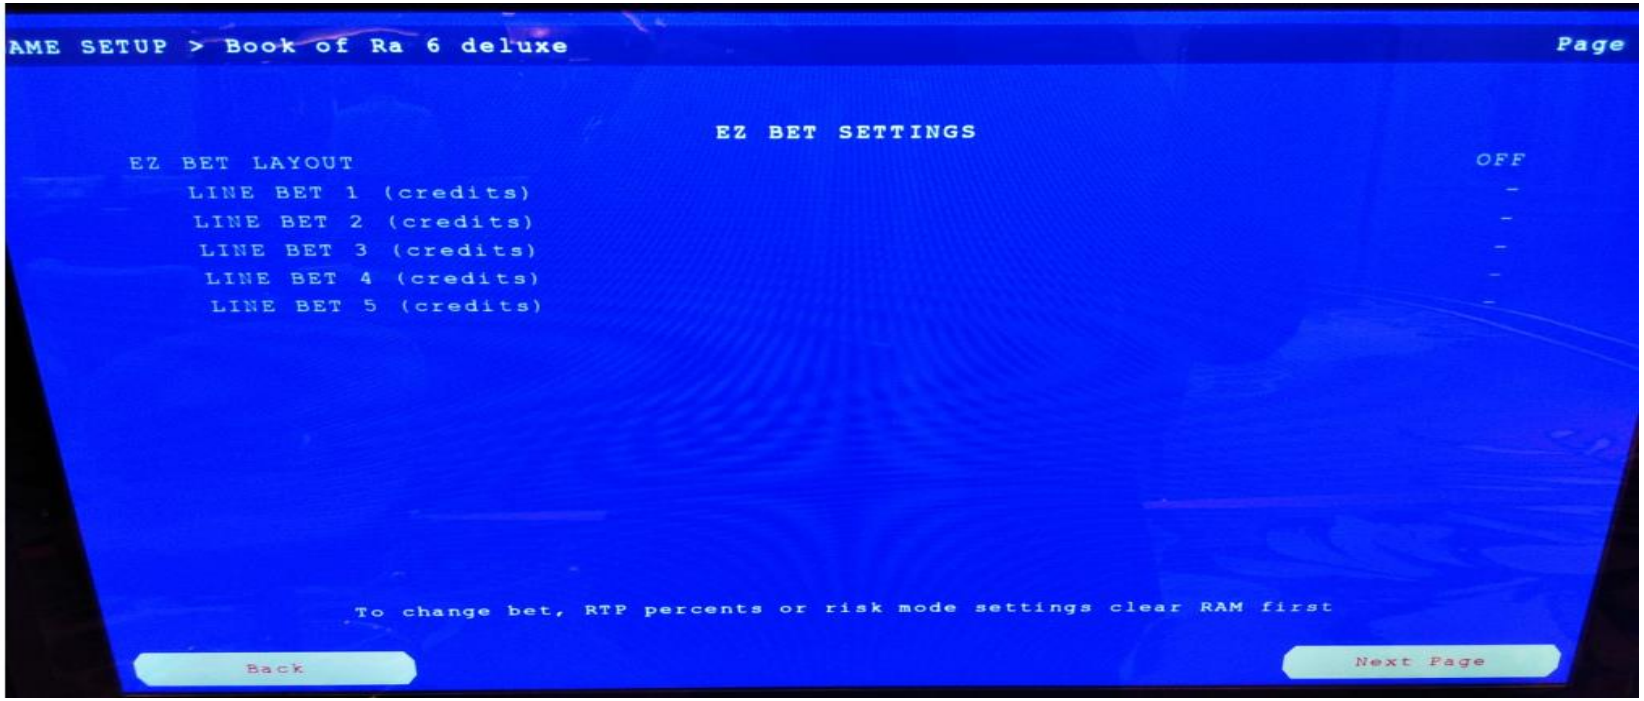

- **Network Setup (Pages 4/4)**
  - ✓ **EZ Bet Settings should be set to OFF**

- **After reviewing and confirming all the setting are correct.**
- **Turn the Operator/Audit reset switch**
- **Power OFF/ON machines until it will go to normal game mode.**
- **Just for instance the machine will give an error of Validation error or Tticket Error.**
- **Reset the power adapter of the UCB to gather new soft meters and settings of the machine. And to reset the error of ticket error and validation error.**