CORONA
RESORT & CASINO

Slot Technical Department

Aristocrat RAM Clear Procedure with Worldbase v. 5.04

Technical Luke

November 1, 2025



Aristocrat Helix WorldBase 5.05 (StandAlone)



Maindoor lock



Power Switch

- **Open the main door of the machine to access the logic box and turnoff the main power switch**



Logic Box door



Cfast card

- **Open the Logic box door**
- **Push-in and Pull-out to remove the Cfast Card from the cf card slot**



Set Chips of Aristocrat installed at Corona Casino




Set Chip for worldbase 5.04-1.00.0 or Higher



- Aristocrat Set Chip Table

Set Chip Version	World Base Platform
7.02.17	5.00.0 – 1.00.3 5.01.0 – 1.00.3 5.01.1 – 1.01.0 5.03.1 – 1.01.3
7.02.23	5.04-1.00.2
7.02.50	5.04-1.00.0 or Higher

- **Select Set Chip version according to the World Base platform of the machine**
- **Verify the World Base platform version on Cfast Card**
- **Based on the Set Chip Table below, use the Set Chip version accordingly**

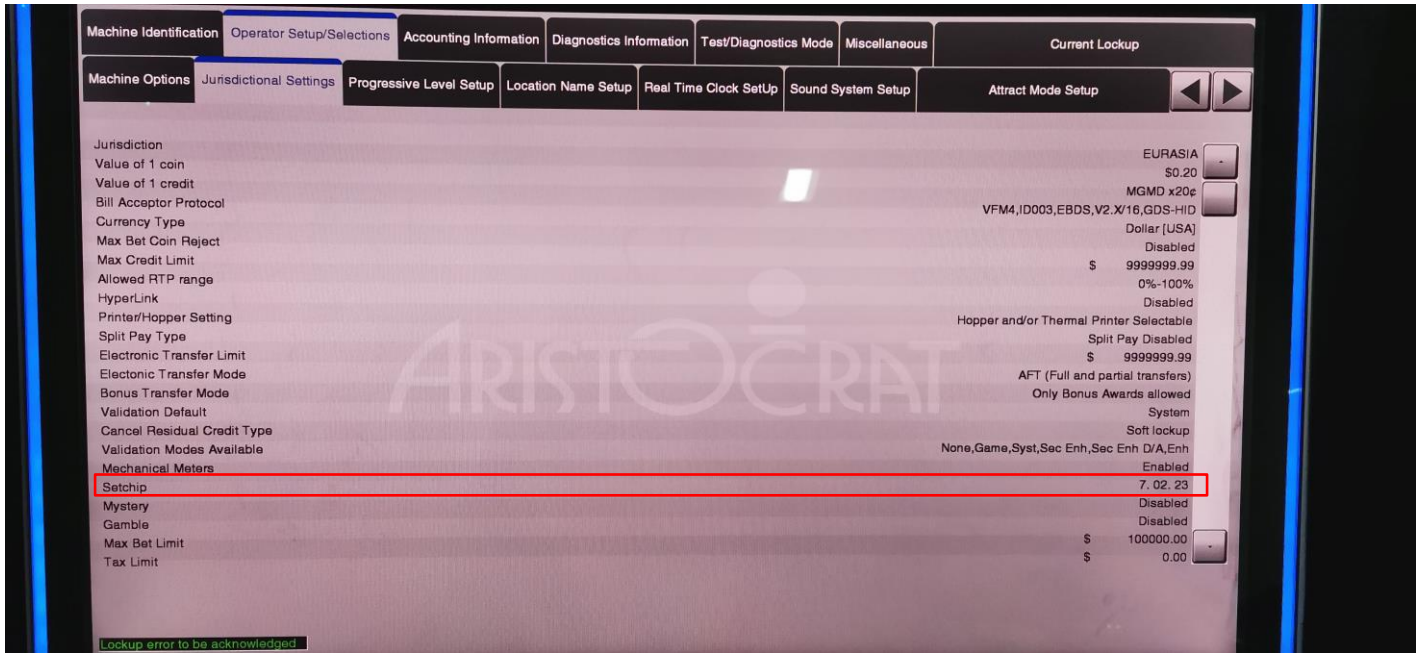

1. **Turn audit key**
2. **Select Operator Setup/Selections**
3. **Select Jurisdictional Settings and locate Setchip**

Or you can verify the Set Chip version on the Jurisdictional Settings under Operator Setup/Selection of the Audit Menu


- **Insert Set Chip card on the cfast card slot**
- **Power-on machine**







- **The machine will display the following screen**
- **Select "*Cabinet Values and Limits*"**
- **Press to tab <u>EGM Disable on Com Timeout</u>**
- **Press Disabled and back Enabled**
- **Ram Clear has been done at this point.**
- **Power off machine**
- **Remove the Set Chip from**
- **Insert game Cfast card into the cf card slot**
- **Power on machine**

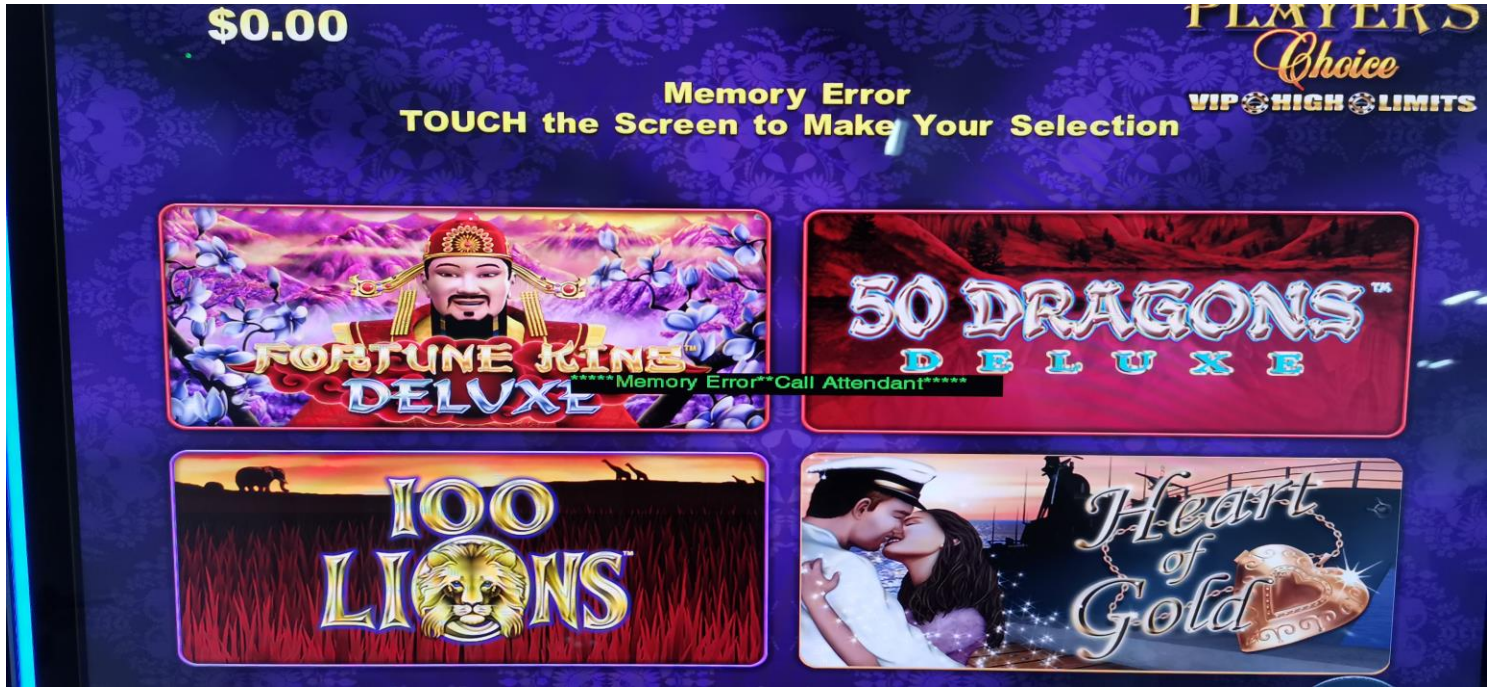




- **Upon the game has been loaded, a “Memory Error, Call Attendant” error will appear on screen**
- **Turn Audit Key to access menu**







- **Machine will prompt to select Touch Screen Driver, select "HID Touch Screen". Used Bet 1 or Bet 2 to navigate**
- **Press Service to Save/Configure**

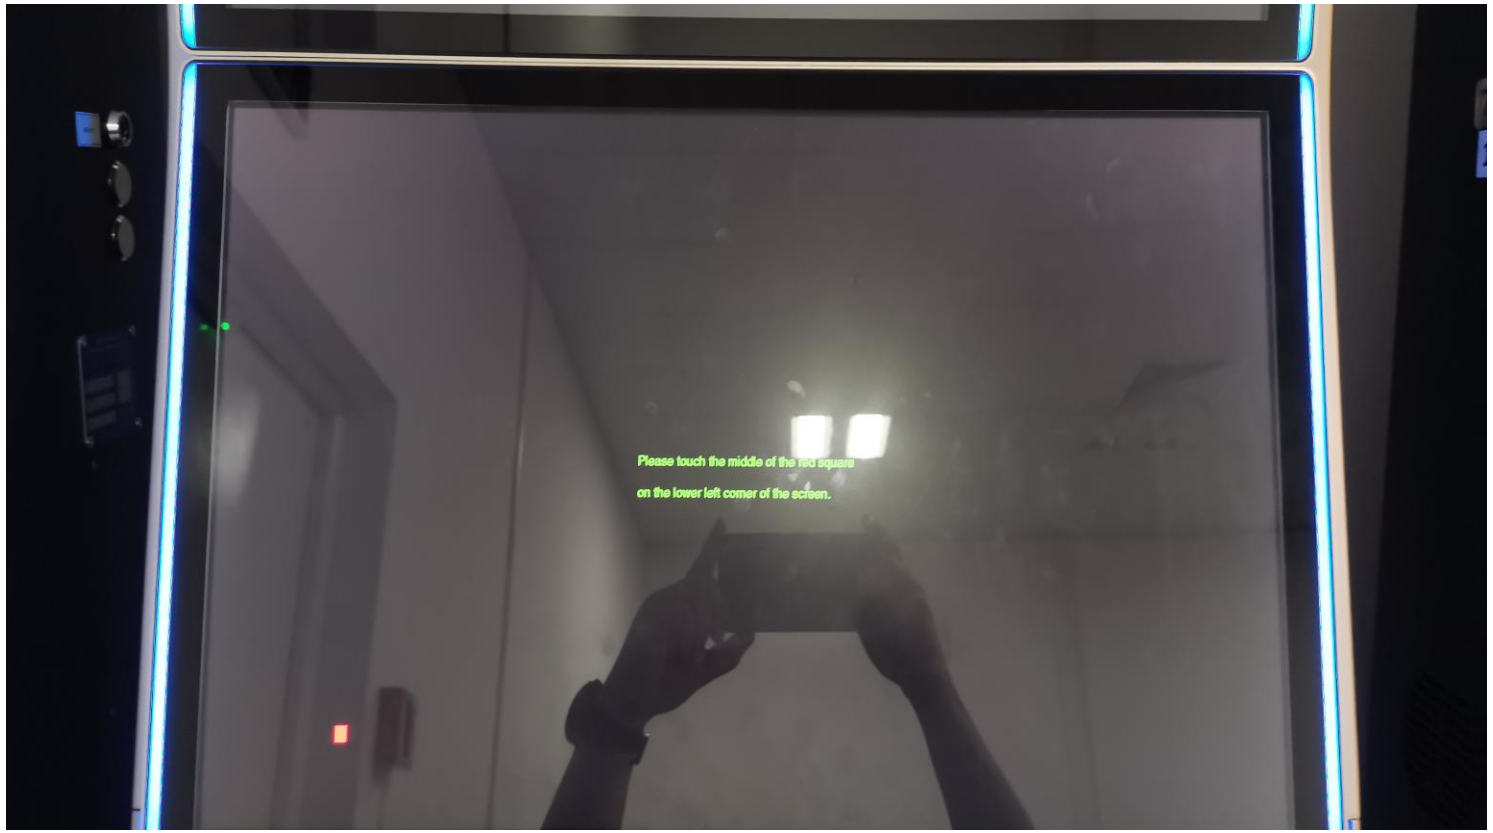


- **Machine will prompt to calibrate touch screen**

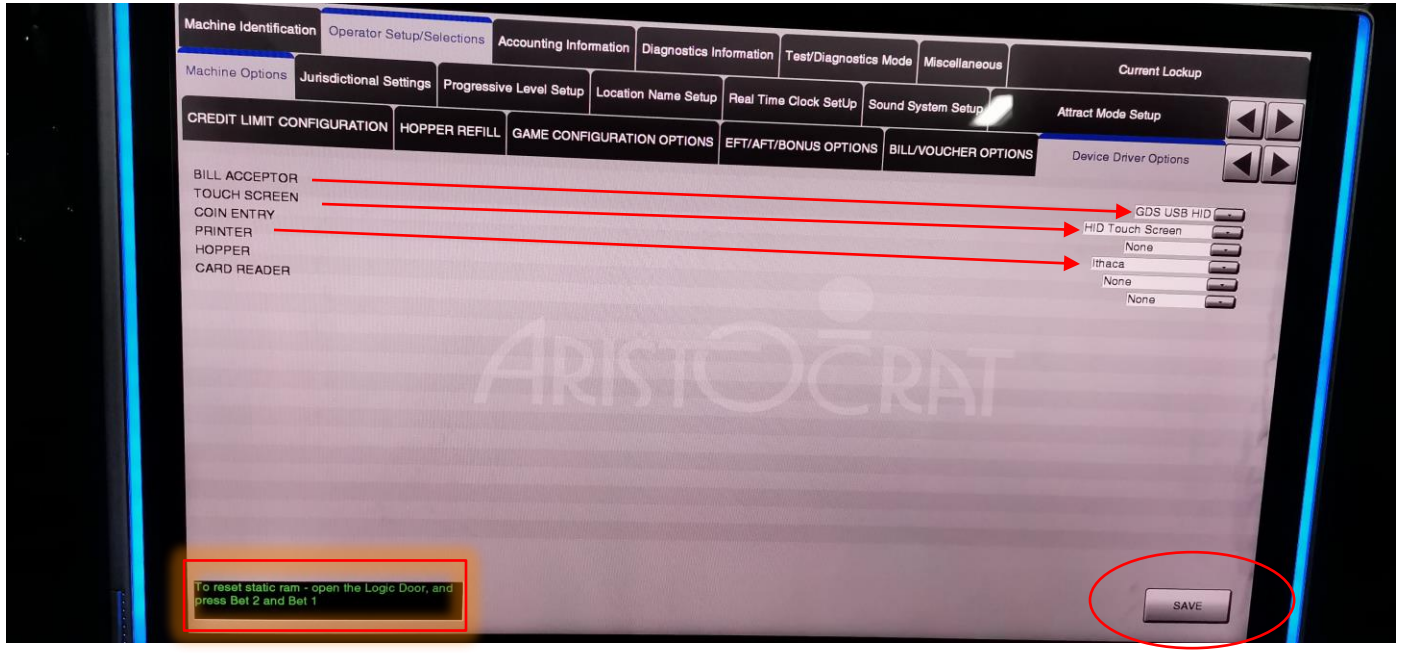

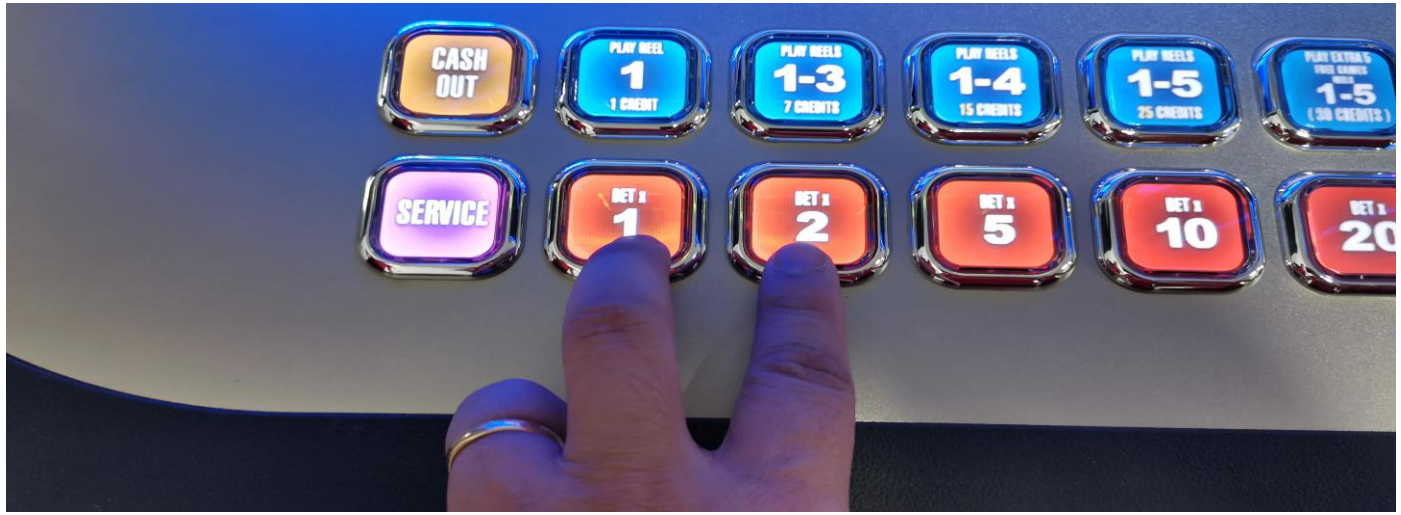


Device Driver Options


- **Under Operator Setup / Selections**
- **Select Machine Options**
- **Set the options as follows (see photo) and tap Save**
- **Press Button Bet x1 and Bet x2 at the same time to clear static ram. Note: logic door must be open**

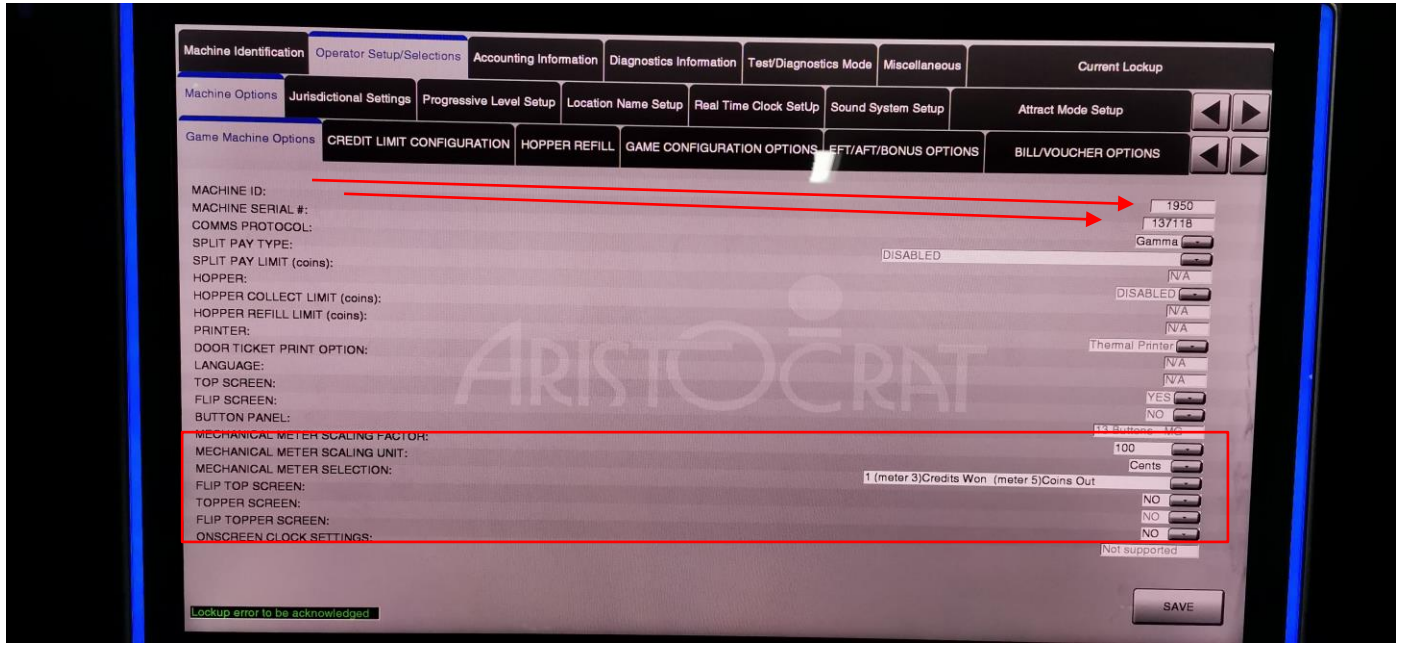

Game Machine Options

- **Set the options as follows (see photo) and tap Save**

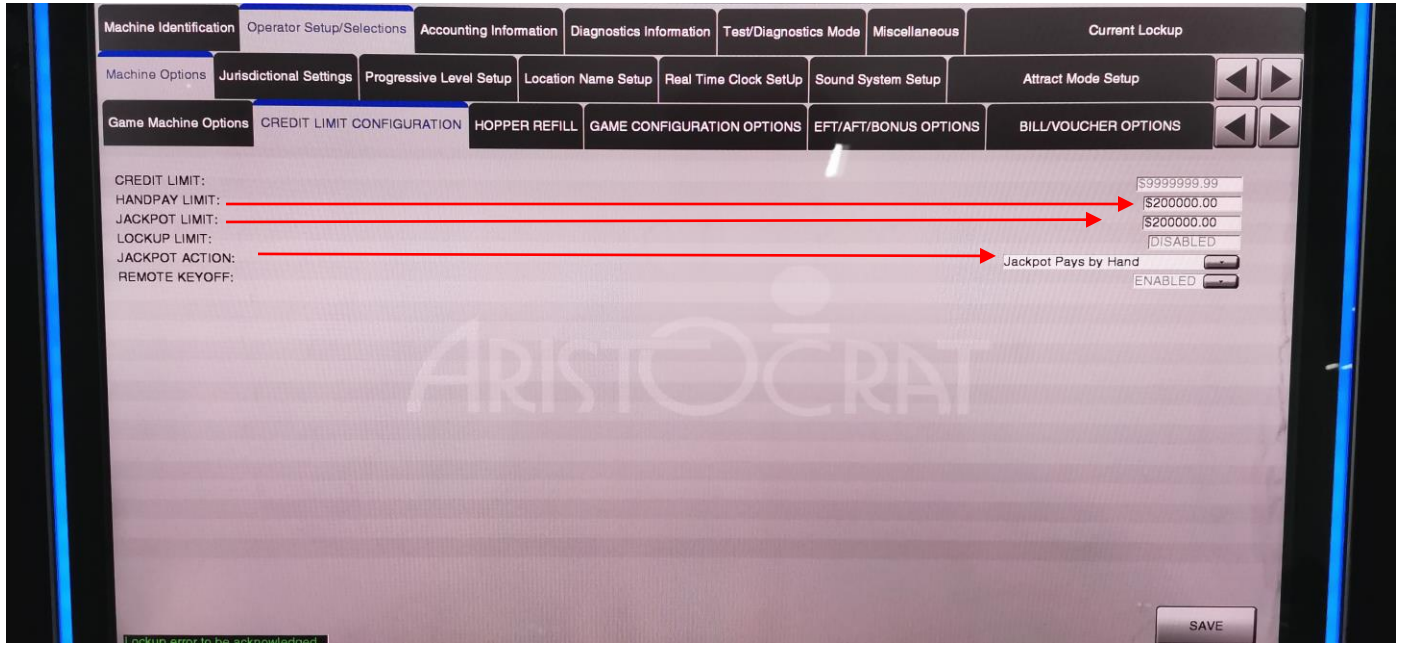

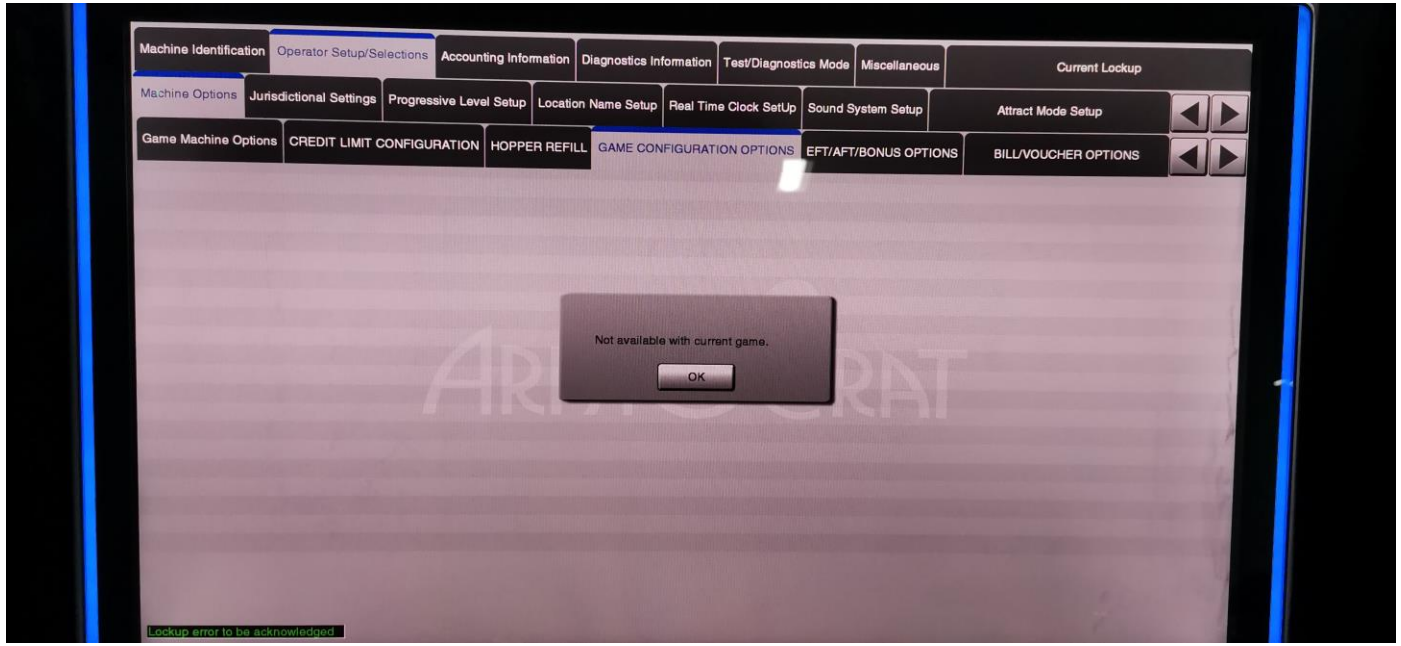


Credit Limit Configuration

- **Set the options as follows (see photo) and tap Save**


Game Configuration Options

- **For this type of game, game config is not available**

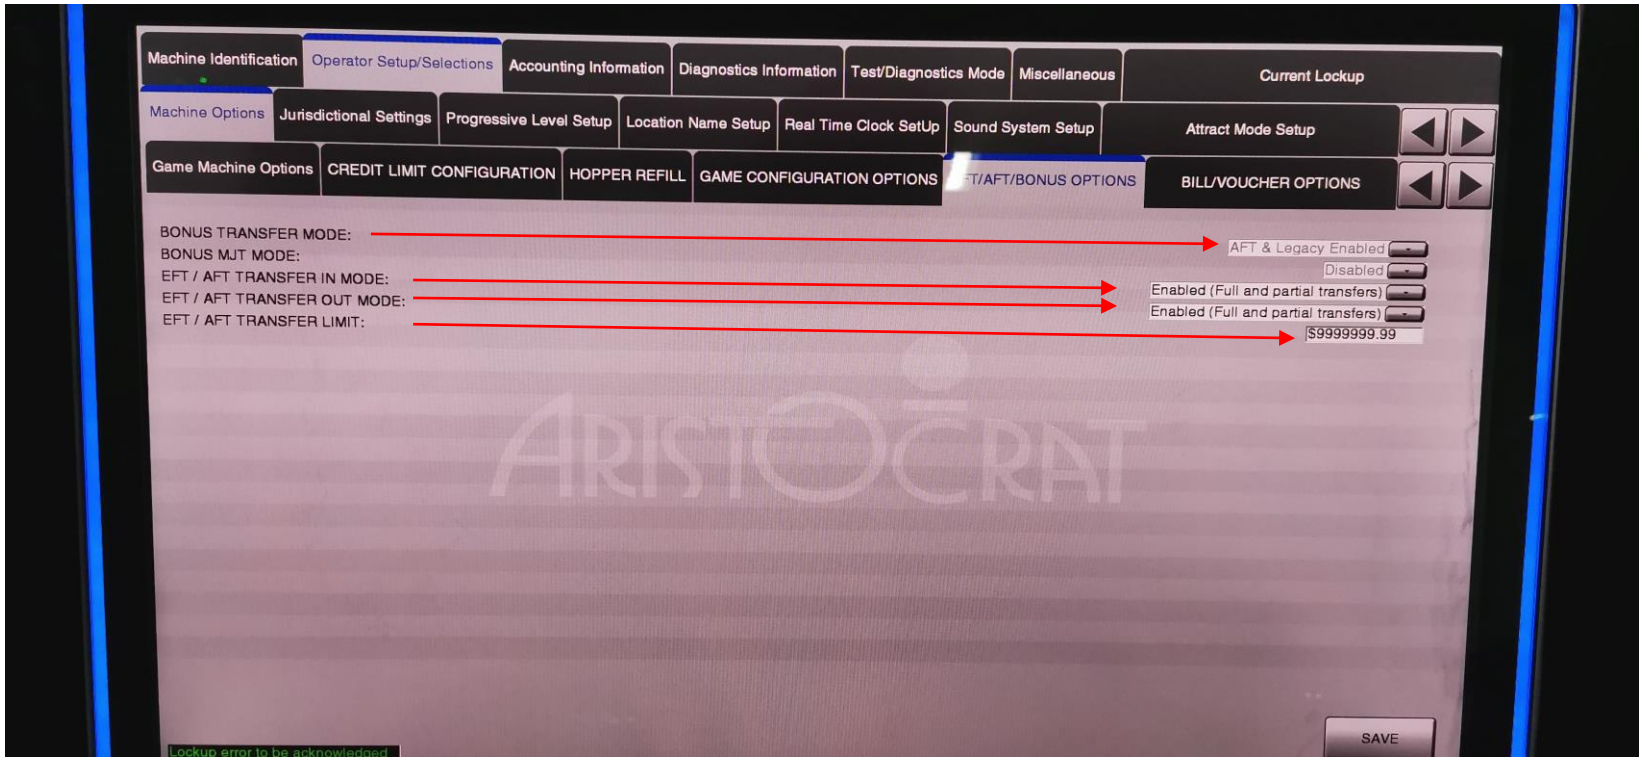


EFT/AFT Bonus Options


- **Set the options as follows (see photo) and tap Save**

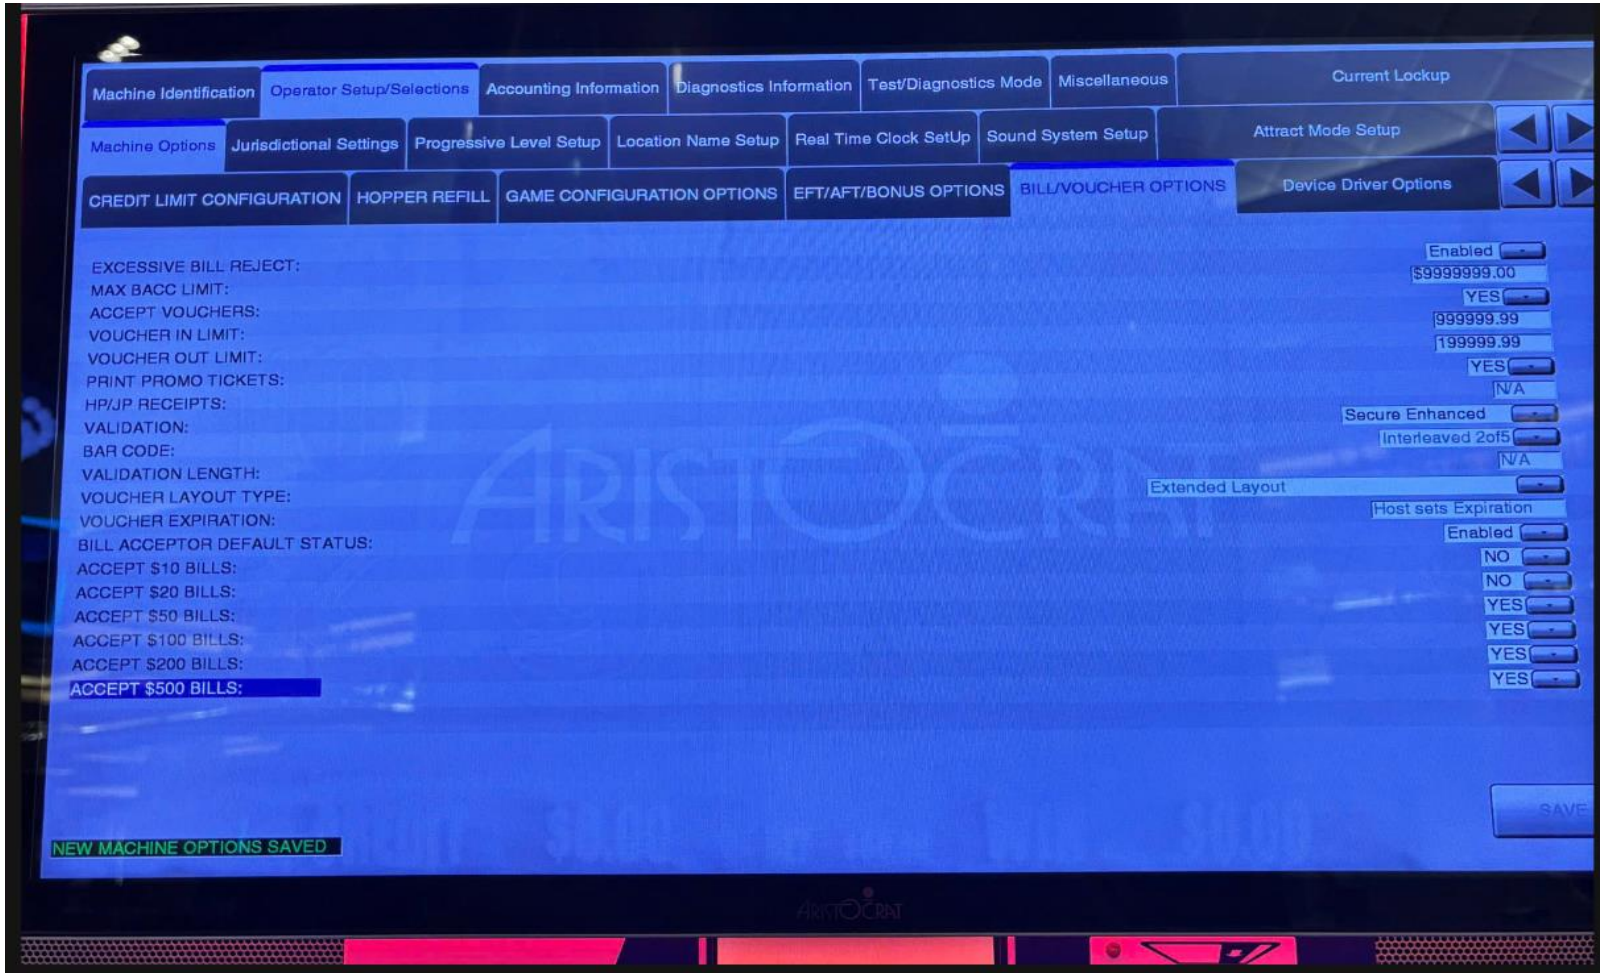

Bill Voucher Options

- **Set the options as follows (see photo) and tap Save**

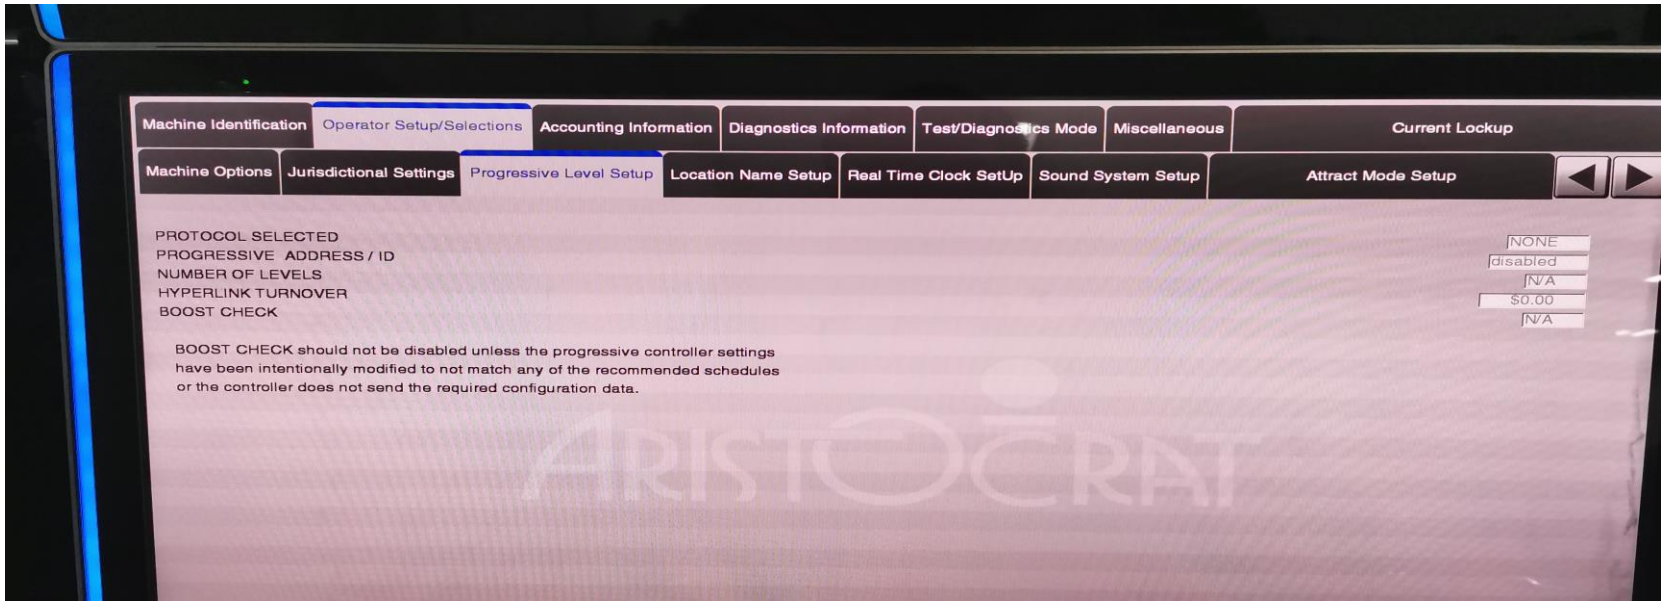

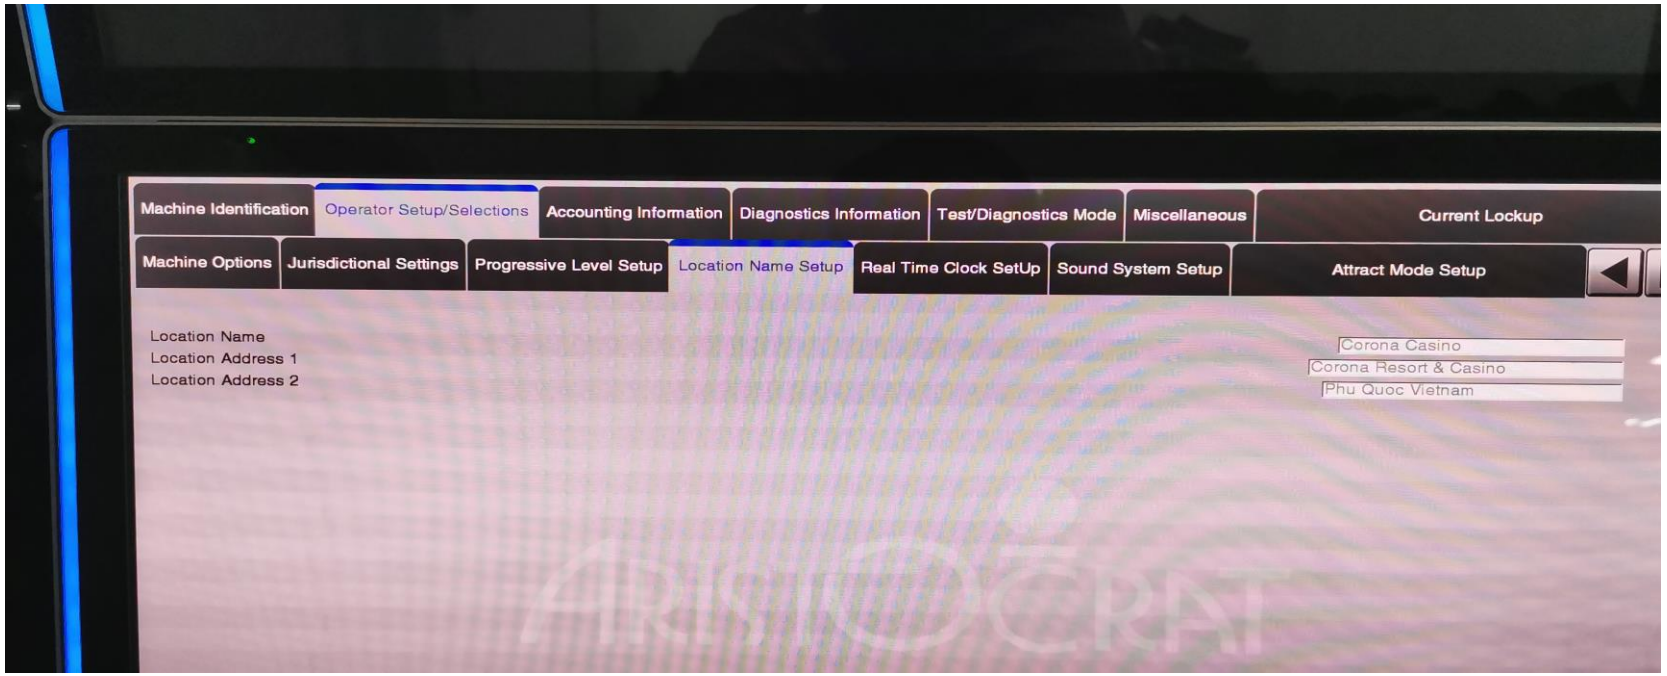



Progressive level Setup

- This is to set the progressive level

Location Name Setup

- Auto set by the system or host

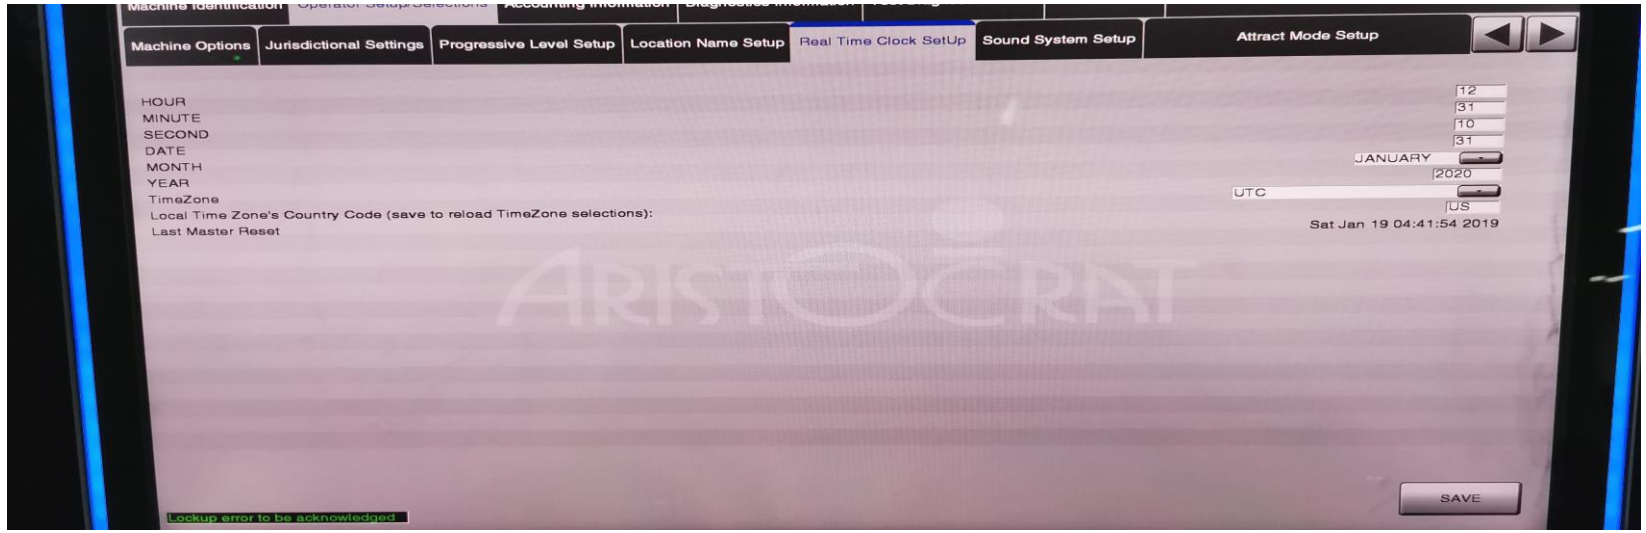

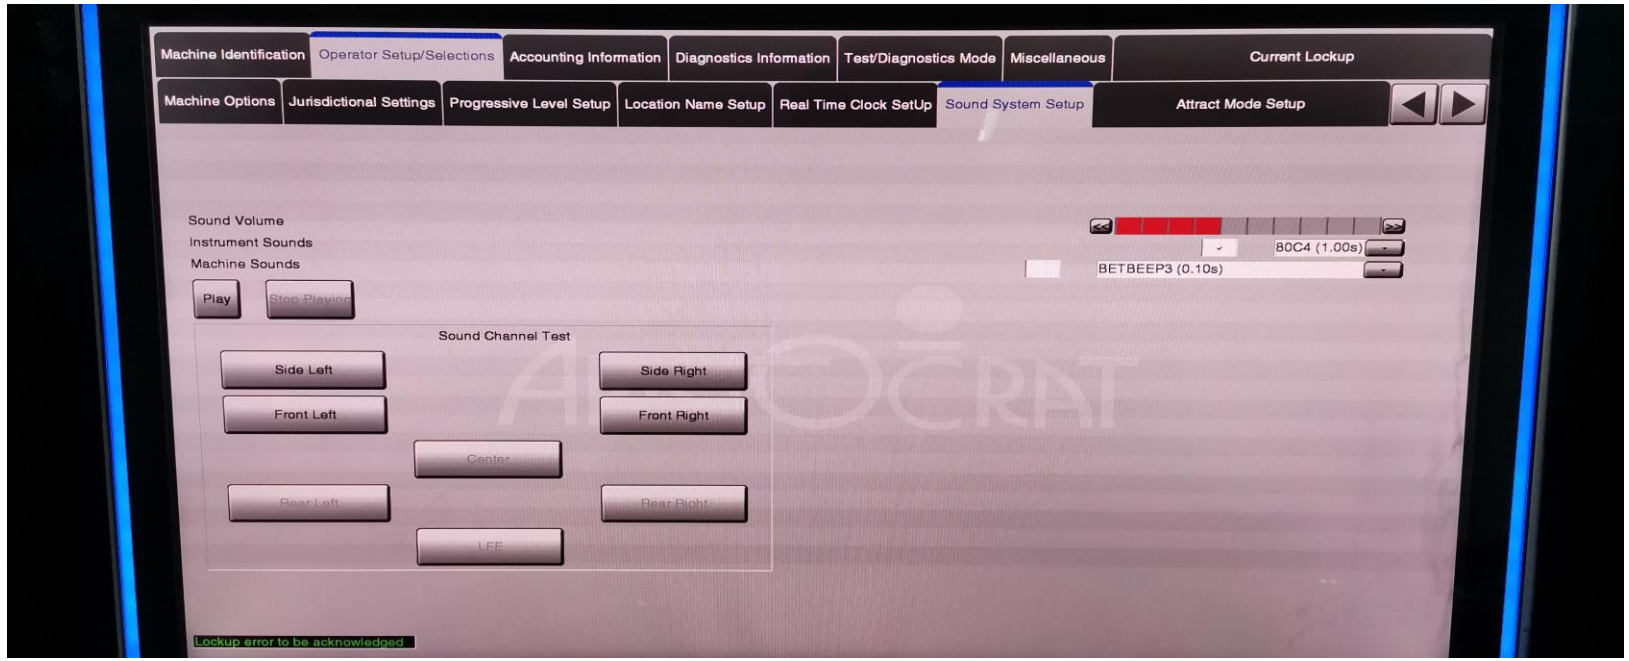


Real Time Clock Setup

- Set up time and date
- Tap Save


Sound System Setup

- Set up sound volume

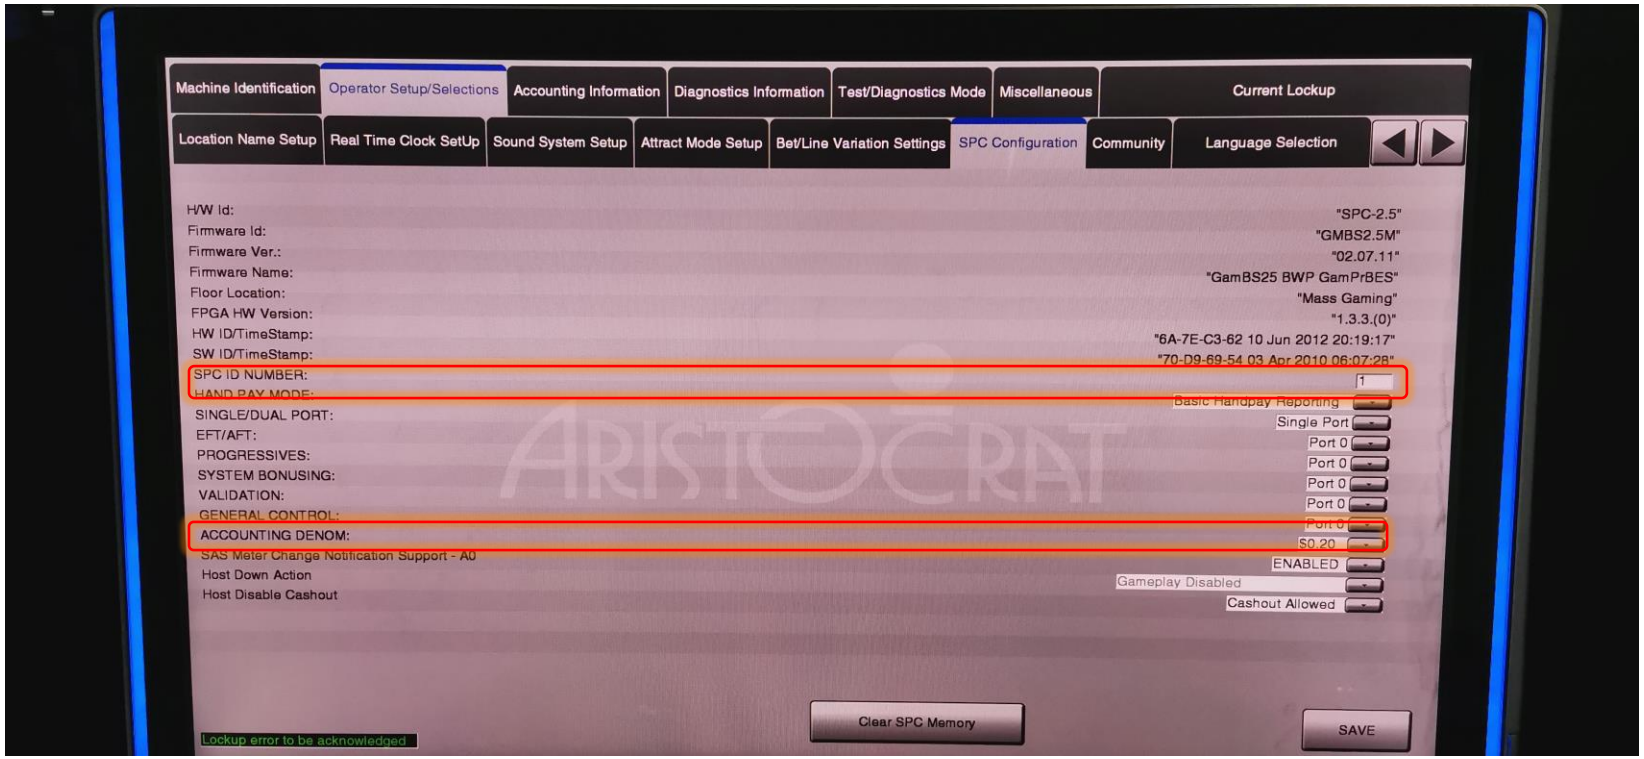

SPC Configuration

- **SPC ID number = 1**
- **Accounting denom = denom set by management**
- **Tap Save to save options set**
- **Tap Clear SPC memory to clear SPC2.5**

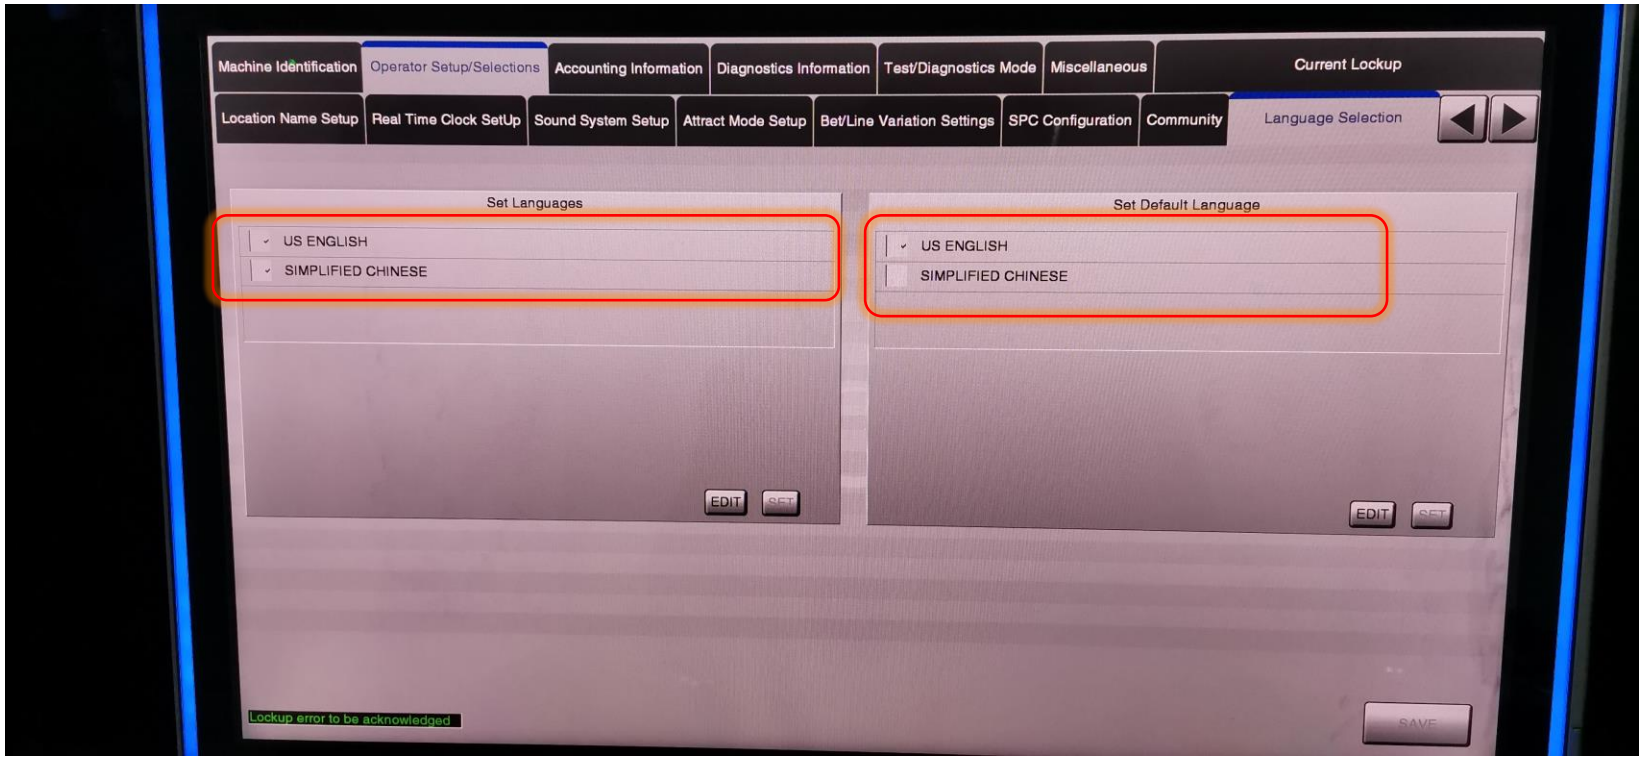

Language Selection

On the Languages box

- **Tap Edit**
- **Tap Simplified Chinese**
- **Tap Set**

On the Default Languages box

- **Tap Edit**
- **Tap US english**
- **Tap Set**

Tap Save