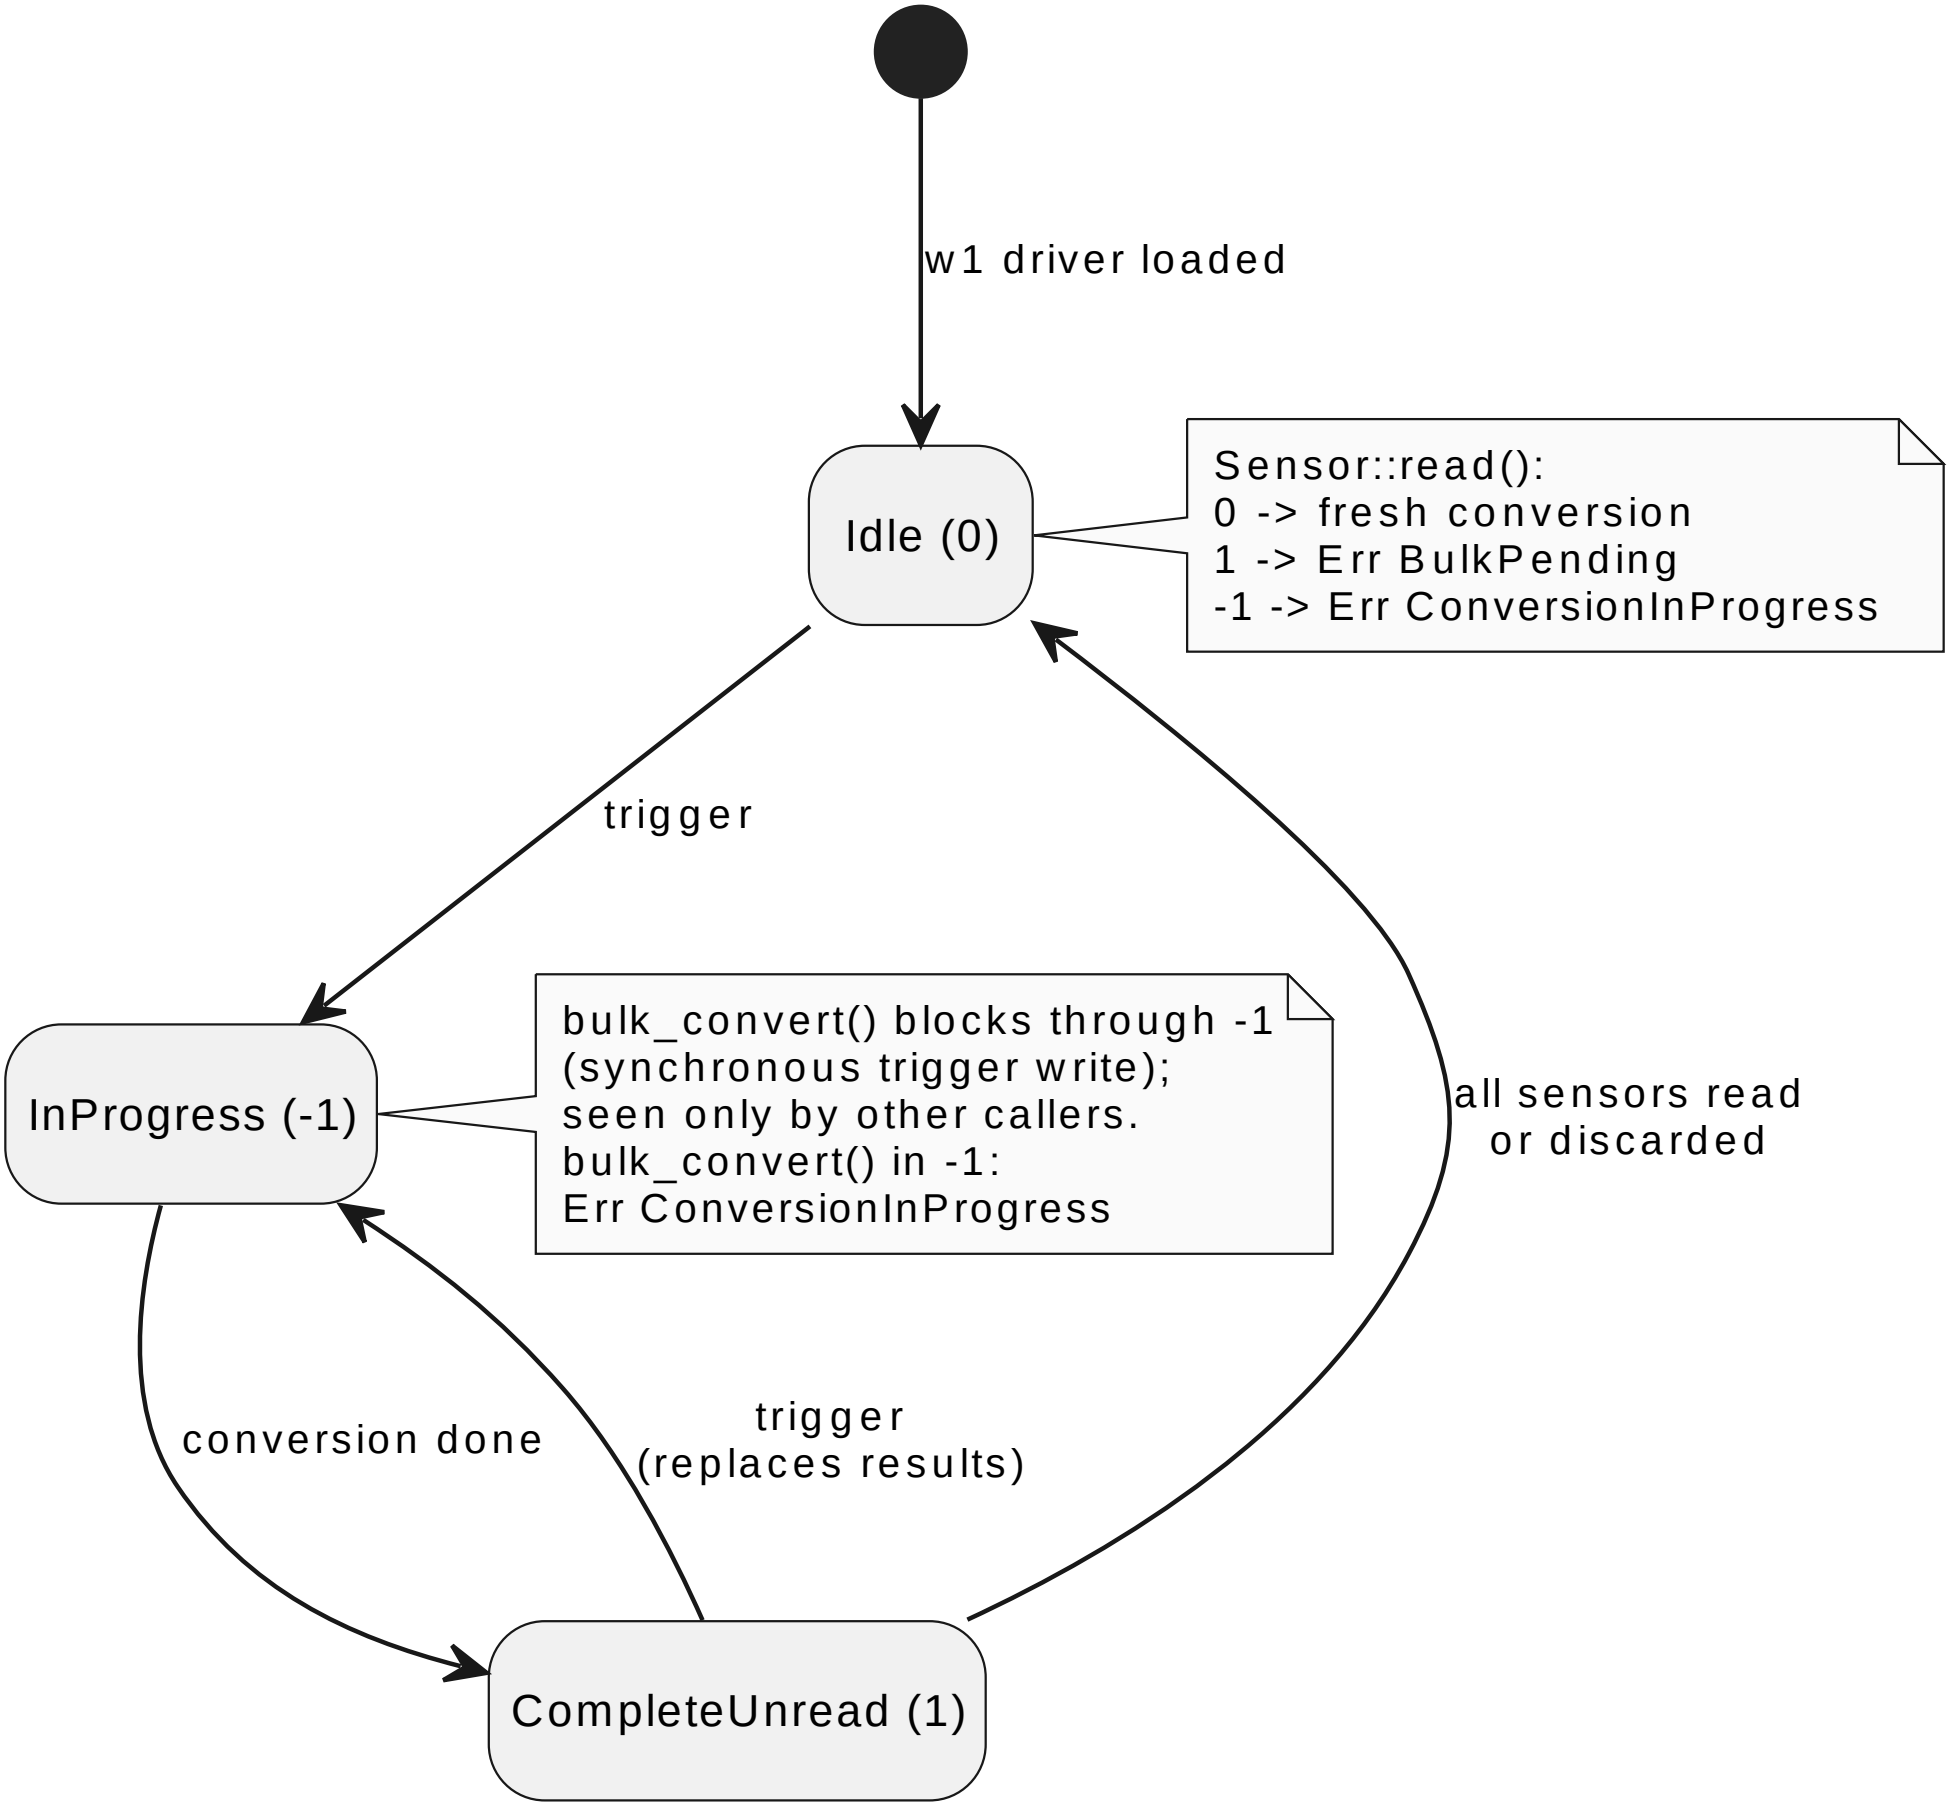
w1 driver loaded
Idle (0)
Sensor::read():
0 -> fresh conversion
1 -> Err BulkPending
-1 -> Err ConversionInProgress
trigger
InProgress (-1)
bulk_convert() blocks through -1
(synchronous trigger write);
seen only by other callers.
bulk_convert() in -1:
Err ConversionInProgress
all sensors read
or discarded
conversion done
trigger
(replaces results)
CompleteUnread (1)