
Add 3" Drive jumper on 09FLP Ver: 02 / Ver:09


First cut the following two traces.

For Small 09FLP!

If existing DC3 straight connectors!

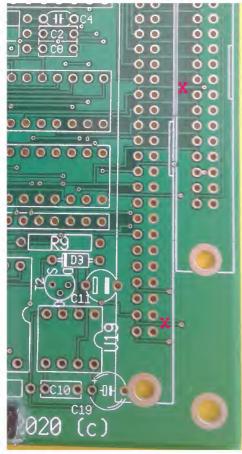



Component side!

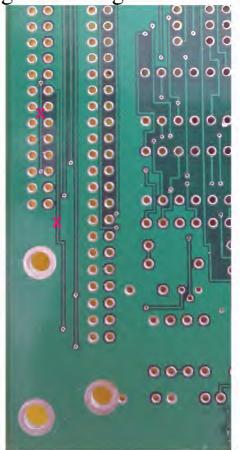

Solder side!

Then drill the 1.2mm holes for a 2x3 Pin Header.

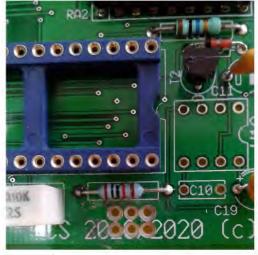


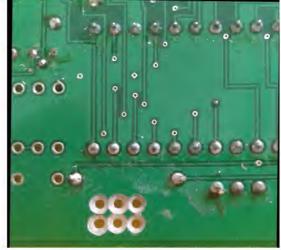

The jumpers come below R5 for the use of DC2 connectors. Remove the ground layer with a 3mm drill on both sides.

Glue the 2x3 Pin Header on the print component side.




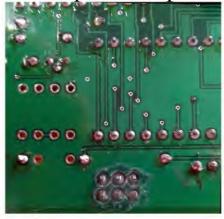

Clean the pins on the solder side.


Now connect the following wires:

For Small 09FLP!

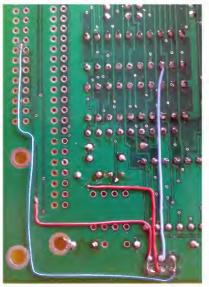

Use the via's and pin-3 U7.

Existing DC3 straight connectors!

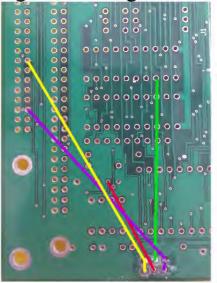

Use connector pin 3 and 20.



5" drive setting.



3" drive setting.

See also 'Small 09FLP.pdf'.