

Add 3" Drive jumper on 09FLP Ver: 03 / Ver:09

First cut the following two traces on the component side.

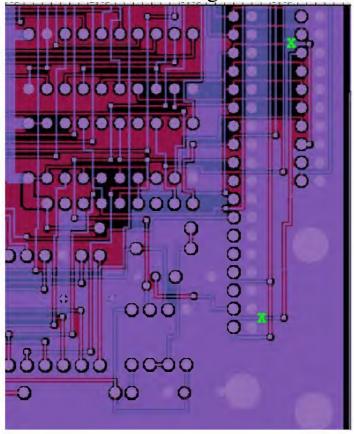


Then drill the 1.2mm holes for a 2x3 Pin Header.

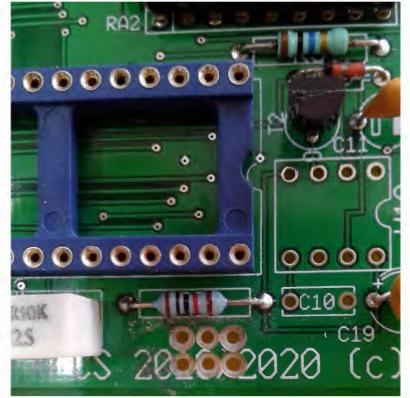


The jumpers come below R5 for the use of DC2 connectors.

And remove the ground layer with a 3mm drill on both sides.

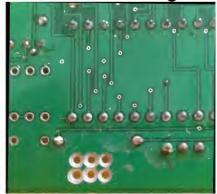


Glue the 2x3 Pin Header on the print component side.



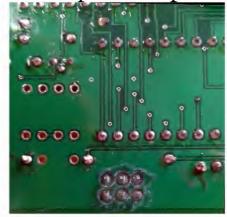

Clean the pins on the solder side.

Now connect the following wires, use the via's and pin-3 U7.

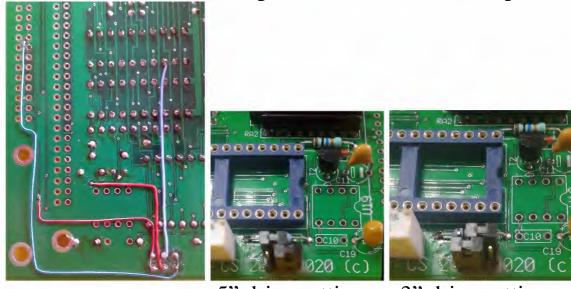

5" drive setting. 3" drive setting.

See also 'Small 09FLP.pdf'.