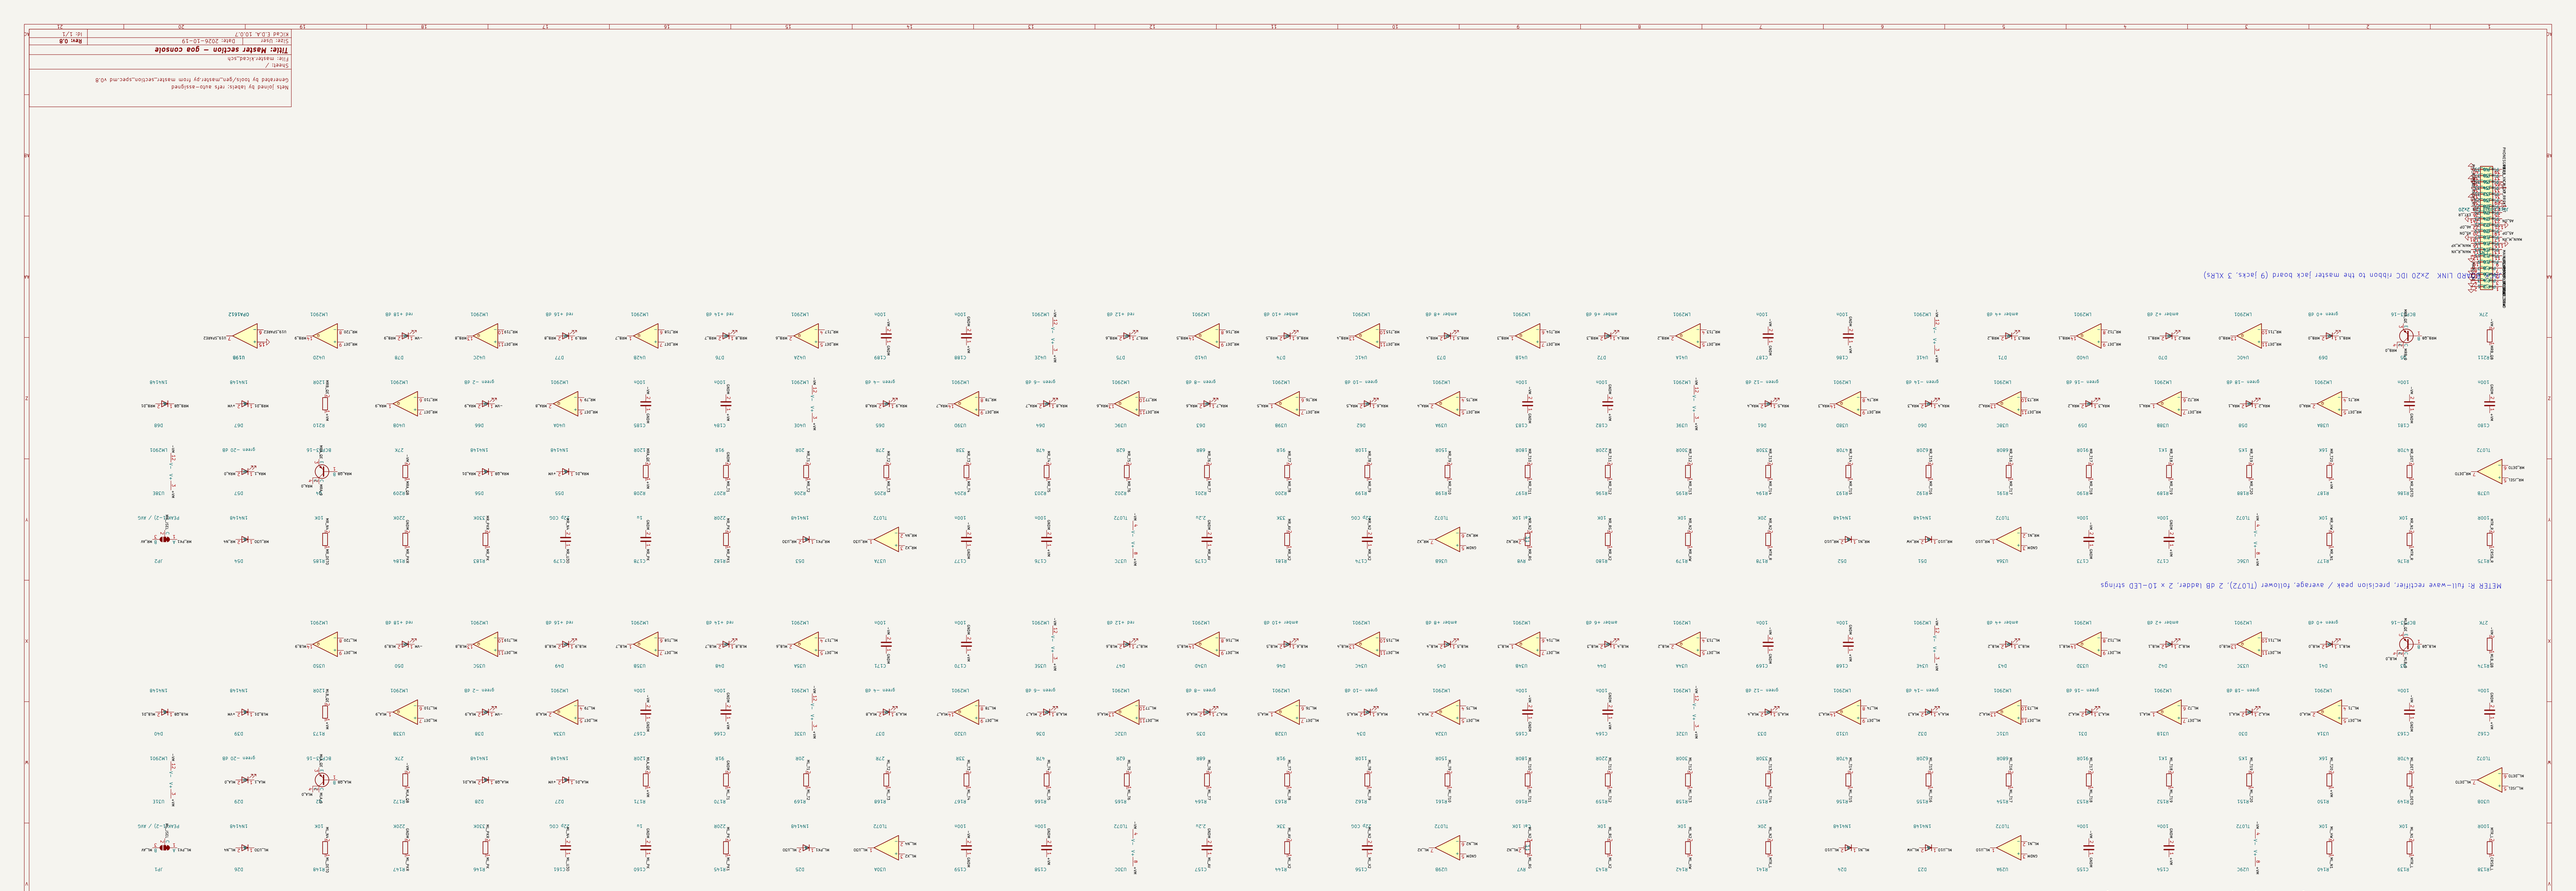

POWER ENTRY (7-pin XLR NC7MD-LX on the rear panel. two 5 A contacts per rail. 18 AWG to this terminal: +-17 V PSU)
DISTRIBUTION (PTC per wing per rail. 1.6 A hold. 72 V. local branches VA audio. VP phones. VM meters. VL logic)
MAIN OUTPUTS: DRV134 -> IUz NP in the Sense loop -> XLR mate. pin 2 hot
POWER-ON MUTE: rails > -14 V for ~2.7 s closes all six relays: either rail low opens them at once
RUDE SOLO: ~2 Hz flasher. PFL ACTIVE LED. held off through PFL_N while no key is pressed
CONTROL ROOM: C/ROOM dual A10K. followers. DRV134. mute relays. TRS outs
HEADPHONES: PHONES dual A10K. OPA4612 + LME49600 composite (+9.9 dB). 2R2 out. mute relay. PHONESGND
REMOTE METER HEADER (for a meter bridge)
EXT INPUT (2-track / DAW) and MIX / EXT monitor select (SW latched = EXT)
MASTER FADER (dual 100 mm A10K. pin 1 = GNDA) + post-amps +10 dB
MIX R: summing amp (GCANCEL-referenced). re-inverter. master insert
MIX L: summing amp (GCANCEL-referenced). re-inverter. master insert
GROUND CANCEL BUFFER (feeds every re-inverter: summing amps use the raw GCANCEL line: 100K keeper)
MOTHERLOOM (master in the center: CN1 = left wing. CN2 = right wing: Delta pinout)
AUX MASTER B: OPA4612 sum (22K || 100p) + re-invert. level. buffer. DRV134 out. AFL
AUX MASTER A: OPA4612 sum (22K || 100p) + re-invert. level. buffer. DRV134 out. AFL
AUX MASTER 6: OPA4612 sum (22K || 100p) + re-invert. level. buffer. DRV134 out. AFL
METER R: full-wave rectifier. precision peak / average. follower (TL072). 2 dB ladder. 2 x 10-LED strings
METER L: full-wave rectifier. precision peak / average. follower (TL072). 2 dB ladder. 2 x 10-LED strings