

Introducing Signals and Systems

Colophon

An annotatable copy of the notes for this presentation is available as Worksheet 1.

- The <u>Jupytext</u> source code for this page is <u>introduction/index.md</u>.
- You can view the notes for this presentation as a webpage (HTML).
- This page is downloadable as a PDF file.

Signals and Systems for Dummies

Signals and Systems for Dummies (**SS4D**) [<u>Wic13</u>] provides a useful introduction to the topics that will be covered in this module and it is in the <u>Reading List</u> as a *recommended text*. I have based this presentation on Chapter 1 which is available as a <u>downloadable PDF</u> from the publishers.

You should read Chapter 1 of SS4D in conjunction with the notes for this presentation.

Note that Signals and Systems for Dummies is available as an e-book from the University Library.

Topics

- Continuous-time Signals
- Continuous-time Systems
- Discrete-time Signals
- Discrete-time Systems
- Signal Classifications
- Domains for Signals
- Systems Thinking and Systems Design

Continuous-time signals

Continuous signals are represented mathematically by functions which vary continuously with time.

Sinusoidal signals (e.g. AC) are pretty fundamental in electrical engineering. The mathematical model of a sinusoidal signal is:

$$x(t) = A\cos(2\pi f_0 t - \phi).$$

Exercise

First attempt

For this expression, we wish to match each of the symbols to its definition.

Without computing anything, see if you can complete this table.

Colophon

Signals and Systems for Dummies

Topics

Continuous-time signals

Exercise

Gaining insight using computers

Returning to the Question

Supplementary question

Try This Yourself

Continuous-time Systems

Example 1

<u>Discrete-time Signals</u>

Example 2

Discrete-time Systems

Signal Classifications

Periodic

Aperiodic

<u>Random</u>

Domains for Signals and Systems

Other Domains you will encounter

<u>Viewing Signals in the Frequency</u>

<u>Domain</u>

Fourier Transform

Laplace and Z-Transform Domains

Systems Thinking and Systems Desigr

Familiar Signals and Systems

Reference

Symbol	Definition
A	Phase in radians
f_0	Frequency in Hz
ϕ	Amplitude

Gaining insight using computers

Frequency in rad/s

To help us answer these questions, let's use our Mathematical tools to plot a signal like this and explore it. The example we will use is from *Signals and Systems for Dummies* (SS4D: page 12):

$$3\cos(2\pi\cdot 2t-3\pi/4)$$

Wolfram Alpha

 $2\pi f_0$

Here's the link: https://www.wolframalpha.com

Paste this into the search box

```
plot 3 cos(2 pi 2 t - 3 pi/4)
```

Try changing the numbers to gain insight.

MATLAB

In MATLAB we would need to tackle this by breaking down the steps.

```
%Make sure that we have a clean workspace clear all format compact imatlab_export_fig('print-svg') % Static svg figures.
```

Define t

```
t = linspace(0, 1, 100);
```

Define x


```
x = 3 * cos(2*pi*2*t - 3*pi/4);
```

Plot result and label plot

```
plot(t,x)
title('A Sinusoidal Signal')
xlabel('Time t (s)')
ylabel('Amplitude')
grid
```





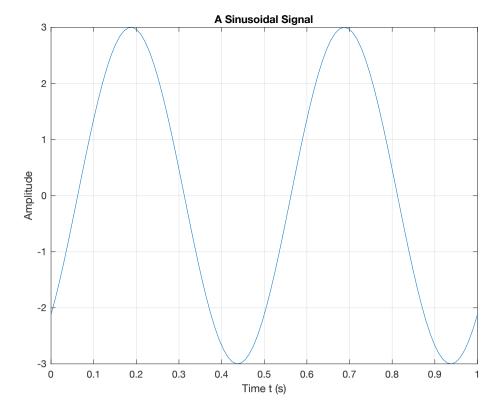

If you want to execute this in MATLAB, you can create a file by copying this text into an m-file:


```
% SINEWAVE - plot function $x(t) = 3 \cos(2\pi t - 3 \pi/4)$ for $t = 0\ldots 1$

%% Set up the problem
% define t
t = linspace(0, 1, 100);
% define x
x = 3 * cos(2*pi*2*t - 3*pi/4);
%% Plot result and label plot
plot(t,x)
title('A Sinusoidal Signal')
xlabel('Time t (s)')
ylabel('Amplitude')
grid
```

edit sinewave

To run this script, just type the filename without the .m extension.

sinewave

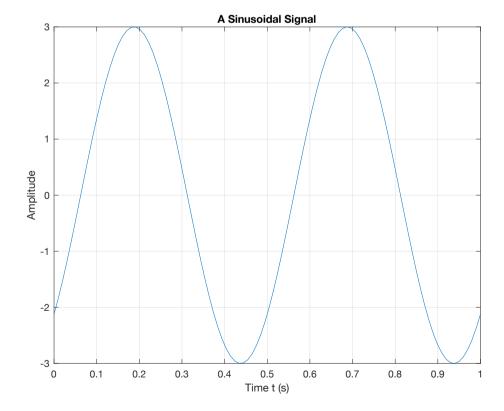

(Download sinewave.m)

To run this script, just type the filename without the .m extension. Try adjusting the values of the numerical constants and see what insights you gain.

Returning to the Question

$$x(t) = A\cos(2\pi f_0 t - \phi).$$

0

Exercise - second go after gaining insight from your computer

Using the insight just gained by exploring this function with a computer, match each of the symbols to its definition again.

Symbol	Definition
A	Phase in radians
f_0	Frequency in Hz
φ	Amplitude
$2\pi f_0$	Frequency in rad/s

Did you get different answers?

Supplementary question

What is the period of the waveform in seconds?

Notes

- In communications and electronic signal processing, the frequency of sinusoidal signals us usually given in cycles per second or Hz.
- In mathematics, the frequency is always expressed in *radians per second*.
- In some courses, including later in this one and in EG-243 Control Systems, the frequency $2\pi f_0$ is often called the *natural frequency* and is usually written ω_n .

Try This Yourself

- Use any or all of computing tools that you have access to to explore other sinusoids. Change the values of the variables and explain what happens.
- Try adding sinusoids of different amplitudes and different frequencies together and see what happens.
- Change cos to sin and see what happens.

Continuous-time Systems

Systems operate on signals. In mathematical terms, a *system* is a function or an *operator*, $H\{\}$ that maps the input signal x(t) to an output signal y(t).

Mathematically we would write this:

$$y(t) = H\{x(t)\}.$$


Example 1

An example of a continuous-time system is an electronic amplifier with a gain of 5 and level shift of 2: $y(t) = H\{x(t)\} = 5x(t) + 2$.

In this course, we will model such systems as block diagram models in Simulink.





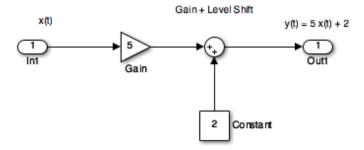

The Similink code can be downloaded from this file gain level shift.slx.

Discrete-time Signals

Discrete-time signals are a function of a time index n. A discrete-time signal x[n], unlike a continuous-time signal x(t), is only defined at integer values of the independent variable n. This means that the signal is only active at specific periods of time. Discrete-time signals can be stored in computer memory.

Example 2

Consider the following simple signal, a pulse sequence:

$$y[n] = \begin{cases} 5, \ 0 \le n < 10 \\ 0, \ \text{otherwise} \end{cases}$$

We can plot this in MATLAB as a stem plot

Procedure

Define function using this text:


```
% Define the function
function [y] = x(n)
  if n < 0 | n >= 10
     y = 0;
  end
end
```

and save as <u>y.m</u>.

```
edit y
%% Define sample points
n = -15:18;
%% Make space for the signal
xn = zeros(size(n));
%% Compute the signal x[n]
for i = 1:length(xn)
    xn(i) = y(n(i));
end
%% Plot the result
stem(n,xn)
axis([-15, 18, 0, 6])
title('Stem Plot for a Discrete Signal')
xlabel('Sample n')
ylabel('Signal x[n]')
grid
```





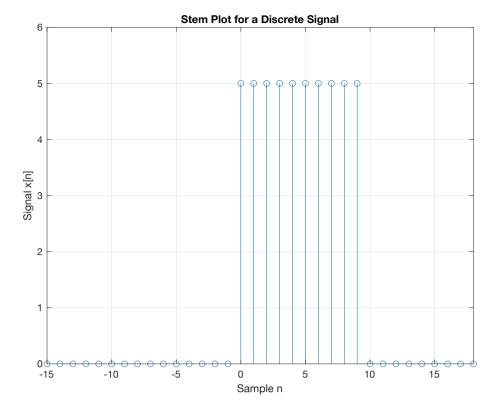


Discrete-time Systems

A discrete-time system, like its continuous-time counterpart, is a function, $H\{\}$, that maps the input x[n] to the output $y[n] = H\{x[n]\}$. An example of a discrete-time system is the *two-tap* filter:

$$y[n] = H\{x[n]\} = \frac{3}{4}x[n] + \frac{1}{4}x[n-1]$$

The term tap denotes that output at time instant n is formed from two time instants of the input, n and n-1. Check out a block diagram of a two-tap filter system:

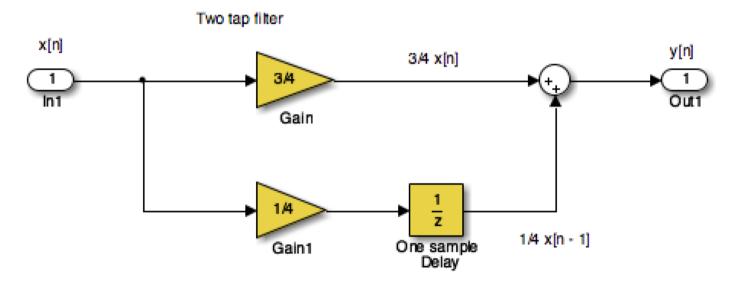

This system is available as a Simulink model <u>discrete_system.slx</u>

In words, this system scales the present input by 3/4 and adds it to the past value of the input scaled by 1/4. The notion of the past input comes about because x[n-1] is lagging one sample value behind x[n]. The term *filter* describes the output as an *averaging* of the present input and the previous input. *Averaging* is a form of filtering.

Signal Classifications

Periodic

Signals that repeat over and over are said to be periodic. In mathematical terms, a signal is periodic if:

- Continuous signal x(t + T) = x(t)
- Discrete signal x[n + N] = x[n]

The smallest T or N for which the equality holds is the *signal period*.


The sinusoidal signal we saw earlier is periodic because of the $\mod 2\pi$ property of cosines. The signal of the sinusoid has a period 0.5 seconds (s), which turns out to be the reciprocal of the frequency $1/f_0$ Hz.

This code generates a square wave.

```
%% A Periodic signal (square wave)
t = linspace(0, 1, 500);
x = square(2 * pi * 5 * t);
```

This Square wave is a 5 Hz waveform sampled at 500 Hz for 1 second

```
plot(t, x);
ylim([-2, 2]);
grid()
title('A Periodic Signal')
xlabel('Time t (s)')
ylabel('Amplitude')
```

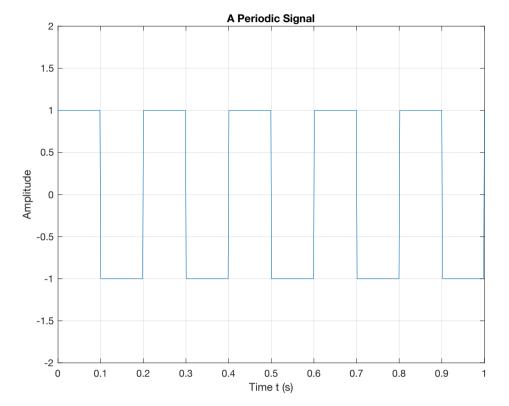

What is the period T in milliseconds?

Aperiodic

Signals that are *deterministic* (completely determined functions of time) but not periodic are known as *aperiodic*. Point of view matters. If a signal occurs infrequently, you may view it as aperiodic.

This is how we generate an aperiodic rectangular pulse of duration au in Matlab:


```
%% An aperiodic function
tau = 1;
x = linspace(-1,5,1000);
y = rectangularPulse(0,tau,x);
```

```
plot(x,y)
ylim([-0.2,1.2])
grid
title('An Aperiodic Signal')
xlabel('Time t (s)')
ylabel('Amplitude')
```







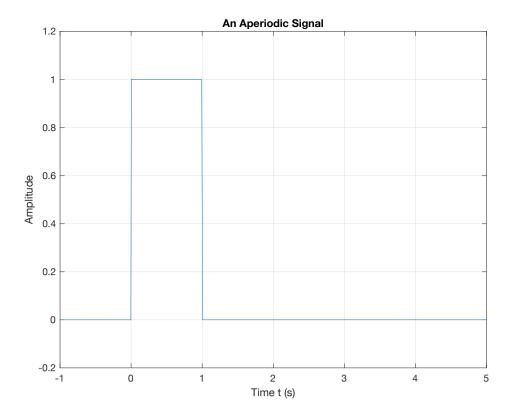


Random

A signal is random if one or more signal attributes takes on unpredictable values in a probability sense.

Engineers working with communication receivers are concerned with random signals, especially noise.

```
%% Plot a Random Signal
plot(0.5 + 0.25 * rand(100,1))
ylim([0,1])
grid
title('Random Signal')
xlabel('Time t (s)')
ylabel('Amplitude')
```

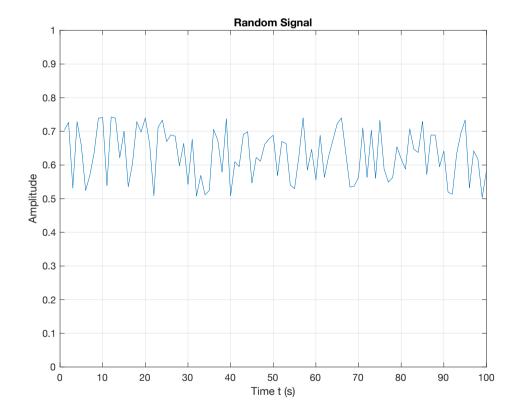

Domains for Signals and Systems

Most of the signals we encounter on a daily basis reside in the time domain. They're functions of independent variable t or n. But sometimes when you're working with continuous-time signals, you may need to transform away from the time domain (t) to another domain.

Other Domains you will encounter

The most commonly used domains used when analyzing continuous-time signals are the frequency domain (f or ω) and the Laplace s-domain (s).

Similarly, for discrete-time signals, you may need to transform from the discrete-time domain (n) to the frequency domain $(\hat{\omega})$ or the z-domain (z).

This section briefly introduces the world of signals and systems in the frequency, s-, and z-domains. More on these domains will follow.

Systems, continuous and discrete, can also be transformed to the frequency and s- and z-domains, respectively. Signals can, in fact, be passed through systems in these alternative domains. When a signal is passed through a system in the frequency domain, for example, the frequency domain output signal can later be returned to the time domain and appear just as if the time-domain version of the system operated on the signal in the time domain.

Consider the sum of a two-sinusoids signal
$$\$x(t) = \underbrace{A_1 \cos(2\pi f_1 t)}_{\$_1} + \underbrace{A_2 \cos(2\pi f_2 t)}_{\$_2} \$$$


This can be coded as

```
%... plot two sinusoids signal
A1 = 2; f1 = 1;
A2 = 1.5; f2 = 2.2;
t = linspace(0, 3*(1/f1), 1000);
s1 = A1*cos(2*pi*f1*t);
s2 = A2*cos(2*pi*f2*t);
subplot(4,1,1)
plot(t,s1),ylim([-5,5]),xlabel('Time t (s) '),ylabel('s1')
subplot(4,1,2)
plot(t,s2),ylim([-5,5]),xlabel('Time t (s) '),ylabel('s2')
subplot(4,1,3)
plot(t,s1+s2),ylim([-5,5]),xlabel('Time t (s) '),ylabel('x(t) = s2 + s2')
subplot(4,1,4)
axis([0,4,0,2.5])
arrow([f1,0],[f1,A1]),text(f1,A1+0.2,'A1'),text(f1+0.05,0.2,'f1')
arrow([f2,0],[f2,A2]),text(f2,A2+0.2,'A2'),text(f2+0.05,0.2,'f2')
ylabel('Frequency Spectrum X(f)'),xlabel('Frequency (Hz)')
```

```
edit two_sines
```

Run

two_sines

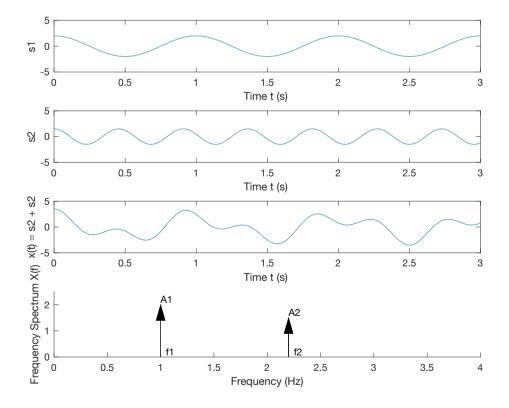


(Download two sines.m)

Viewing Signals in the Frequency Domain

The top waveform plot, denoted s_1 , is a single sinusoid at frequency f_1 and peak amplitude A_1 . The waveform repeats every period $T_1 = 1/f_1$. The second waveform plot, denoted s_2 , is a single sinusoid at frequency $f_2>f_1$ and peak amplitude $A_2< A_1$. The sum signal, s_1+s_2 , in the time domain is a squiggly line (third waveform plot), but the amplitudes and frequencies (periods) of the sinusoids aren't clear here as they are in the first two plots. The frequency spectrum (bottom plot) reveals that x(t) is composed of just two sinusoids, with both the frequencies and amplitudes discernible.

Print to PD

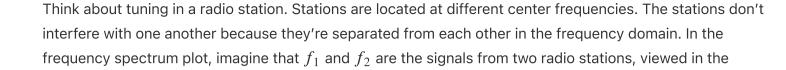

frequency domain. You can design a receiving system to filter s_1 from $s_1 + s_2$. The filter is designed to pass s_1

0



Fourier Transform

and block s_2 .

We use the *Fourier transform* to move away from the time domain and into the frequency domain. To get back to the time domain, use the *inverse Fourier transform*. We will found out more about these transforms in this module.

Laplace and Z-Transform Domains

From the time domain to the frequency domain, only one independent variable, $t \to f$, exists. When a signal is transformed to the s-domain, it becomes a function of a complex variable $s = \sigma + j\omega$. The two variables (real and imaginary parts) describe a location in the s-plane.

In addition to visualization properties, the s-domain reduces differential equation solving to algebraic manipulation. For discrete-time signals, the z-transform accomplishes the same thing, except differential equations are replaced by difference equations.

Systems Thinking and Systems Design

See section **Testing Product Concepts with Behavioral Level Modeling** from Chapter 1 of <u>SS4D</u> ([<u>Wic13</u>] pages 18–20) and add some notes to summarize this for yourself.

- We will use behavioural modelling
- We will rely on abstraction
- We work top-down
- We make use of mathematics and mathematical software.

Familiar Signals and Systems

See pages 21-23 of the free sample (Chapter 1) of [Wic13] for notes and details.

Reference

[Wic13](1,2,3)

Mark Wickert. Signals & systems for dummies. Wiley, Hoboken, NJ, 2013. ISBN 111847581X.

By Dr Chris P. Jobling

© Copyright Swansea University (2019-2022).

This page was created by <u>Dr Chris P. Jobling</u> for <u>Swansea University</u>.