

Introduction to Filters

Colophon

An annotatable worksheet for this presentation is available as Worksheet 15.

- The source code for this page is fourier transform/4/ft4.ipynb.
- You can view the notes for this presentation as a webpage (HTML).
- This page is downloadable as a PDF file.

Scope and Background Reading

This section is Based on the section **Filtering** from Chapter 5 of <u>Benoit Boulet, Fundamentals of Signals and Systems[Bou06]</u> from the **Recommended Reading List**.

This material is an introduction to analogue filters. You will find much more in-depth coverage on <u>Pages 11-1—11-48</u> of [Kar12].

Agenda

- Frequency Selective Filters
- · Ideal low-pass filter
- Butterworth low-pass filter
- High-pass filter
- Bandpass filter

Introduction

- Filter design is an important application of the Fourier transform
- Filtering is a rich topic often taught in graduate courses so we give only an introduction.
- Our introduction will illustrate the usefulness of the frequency domain viewpoint.
- We will explore how filters can shape the spectrum of a signal.


Other applications of the Fourier transform are sampling theory (introduced next week) and modulation.

Frequency Selective Filters

An ideal frequency-selective filter is a system that let's the frequency components of a signal through undistorted while frequency components at other components are completely cut off.

- The range of frequencies which are let through belong to the pass Band
- The range of frequencies which are cut-off by the filter are called the **stopband**
- A typical scenario where filtering is needed is when noise n(t) is added to a signal x(t) but that signal has most of its energy outside the bandwidth of a signal.

Typical filtering problem

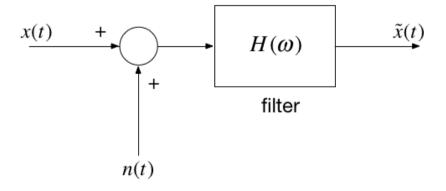

Colophon

Scope and Background Reading Print to PD

<u>Agenda</u>

Introduction

Frequency Selective Filters

Typical filtering problem

<u>Signal</u>

Out-of Bandwidth Noise

Signal plus Noise

Results of filtering

Motivating example

<u>Ideal Low-Pass Filter (LPF)</u>

Frequency response of an ideal LPF

Impulse response of an ideal LPF

Filtering is Convolution

Issues with the "ideal" filter

Butterworth low-pass filter

Example 5: Second-order BW Filter

Example 6

Example 7

Magnitude of frequency response of a 2nd-

order Butterworth Filter

Example 8

High-pass filter (HPF)

Frequency response of an ideal HPF

Responses

Example 9


Band-pass filter (BPF)

Frequency response of an ideal BPF


Bandpass filter design

<u>Summary</u>


<u>Solutions</u>

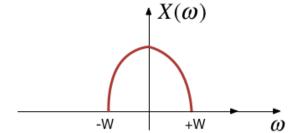


Out-of Bandwidth Noise

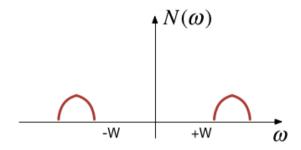

Signal plus Noise

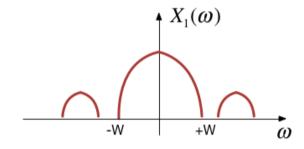

Results of filtering

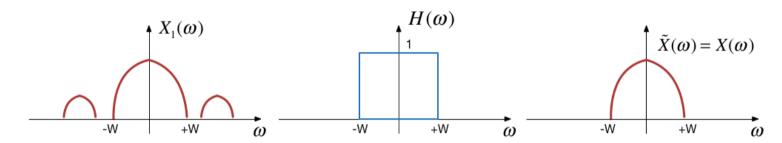

Motivating example


See the video and script on <u>Canvas Week 7</u>.

Ideal Low-Pass Filter (LPF)

An ideal low pass filter cuts-off frequencies higher than its *cut-off frequency*, ω_c .

$$H_{\rm lp}(\omega) = \begin{cases} 1, & |\omega| < \omega_c \\ 0, & |\omega| \ge \omega_c \end{cases}$$


Frequency response of an ideal LPF

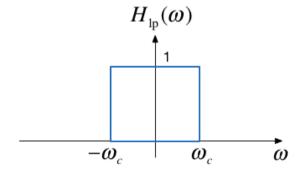

Impulse response of an ideal LPF

$$h_{\mathrm{lp}}(t) = \frac{\omega_c}{\pi} \mathrm{sinc}\left(\frac{\omega_c}{\pi}t\right)$$



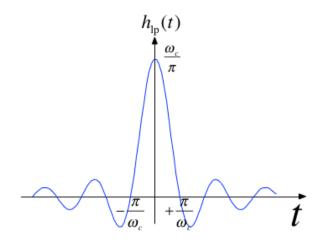

Filtering is Convolution

The output of an LTI system with impulse response

$$h(t) \Leftrightarrow H(\omega)$$

subject to an input signal


$$x(t) \Leftrightarrow X(\omega)$$

is given by

$$y(t) = h(t) * x(t) \Leftrightarrow Y(\omega) = H(\omega)X(\omega)$$

Issues with the "ideal" filter

This is the step response:



(reproduced from [Bou06] Fig. 5.23 p. 205)

Ripples in the impulse resonse would be undesireable, and because the impulse response is non-causal it cannot actually be implemented.

Butterworth low-pass filter

N-th Order Butterworth Filter

$$|H_B(\omega)| = \frac{1}{\left(1 + \left(\frac{\omega}{\omega_c}\right)^{2N}\right)^{\frac{1}{2}}}$$

Remarks

• DC gain is

$$|H_B(j0)| = 1$$

• Attenuation at the cut-off frequency is

$$|H_B(j\omega_c)| = 1/\sqrt{2}$$

for any N

More about the Butterworth filter: Wikipedia Article

Example 5: Second-order BW Filter

The second-order butterworth Filter is defined by is Characteristic Equation (CE):

$$p(s) = s^2 + \omega_c \sqrt{2}s + \omega_c^2 = 0^*$$

Calculate the roots of p(s) (the poles of the filter transfer function) in both Cartesian and polar form.

Note: This has the same characteristic as a control system with damping ratio $\zeta=1/\sqrt{2}$ and $\omega_n=\omega_c!$

Example 6
Derive the differential equation relating the input $x(t)$ to output $y(t)$ of the 2nd-Order Butterworth Low-Pass Filter with cutoff frequency ω_c .
Solution to example 6
Example 7
Determine the frequency response $H_B(\omega)=Y(\omega)/X(\omega)$
Solution to example 7

```
imatlab_export_fig('print-svg') % Static svg figures.
```

```
wc = 100;
```

Transfer function

```
H = tf(wc^2,[1, wc*sqrt(2), wc^2])
```

```
H =
```

10000


```
_____
```

```
s^2 + 141.4 s + 10000
```

Continuous—time transfer function.

Magnitude frequency response

```
w = -400:400;
mHlp = 1./(sqrt(1 + (w./wc).^4));
plot(w,mHlp)
grid
ylabel('|H_B(j\omega)|')
title('Magnitude Frequency Response for 2nd-Order LP Butterworth Filter (\omega_c = 100 rad/s)')
xlabel('Radian Frequency \omega [rad/s]')
text(100,0.1,'\omega_c')
text(-100,0.1,'-\omega_c')
hold on
plot([-400,-100,-100,100,100,400],[0,0,1,1,0,0],'r:')
hold off
```

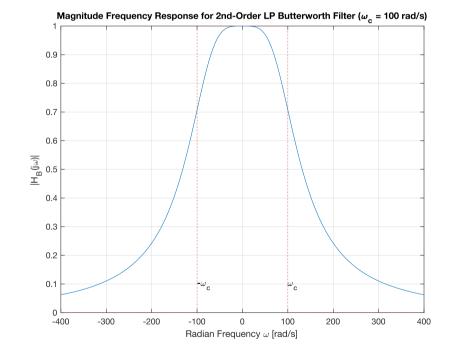


Bode plot

```
bode(H)
grid
title('Bode-plot of Butterworth 2nd-Order Butterworth Low Pass Filter')
```







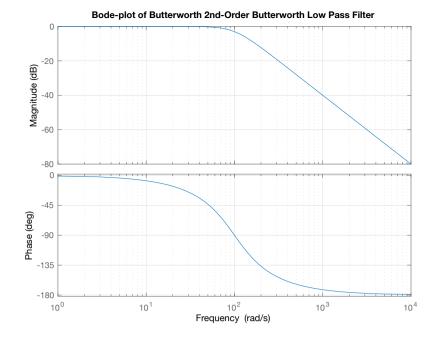

Note that the attentuation of the filter is flat at 0 dB in the pass-band at frequencies below the cut-off frequency $\omega < \omega_c$; has a value of -3 dB at the cut-off frquency $\omega = \omega_c$; and has a "roll-off" (rate of decrease) of $N \times 20$ dB/decade in the stop-band.

In this case, N=2, and $\omega_c=100$ rad/s so the attenuation is -40 dB at $\omega=10\omega_c=1,000$ rad/s and $\omega=-80$ dB at $\omega=100\omega_c=10,000$ rad/s.

The phase is 0° at $\omega = 0$; $N \times 90^{\circ}$ at $\omega = \infty$; and $N \times 45^{\circ}$ and $\omega = \omega_c$.

Example 8

Determine the impulse and step response of a butterworth low-pass filter.

You will find this Fourier transform pair useful:

$$e^{-at} \sin \omega_0 t \ u_0(t) \Leftrightarrow \frac{\omega_0}{(j\omega + a)^2 + \omega_0^2}$$


Solution to example 8

Impulse response

```
impulse(H,0.1)
grid
title('Impulse Response of 2nd-Order Butterworth Low Pass Filter')
```






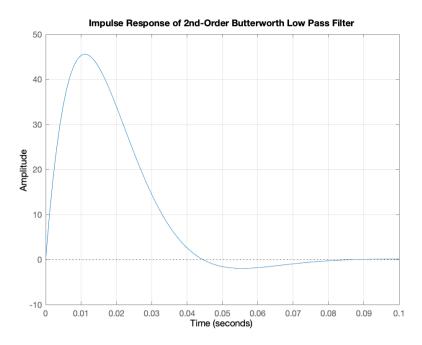

Step response

```
step(H,0.1)
title('Step Response of Butterworth 2nd-Order Butterworth Low Pass Filter')
grid
text(0.008,1,'s_B(t) for \omega_c = 100 rad/s')
```

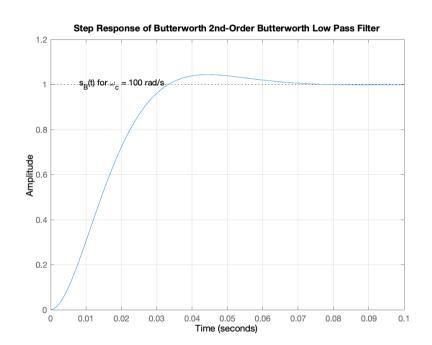


High-pass filter (HPF)

An ideal highpass filter cuts-off frequencies lower than its $\it cutoff$ frequency, $\it \omega_{\it c}$.

$$H_{\rm hp}(\omega) = \left\{ egin{array}{ll} 0, & |\omega| \leq \omega_c \\ 1, & |\omega| > \omega_c \end{array} \right.$$

Frequency response of an ideal HPF

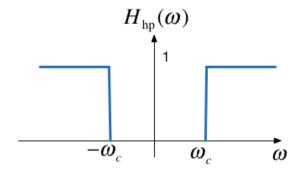

Responses

Frequency response

$$H_{\mathrm{hp}}(\omega) = 1 - H_{\mathrm{lp}}(\omega)$$

Impulse response

$$h_{\rm hp}(t) = \delta(t) - h_{\rm lp}(t)$$

Example 9


Determine the frequency response of a 2nd-order butterworth highpass filter

0

Solution to example 9

Magnitude frequency response

```
w = -400:400;
plot(w,1-mHlp)
grid
ylabel('|H_B(j\omega)|')
title('Magnitude Frequency Response for 2nd-Order HP Butterworth Filter (\omega_c = 100 rad/s)')
xlabel('Radian Frequency \omega [rad/s]')
text(100,0.9,'\omega_c')
text(-100,0.9,'-\omega_c')
hold on
plot([-400,-100,-100,100,100,400],[0,0,1,1,0,0],'r:')
hold off
```

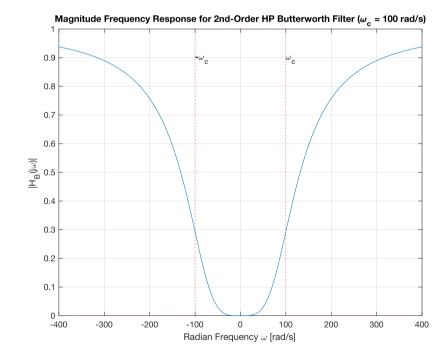

High-pass filter


```
Hhp = 1 - H
bode(Hhp)
grid
title('Bode-plot of Butterworth 2nd-Order Butterworth High Pass Filter')
```

```
Hhp =

s^2 + 141.4 s

-----

s^2 + 141.4 s + 10000
```

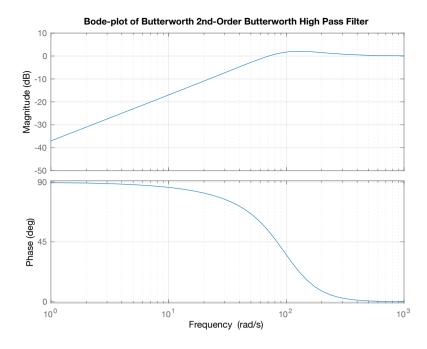


Band-pass filter (BPF)

An ideal bandpass filter cuts-off frequencies lower than its first cutoff frequency ω_{c1} , and higher than its second cutoff frequency ω_{c2} .

$$H_{\rm bp}(\omega) = \begin{cases} 1, & \omega_{c1} < |\omega| < \omega_{c2} \\ 0, & \text{otherwise} \end{cases}$$

Frequency response of an ideal BPF

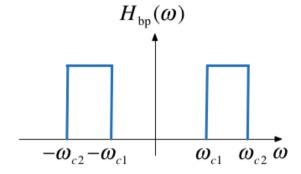

Bandpass filter design

A bandpass filter can be obtained by multiplying the frequency responses of a lowpass filter by a highpass filter.

$$H_{\rm bp}(\omega) = H_{\rm hp}(\omega)H_{\rm lp}(\omega)$$

- The highpass filter should have cut-off frequency of ω_{c1}
- The lowpass filter should have cut-off frequency of ω_{c2}

To generate all the plots shown in this presentation, you can use butter2 ex.mlx

Summary

- Frequency-Selective Filters
- Ideal low-pass filter
- Butterworth low-pass filter
- High-pass filter
- Bandpass filter

Solutions

Solutions to Examples 5-9 are captured as a PenCast in filters.pdf.