

KINETIC

A U D I O G R A V I T Y E N G I N E

User Manual

Version 1.8 · VST3 and AU

Bass that bends, rebounds and breathes.

Contents

1. What KINETIC is	3
2. Quick start	4
3. Installation	5
3.1 Windows (VST3)	5
3.2 macOS (AU and VST3)	5
4. Trial, license and activation	6
5. The interface	7
5.1 Output	8
5.2 Gravity Well, Event Horizon and Delay Offset displays	8
5.3 Physics	8
6. How the engine works	9
6.1 Detect: Hit and Follow	9
6.2 Warp: micro-Doppler delay	9
6.3 Rebound: the spring	10
6.4 Event Horizon: choosing what falls in	10
6.5 Auto-Track and Horizon Follow	11
6.6 Phase Align	11
7. Parameter reference	13
8. Sound design and mixing recipes	15
8.1 Make the kick pop out of the mix while the bass keeps the same loudness	15
8.2 Remove mud between kick and bass	16
8.3 Bass that follows a moving bassline	16
8.4 Sub movement and breathing bass (EDM, bass music)	16
8.5 Elastic, bouncy 808s (hip-hop, trap)	16
8.6 Width and texture (pads, hats, vocals, effects)	17
8.7 Using KINETIC without a sidechain	17
8.8 Presets and A/B	17
9. Sidechain routing in your DAW	18
10. Latency and delay compensation	18
11. Troubleshooting and FAQ	19
12. Technical specifications and support	19

1. What KINETIC is

KINETIC is a bass and low-end effect plug-in. It treats a kick or a bass note as a **mass** that falls into a **gravity well**. While it falls, the sound is bent in **time** by a tiny, fast-moving delay (a micro-Doppler effect). Afterwards it snaps back on an **elastic spring**, with a natural overshoot. Three things happen in order:

1. **Detect.** KINETIC measures how hard the low end is hitting (the “mass”).
2. **Warp.** The chosen part of the spectrum is moved slightly earlier or later in time. Pitch and timing bend, **level never changes**.
3. **Rebound.** A spring pulls the sound back to rest. You set how fast it returns and how bouncy it is.

What KINETIC is not. It is not a compressor, not a sidechain ducker and not an EQ. There is no gain reduction and no gain modulation anywhere in the signal path. This is why a bass processed with KINETIC keeps the same loudness, while the timing around the kick changes and the kick gets room to be heard.

Typical uses

Make the kick pop out of the mix without lowering the bass. · Remove low-end mud between kick and bass (Phase Align). · Add movement, bounce and breathing to sub bass and 808s. · Create wide, floating textures on pads and effects. · Designed for EDM, bass music, hip-hop, trap and techno.

Formats. VST3 (Windows and macOS) and AU (macOS). Mono and stereo, with an optional stereo or mono sidechain input. Latency is a fixed 18 ms, reported to your DAW for automatic delay compensation.

2. Quick start

The fastest way to hear what KINETIC does is to make the kick drive the bass.

1. **Install** the plug-in (chapter 3) and restart your DAW. Rescan plug-ins if KINETIC is not listed.
2. **Insert KINETIC on the bass track** (not on the kick).
3. **Route the kick to KINETIC's sidechain input** in your DAW (chapter 9) and switch on **External Sidechain** in the Output panel.
4. **Load the preset "Init"** from the preset menu. Play the song. Under Signal Tracking you should see **Sidechain: signal**, and in Phase Align the status **active**.
5. **Listen, then adjust.** Toggle the plug-in on and off. The bass keeps its level while the kick becomes clearer. Try the presets "Kick>Bass Outfall Pop" and "Kick>Bass Punchy" to hear different characters.

No kick to route?

KINETIC works on a single track too. Put it on a bass or 808 and use a Bass preset such as "808 Rubber" or "Sub Dive". The plug-in then detects hits in the bass itself (see recipes 8.4 and 8.5).

Trial and license. Click the license badge in the plug-in header to start the free 7-day trial or to enter your license key (chapter 4).

3. Installation

Download the installer for your system from **craftedhertz.com**. The installers are not yet code-signed or notarized, so Windows and macOS may show a security prompt the first time. This is expected. The steps below show how to continue.

3.1 Windows (VST3)

1. Run KINETIC_v1.8_Windows_Setup.exe (64-bit, Windows 10 or newer).
2. If you see **Windows protected your PC**, click **More info**, then **Run anyway**. In some browsers you first have to confirm the download with **Keep**.
3. Finish the installer. It needs administrator rights, because the plug-in goes into the system-wide VST3 folder.
4. Restart your DAW and rescan plug-ins.

What	Where
Plug-in (VST3)	C:\Program Files\Common Files\VST3\KINETIC.vst3
User presets	%APPDATA%\Crafted Hertz\KINETIC\Presets

3.2 macOS (AU and VST3)

1. Double-click KINETIC-1.8-macOS.pkg (macOS 11 or newer). If macOS says it cannot verify the developer, click **Done**.
2. Open **System Settings** → **Privacy & Security**, scroll to **Security** and click **Open Anyway** next to the KINETIC message. Enter your password and click **Open**. On macOS 14 and older, right-click the file, choose **Open**, then **Open** again.
3. In the installer choose **AU** and/or **VST3** and finish.
4. Restart your DAW and rescan plug-ins. Logic Pro may take a moment on first launch while it validates the Audio Unit.

Still blocked?

Open Terminal and run the following line, then open the installer again:

```
xattr -cr ~/Downloads/KINETIC-1.8-macOS.pkg
```

What	Where
Audio Unit	/Library/Audio/Plug-Ins/Components/KINETIC.component
VST3	/Library/Audio/Plug-Ins/VST3/KINETIC.vst3
User presets	~/Library/Application Support/Crafted Hertz/KINETIC/Presets

3.3 Uninstalling

Windows: use *Apps & features* in Windows Settings. **macOS:** delete KINETIC.component and KINETIC.vst3 from the two folders above. Your presets and your license/trial state are kept on purpose, so reinstalling or updating never loses them.

4. Trial, license and activation

KINETIC includes a **7-day free trial with all features**. You start it from inside the plug-in. After the trial, a purchased license unlocks the plug-in permanently.

- **License badge.** The header shows the current state: **TRIAL n d left**, **LICENSED**, **TRIAL ENDED**, **RENEW REQUIRED**, **LICENCE INVALID** or **UNLICENSED**. Click it to open the license dialog.
- **Start the trial:** open the dialog and press **Start 7-day trial**. An internet connection is needed once.
- **Activate a license:** buy KINETIC on craftedhertz.com. Creem (our merchant of record) emails you a license key and keeps it in your customer portal. Enter the key in the dialog and press **Activate**.
- **Two devices.** One license activates on up to 2 devices that you own.
- **Offline use.** After activation the plug-in works offline. It renews its license silently whenever you are online. After a long offline period it asks you to connect once (**RENEW REQUIRED**) and press **Retry**.
- **New computer.** Press **Deactivate** in the dialog on the old computer and activate on the new one. If the old computer is no longer available, email support and we will free a slot.
- **Without a license** (or after the trial) audio passes through cleanly, delayed by the plug-in latency. KINETIC never adds noise and never mutes your session.

Privacy

The plug-in sends only your license key, an anonymous machine hash and the plug-in version to the activation server. There is no tracking and no analytics.

5. The interface

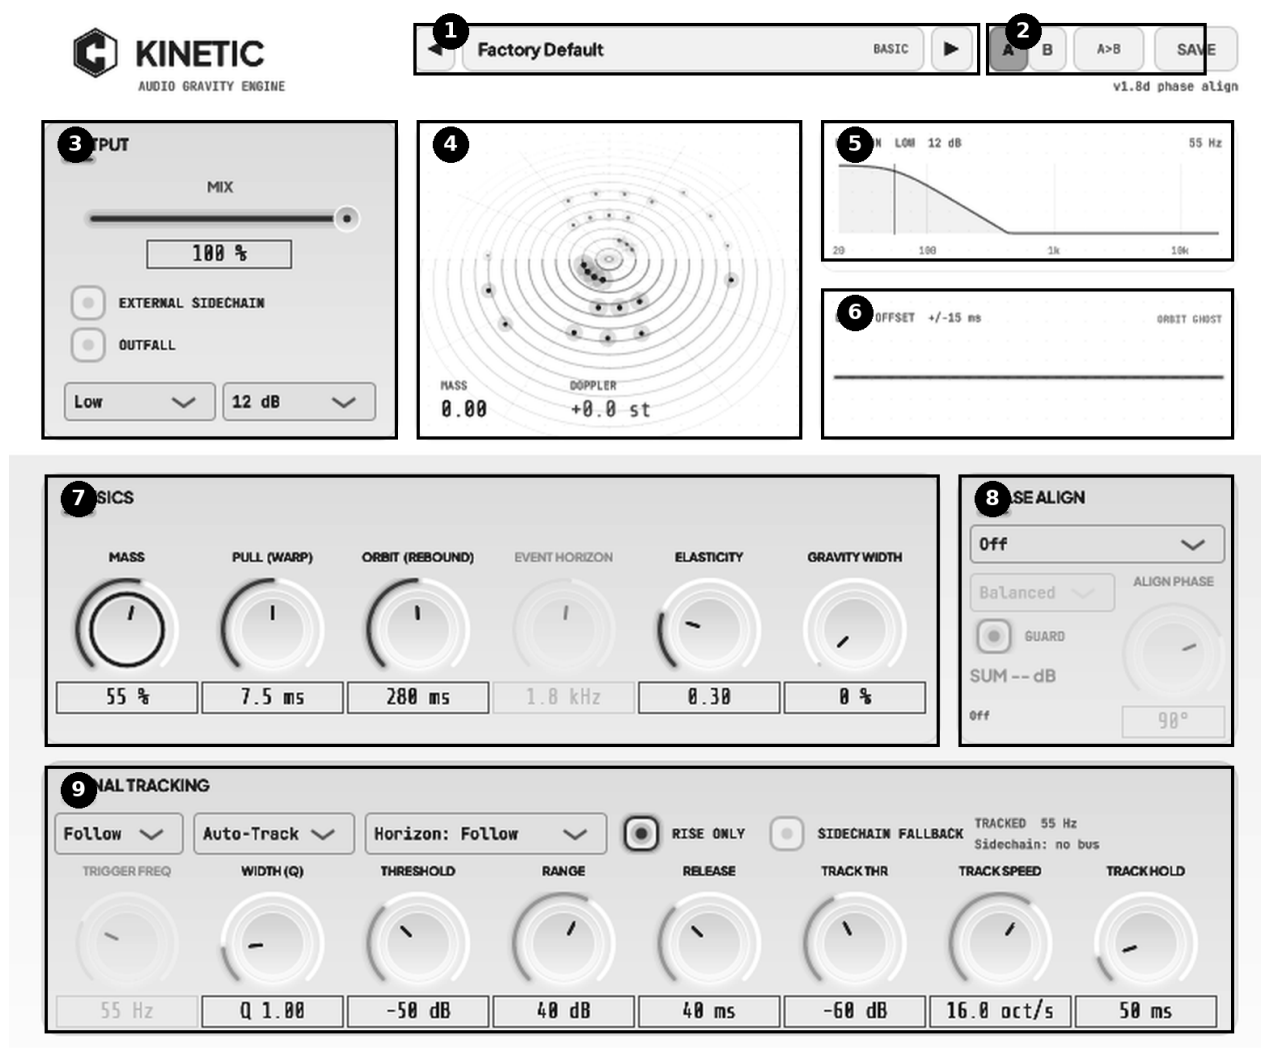


Figure 1. The KINETIC window (shown here in inverted gray tones for printing). Numbers refer to the list below.

#	Area	What it does
1	Preset bar	Previous/next arrows and the preset name. Factory and user presets, grouped by category.
2	A / B, A>B, SAVE	Two settings slots for comparison, copy the active slot to the other one, and save your own preset.
3	Output	Mix, External Sidechain, Outfall (polarity), and the Event Horizon mode and slope menus.
4	Gravity Well display	Live animation of the engine with the read-outs Mass and Doppler (pitch bend in semitones).
5	Event Horizon response	Shows which part of the spectrum falls into the well and the current frequency.
6	Delay offset	Live trace of the time offset (± 15 ms) plus a ghost curve of the orbit.
7	Physics	Mass, Pull, Orbit, Event Horizon, Elasticity, Gravity Width.
8	Phase Align	Optional kick-to-bass phase correction.
9	Signal Tracking	How hits are detected and which frequency is watched.

5.1 Output

- **Mix.** Blends the warped band with the unwarped one. At 0 % the plug-in outputs only the delayed original. At 100 % you hear the full effect.
- **External Sidechain.** Off: the plug-in listens to its own input. On: it listens to the sidechain input (usually the kick) and warps its main input (usually the bass).
- **Outfall.** Off = **Infall**: the delay shortens, the pitch rises briefly. On = **Outfall**: the delay lengthens, the pitch dips briefly.
- **Event Horizon mode (Low / High / Band)** and **slope (12 or 24 dB per octave)**. See section 6.4.

5.2 Gravity Well, Event Horizon and Delay Offset displays

These three displays are read-only. They help you see what the engine is doing: how much mass was detected, how far the sound is bent, where the split frequency sits and how the spring returns. If nothing moves, no hit was detected: check the input level and the Signal Tracking panel.

5.3 Physics


- **Mass.** In **Hit** mode it sets how strongly a detected hit pulls on the sound. In **Follow** mode it acts as sensitivity (see 6.3).
- **Pull (Warp).** The depth of the time bend, 0 to 15 ms. More Pull means a bigger pitch bend. While Phase Align is active, this knob is renamed **Correction** (see 6.6).
- **Orbit (Rebound).** How long the spring takes to bring the sound back, 40 to 1200 ms. Short values feel tight, long values feel like a slow breath.
- **Event Horizon.** The split frequency, 60 Hz to 20 kHz. It is greyed out while Horizon Source is set to **Follow**, because the frequency is then set automatically.
- **Elasticity.** The damping of the return spring, 0.12 to 0.90. Low = bouncy with several overshoots. High = one calm return.
- **Gravity Width.** Lets the left and right springs drift apart during the rebound, which widens the stereo image of the movement. At 0 % both channels move identically.

5.4 Phase Align and Signal Tracking

Both panels are explained in detail in chapter 6 and in the parameter reference (chapter 7).

6. How the engine works

CONTROL PATH (decides how far the bass moves)

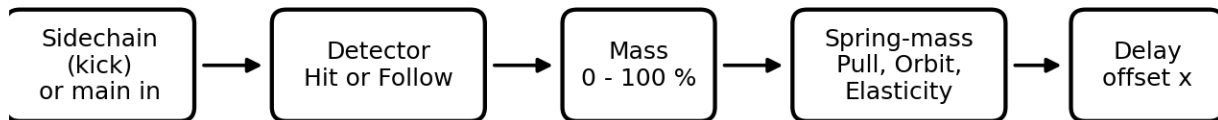

AUDIO PATH (what you hear)

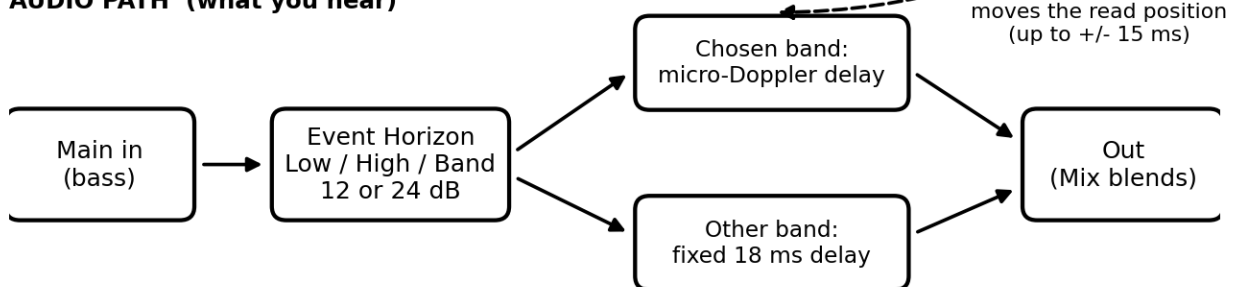


Figure 2. Signal flow. The upper path decides how far the sound moves. The lower path is the audio. Level is never changed.

6.1 Detect: Hit and Follow

The detector watches the sidechain input when External Sidechain is on, otherwise the plug-in's own input.

- **Hit.** A transient detector for the low end. It reacts to hits, adapts to the input level automatically (a quiet kick and a loud kick both work), and uses a short refractory period of about 20 ms so the tail of one kick cannot retrigger itself.
- **Follow.** Mass follows the level of **one frequency band** continuously. Quiet notes create a small mass and loud notes a big one, so no note is missed. The watched frequency is set by **Trigger Freq** (Manual) or found automatically (**Auto-Track**).

6.2 Warp: micro-Doppler delay

A delay that changes quickly acts like a moving sound source: when the delay gets shorter the pitch rises, when it gets longer the pitch falls (the Doppler effect). KINETIC moves a very short delay by up to 15 ms and reads it with high-quality interpolation. The result is a small, musical bend of pitch and timing. Because only the position in time changes, the amplitude of the signal stays the same.

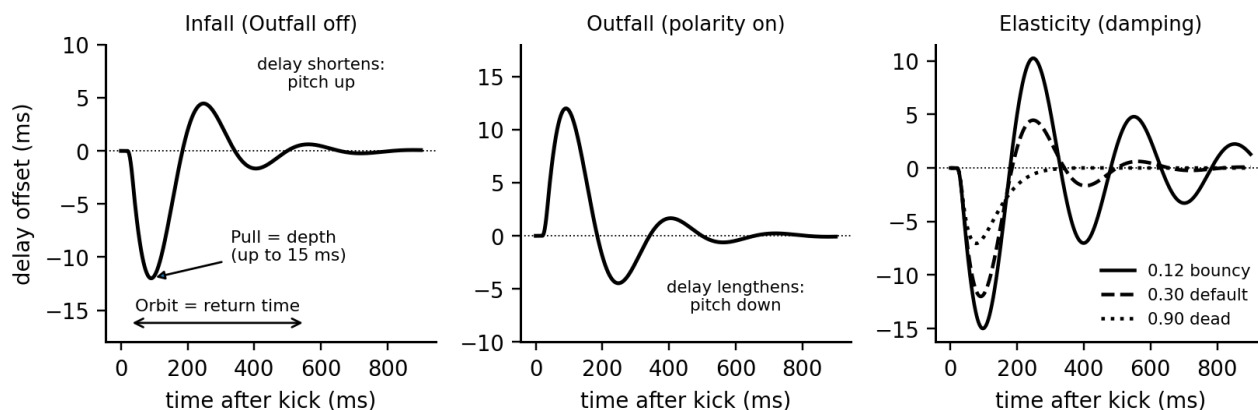


Figure 3. One hit, schematic. Left: Infall. Middle: Outfall. Right: three Elasticity settings. The curves illustrate the behavior; they are not measurements.

6.3 Rebound: the spring

After the hit, the delay offset returns to rest on a spring. **Pull** sets how far it is pushed, **Orbit** sets the speed of the return and **Elasticity** sets how many overshoots you hear. At low Elasticity the bass wobbles for a moment. At high Elasticity it returns smoothly and stops.

Follow mode in detail. The band level is converted to Mass over a range of dB above the **Threshold**. A bigger **Range** means a gentler response. The **Mass** knob scales the result between about half and one and a half times.

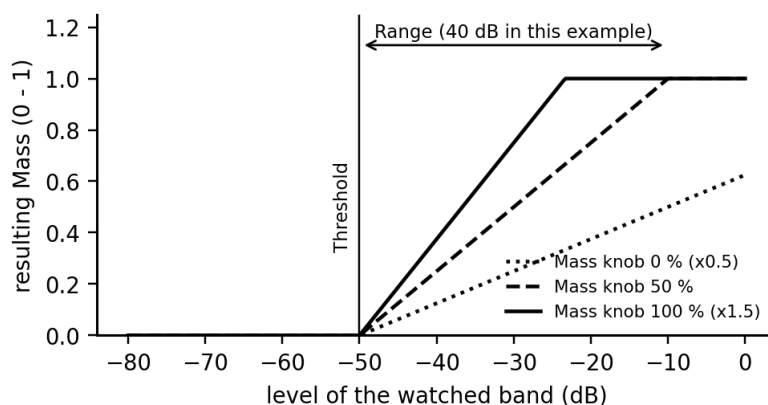


Figure 4. Follow mode: how the level of the watched band becomes Mass (Threshold -50 dB, Range 40 dB).

6.4 Event Horizon: choosing what falls in

The Event Horizon splits the signal into two bands that add up exactly again, so nothing is lost and the two parts stay phase-aligned. Only the **chosen band** is warped. The other band passes through with a fixed 18 ms delay.

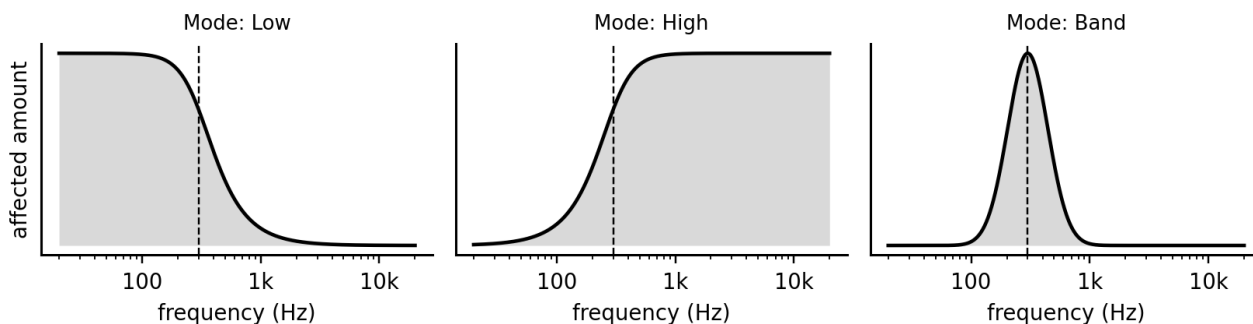


Figure 5. The three Event Horizon modes. The shaded area falls into the well; the dashed line is the Event Horizon frequency.

- **Low.** Everything below the frequency is warped. Best for bass, sub and 808.
- **High.** Everything above is warped. Useful for hats, air and shimmer.
- **Band.** Only a band around the frequency is warped. Useful for mids and for targeting one resonance.
- **Slope.** 12 dB per octave is gentler. 24 dB per octave is more selective.

6.5 Auto-Track and Horizon Follow

With **Auto-Track**, KINETIC finds the dominant frequency of the input by itself using a bank of third-octave bands. With **Horizon: Follow**, the Event Horizon frequency follows that frequency. This keeps the effect on the fundamental of a moving bassline without you automating anything. **Track Thr** sets how loud a note must be before tracking reacts, **Track Speed** how fast the frequency may move (in octaves per second), and **Track Hold** keeps the last value for a moment so the tracker does not jump onto noise.

6.6 Phase Align

When a kick and a bass play the same low frequency at the same time, their waves can add up or cancel each other, which causes mud or a weak kick. Phase Align solves this by moving the bass slightly in time so that the two waves have the phase relationship you choose. It uses **only a time offset**: no gain change, no ducking, no EQ.

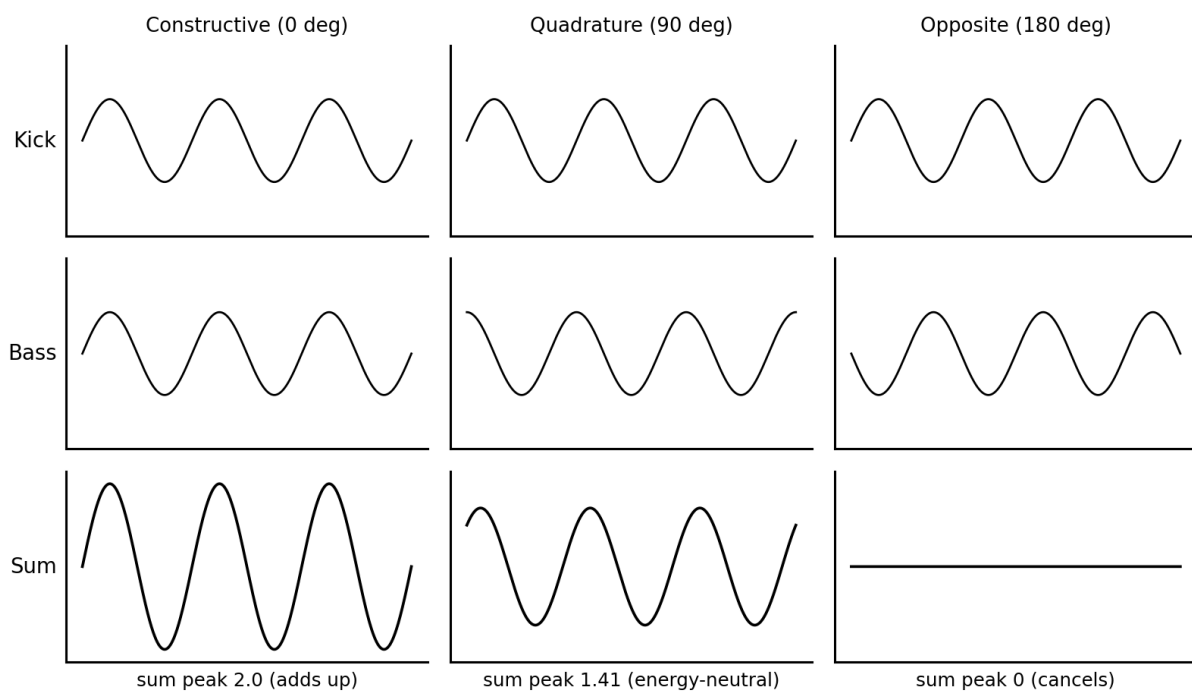


Figure 6. The same two waves with three different phase relationships. Quadrature keeps the energy of both and avoids both mud and cancellation.

- **Off.** Phase Align is not used.
- **Quadrature.** The bass is placed 90° from the kick. The sum is energy-neutral. This is the recommended mode for cleaning up mud.
- **Constructive.** Kick and bass in phase, so they add up. Gives a bigger, more solid low end.
- **Custom (advanced).** You choose the target phase with **Align Phase** (–180° to 180°). Values near 180° partly cancel the low end. **Cancel Guard** limits the loss to about 6 dB.

Requirement	Why
Detect = Follow	Phase Align needs a continuous measurement of the bass frequency.
External Sidechain on, kick on the sidechain	The kick is the phase reference.
Audio actually arriving on the sidechain	Without audio the status reads <i>inactive: no audio on the sidechain</i> .

Align Attack sets how quickly the correction is applied after a hit. **Punchy** gives the cleanest kick onset but moves the bass pitch more while it is corrected. **Smooth** is gentlest on the bass but corrects the first 20 to 40 ms of the kick less. **Balanced** is in between. The **Correction** knob (the Pull knob while Align is active) sets how much of the calculated correction is applied; 1.0 is full correction and is recommended for removing mud. The status line under the menu tells you why Align is active or inactive, and the **SUM** read-out shows a live value for how kick and bass currently add up.

7. Parameter reference

Defaults are the values of a new plug-in instance (the preset “Factory Default”).

Output

Name	Range	Default	Description
Mix	0 – 100 %	100 %	Blend of the warped band with the unwarped one.
External Sidechain	Off / On	Off	Detector listens to the sidechain input.
Outfall	Off / On	Off	Off = Infall (delay shortens, pitch up). On = Outfall (delay lengthens, pitch down).
Horizon Mode	Low / High / Band	Low	Which part of the spectrum falls into the well.
Horizon Slope	12 dB / 24 dB	12 dB	Steepness of the split per octave.

Physics

Name	Range	Default	Description
Mass	0 – 100 %	55 %	Hit mode: strength of a hit. Follow mode: sensitivity.
Pull (Warp)	0 – 15 ms	7.5 ms	Depth of the time bend. Called Correction while Phase Align is active.
Orbit (Rebound)	40 – 1200 ms	280 ms	Time the spring needs to return.
Event Horizon	60 Hz – 20 kHz	1.8 kHz	Split frequency. Unavailable while Horizon Source = Follow.
Elasticity	0.12 – 0.90	0.30	Damping of the return spring. Low = bouncy, high = calm.
Gravity Width	0 – 100 %	0 %	Stereo drift between left and right springs.

Phase Align

Name	Range	Default	Description
Phase Align	Off / Quadrature / Constructive / Custom	Off	Target phase relationship between kick and bass.
Align Attack	Smooth / Balanced / Punchy	Balanced	Speed of the correction after a hit.
Align Phase	–180° – 180°	90°	Target phase. Custom mode only.
Guard (Cancel Guard)	Off / On	On	Limits cancellation to about 6 dB. Custom mode only.

Signal Tracking

Name	Range	Default	Description
Detect Mode	Hit / Follow	Follow	Hit = transient detector. Follow = continuous band level.
Freq Source	Manual / Auto-Track	Auto-Track	Manual uses Trigger Freq. Auto-Track finds the dominant frequency.
Horizon Source	Manual / Follow Freq	Follow Freq	Follow sets the Event Horizon to the trigger or tracked frequency.
Rise Only	Off / On	On	On: only rises of the band level create Mass, a sustained tone fades out. Off: Mass follows the absolute level.
Sidechain Fallback	Off / On	Off	If External Sidechain is on but the host sends silence for 0.5 s, listen to the main input.
Trigger Freq	20 Hz – 20 kHz	55 Hz	Watched frequency in Manual mode.
Width (Q)	0.5 – 4.0	1.00	Width of the watched band. Higher Q = narrower.
Threshold	-70 – -10 dB	-50 dB	Follow: level where Mass starts.
Range	10 – 60 dB	40 dB	Follow: dB above Threshold over which Mass builds up.
Release	10 – 200 ms	40 ms	Follow: how quickly the measured level falls.
Track Thr	-80 – -30 dB	-60 dB	Auto-Track: minimum level before the frequency is updated.
Track Speed	0.5 – 40 oct/s	16 oct/s	Auto-Track: how fast the tracked frequency may move.
Track Hold	0 – 500 ms	50 ms	Auto-Track: keeps the last value for this time.

8. Sound design and mixing recipes

All values below are **starting points**, taken from the factory presets. Every track is different: use your ears, and switch the plug-in on and off to judge the result. The parameter names are the ones printed on the interface.

8.1 Make the kick pop out of the mix while the bass keeps the same loudness

A normal sidechain compressor makes room for the kick by turning the bass down. KINETIC makes room by moving the bass in time, so the kick transient arrives clean and the bass keeps its level.

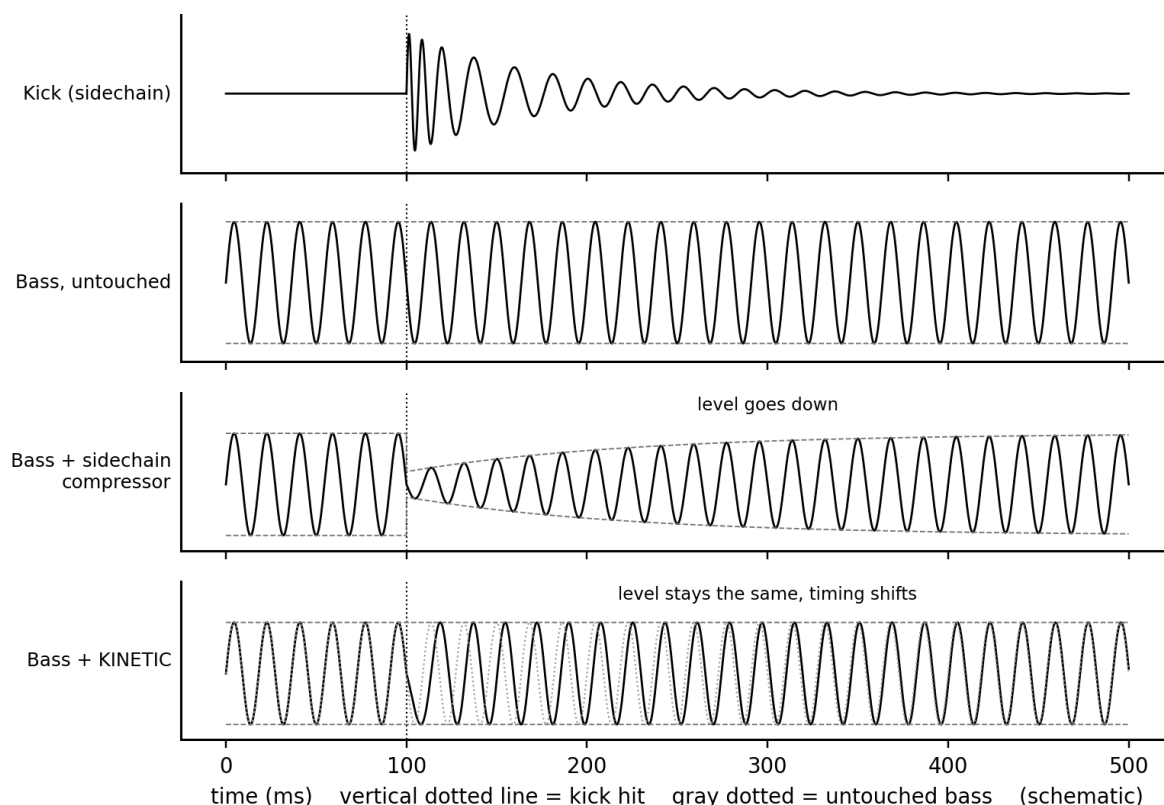


Figure 7. Ducking lowers the bass level. KINETIC keeps the level and moves only the timing. Schematic.

Method A: Phase Align (cleanest, recommended first)

1. Put KINETIC on the **bass** track. Route the **kick** to its sidechain input and switch on **External Sidechain**.
2. Load the preset **Init**. It sets: Detect **Follow**, Freq Source **Auto-Track**, Horizon **Follow**, Horizon Mode **Low** at **12 dB**, Phase Align **Quadrature**, Align Attack **Balanced**, Correction (Pull) **1.0**.
3. Confirm **Sidechain: signal** and Phase Align status **active**.
4. If the kick needs more weight, try **Constructive** (preset "Kick>Bass Constructive"). If the bass pitch moves too much, try **Smooth**. If the kick onset is not crisp enough, try **Punchy**.

Method B: Outfall warp on every kick

Use the preset **Kick>Bass Outfall Pop**. The bass onset moves slightly later each time the kick hits, which opens a short gap for the kick.

Parameter	Pop	Hard
External Sidechain	On	On
Detect / Freq / Horizon source	Hit / Manual / Manual	Hit / Manual / Manual
Mass	55 %	70 %
Pull	7.5 ms	15 ms
Orbit	280 ms	220 ms
Event Horizon (Low)	300 Hz	300 Hz
Outfall	On	On
Elasticity	0.30	0.30

- Raise **Pull** for a more obvious gap. Shorten **Orbit** for fast, punchy music; lengthen it for slow, breathing grooves.
- Set **Event Horizon** just above the main body of your bass so the warped band contains the fundamental and not the high harmonics.
- Reduce **Mix** if the effect is too obvious.

8.2 Remove mud between kick and bass

If the kick sounds weak when the bass plays, or the low end is muddy, use Method A with **Quadrature**. Check the result in mono. If it still sounds muddy, compare the **SUM** read-out and the sound in the three modes. **Custom** is for experiments: avoid values near 180° unless you want to thin the low end on purpose, and keep **Guard** on.

8.3 Bass that follows a moving bassline

1. Use Detect **Follow**, Freq Source **Auto-Track**, Horizon **Follow** (all defaults).
2. If the effect reacts to noise or quiet notes, raise **Threshold** or **Track Thr**. If it misses soft notes, lower them.
3. If the tracked frequency jumps, lower **Track Speed** or raise **Track Hold**.
4. Leave **Rise Only** on for plucked or hit notes. Turn it off if you want long sustained notes to keep pulling.

The label next to the Sidechain Fallback switch shows the tracked frequency in Hz (**TRACKED**) or the manual frequency (**TRIGGER**).

8.4 Sub movement and breathing bass (EDM, bass music)

Put KINETIC on the bass without a sidechain. Load **Sub Dive** and play a sustained sub.

Mass	Pull	Orbit	Event Horizon	Elasticity	Width	Polarity
80 %	15 ms	900 ms	120 Hz, Low, 24 dB	0.20	10 %	Infall

Long Orbit times give slow “breathing”. Keep the Event Horizon low (80 to 150 Hz) so only the sub moves and the mids stay solid.

8.5 Elastic, bouncy 808s (hip-hop, trap)

Load **808 Rubber**.

Mass	Pull	Orbit	Event Horizon	Elasticity	Width	Polarity
70 %	12 ms	650 ms	220 Hz, Low, 12 dB	0.14	0 %	Outfall

A low **Elasticity** (0.12 to 0.20) gives the rubbery bounce. Raise it toward 0.5 or more for a single, tight pull without wobble.

8.6 Width and texture (pads, hats, vocals, effects)

- **Wide Swirl:** Band mode, 12 dB, Event Horizon 900 Hz, Mass 45 %, Pull 9 ms, Orbit 1000 ms, Outfall, Elasticity 0.12, **Gravity Width 100 %**, Mix 70 %. The left and right channels drift apart during the rebound.
- **Hat Shimmer** uses High mode with the Event Horizon at 6 kHz. **Vocal Float** uses Band mode around 2 kHz. Both use a moderate Mix and Gravity Width (about 50 to 60 %) for subtle movement.

8.7 Using KINETIC without a sidechain

Leave **External Sidechain** off. The detector then listens to the plug-in's own input. Use Detect **Hit** for drums and plucks, or **Follow** for sustained sounds. Phase Align needs a sidechain and stays inactive without one.

8.8 Presets and A/B

- **Factory presets** are grouped into the categories Sidechain, Bass, Drums, Fx, Space and Basic. Use the arrows next to the name to step through them. The first sidechain preset, **Init**, is the recommended starting point for kick and bass.
- **SAVE** stores your own preset. User presets are small files with the extension `.kpreset` and live in the folders listed in chapter 3. You can copy them to another computer.
- **A / B** holds two settings. Click to switch, and use **A>B** to copy the active slot to the other one before you start experimenting.

9. Sidechain routing in your DAW

KINETIC has to be on the **bass** track, and the **kick** has to reach the plug-in's sidechain input. The exact menus differ between DAWs and versions, so check your DAW's manual for "external sidechain" or "plug-in sidechain" if a step below looks different.

DAW	How to route the kick
Logic Pro (AU)	Open KINETIC on the bass track and choose the kick track in the Side Chain menu at the top of the plug-in window.
Reaper	Add a send from the kick track to the bass track with destination channels 3/4 . Make sure the bass track has at least 4 channels. KINETIC reads the sidechain from channels 3/4.
FL Studio	Send the kick's mixer track to the bass's mixer track. Right-click the send knob and choose Sidechain to this track . Select the sidechain input in the plug-in's wrapper settings.
Ableton Live	Expand the KINETIC device and enable its sidechain section, then choose the kick track as the audio source.
Cubase / Nuendo	Activate the sidechain button in the plug-in header, then add a send on the kick track that points to KINETIC's sidechain input.
Other DAWs	Look for a "side-chain input" or "external input" option on the plug-in or on the track send.

Check it worked. Switch on **External Sidechain** and read the label in the Signal Tracking panel:

Label	Meaning
Sidechain: no bus	The host did not provide a sidechain input. Check the routing or the track type.
Sidechain: EMPTY (host silent)	The input exists but carries no audio. Check that the kick plays and the send is open.
Sidechain: signal	Everything is fine.
Sidechain: silent -> MAIN	Sidechain Fallback is on and the sidechain has been silent for 0.5 s, so the plug-in uses its main input.

10. Latency and delay compensation

KINETIC delays the audio by a fixed **18 ms**. This is the resting position of its delay line, and it is what allows the sound to move earlier or later around that point. The plug-in reports the 18 ms to your DAW, and the DAW's **plug-in delay compensation (PDC)** keeps all tracks in time.

- Keep PDC switched on in your DAW. Most DAWs have it on by default.
- In warp mode the delay moves by up to ± 15 ms around the 18 ms. With Phase Align the bass can be up to 28 ms later.
- At **Mix 0 %** the plug-in outputs the plain delayed original. The latency stays the same, so automating Mix never shifts the track.
- If you record through KINETIC live, remember the 18 ms. For tracking, bypass the plug-in and add it when mixing.
- When you bounce or export, PDC is applied by the DAW, so the result is in time.

11. Troubleshooting and FAQ

Problem	What to try
KINETIC does not appear in my DAW	Restart the DAW and rescan plug-ins. Check that the installer finished and that the files exist in the folders listed in chapter 3. On macOS make sure you installed the format your DAW uses (AU or VST3).
The installer is blocked	Windows: More info → Run anyway. macOS: System Settings → Privacy & Security → Open Anyway, or the Terminal command in section 3.2.
Nothing happens when I play	Check the license badge (trial ended or unlicensed means clean pass-through). Check Mix is above 0 %. Check the Gravity Well display: if Mass stays at 0, no hits are detected, so lower Threshold or raise Mass.
Sidechain does not work	See the status label in chapter 9. Make sure External Sidechain is on, the kick is routed to the sidechain input and the send is open. Turn on Sidechain Fallback if you want a safe fallback to the main input.
Phase Align says inactive	Read the status line: it names the reason. Align needs Detect = Follow, External Sidechain on and audio on the sidechain.
The bass pitch moves too much	Lower Pull, lengthen Orbit or raise Elasticity. With Phase Align choose Smooth.
The effect is too subtle	Raise Pull and Mass, shorten Orbit, check that Event Horizon includes the main part of the bass.
Crackles or high CPU	Raise your audio buffer size. KINETIC does not allocate memory while processing, so crackles usually come from a buffer that is too small or an overloaded system.
Mono compatibility	KINETIC works with mono and stereo. With Gravity Width at 0 % both channels move identically and the sum is mono-compatible. Check wide settings in mono.
My license says RENEW REQUIRED	Connect to the internet, open the license dialog and press Retry.
I bought a new computer	Deactivate the old device in the license dialog and activate the new one, or email support.
Is it a compressor?	No. KINETIC works with time warping and elastic rebound. The level of your signal is never reduced.
Can I use it offline?	Yes, after activation. It renews its license silently when you are online.

12. Technical specifications and support

Item	Specification
Formats	VST3 (Windows, macOS), AU (macOS)
Windows	64-bit, Windows 10 or newer
macOS	macOS 11 or newer
Channels	Mono and stereo, optional stereo or mono sidechain
Latency	Fixed 18 ms, reported to the host
Processing	No gain modulation or compression. No memory allocation on the audio thread.
Delay range	Up to ± 15 ms around the 18 ms rest position (warp mode)
Activation	Internet once. Offline afterwards with silent periodic renewal.
Trial	7 days, all features
License	Up to 2 devices

Support

Licensing, installation, refunds or bug reports: **craftedhertz@gmail.com**. We answer within 2 business days. Please include your operating system, your DAW and its version, and the plug-in version (v1.8).

Terms of Use, Privacy Policy and Refund Policy are available at **craftedhertz.com**. The license agreement (EULA) is shown during installation on Windows.

© 2026 Crafted Hertz. KINETIC and Crafted Hertz are trademarks of their owner. All rights reserved.