TRUST Reference Manual V1.7.7

Support team: trust@cea.fr

Link to: TRUST Generic Guide

October 1, 2018

Contents

1	Syntax to define a mathematical function	12
2	Existing & predefined fields names	13
3	interprete	15
	3.1 Raffiner_isotrope_parallele	15
	3.2 read med	16
	3.3 lire_medfile	17
	3.4 analyse_angle	17
	3.5 associate	17
	3.6 axi	18
	3.7 bidim axi	18
	3.8 calculer moments	18
	3.9 lecture_bloc_moment_base	18
	3.9.1 calcul	19
	3.9.2 centre_de_gravite	19
	3.9.3 un_point	19
	3.10 corriger_frontiere_periodique	19
	3.11 create_domain_from_sous_zone	20
	3.12 debog	20
	3.13 {	21
	3.14 decoupebord_pour_rayonnement	21
	3.15 decouper_bord_coincident	22
	3.16 dilate	22
	3.17 dimension	22
	3.18 disable TU	22
	3.19 discretiser domaine	23
	3.20 discretize	23
	3.21 distance_paroi	23
	3.22 ecrire_champ_med	24
	3.23 ecrire_fichier_formatte	24
	3.24 ecriturelecturespecial	24
	3.25 execute_parallel	24
	3.26 export	25
	3.27 extract_2d_from_3d	25
	3.28 extract_2daxi_from_3d	25
	3.29 extraire domaine	26
	3.30 extraire_plan	26
	3.31 extraire_surface	27
	3.32 extrudebord	27
	3.33 extrudeparoi	28
	3.34 extruder	29
	3.35 troisf	29
	3.36 extruder_en20	29
	3.37 extruder_en3	30
	3.38 end	30
	3.39 }	31
	3.40 imprimer_flux	31
	3.40 Imprimer_nux 3.41 bloc_lecture	31
	3.42 imprimer_flux_sum	31
	3.43 integrer_champ_med	32
	3.44 interprete geometrique base	32

3.45	lata_to_med	32
3.46	format_lata_to_med	33
3.47	lata_to_other	33
3.48	lire_ideas	33
		33
		34
		34
	——————————————————————————————————————	34
	1	34
	— <u>—</u>	35
		35
		35
		36
		36
		36
		30 37
		37
	1	37
		38
	1	38
		39
	√ = 1	39
3.54		40
	1 -	41
		41
		41
	— 1	41
3.59	pilote_icoco	43
3.60	porosites	43
3.61	bloc_lecture_poro	43
3.62	porosites_champ	44
3.63	postraiter_domaine	44
		44
		45
		45
		46
		47
		47
	·	47
		47
		48
		48
		48
		49
		49
	-	49 49
		-
		50 50
	1	50 50
		50
	_ 6	51
		51
		51
		51
3 85	scatterformatte	52

	rmed
3.87 solve	1 1
	me_bord
_	om
3.90 systen	
_	olveur
	[
	r_medcoupling
	lriser
3.95 tetraed	driser_homogene
3.96 tetraed	lriser_homogene_compact
3.97 tetraed	lriser_homogene_fin
3.98 tetraed	lriser_par_prisme
3.99 transfe	ormer
3.100triang	uler
_	uler_fin
	uler_h
	er_qualite_raffinements
	nom
	er_simplexes
	ercoin
	ercoin bloc
3.107 verific 3.108ecrire	-
	_fichier_bin
	_med
	se
-	
4.2.1	definition_champs
4.2.2	definition_champ
4.2.3	sondes
4.2.4	sonde
4.2.5	sonde_base
4.2.6	points
4.2.7	listpoints
4.2.8	point
4.2.9	segmentpoints
4.2.10	numero_elem_sur_maitre
4.2.11	position_like
4.2.11	position_like
4.2.11 4.2.12	
4.2.11 4.2.12 4.2.13	segment
4.2.11 4.2.12 4.2.13 4.2.14	segment
4.2.11 4.2.12 4.2.13 4.2.14 4.2.15	segment plan
4.2.11 4.2.12 4.2.13 4.2.14 4.2.15 4.2.16	plan
4.2.11 4.2.12 4.2.13 4.2.14 4.2.15 4.2.16 4.2.17	segment plan
4.2.11 4.2.12 4.2.13 4.2.14 4.2.15 4.2.16 4.2.17 4.2.18	segment plan
4.2.11 4.2.12 4.2.13 4.2.14 4.2.15 4.2.16 4.2.17 4.2.18 4.2.19	segment plan volume circle circle_3 champs_posts champs_a_post champ_a_post
4.2.11 4.2.12 4.2.13 4.2.14 4.2.15 4.2.16 4.2.17 4.2.18 4.2.19 4.2.20	segment plan volume circle circle_3 champs_posts champs_a_post champ_a_post stats_posts
4.2.11 4.2.12 4.2.13 4.2.14 4.2.15 4.2.16 4.2.17 4.2.18 4.2.19 4.2.20 4.2.21	segment plan volume circle circle_3 champs_posts champs_a_post champ_a_post stats_posts list_stat_post
4.2.11 4.2.12 4.2.13 4.2.14 4.2.15 4.2.16 4.2.17 4.2.18 4.2.19 4.2.20 4.2.21	segment plan volume circle circle_3 champs_posts champs_a_post champ_a_post stats_posts list_stat_post stat_post_deriv
4.2.11 4.2.12 4.2.13 4.2.14 4.2.15 4.2.16 4.2.17 4.2.18 4.2.20 4.2.21 4.2.22 4.2.23	segment plan volume circle circle_3 champs_posts champs_a_post champ_a_post stats_posts list_stat_post

		4.2.25 moyenne
		4.2.26 ecart_type
		4.2.27 correlation
		4.2.28 stats_serie_posts
	4.3	post_processings
		4.3.1 un_postraitement
	4.4	liste_post_ok
		4.4.1 nom_postraitement
		4.4.2 postraitement_base
		4.4.3 post_processing
	4.5	1 –1 0
	4.3	<u> </u>
		4.5.1 un_postraitement_spec
		4.5.2 type_un_post
		4.5.3 type_postraitement_ft_lata
	4.6	format_file
	4.7	probleme_couple
	4.8	list_list_nom
	4.9	pb_avec_passif
	4.10	listeqn
	4.11	pb_conduction
	4.12	pb_conduction_milieu_variable
	4.13	pb_hydraulique
	4.14	pb_hydraulique_concentration
	4.15	pb_hydraulique_concentration_scalaires_passifs
		pb_hydraulique_concentration_turbulent
		pb_hydraulique_concentration_turbulent_scalaires_passifs
		pb_hydraulique_turbulent
		pb_post
		pb_thermohydraulique
		pb_thermohydraulique_concentration
		pb_thermohydraulique_concentration_scalaires_passifs
		pb_thermohydraulique_concentration_turbulent
		1
		1
		pb_thermohydraulique_qc
		pb_thermohydraulique_qc_fraction_massique
		pb_thermohydraulique_scalaires_passifs
	4.28	pb_thermohydraulique_turbulent
		pb_thermohydraulique_turbulent_qc
		pb_thermohydraulique_turbulent_qc_fraction_massique
	4.31	pb_thermohydraulique_turbulent_scalaires_passifs
	4.32	pbc_med 99
	4.33	list_info_med
		4.33.1 info_med
	4.34	problem_read_generic
5	mor	_eqn
	5.1	conduction
	5.2	bloc_diffusion
		5.2.1 diffusion_deriv
		5.2.2 negligeable
		5.2.3 plb
		5.2.4 plncp1b
		5.2.5 stab
		5.2.6 standard
		512.0 Standard

	5.2.7	bloc_diffusion_standard
	5.2.8	option 104
	5.2.9	op_implicite
5.3	condinit	s
	5.3.1	condinit
5.4	condlim	s
		condlimlu 105
5.5		
5.6		chier_xyz_valeur_param
		ecrire_fichier_xyz_valeur_item
		bords_ecrire
5.7		re_equation_base
J.,		parametre_diffusion_implicite
		parametre_implicite
5.8		ion_milieu_variable
5.9		nvection
3.9		convection_deriv
		amont_old
		centre
		centre4
		centre_old
		di_12
		ef
		bloc_ef
		muscl3
		ef_stab
	5.9.12	listsous_zone_valeur
	5.9.13	sous_zone_valeur
	5.9.14	generic
	5.9.15	kquick
	5.9.16	muscl
	5.9.17	muscl_old
	5.9.18	muscl_new
	5.9.19	negligeable
		quick
		btd
		supg
5.10		on_diffusion_chaleur_qc
		on_diffusion_chaleur_turbulent_qc
		on_diffusion_concentration
		on_diffusion_concentration_turbulent
		on_diffusion_fraction_massique_qc
		on_diffusion_fraction_massique_turbulent_qc
3.17		
F 10		penalisation_12_ftd_lec
		on_diffusion_temperature_turbulent
		e
		stokes_qc
		ts
	floatfloa	
5.23		nt_particulier
	5.23.1	traitement_particulier_base

		5.23.2 temperature	127
		5.23.3 canal	
		5.23.4 ec	
		5.23.5 thi	
		5.23.6 chmoy_faceperio	
	5 0 4		
		navier_stokes_standard	
		navier_stokes_turbulent	
	5.26	modele_turbulence_hyd_deriv	
		5.26.1 dt_impr_ustar_mean_only	
		5.26.2 NUL	
		5.26.3 mod_turb_hyd_ss_maille	135
		5.26.4 form_a_nb_points	136
		5.26.5 sous_maille_wale	
		5.26.6 sous_maille_smago	
		5.26.7 combinaison	
		5.26.8 longueur_melange	
		5.26.9 sous_maille	
		5.26.10 mod_turb_hyd_rans	
		5.26.11 k_epsilon	
	5 O.T	5.26.12 modele_fonction_bas_reynolds_base	
		navier_stokes_turbulent_qc	
	5.28	transport_k_epsilon	146
6	/* 6.1	/*	147
	0.1		14/
7			
7	chan	np_generique_base	147
7	chan 7.1	np_generique_base champ_post_de_champs_post	147 148
7	chan 7.1 7.2	np_generique_base champ_post_de_champs_post	147 148 148
7	chan 7.1 7.2 7.3	np_generique_base champ_post_de_champs_post list_nom_virgule listchamp_generique	147 148 148 148
7	chan 7.1 7.2 7.3 7.4	pp_generique_base champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base	147 148 148 148
7	chan 7.1 7.2 7.3 7.4 7.5	pp_generique_base champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn	147 148 148 148 148
7	chan 7.1 7.2 7.3 7.4 7.5 7.6	np_generique_base champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn champ_post_statistiques_base	147 148 148 148 148 149
7	chan 7.1 7.2 7.3 7.4 7.5 7.6 7.7	np_generique_base champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn champ_post_statistiques_base correlation	147 148 148 148 149 150
7	7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8	np_generique_base champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn champ_post_statistiques_base correlation champ_post_operateur_divergence	147 148 148 148 148 150 150
7	7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9	np_generique_base champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn champ_post_statistiques_base correlation champ_post_operateur_divergence ecart_type	147 148 148 148 149 150 150
7	chan 7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10	champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn champ_post_statistiques_base correlation champ_post_operateur_divergence ecart_type champ_post_extraction	147 148 148 148 149 150 151 151
7	chan 7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 7.11	champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn champ_post_statistiques_base correlation champ_post_operateur_divergence ecart_type champ_post_extraction champ_post_operateur_gradient	147 148 148 148 149 150 151 151 152
7	chan 7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 7.11	champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn champ_post_statistiques_base correlation champ_post_operateur_divergence ecart_type champ_post_extraction	147 148 148 148 149 150 151 151 152
7	chan 7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 7.11 7.12	champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn champ_post_statistiques_base correlation champ_post_operateur_divergence ecart_type champ_post_extraction champ_post_operateur_gradient	147 148 148 148 149 150 151 152 152 153
7	chan 7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 7.11 7.12 7.13	champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn champ_post_statistiques_base correlation champ_post_operateur_divergence ecart_type champ_post_extraction champ_post_operateur_gradient champ_post_interpolation champ_post_morceau_equation	147 148 148 148 149 150 151 152 152 153
7	chan 7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 7.11 7.12 7.13 7.14	champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn champ_post_statistiques_base correlation champ_post_operateur_divergence ecart_type champ_post_extraction champ_post_operateur_gradient champ_post_interpolation champ_post_morceau_equation moyenne	147 148 148 148 149 150 151 152 152 153
7	chan 7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 7.11 7.12 7.13 7.14 7.15	champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn champ_post_statistiques_base correlation champ_post_operateur_divergence ecart_type champ_post_extraction champ_post_operateur_gradient champ_post_operateur_gradient champ_post_interpolation champ_post_morceau_equation moyenne predefini	147 148 148 148 149 150 151 151 152 153 154 1154
7	chan 7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 7.11 7.12 7.13 7.14 7.15 7.16	champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn champ_post_statistiques_base correlation champ_post_operateur_divergence ecart_type champ_post_extraction champ_post_operateur_gradient champ_post_operateur_gradient champ_post_interpolation champ_post_morceau_equation moyenne predefini champ_post_reduction_0d	147 148 148 148 149 150 151 152 153 154 155
7	chan 7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 7.11 7.12 7.13 7.14 7.15 7.16 7.17	champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn champ_post_statistiques_base correlation champ_post_operateur_divergence ecart_type champ_post_extraction champ_post_operateur_gradient champ_post_operateur_gradient champ_post_interpolation champ_post_morceau_equation moyenne predefini champ_post_reduction_0d champ_post_refchamp	147 148 148 148 149 150 151 152 153 154 155 155
7	chan 7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 7.11 7.12 7.13 7.14 7.15 7.16 7.17 7.18	champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn champ_post_statistiques_base correlation champ_post_operateur_divergence ecart_type champ_post_extraction champ_post_operateur_gradient champ_post_interpolation champ_post_morceau_equation moyenne predefini champ_post_reduction_0d champ_post_refchamp champ_post_refchamp champ_post_tparoi_vef	147 148 148 148 149 150 151 151 152 153 154 155 156
7	chan 7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 7.11 7.12 7.13 7.14 7.15 7.16 7.17 7.18	champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn champ_post_statistiques_base correlation champ_post_operateur_divergence ecart_type champ_post_extraction champ_post_operateur_gradient champ_post_operateur_gradient champ_post_operateur_gradient champ_post_operateur_gradient champ_post_operateur_gradient champ_post_morceau_equation moyenne predefini champ_post_reduction_0d champ_post_refchamp champ_post_tparoi_vef	147 148 148 148 149 150 151 152 153 154 155 155
7	chan 7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 7.11 7.12 7.13 7.14 7.15 7.16 7.17 7.18 7.19	champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn champ_post_statistiques_base correlation champ_post_operateur_divergence ecart_type champ_post_extraction champ_post_operateur_gradient champ_post_interpolation champ_post_interpolation champ_post_morceau_equation moyenne predefini champ_post_reduction_0d champ_post_refchamp champ_post_tparoi_vef champ_post_transformation	147 148 148 148 149 150 151 151 152 153 154 155 157
	chan 7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 7.11 7.12 7.13 7.14 7.15 7.16 7.17 7.18 7.19	champ_post_de_champs_post list_nom_virgule listchamp_generique champ_post_operateur_base champ_post_operateur_eqn champ_post_statistiques_base correlation champ_post_operateur_divergence ecart_type champ_post_extraction champ_post_operateur_gradient champ_post_interpolation champ_post_interpolation champ_post_morceau_equation moyenne predefini champ_post_reduction_0d champ_post_refchamp champ_post_tparoi_vef champ_post_transformation	147 148 148 148 149 150 151 151 152 153 154 155 156

•		
9		generic 155
	9.1	cholesky
	9.2	dt_calc
	9.3	dt_fixe
	9.4	dt_min
	9.5	dt_start
	9.6	gcp_ns
	9.7	gen
	9.8	gmres
	9.9	optimal
	9.10	petsc
	9.11	gcp 160
	9.12	solveur_sys_base
10		16'
	10.1	#
	_	
11		lim_base 168
		Neumann_homogene
		Neumann_paroi_adiabatique
		Paroi
		dirichlet
	11.5	entree_temperature_imposee_h 169
	11.6	frontiere_ouverte
	11.7	frontiere_ouverte_concentration_imposee
	11.8	frontiere_ouverte_fraction_massique_imposee
	11.9	frontiere_ouverte_gradient_pression_impose
	11.10	frontiere_ouverte_gradient_pression_impose_vefprep1b
		frontiere_ouverte_gradient_pression_libre_vef
		frontiere_ouverte_gradient_pression_libre_vefprep1b
		frontiere_ouverte_k_eps_impose
		frontiere_ouverte_pression_imposee
		frontiere_ouverte_pression_imposee_orlansky
		frontiere_ouverte_pression_moyenne_imposee
		frontiere_ouverte_rho_u_impose
		frontiere_ouverte_temperature_imposee
		frontiere_ouverte_vitesse_imposee
		frontiere ouverte vitesse imposee sortie
		neumann
		paroi_adiabatique
		paroi_contact
		paroi_contact_fictif
		paroi_decalee_robin
		•
		paroi_defilante
		paroi_echange_contact_correlation_vdf
		paroi_echange_contact_correlation_vef
		paroi_echange_contact_vdf
		paroi_echange_externe_impose
		paroi_echange_externe_impose_h
		paroi_echange_global_impose
		paroi_fixe
		paroi_fixe_iso_Genepi2_sans_contribution_aux_vitesses_sommets
		paroi_flux_impose
	11 36	paroi knudsen non negligeable

	11.37paroi_rugueuse	179
	11.38paroi_temperature_imposee	179
	11.39periodique	179
	11.40scalaire_impose_paroi	
	11.41sortie_libre_temperature_imposee_h	
	11.42symetrie	
	11.43temperature_imposee_paroi	180
10		100
12	discretisation_base	180
	12.1 ef	
	12.2 vdf	181
	12.3 vef	181
	12.4 vefprep1b	181
13	domaine	182
14	espece	182
15	champ_base	182
	15.1 champ_base	182
	15.2 Champ_Fonc_MEDfile	
	15.3 champ_don_base	
	15.4 champ_don_lu	
	15.5 champ_fonc_fonction	
	15.6 champ_fonc_fonction_txyz	184
	15.7 champ_fonc_med	184
	15.8 champ_fonc_reprise	184
	15.9 fonction_champ_reprise	
	15.10champ_fonc_t	
	15.11champ_fonc_tabule	
	15.12champ_init_canal_sinal	
	15.13bloc_lec_champ_init_canal_sinal	
	15.14champ_input_base	
	15.15champ_input_p0	
	15.16champ_ostwald	188
	15.17champ_som_lu_vdf	188
	15.18champ_som_lu_vef	188
	15.19champ_tabule_temps	
	15.20champ_uniforme_morceaux	
	15.21champ_uniforme_morceaux_tabule_temps	
	15.22champ_fonc_txyz	190
	15.23champ_fonc_xyz	190
		190
	15.25init_par_partie	
	15.26tayl_green	191
	15.27uniform_field	191
	15.28valeur_totale_sur_volume	191
16	champ_front_base	192
	16.1 champ_front_base	192
		192
	16.3 boundary_field_uniform_keps_from_ud	-
	16.4 ch_front_input	
	16.5 ch_front_input_uniforme	193

	16.6 champ_front_MED
	16.7 champ_front_bruite
	16.8 champ_front_calc
	16.9 champ_front_contact_vef
	16.10champ_front_debit
	16.11champ_front_fonc_pois_ipsn
	16.12champ_front_fonc_pois_tube
	16.13champ_front_fonc_txyz
	16.14champ_front_fonc_xyz
	16.15champ_front_fonction
	16.16champ_front_lu
	16.17champ_front_normal_vef
	16.18champ_front_pression_from_u
	16.19champ_front_recyclage
	16.20champ_front_tabule
	16.21champ_front_tangentiel_vef
	16.22champ_front_uniforme
17	loi_etat_base 200
	17.1 gaz_reel_rhot
	17.2 melange_gaz_parfait
	17.3 gaz_parfait
	loi_fermeture_base 20:
	18.1 loi_fermeture_test
19	loi_horaire 20
20	milieu base 20:
	20.1 constituent
	20.2 fluide_incompressible
	20.3 fluide_ostwald
	20.4 fluide_quasi_compressible
	-1 - 1
	20.5 bloc_sutherland
	20.5 bloc_sutherland 20.5 solide 20.6 solide 20.6 solide
	20.5 bloc_sutherland
	20.5 bloc_sutherland 20.5 solide 20.6 solide 20.6 solide
21	20.5 bloc_sutherland 20. 20.6 solide 20. 20.7 solide_milieu_variable 20. modele_turbulence_scal_base 20.
21	20.5 bloc_sutherland 20. 20.6 solide 20. 20.7 solide_milieu_variable 20. modele_turbulence_scal_base 20.
21	20.5 bloc_sutherland 20: 20.6 solide 20: 20.7 solide_milieu_variable 20: modele_turbulence_scal_base 20: 21.1 prandtl 20:
21	20.5 bloc_sutherland 20. 20.6 solide 20. 20.7 solide_milieu_variable 20. modele_turbulence_scal_base 20. 21.1 prandtl 20. 21.2 schmidt 20. nom 20.
21	20.5 bloc_sutherland 20. 20.6 solide 20. 20.7 solide_milieu_variable 20. modele_turbulence_scal_base 20. 21.1 prandtl 20. 21.2 schmidt 20. nom 20.
21	20.5 bloc_sutherland 20. 20.6 solide 20. 20.7 solide_milieu_variable 20. modele_turbulence_scal_base 20. 21.1 prandtl 20. 21.2 schmidt 20. nom 20. 22.1 nom_anonyme 20.
21 22 23	20.5 bloc_sutherland 20. 20.6 solide 20. 20.7 solide_milieu_variable 20. modele_turbulence_scal_base 20. 21.1 prandtl 20. 21.2 schmidt 20. nom 20. 22.1 nom_anonyme 20. partitionneur_deriv 20.
21 22 23	20.5 bloc_sutherland 20. 20.6 solide 20. 20.7 solide_milieu_variable 20. modele_turbulence_scal_base 20. 21.1 prandtl 20. 21.2 schmidt 20. nom 20. 22.1 nom_anonyme 20. partitionneur_deriv 20. 23.1 fichier_decoupage 20.
21 22 23	20.5 bloc_sutherland 20. 20.6 solide 20. 20.7 solide_milieu_variable 20. modele_turbulence_scal_base 20. 21.1 prandtl 20. 21.2 schmidt 20. nom 20. 22.1 nom_anonyme 20. partitionneur_deriv 20. 23.1 fichier_decoupage 20. 23.2 metis 20.
21 22 23	20.5 bloc_sutherland 20. 20.6 solide 20. 20.7 solide_milieu_variable 20. modele_turbulence_scal_base 20. 21.1 prandtl 20. 21.2 schmidt 20. nom 20. 22.1 nom_anonyme 20. 23.1 fichier_decoupage 20. 23.2 metis 20. 23.3 partition 21.
21 22 23	20.5 bloc_sutherland 20. 20.6 solide 20. 20.7 solide_milieu_variable 20. modele_turbulence_scal_base 20. 21.1 prandtl 20. 21.2 schmidt 20. nom 20. 22.1 nom_anonyme 20. partitionneur_deriv 20. 23.1 fichier_decoupage 20. 23.2 metis 20. 23.3 partition 21. 23.4 sous_zones 21.
21 22 23	20.5 bloc_sutherland 20. 20.6 solide 20. 20.7 solide_milieu_variable 20. modele_turbulence_scal_base 20. 21.1 prandtl 20. 21.2 schmidt 20. nom 20. 22.1 nom_anonyme 20. 23.1 fichier_decoupage 20. 23.2 metis 20. 23.3 partition 21. 23.4 sous_zones 21.
21 22 23	20.5 bloc_sutherland 20: 20.6 solide 20: 20.7 solide_milieu_variable 20: modele_turbulence_scal_base 20: 21.1 prandtl 20: 21.2 schmidt 20: nom 20: 22.1 nom_anonyme 20: 23.1 fichier_decoupage 20: 23.2 metis 20: 23.3 partition 21: 23.4 sous_zones 21: 23.5 tranche 21 precond_base 21:
21 22 23	20.5 bloc_sutherland 20. 20.6 solide 20. 20.7 solide_milieu_variable 20. modele_turbulence_scal_base 20. 21.1 prandtl 20. 21.2 schmidt 20. nom 20. 22.1 nom_anonyme 20. 23.1 fichier_decoupage 20. 23.2 metis 20. 23.3 partition 21. 23.4 sous_zones 21. 23.5 tranche 21. precond_base 21. 24.1 precondsolv 21.
21 22 23	20.5 bloc_sutherland 20: 20.6 solide 20: 20.7 solide_milieu_variable 20: modele_turbulence_scal_base 20: 21.1 prandtl 20: 21.2 schmidt 20: nom 20: 22.1 nom_anonyme 20: 23.1 fichier_decoupage 20: 23.2 metis 20: 23.3 partition 21: 23.4 sous_zones 21: 23.5 tranche 21 precond_base 21:

25	schema_temps_base	213
	25.1 Sch_CN_EX_iteratif	214
	25.2 Sch_CN_iteratif	216
	25.3 scheme_euler_explicit	219
	25.4 leap_frog	220
	25.5 runge_kutta_ordre_3	222
	25.6 runge_kutta_ordre_4_d3p	
	25.7 runge_kutta_rationnel_ordre_2	
	25.8 schema_adams_bashforth_order_2	
	25.9 schema_adams_bashforth_order_3	
	25.10schema_adams_moulton_order_2	
	25.11schema_adams_moulton_order_3	
	25.12schema_backward_differentiation_order_2	
	25.13schema_backward_differentiation_order_3	
	25.14scheme_euler_implicit	
	25.15schema_implicite_base	
	25.16schema_predictor_corrector	
	25.10schema_predictor_corrector	243
26	solveur_implicite_base	246
20	26.1 implicite	
	26.2 piso	
	26.3 simple	
	26.4 simpler	
	26.5 solveur_lineaire_std	250
27	source_base	250
41	27.1 Source_Transport_K_Eps_anisotherme	
	27.1 Source_transport_K_Eps_anisometrie	
	27.3 boussinesq_concentration	
	27.4 boussinesq_temperature	
	27.5 canal_perio	
	27.6 coriolis	
	27.7 darcy	
	27.8 dirac	
	27.9 forchheimer	
	27.10perte_charge_anisotrope	
	27.11perte_charge_circulaire	
	27.12perte_charge_directionnelle	
	27.13perte_charge_isotrope	255
	27.14perte_charge_reguliere	256
	27.15spec_pdcr_base	256
	27.15.1 longitudinale	256
	27.15.2 transversale	257
	27.16perte_charge_singuliere	257
	27.17puissance_thermique	257
	27.18source_constituant	258
	27.19source_generique	258
	27.20source_qdm	258
	27.21source_qdm_lambdaup	259
	27.22source_robin	259
	27.23source_robin_scalaire	259
		260
	27.25source_th_tdivu	
	27.26source transport k eps	

		7source_transport_k_eps_aniso_concen	
28	sous	z_zone	261
	28.1	bloc_origine_cotes	262
	28.2	deuxentiers	262
		bloc_couronne	
		bloc_tube	
29	turb	pulence_paroi_base	263
	29.1	loi_expert_hydr	263
	29.2	loi_standard_hydr	264
	29.3	loi_standard_hydr_old	264
	29.4	negligeable	264
		paroi_tble	
	29.6	twofloat	265
	29.7	liste_sonde_tble	266
		29.7.1 sonde_tble	266
	29.8	entierfloat	266
	29.9	utau_imp	266
30			267
		loi_analytique_scalaire	
		loi_expert_scalaire	
		loi_paroi_nu_impose	
	30.4	loi_standard_hydr_scalaire	268
	30.5	negligeable_scalaire	268
	30.6	paroi_tble_scal	268
	30.7	fourfloat	269
31		bj_impl	269
		list_un_pb	
	31.2	un_pb	270
	31.3	listobj	270
32	obje	t_lecture	270
	32.1	paroi_ft_disc_deriv	270
		32.1.1 symetrie	271
	32.2	methode_transport_deriv	271
		32.2.1 loi_horaire	271
33	inde	X	271

1 Syntax to define a mathematical function

In a mathematical function, used for example in field definition, it's possible to use the predifined function (an object parser is used to evaluate the functions):

ABS : absolute value function

COS : cosine function
SIN : sine function
TAN : tangent function
ATAN : arctangent function
EXP : exponential function
LN : natural logarithm function

```
SQRT : square root function
INT: integer function
ERF : error function
RND(x): random function (values between 0 and x)
COSH : hyperbolic cosine function
SINH : hyperbolic sine function
TANH : hyperbolic tangent function
ACOS : inverse cosine function
ATANH: inverse hyperbolic tangent function
NOT(x) : NOT x (returns 1 if x is false, 0 otherwise)
x_AND_y : boolean logical operation AND (returns 1 if both x and y are true, else 0)
x_OR_y : boolean logical operation OR (returns 1 if x or y is true, else 0)
x_GT_y : greater than (returns 1 if x>y, else 0)
x_GE_y: greater than or equal to (returns 1 if x \ge y, else 0)
x_LT_y: less than (returns 1 if x < y, else 0)
x_LE_y: less than or equal to (returns 1 if x \le 0)
x_MIN_y : returns the smallest of x and y
x_MAX_y : returns the largest of x and y
x_MOD_y : modular division of x per y
x_EQ_y
             : equal to (returns 1 if x==y, else 0)
             : not equal to (returns 1 if x!=y, else 0)
x_NEQ_y
You can also use the following operations:
+ : addition
- : subtraction
/ : division
* : multiplication
%: modulo
$ : max
• : power
< : less than
> : greater than
[ : less than or equal to
] : greater than or equal to
You can also use the following constants:
Pi : pi value (3,1415...)
The variables which can be used are:
x,y,z : coordinates
t: time
Examples:
Champ_front_fonc_txyz 2 \cos(y+x^2) t+\ln(y)
Champ_fonc_xyz dom 2 \tanh(4*y)*(0.95+0.1*rnd(1)) 0.
Possible error:
Champ_fonc_txyz 1 \cos(10*t)*(1< x<2)*(1< y<2)
Previous line is wrong. It should be written:
Champ_fonc_txyz 1 \cos(10*t)*(1<x)*(x<2)*(1<y)*(y<2)
```

2 Existing & predefined fields names

Here is a list of post-processable fields, but it is not the only ones.

Physical values	Keyword for field_name	Unit
Velocity	Vitesse or Velocity	$m.s^{-1}$
Kinetic energy per elements		
$(0.5\rho u_i ^2)$	Energie_cinetique_elem	$kg.m^{-1}.s^{-2}$
Total kinetic energy		
$\left(\frac{\sum_{i=1}^{nb_elem} 0.5\rho u_i ^2 vol_i}{\sum_{i=1}^{nb_elem} vol_i}\right)$. 1 9
$\left[\begin{array}{c} \frac{2^{l-1}}{\sum_{nb_elem} v_{nol}} \end{array}\right]$	Energie_cinetique_totale	$kg.m^{-1}.s^{-2}$
$\frac{\sum_{i=1} voi_i}{\text{Vorticity}}$	Vorticite	s^{-1}
Pressure in incompressible flow	vorucite	3
$(P/\rho + gz)$	Pression ¹	$Pa.m^3.kg^{-1}$
For Front Tracking probleme	T TCSSION	or
$(P + \rho gz)$		Pa
Pressure in incompressible flow		1 4
$(P+\rho gz)$	Pression_pa or Pressure	Pa
Pressure in compressible flow	Pression	Pa
Hydrostatic pressure (ρgz)	Pression_hydrostatique	Pa
Totale pressure (when		
quasi compressible model		
is used)=Pth+P	Pression tot	Pa
Pressure gradient	_	
$(\nabla(P/\rho+gz))$	Gradient_pression	$m.s^{-2}$
Temperature	Temperature	°C or K
Phase temperature of	•	
a two phases flow	Temperature_EquationName	°C or K
Mass transfer rate		
between two phases	Temperature_mpoint	$\frac{kg.m^{-2}.s^{-1}}{K^2}$
Temperature variance	Variance_Temperature	
Temperature dissipation rate	Taux_Dissipation_Temperature	$K^2.s^{-1}$
Temperature gradient	Gradient_temperature	$K.m^{-1}$
Heat exchange coefficient	H_echange_Tref ²	$W.m^{-2}.K^{-1}$
Turbulent heat flux	Flux_Chaleur_Turbulente	$m.K.s^{-1}$
Turbulent viscosity	Viscosite_turbulente	$m^2.s^{-1}$
Turbulent dynamic viscosity		
(when quasi compressible	Viscosite_dynamique_turbulente	$kg.m.s^{-1}$
model is used)		
Turbulent kinetic energy	K	$m^2.s^{-2}$
Turbulent dissipation rate	Eps	$m^3.s^{-1}$
Turbulent quantities		, , , , , ,
K and Epsilon	K_Eps	$(m^2.s^{-2}, m^3.s^{-1})$
Constituent concentration	Concentration	_1
Component velocity along X	VitesseX	$m.s^{-1}$
Component velocity along Y	VitesseY	$m.s^{-1}$
Component velocity along Z	VitesseZ	$m.s^{-1}$
Mass balance on each cell	Divergence_U	$m^3.s^{-1}$
Irradiancy	Irradiance	$\frac{W.m^{-2}}{s^{-1}}$
Q-criteria Distance to the wall $Y^+ = yU/\nu$	Critere_Q	<i>S</i> -
	continued on next page	
•••	continued on next page	

The post-processed pressure is the pressure divided by the fluid's density $(P/\rho+gz)$ on incompressible laminar calculation. For turbulent, pressure is $P/\rho+gz+2/3*k$ cause the turbulent kinetic energy is in the pressure gradient.

2Tref indicates the value of a reference temperature and must be specified by the user. For example, H_echange_293 is the keyword

to use for Tref=293K.

Physical values	Keyword for field_name	Unit
(only computed on	Y_plus	dimensionless
boundaries of wall type)		
Friction velocity	U_star	$m.s^{-1}$
Cell volumes	Volume_maille	m^3
Chemical potential	Potentiel_Chimique_Generalise	
Source term in non		
Galinean referential	Acceleration_terme_source	$m.s^{-2}$
Stability time steps	Pas_de_temps	S
Listing of boundary fluxes	Flux_bords	cf each *.out file
Volumetric porosity	Porosite_volumique	dimensionless
Distance to the wall	Distance_Paroi ³	m
Volumic thermal power	Puissance_volumique	$W.m^{-3}$
Local shear strain rate defined as		
$\sqrt{(2SijSij)}$	Taux_cisaillement	s^{-1}
Cell Courant number (VDF only)	Courant_maille	dimensionless
Cell Reynolds number (VDF only)	Reynolds_maille	dimensionless

3 interprete

Description: Basic class for interpreting a data file. Interpretors allow some operations to be carried out on objects.

See also: objet_u (33) read (3.67) associate (3.5) discretize (3.20) mailler (3.49) maillerparallel (3.51) ecrire_fichier_bin (3.109) ecrire (3.108) read_file (3.68) lire_tgrid (3.70) solve (3.87) execute_parallel (3.25) end (3.38) dimension (3.17) bidim_axi (3.7) axi (3.6) transformer (3.99) rotation (3.83) dilate (3.16) testeur (3.92) test_solveur (3.91) postraiter_domaine (3.63) modif_bord_to_raccord (3.52) remove_elem (3.76) regroupebord (3.75) supprime bord (3.88) calculer moments (3.8) imprimer flux (3.40) decouperbord coincident (3.15) raffiner anisotrope (3.65) raffiner isotrope (3.66) trianguler (3.100) tetraedriser (3.94) orientefacesbord (3.56) reorienter tetraedres (3.80) reorienter triangles (3.81) verifiercoin (3.106) porosites (3.60) porosites_champ (3.62) discretiser_domaine (3.19) { (3.13) } (3.39) export (3.26) debog (3.12) pilote icoco (3.59) moyenne volumique (3.53) ecrire champ med (3.22) read med (3.2) lire ideas (3.48) ecrire med (3.110) system (3.90) redresser hexaedres vdf (3.73) analyse angle (3.4) remove invalidinternal boundaries (3.78) reordonner (3.82) option vdf (3.55) precisiongeom (3.64) nettoiepasnoeuds (3.54) scatter (3.84) partition (3.57) reordonner_faces_periodiques (3.79) corriger_frontiere_periodique (3.10) distance_paroi (3.21) extrudebord (3.32) extruder (3.34) extract_2d_from_3d (3.27) extruder_en20 (3.36) extrudeparoi (3.33) ecriturelecturespecial (3.24) lata_to_med (3.45) lata_to_other (3.47) decoupebord-_pour_rayonnement (3.14) extraire_plan (3.30) extraire_domaine (3.29) extraire_surface (3.31) integrer-_champ_med (3.43) orienter_simplexes (3.72) verifier_simplexes (3.105) verifier_qualite_raffinements (3.103) testeur_medcoupling (3.93) Raffiner_isotrope_parallele (3.1) interprete_geometrique_base (3.44) disable-_TU (3.18) refine_mesh (3.74)

Usage:

interprete

3.1 Raffiner_isotrope_parallele

Description: Refine parallel mesh in parallel

See also: interprete (3)

³distance paroi is a field which can be used only if the mixing length model (see 2.15.1.2) is used in the data file.

```
Usage:
Raffiner_isotrope_parallele {
    name_of_initial_zones str
    name_of_new_zones str
    [ascii]
}
where
• name_of_initial_zones str: name of initial Zones
• name_of_new_zones str: name of new Zones
• ascii: writing Zones in ascii format
```

3.2 read med

Synonymous: lire_med

Description: Keyword to read MED mesh files where domain_name corresponds to the domain name, filename.med corresponds to the file (written in format MED) containing the mesh named mesh_name. Note about naming boundaries: When reading filename.med, TRUST will detect boundaries between domain (Raccord) when the name of the boundary begins by type_raccord_. For example, a boundary named type_raccord_wall in filename.med will be considered by TRUST as a boundary named wall between two domains.

NB: To read several domains from a mesh issued from a MED file, use Read_Med to read the mesh then use Create domain from sous zone keyword.

NB: If the MED file contains one or several subzone defined as a group of volumes, then Read_MED will read it and will create two files domain_name_ssz_geo and domain_name_ssz_par.geo defining the subzones for sequential and/or parallel calculations. These subzones will be read in sequential in the datafile by including (after Read_Med keyword) something like:

```
Read_Med ....

Read_file domain_name_ssz.geo;

During the parallel calculation, you will include something:

Scatter { ... }

Read_file domain_name_ssz_par.geo;

See also: interprete (3) lire_medfile (3.3)
```

Usage:

```
\begin{tabular}{ll} read\_med & [ \ vef \ ] \ [ \ family\_names\_from\_group\_names \ ] \ [ \ short\_family\_names \ ] \ nom\_dom & nom\_dom\_med & file \\ where \\ \end{tabular}
```

- vef str into ['vef']: Option vef is obsolete and is kept for backward compatibility.
- family_names_from_group_names str into ['family_names_from_group_names']: The option family_names_from_group_names uses the group names instead of the family names to detect the boundaries into a MED mesh (useful when trying to read a MED mesh file from Gmsh tool which can now read and write MED meshes).
- **short_family_names** *str into ['short_family_names']*: The option short_family_names is useful to suppress FAM_-*_ from the boundary names of the MED meshes.
- **nom_dom** *str*: corresponds to the domain name
- nom_dom_med str: name of the mesh in med file
- file str: corresponds to the file (written in format MED) containing the mesh

3.3 lire_medfile

Description: Obsolete keyword to read a mesh with MED file API

See also: read_med (3.2)

Usage:

 $lire_medfile \ [\ vef\]\ [\ family_names_from_group_names\]\ [\ short_family_names\]\ nom_dom\ nom_dom_med\ file$

where

- vef str into ['vef']: Option vef is obsolete and is kept for backward compatibility.
- family_names_from_group_names str into ['family_names_from_group_names']: The option family_names_from_group_names uses the group names instead of the family names to detect the boundaries into a MED mesh (useful when trying to read a MED mesh file from Gmsh tool which can now read and write MED meshes).
- **short_family_names** *str into ['short_family_names']*: The option short_family_names is useful to suppress FAM_-*_ from the boundary names of the MED meshes.
- nom_dom str: corresponds to the domain name
- nom_dom_med str: name of the mesh in med file
- file str: corresponds to the file (written in format MED) containing the mesh

3.4 analyse_angle

Description: Keyword Analyse_angle prints the histogram of the largest angle of each mesh elements of the domain named name_domain. nb_histo is the histogram number of bins. It is called by default during the domain discretization with nb_histo set to 18. Useful to check the number of elements with angles above 90 degrees.

See also: interprete (3)

Usage:

analyse_angle domain_name nb_histo

where

- **domain_name** *str*: Name of domain to resequence.
- nb histo int

3.5 associate

Synonymous: associer

Description: This interpretor allows one object to be associated with another. The order of the two objects in this instruction is not important. The object objet_2 is associated to objet_1 if this makes sense; if not either objet_1 is associated to objet_2 or the program exits with error because it cannot execute the Associate (Associer) instruction. For example, to calculate water flow in a pipe, a Pb_Hydraulique type object needs to be defined. But also a Domaine type object to represent the pipe, a Scheme_euler_explicit type object for time discretization, a discretization type object (VDF or VEF) and a Fluide_Incompressible type object which will contain the water properties. These objects must then all be associated with the problem.

See also: interprete (3)

```
Usage: associate objet_1 objet_2 where
```

objet_1 str: Objet_1
 objet_2 str: Objet_2

3.6 axi

Description: This keyword allows a 3D calculation to be executed using cylindrical coordinates (R, θ, Z). If this instruction is not included, calculations are carried out using Cartesian coordinates.

See also: interprete (3)

Usage:

axi

3.7 bidim_axi

Description: Keyword allowing a 2D calculation to be executed using axisymetric coordinates (R, Z). If this instruction is not included, calculations are carried out using Cartesian coordinates.

See also: interprete (3)

Usage:

bidim_axi

3.8 calculer_moments

Description: Calculates and prints the torque (moment of force) exerted by the fluid on each boundary in output files (.out) of the domain nom_dom.

See also: interprete (3)

Usage:

calculer_moments nom_dom mot where

- nom dom str: Name of domain.
- mot lecture_bloc_moment_base (3.9): Keyword.

3.9 lecture_bloc_moment_base

Description: Auxiliary class to compute and print the moments.

See also: objet_lecture (32) calcul (3.9.1) centre_de_gravite (3.9.2)

Usage:

3.9.1 calcul Description: The centre of gravity will be calculated. See also: (3.9) Usage: calcul 3.9.2 centre_de_gravite Description: To specify the centre of gravity. See also: (3.9) Usage: centre_de_gravite point where • **point** *un_point* (3.9.3): A centre of gravity. 3.9.3 un_point Description: A point. See also: objet_lecture (32) Usage: pos where

3.10 corriger_frontiere_periodique

• pos x1 x2 (x3): Point coordinates.

Description: The Corriger_frontiere_periodique keyword is mandatory to first define the periodic boundaries, to reorder the faces and eventually fix unaligned nodes of these boundaries. Faces on one side of the periodic domain are put first, then the faces on the opposite side, in the same order. It must be run in sequential before mesh splitting.

```
See also: interprete (3)

Usage:
corriger_frontiere_periodique {
    domaine str
    bord str
    [ direction n x1 x2 ... xn]
    [ fichier_post str]
}
where
```

- domaine str: Name of domain.
- bord str: the name of the boundary (which must contain two opposite sides of the domain)

- **direction** *n x1 x2 ... xn*: defines the periodicity direction vector (a vector that points from one node on one side to the opposite node on the other side). This vector must be given if the automatic algorithm fails, that is:
 - when the node coordinates are not perfectly periodic
 - when the periodic direction is not aligned with the normal vector of the boundary faces
- fichier_post str: .

3.11 create_domain_from_sous_zone

Description: This keyword fills the domain domaine_final with the subzone par_sous_zone from the domain domaine_init. It is very useful when meshing several mediums with Gmsh. Each medium will be defined as a subzone into Gmsh. A MED mesh file will be saved from Gmsh and read with Lire_Med keyword by the TRUST data file. And with this keyword, a domain will be created for each medium in the TRUST data file.

```
See also: interprete_geometrique_base (3.44)

Usage:
create_domain_from_sous_zone {
    domaine_final str
    par_sous_zone str
    domaine_init str
}
where

• domaine_final str: new domain in which faces are stored
• par_sous_zone str: a sub-area allowing to choose the elements
• domaine_init str: initial domain
```

3.12 debog

Description: Class to debug some differences between two TRUST versions on a same data file.

If you want to compare the results of the same code in sequential and parallel calculation, first run (mode=0) in sequential mode (the files fichier1 and fichier2 will be written first) then the second run in parallel calculation (mode=1).

During the first run (mode=0), it prints into the file DEBOG, values at different points of the code thanks to the C++ instruction call. see for example in Noyau/Resoudre.cpp file the instruction: Debog::verifier(msg,value); Where msg is a string and value may be a double, an integer or an array.

During the second run (mode=1), it prints into a file Err_Debog.dbg the same messages than in the DEBOG file and checks if the differences between results from both codes are less than a given value (error). If not, it prints Ok else show the differences and the lines where it occured.

```
See also: interprete (3)

Usage:
debog pb fichier1 fichier2 seuil mode
where
```

- **pb** *str*: Name of the problem to debug.
- fichier1 str: Name of the file where domain will be written in sequential calculation.
- fichier2 str: Name of the file where faces will be written in sequential calculation.

- seuil *float*: Minimal value (by default 1.e-20) for the differences between the two codes.
- **mode** *int*: By default -1 (nothing is written in the different files), you will set 0 for the sequential run, and 1 for the parallel run.

3.13 {Description: Block's beginning.See also: interprete (3)Usage:

3.14 decoupebord_pour_rayonnement

Description: To subdivide the external boundary of a domain into several parts (may be useful for better accuracy when using radiation model in transparent medium). To specify the boundaries of the fine_domain_name domain to be splitted. These boundaries will be cut according the coarse mesh defined by either the keyword domaine_grossier (each boundary face of the coarse mesh coarse_domain_name will be used to group boundary faces of the fine mesh to define a new boundary), either by the keyword nb_parts_naif (each boundary of the fine mesh is splitted into a partition with nx*ny*nz elements), either by a geometric condition given by a formulae with the keyword condition_geometrique. If used, the coarse_domain_name domain should have the same boundaries name of the fine_domain_name domain.

A mesh file (ASCII format, except if binaire option is specified) named by default newgeom (or specified by the nom_fichier_sortie keyword) will be created and will contain the fine_domain_name domain with the splitted boundaries named boundary_name

```
See also: interprete (3)
Usage:
decoupebord_pour_rayonnement {
     domaine str
     [ domaine_grossier str]
     [ nb_parts_naif  n n1 n2 ... nn]
     [ nb_parts_geom n n1 n2 ... nn]
     bords a decouper n word1 word2 ... wordn
     [ nom_fichier_sortie str]
     [ condition geometrique n word1 word2 ... wordn]
     [binaire int]
}
where
   • domaine str
   • domaine grossier str
   • nb_parts_naif n n1 n2 ... nn
   • nb_parts_geom n n1 n2 ... nn
   • bords_a_decouper n word1 word2 ... wordn
   • nom_fichier_sortie str
   • condition_geometrique n word1 word2 ... wordn
   • binaire int
```

3.15 decouper_bord_coincident

Description: In case of non-coincident meshes and a paroi_contact condition, run is stopped and two external files are automatically generated in VEF (connectivity_failed_boundary_name and connectivity_failed_pb_name.med). In 2D, the keyword Decouper_bord_coincident associated to the connectivity_failed_boundary_name file allows to generate a new coincident mesh.

See also: interprete (3)

Usage:

decouper_bord_coincident domain_name bord where

- domain name str: Name of domain.
- **bord** *str*: connectivity_failed_boundary_name

3.16 dilate

Description: Keyword to multiply the whole coordinates of the geometry.

See also: interprete (3)

Usage:

dilate domain_name alpha

where

- domain_name str: Name of domain.
- alpha *float*: Value of dilatation coefficient.

3.17 dimension

Description: Keyword allowing calculation dimensions to be set (2D or 3D), where dim is an integer set to 2 or 3. This instruction is mandatory.

See also: interprete (3)

Usage:

dimension dim

where

• dim int into [2, 3]: Number of dimensions.

3.18 disable_TU

Description: Flag to disable the writing of the .TU files

See also: interprete (3)

Usage:

disable TU

3.19 discretiser_domaine

Description: Useful to discretize the domain domain_name (faces will be created) without defining a problem.

See also: interprete (3)

Usage:

discretiser_domaine domain_name where

• **domain name** *str*: Name of the domain.

3.20 discretize

Synonymous: discretiser

Description: Keyword to discretise a problem_name according to the discretization dis. IMPORTANT: A number of objects must be already associated (a domain, time scheme, central object) prior to invoking the Discretize (Discretiser) keyword. The physical properties of this central object must also have been read.

See also: interprete (3)

Usage:

discretize problem_name dis

where

- **problem_name** *str*: Name of problem.
- dis str: Name of the discretization object.

3.21 distance_paroi

Description: Class to generate external file Wall_length.xyz devoted for instance, for mixing length modelling. In this file, are saved the coordinates of each element (center of gravity) of dom domain and minimum distance between this point and boundaries (specified bords) that user specifies in data file (typically, those associated to walls). A field Distance_paroi is available to post process the distance to the wall.

See also: interprete (3)

Usage:

distance_paroi dom bords format

where

- dom str: Name of domain.
- **bords** *n word1 word2* ... *wordn*: Boundaries.
- **format** *str into* ['binaire', 'formatte']: Value for format may be binaire (a binary file Wall_length.xyz is written) or formatte (moreover, a formatted file Wall_length_formatted.xyz is written).

3.22 ecrire_champ_med

Description: Keyword to write a field to MED format into a file. Useful with Homard.

See also: interprete (3)

Usage:

ecrire_champ_med nom_dom nom_chp file where

nom_dom str: domain namenom_chp str: field name

• **file** *str*: file name

3.23 ecrire fichier formatte

Description: Keyword to write the object of name name_obj to a file filename in ASCII format.

See also: ecrire_fichier_bin (3.109)

Usage

ecrire_fichier_formatte name_obj filename where

- name_obj str: Name of the object to be written.
- filename str: Name of the file.

3.24 ecriturelecturespecial

Description: Class to write or not to write a .xyz file on the disk at the end of the calculation.

See also: interprete (3)

Usage:

ecriturelecturespecial type

where

• **type** *str*: If set to 0, no xyz file is created. If set to EFichierBin, it uses prior 1.7.0 way of reading xyz files (now LecFicDiffuseBin). If set to EcrFicPartageBin, it uses prior 1.7.0 way of writing xyz files (now EcrFicPartageMPIIO).

3.25 execute_parallel

Description: This keyword allows to run several computations in parallel on processors allocated to TRUST. The set of processors is split in N subsets and each subset will read and execute a different data file. Error messages usually written to stderr and stdout are redirected to .log files (journaling must be activated).

See also: interprete (3)

Usage:
execute_parallel {

liste cas n word1 word2 ... wordn

```
[ nb_procs n n1 n2 ... nn] } where
```

- **liste_cas** *n word1 word2 ... wordn*: N datafile1 ... datafileN. datafileX the name of a TRUST data file without the .data extension.
- **nb_procs** *n n1 n2 ... nn*: nb_procs is the number of processors needed to run each data file. If not given, TRUST assumes that computations are sequential.

3.26 export

Description: Class to make the object have a global range, if not its range will apply to the block only (the associated object will be destroyed on exiting the block).

See also: interprete (3)

Usage:

export

3.27 extract_2d_from_3d

Description: Keyword to extract a 2D mesh by selecting a boundary of the 3D mesh. To generate a 2D axisymmetric mesh prefer Extract_2Daxi_from_3D keyword.

See also: interprete (3) extract_2daxi_from_3d (3.28)

Usage:

extract_2d_from_3d dom3D bord dom2D where

- dom3D str: Domain name of the 3D mesh
- **bord** *str*: Boundary name. This boundary becomes the new 2D mesh and all the boundaries, in 3D, attached to the selected boundary, give their name to the new boundaries, in 2D.
- dom2D str: Domain name of the new 2D mesh

3.28 extract_2daxi_from_3d

Description: Keyword to extract a 2D axisymetric mesh by selecting a boundary of the 3D mesh.

See also: extract_2d_from_3d (3.27)

Usage:

extract_2daxi_from_3d dom3D bord dom2D where

- dom3D str: Domain name of the 3D mesh
- **bord** *str*: Boundary name. This boundary becomes the new 2D mesh and all the boundaries, in 3D, attached to the selected boundary, give their name to the new boundaries, in 2D.
- dom2D str: Domain name of the new 2D mesh

3.29 extraire_domaine

Description: Keyword to create a new domain built with the domain elements of the pb_name problem verifying the two conditions given by Condition_elements. The problem pb_name should have been discretized.

Keyword Discretize should have already been used to read the object.

See also: interprete (3)

Usage:
extraire_domaine {

domaine str
probleme str
[condition_elements str]
[sous_zone str]
}
where

• domaine str: Domain in which faces are saved
• probleme str: Problem from which faces should be extracted
• condition elements str

3.30 extraire plan

• sous zone str

Description: This keyword extracts a plane mesh named domain_name (this domain should have been declared before) from the mesh of the pb_name problem. The plane can be either a triangle (defined by the keywords Origine, Point1, Point2 and Triangle), either a regular quadrangle (with keywords Origine, Point1 and Point2), or either a generalized quadrangle (with keywords Origine, Point1, Point2, Point3). The keyword Epaisseur specifies the thickness of volume around the plane which contains the faces of the extracted mesh. The keyword via_extraire_surface will create a plan and use Extraire_surface algorithm. Inverse_condition_element keyword then will be used in the case where the plane is a boundary not well oriented, and avec_certains_bords_pour_extraire_surface is the option related to the Extraire_surface option named avec_certains_bords.

Keyword Discretize should have already been used to read the object. See also: interprete (3)

```
Usage:
extraire_plan {

domaine str
probleme str
epaisseur float
origine n x1 x2 ... xn
point1 n x1 x2 ... xn
point2 n x1 x2 ... xn
[ point3 n x1 x2 ... xn]
[ triangle ]
[ via_extraire_surface ]
[ inverse_condition_element ]
[ avec certains bords pour extraire surface n word1 word2 ... wordn]
```

```
where

• domaine str: domain_namme
• probleme str: pb_name
• epaisseur float
• origine n x1 x2 ... xn
• point1 n x1 x2 ... xn
• point2 n x1 x2 ... xn
• point3 n x1 x2 ... xn
• triangle
• via_extraire_surface
• inverse_condition_element
• avec_certains_bords_pour_extraire_surface n word1 word2 ... wordn
```

3.31 extraire surface

Description: This keyword extracts a surface mesh named domain_name (this domain should have been declared before) from the mesh of the pb_name problem. The surface mesh is defined by one or two conditions. The first condition is about elements with Condition_elements. For example: Condition_elements $x^*x+y^*y+z^*z<1$

Will define a surface mesh with external faces of the mesh elements inside the sphere of radius 1 located at (0,0,0). The second condition Condition_faces is useful to give a restriction.

By default, the faces from the boundaries are not added to the surface mesh excepted if option avec_les_bords is given (all the boundaries are added), or if the option avec_certains_bords is used to add only some boundaries.

Keyword Discretize should have already been used to read the object. See also: interprete (3)

```
Usage:
extraire_surface {

domaine str
probleme str
[condition_elements str]
[condition_faces str]
[avec_les_bords]
[avec_certains_bords n word1 word2 ... wordn]
}
where
```

- domaine str: Domain in which faces are saved
- **probleme** *str*: Problem from which faces should be extracted
- condition elements str
- condition_faces str
- avec_les_bords
- avec_certains_bords n word1 word2 ... wordn

3.32 extrudebord

Description: Class to generate an extruded mesh from a boundary of a tetrahedral or an hexahedral mesh. Warning: If the initial domain is a tetrahedral mesh, the boundary will be moved in the XY plane then

extrusion will be applied (you should maybe use the Transformer keyword on the final domain to have the domain you really want). You can use the keyword Ecrire_Fichier_Meshtv to generate a meshtv file to visualize your initial and final meshes.

This keyword can be used for example to create a periodic box extracted from a boundary of a tetrahedral or a hexaedral mesh. This periodic box may be used then to engender turbulent inlet flow condition for the main domain.

Note that ExtrudeBord in VEF generates 3 or 14 tetrahedra from extruded prisms.

```
Usage:
extrudebord {

domaine_init str
[direction x1 x2 (x3)]
[nb_tranches int]
[domaine_final str]
[nom_bord str]
[non_perio]
[hexa_old]
[trois_tetra]
[vingt_tetra]
[sans_passer_par_le2D int]
}
where
```

- **domaine_init** *str*: Initial domain with hexaedras or tetrahedras.
- **direction** $x1 \ x2 \ (x3)$: Directions for the extrusion.
- **nb_tranches** *int*: Number of elements in the extrusion direction.
- domaine final str: Extruded domain.
- nom_bord str: Name of the boundary of the initial domain where extrusion will be applied.
- **non_perio**: Extruded domain will not have periodic boundaries. So, the boundaries will be named devant (front) and derriere (back) instead of PERIO.
- hexa_old : Old algorithm for boundary extrusion from a hexahedral mesh.
- trois tetra: To extrude in 3 tetrahedras instead of 14 tetrahedras.
- vingt tetra: To extrude in 20 tetrahedras instead of 14 tetrahedras.
- sans_passer_par_le2D int: Only for non-regression

3.33 extrudeparoi

Description: Keyword dedicated in 3D (VEF) to create prismatic layer at wall. Each prism is cut into 3 tetraedra.

```
See also: interprete (3)

Usage:
extrudeparoi {

domaine str
nom_bord str
[epaisseur n x1 x2 ... xn]
[critere_absolu int]
[projection normale bord]
```

```
}
where
```

- domaine str: Name of the domain.
- nom_bord str: Name of the (no-slip) boundary for creation of prismatic layers.
- epaisseur n x1 x2 ... xn: n r1 r2 rn : (relative or absolute) width for each layer.
- **critere_absolu** *int*: relative (0, the default) or absolute (1) width for each layer.
- **projection_normale_bord**: keyword to project layers on the same plane that contiguous boundaries. defaut values are: epaisseur_relative 1 0.5 projection_normale_bord 1

3.34 extruder

Description: Class to create a 3D tetrahedral/hexahedral mesh (a prism is cut in 14) from a 2D triangular/quadrangular mesh.

```
See also: interprete (3) extruder_en3 (3.37)

Usage:
extruder {

domaine str
direction troisf
nb_tranches int
}
where
```

- domaine str: Name of the domain.
- **direction** *troisf* (3.35): Direction of the extrude operation.
- **nb** tranches *int*: Number of elements in the extrusion direction.

3.35 troisf

Description: Auxiliary class to extrude.

```
See also: objet_lecture (32)
Usage:
```

lx ly lz where

- lx float: X direction of the extrude operation.
- ly *float*: Y direction of the extrude operation.
- Iz *float*: Z direction of the extrude operation.

3.36 extruder en20

Description: It does the same task as Extruder except that a prism is cut into 20 tetraedra instead of 3. The name of the boundaries will be devant (front) and derriere (back). But you can change these names with the keyword RegroupeBord.

```
See also: interprete (3)
Usage:
extruder en20 {
```

```
domaine str
  [ direction troisf]
  nb_tranches int
}
where
```

- **domaine** *str*: Name of the domain.
- **direction** troisf(3.35): 0 Direction of the extrude operation.
- **nb_tranches** *int*: Number of elements in the extrusion direction.

3.37 extruder_en3

Description: Class to create a 3D tetrahedral/hexahedral mesh (a prism is cut in 3) from a 2D triangular/quadrangular mesh. The names of the boundaries (by default, devant (front) and derriere (back)) may be edited by the keyword nom_cl_devant and nom_cl_derriere. If NULL is written for nom_cl, then no boundary condition is generated at this place.

Recommendation: to ensure conformity between meshes (in case of fluid/solid coupling) it is recommended to extrude all the domains at the same time.

```
See also: extruder (3.34)

Usage:
extruder_en3 {

domaine n word1 word2 ... wordn
 [nom_cl_devant str]
 [nom_cl_derriere str]
 direction troisf
 nb_tranches int
}
where
```

- **domaine** *n word1 word2* ... *wordn*: List of the domains
- nom_cl_devant str: New name of the first boundary.
- nom_cl_derriere str: New name of the second boundary.
- **direction** *troisf* (3.35) for inheritance: Direction of the extrude operation.
- **nb_tranches** *int* for inheritance: Number of elements in the extrusion direction.

3.38 end

Synonymous: fin

Description: Keyword which must complete the data file. The execution of the data file stops when reaching this keyword.

See also: interprete (3)

Usage:

end

3.39 } Description: Block's end. See also: interprete (3) Usage:

3.40 imprimer_flux

Description: This keyword prints the flux per face at the specified domain boundaries in the data set. The fluxes are written to the .face files at a frequency defined by dt_impr, the evaluation printing frequency (refer to time scheme keywords). By default, fluxes are incorporated onto the edges before being displayed.

See also: interprete (3) imprimer_flux_sum (3.42)

Usage:

imprimer_flux domain_name noms_bord where

- domain_name str: Name of the domain.
- noms_bord bloc_lecture (3.41): List of boundaries, for ex: { Bord1 Bord2 }

3.41 bloc_lecture

Description: to read between two braces

See also: objet_lecture (32)

Usage:

bloc_lecture

where

• bloc_lecture str

3.42 imprimer_flux_sum

Description: This keyword prints the sum of the flux per face at the domain boundaries defined by the user in the data set. The fluxes are written into the .out files at a frequency defined by dt_impr, the evaluation printing frequency (refer to time scheme keywords).

See also: imprimer_flux (3.40)

Usage:

imprimer_flux_sum domain_name noms_bord where

- domain_name str: Name of the domain.
- noms_bord bloc_lecture (3.41): List of boundaries, for ex: { Bord1 Bord2 }

3.43 integrer_champ_med

Description: his keyword is used to calculate a flow rate from a velocity MED field read before. The method is either debit_total to calculate the flow rate on the whole surface, either integrale_en_z to calculate flow rates between z=zmin and z=zmax on nb_tranche surfaces. The output file indicates first the flow rate for the whole surface and then lists for each tranche: the height z, the surface average value, the surface area and the flow rate. For the debit_total method, only one tranche is considered. file:z Sum(u.dS)/Sum(dS) Sum(dS) Sum(u.dS)

```
See also: interprete (3)

Usage:
integrer_champ_med {
    champ_med str
    methode str into ['integrale_en_z', 'debit_total']
    [ zmin float]
    [ zmax float]
    [ nb_tranche int]
    [ fichier_sortie str]
}
where
```

- champ_med str
- **methode** *str into ['integrale_en_z', 'debit_total']*: to choose between the integral following z or over the entire height (debit_total corresponds to zmin=-DMAXFLOAT, ZMax=DMAXFLOAT, nb-tranche=1)
- zmin float
- zmax float
- nb_tranche int
- fichier_sortie str: name of the output file, by default: integrale.

3.44 interprete_geometrique_base

Description: Class for interpreting a data file

See also: interprete (3) create_domain_from_sous_zone (3.11)

Usage:

interprete_geometrique_base

3.45 lata_to_med

Description: To convert results file written with LATA format to MED file. Warning: Fields located on faces are not supported yet.

```
See also: interprete (3)

Usage:
lata_to_med [format] file file_med
where
```

• **format** *format_lata_to_med* (3.46): generated file post_med.data use format (MED or LATA or LML keyword).

- file str: LATA file to convert to the new format.
- file_med str: Name of the MED file.

3.46 format_lata_to_med

Description: not_set

See also: objet_lecture (32)

Usage:

mot [format]

where

- mot str into ['format_post_sup']
- **format** *str into ['lml', 'lata', 'lata_v1', 'lata_v2', 'med']*: generated file post_med.data use format (MED or LATA or LML keyword).

3.47 lata_to_other

Description: To convert results file written with LATA format to MED or LML format. Warning: Fields located at faces are not supported yet.

See also: interprete (3)

Usage:

lata_to_other [format] file file_post

where

- **format** *str into* ['lml', 'lata', 'lata_v1', 'lata_v2', 'med']: Results format (MED or LATA or LML keyword).
- file str: LATA file to convert to the new format.
- file_post str: Name of file post.

3.48 lire ideas

Description: Read a geom in a unv file. 3D tetra mesh elements only may be read by TRUST.

See also: interprete (3)

Usage:

lire_ideas nom_dom file

where

- nom dom str: Name of domain.
- file str: Name of file.

3.49 mailler

Description: The Mailler (Mesh) interpretor allows a Domain type object domaine to be meshed with objects objet_1, objet_2, etc...

See also: interprete (3)

```
Usage:
mailler domaine bloc
where
   • domaine str: Name of domain.
   • bloc list_bloc_mailler (3.50): Instructions to mesh.
3.50
      list_bloc_mailler
Description: List of block mesh.
See also: listobj (31.3)
Usage:
{ object1, object2....}
list of mailler_base (3.50.1) separeted with,
3.50.1 mailler_base
Description: Basic class to mesh.
See also: objet_lecture (32) pave (3.50.2) epsilon (3.50.12) domain (3.50.13)
Usage:
3.50.2 pave
Description: Class to create a pave (block) with boundaries.
See also: mailler_base (3.50.1)
Usage:
pave name bloc list_bord
where
   • name str: Name of the pave (block).
   • bloc bloc_pave (3.50.3): Definition of the pave (block).
   • list_bord list_bord (3.50.4): Domain boundaries definition.
3.50.3 bloc_pave
Description: Class to create a pave.
See also: objet_lecture (32)
Usage:
      [ Origine x1 \ x2 \ (x3)]
      [longueurs x1 \ x2 \ (x3)]
      [ nombre_de_noeuds n1 n2 (n3)]
      [ facteurs x1 x2 (x3)]
```

[symx]

```
[ symy ]
  [ symz ]
  [ tanh float]
  [ tanh_dilatation int into [-1, 0, 1]]
  [ tanh_taille_premiere_maille float]
}
where
```

- **Origine** x1 x2 (x3): Keyword to define the pave (block) origin, that is to say one of the 8 block points (or 4 in a 2D coordinate system).
- **longueurs** x1 x2 (x3): Keyword to define the block dimensions, that is to say knowing the origin, length along the axes.
- **nombre_de_noeuds** *n1 n2 (n3)*: Keyword to define the discretization (nodenumber) in each direction.
- **facteurs** x1 x2 (x3): Keyword to define stretching factors for mesh discretization in each direction. This is a real number which must be positive (by default 1.0). A stretching factor other than 1 allows refinement on one edge in one direction.
- **symx**: Keyword to define a block mesh that is symmetrical with respect to the YZ plane (respectively Y-axis in 2D) passing through the block centre.
- **symy**: Keyword to define a block mesh that is symmetrical with respect to the XZ plane (respectively X-axis in 2D) passing through the block centre.
- symz: Keyword defining a block mesh that is symmetrical with respect to the XY plane passing through the block centre.
- tanh float: Keyword to generate mesh with tanh (hyperbolic tangent) variation.
- tanh_dilatation int into [-1, 0, 1]: Keyword to generate mesh with tanh (hyperbolic tangent) variation. tanh_dilatation: The value may be -1,0,1 (0 by default): 0: coarse mesh at the middle of the channel and smaller near the walls 1: coarse mesh at the bottom of the channel and smaller near the top -1: coarse mesh at the top of the channel and smaller near the bottom.
- tanh_taille_premiere_maille *float*: Size of the first cell of the mesh with tanh (hyperbolic tangent) variation in the Y direction.

3.50.4 list_bord

Description: The block sides.

See also: listobj (31.3)

Usage: { object1 object2 } list of bord_base (3.50.5)

3.50.5 bord base

Description: Basic class for block sides. Block sides that are neither edges nor connectors are not specified. The duplicate nodes of two blocks in contact are automatically recognized and deleted.

See also: objet lecture (32) bord (3.50.6) raccord (3.50.10) internes (3.50.11)

Usage:

3.50.6 bord

Description: The block side is not in contact with another block and boundary conditions are applied to it.

```
bord nom defbord
where
   • nom str: Name of block side.
   • defbord defbord (3.50.7): Definition of block side.
3.50.7 defbord
Description: Class to define an edge.
See also: objet_lecture (32) defbord_2 (3.50.8) defbord_3 (3.50.9)
Usage:
3.50.8 defbord 2
Description: 1-D edge (straight line) in the 2-D space.
See also: (3.50.7)
Usage:
dir eq pos pos2_min inf1 dir2 inf2 pos2_max
where
   • dir str into ['X', 'Y']: Edge is perpendicular to this direction.
   • eq str into ['=']: Equality sign.
   • pos float: Position value.
   • pos2_min float: Minimal value.
   • inf1 str into ['<=']: Less than or equal to sign.
   • dir2 str into ['X', 'Y']: Edge is parallel to this direction.
   • inf2 str into ['<=']: Less than or equal to sign.
   • pos2 max float: Maximal value.
3.50.9 defbord_3
Description: 2-D edge (plane) in the 3-D space.
See also: (3.50.7)
Usage:
dir eq pos pos2_min inf1 dir2 inf2 pos2_max pos3_min inf3 dir3 inf4 pos3_max
where
   • dir str into ['X', 'Y', 'Z']: Edge is perpendicular to this direction.
   • eq str into ['=']: Equality sign.
   • pos float: Position value.
   • pos2_min float: Minimal value.
   • inf1 str into ['<=']: Less than or equal to sign.
   • dir2 str into ['X', 'Y']: Edge is parallel to this direction.
   • inf2 str into ['<=']: Less than or equal to sign.
   • pos2_max float: Maximal value.
   • pos3_min float: Minimal value.
```

See also: bord_base (3.50.5)

Usage:

- inf3 str into ['<=']: Less than or equal to sign.
- dir3 str into ['Y', 'Z']: Edge is parallel to this direction.
- inf4 str into ['<=']: Less than or equal to sign.
- pos3_max float: Maximal value.

3.50.10 raccord

Description: The block side is in contact with the block of another domain (case of two coupled problems).

See also: bord_base (3.50.5)

Usage:

raccord type1 type2 nom defbord where

- type1 str into ['local', 'distant']: Contact type.
- type2 str into ['homogene']: Contact type.
- nom str: Name of block side.
- **defbord** *defbord* (3.50.7): Definition of block side.

3.50.11 internes

Description: To indicate that the block has a set of internal faces (these faces will be duplicated automatically by the program and will be processed in a manner similar to edge faces).

Two boundaries with the same boundary conditions may have the same name (whether or not they belong to the same block).

The keyword Internes (Internal) must be used to execute a calculation with plates, followed by the equation of the surface area covered by the plates.

See also: bord_base (3.50.5)

Usage:

internes nom defbord

where

- nom str: Name of block side.
- **defbord** *defbord* (3.50.7): Definition of block side.

3.50.12 epsilon

Description: Two points will be confused if the distance between them is less than eps. By default, eps is set to 1e-12. The keyword Epsilon allows an alternative value to be assigned to eps.

See also: mailler_base (3.50.1)

Usage:

epsilon eps

where

• eps float: New value of precision.

3.50.13 domain

```
Description: Class to reuse a domain.

See also: mailler_base (3.50.1)

Usage:
domain domain_name
where

• domain name str: Name of domain.
```

3.51 maillerparallel

Description: creates a parallel distributed hexaedral mesh of a parallelipipedic box. It is equivalent to creating a mesh with a single Pave, splitting it with Decouper and reloading it in parallel with Scatter. It only works in 3D at this time. It can also be used for a sequential computation (with all NPARTS=1)}

```
See also: interprete (3)
Usage:
maillerparallel {
     domain str
     nb nodes n n1 n2 ... nn
     splitting n n 1 n 2 \dots n n
     ghost thickness int
     [ perio_x ]
     [perio_y]
     [perio z]
     [function_coord_x str]
     [function_coord_y str]
     [function_coord_z str]
     [ file_coord_x str]
     [file_coord_y str]
     [ file_coord_z str]
     [boundary_xmin str]
     [boundary_xmax str]
     [boundary_ymin str]
     [boundary_ymax str]
     [boundary_zmin str]
     [boundary zmax str]
}
where
```

- **domain** str: the name of the domain to mesh (it must be an empty domain object).
- **nb_nodes** *n n1 n2* ... *nn*: dimension defines the spatial dimension (currently only dimension=3 is supported), and nX, nY and nZ defines the total number of nodes in the mesh in each direction.
- **splitting** *n n1 n2 ... nn*: dimension is the spatial dimension and npartsX, npartsY and npartsZ are the number of parts created. The product of the number of parts must be equal to the number of processors used for the computation.
- **ghost_thickness** *int*: he number of ghost cells (equivalent to the epaisseur_joint parameter of Decouper.
- **perio** x: change the splitting method to provide a valid mesh for periodic boundary conditions.

- perio_y: change the splitting method to provide a valid mesh for periodic boundary conditions.
- perio_z : change the splitting method to provide a valid mesh for periodic boundary conditions.
- function_coord_x str: By default, the meshing algorithm creates nX nY nZ coordinates ranging between 0 and 1 (eg a unity size box). If function_coord_x} is specified, it is used to transform the [0,1] segment to the coordinates of the nodes. funcX must be a function of the x variable only.
- function_coord_y str: like function_coord_x for y
- function_coord_z str: like function_coord_x for z
- file_coord_x str: Keyword to read the Nx floating point values used as nodes coordinates in the file.
- file_coord_y str: idem file_coord_x for y
- file_coord_z str: idem file_coord_x for z
- **boundary_xmin** *str*: the name of the boundary at the minimum X direction. If it not provided, the default boundary names are xmin, xmax, ymin, ymax, zmin and zmax. If the mesh is periodic in a given direction, only the MIN boundary name is used, for both sides of the box.
- boundary_xmax str
- boundary_ymin str
- boundary_ymax str
- boundary_zmin str
- boundary_zmax str

3.52 modif_bord_to_raccord

Description: Keyword to convert a boundary of domain_name domain of kind Bord to a boundary of kind Raccord (named boundary_name). It is useful when using meshes with boundaries of kind Bord defined and to run a coupled calculation.

```
See also: interprete (3)

Usage: modif_bord_to_raccord domaine nom_bord where
```

- domaine str: Name of domain
- **nom_bord** *str*: Name of the boundary to transform.

3.53 moyenne_volumique

Description: This keyword should be used after Resoudre keyword. It computes the convolution product of one or more fields with a given filtering function.

```
See also: interprete (3)

Usage:
moyenne_volumique {

nom_pb str
nom_domaine str
noms_champs n word1 word2 ... wordn
[nom_fichier_post str]
[format_post str]
[localisation str into ['elem', 'som']]
fonction_filtre bloc_lecture
```

```
}
where
```

- **nom_pb** *str*: name of the problem where the source fields will be searched.
- **nom_domaine** *str*: name of the destination domain (for example, it can be a coarser mesh, but for optimal performance in parallel, the domain should be split with the same algorithm as the computation mesh, eg, same tranche parameters for example)
- **noms_champs** *n word1 word2 ... wordn*: name of the source fields (these fields must be accessible from the postraitement) N source_field1 source_field2 ... source_fieldN
- **nom_fichier_post** *str*: indicates the filename where the result is written
- **format_post** *str*: gives the fileformat for the result (by default : lata)
- **localisation** *str into ['elem', 'som']*: indicates where the convolution product should be computed: either on the elements or on the nodes of the destination domain.
- **fonction_filtre** *bloc_lecture* (3.41): to specify the given filter

```
Fonction_filtre {
type filter_type
demie-largeur l
[ omega w ]
[ expression string ]
}
```

type filter_type: This parameter specifies the filtering function. Valid filter_type are:

Boite is a box filter, $f(x, y, z) = (abs(x) < l) * (abs(y) < l) * (abs(z) < l)/(8l^3)$

Chapeau is a hat filter (product of hat filters in each direction) centered on the origin, the half-width of the filter being 1 and its integral being 1.

Quadra is a 2nd order filter.

Gaussienne is a normalized gaussian filter of standard deviation sigma in each direction (all field elements outside a cubic box defined by clipping_half_width are ignored, hence, taking clipping_half_width=2.5*sigma yields an integral of 0.99 for a uniform unity field).

Parser allows a user defined function of the x,y,z variables. All elements outside a cubic box defined by clipping_half_width are ignored. The parser is much slower than the equivalent c++ coded function...

demie-largeur 1: This parameter specifies the half width of the filter

[omega w] : This parameter must be given for the gaussienne filter. It defines the standard deviation of the gaussian filter.

[expression string]: This parameter must be given for the parser filter type. This expression will be interpreted by the math parser with the predefined variables x, y and z.

3.54 nettoiepasnoeuds

Description: Keyword NettoiePasNoeuds does not delete useless nodes (nodes without elements) from a domain.

```
See also: interprete (3)
```

Usage

nettoiepasnoeuds domain_name

where

• domain_name str: Name of domain.

3.55 option_vdf

```
Description: Class of VDF options.

See also: interprete (3)

Usage: option_vdf {

    [traitement_coins str into ['oui', 'non']]
    [p_imposee_aux_faces str into ['oui', 'non']]
}
where
```

- traitement_coins str into ['oui', 'non']: Treatment of corners (yes or no).
- p_imposee_aux_faces str into ['oui', 'non']: Pressure imposed at the faces (yes or no).

3.56 orientefacesbord

Description: Keyword to modify the order of the boundary verteces included in a domain, such that the surface normals are outer pointing.

See also: interprete (3)

Usage:

orientefacesbord domain_name

where

• domain_name str: Name of domain.

3.57 partition

Synonymous: decouper

Description: Class for parallel calculation to cut a domain for each processor. By default, this keyword is commented in the reference test cases.

See also: interprete (3)

Usage:

partition domaine bloc_decouper where

- domaine str: Name of the domain to be cut.
- **bloc_decouper** *bloc_decouper* (3.58): Description how to cut a domain.

3.58 bloc_decouper

Description: Auxiliary class to cut a domain.

```
See also: objet_lecture (32)
Usage:
```

```
[ Partition_tool|partitionneur partitionneur_deriv]
    [ larg_joint int]
    [ zones_name|nom_zones str]
    [ ecrire_decoupage str]
    [ ecrire_lata str]
    [ nb_parts_tot int]
    [ formatte ]
    [ periodique n word1 word2 ... wordn]
    [ reorder int]
}
where
```

- **Partition_toollpartitionneur** *partitionneur_deriv* (23): Defines the partitionning algorithm (the effective C++ object used is 'Partitionneur ALGORITHM NAME').
- larg_joint int: This keyword specifies the thickness of the virtual ghost zone (data known by one processor though not owned by it). The default value is 1 and is generally correct for all algorithms except the QUICK convection scheme that require a thickness of 2. Since the 1.5.5 version, the VEF discretization imply also a thickness of 2 (except VEF P0). Any non-zero positive value can be used, but the amount of data to store and exchange between processors grows quickly with the thickness.
- **zones_namelnom_zones** *str*: Name of the files containing the different partition of the domain. The files will be:

```
name_0001.Zones name_0002.Zones
```

...

name_000n.Zones. If this keyword is not specified, the geometry is not written on disk (you might just want to generate a 'ecrire_decoupage' or 'ecrire_lata').

- ecrire_decoupage str: After having called the partitionning algorithm, the resulting partition is written on disk in the specified filename. See also partitionneur Fichier_Decoupage. This keyword is useful to change the partition numbers: first, you write the partition into a file with the option ecrire_decoupage. This file contains the zone number for each element's mesh. Then you can easily permute zone numbers in this file. Then read the new partition to create the .Zones files with the Fichier_Decoupage keyword.
- ecrire_lata str
- **nb_parts_tot** *int*: Keyword to generates N .Zone files, instead of the default number M obtained after the partitionning algorithm. N must be greater or equal to M. This option might be used to perform coupled parallel computations. Supplemental empty zones from M to N-1 are created. This keyword is used when you want to run a parallel calculation on several domains with for example, 2 processors on a first domain and 10 on the second domain because the first domain is very small compare to second one. You will write Nb_parts 2 and Nb_parts_tot 10 for the first domain and Nb_parts 10 for the second domain.
- **formatte** : Optional keyword to have formatted format for .Zones files. By default, it is binary format.
- **periodique** *n word1 word2* ... *wordn*: N BOUNDARY_NAME_1 BOUNDARY_NAME_2 ... : N is the number of boundary names given. Periodic boundaries must be declared by this method. The partitionning algorithm will ensure that facing nodes and faces in the periodic boundaries are located on the same processor.
- **reorder** *int*: If this option is set to 1 (0 by default), the partition is renumbered in order that the processes which communicate the most are nearer on the network. This may slighly improves parallel performance.

3.59 pilote_icoco

```
Description: not_set

See also: interprete (3)

Usage:
pilote_icoco {
    pb_name str
    main str

}
where

• pb_name str
• main str
```

3.60 porosites

Description: To define the volume porosity and surface porosity that are uniform in every direction in space on a sub-area.

Porosity was only usable in VDF discretization, and now available for VEF P1NC/P0.

Observations:

- Surface porosity values must be given in every direction in space (set this value to 1 if there is no porosity),
- Prior to defining porosity, the problem must have been discretized.

Can 't be used in VEF discretization, use Porosites_champ instead.

```
See also: interprete (3)

Usage:
porosites pb sous_zone bloc
where
```

- **pb** *str*: Name of the problem to which the sub-area is attached.
- sous_zone str: Name of the sub-area to which porosity are allocated.
- **bloc** *bloc_lecture_poro* (3.61): Surface and volume porosity values.

3.61 bloc_lecture_poro

Description: Surface and volume porosity values.

```
See also: objet_lecture (32)

Usage:
{

volumique float
surfacique n x1 x2 ... xn
}
where
```

- volumique *float*: Volume porosity value.
- **surfacique** n x1 x2 ... xn: Surface porosity values (in X, Y, Z directions).

3.62 porosites_champ

Description: The porosity is given at each element and the porosity at each face, Psi(face), is calculated by the average of the porosities of the two neighbour elements Psi(elem1), Psi(elem2): Psi(face)=2/(1/Psi(elem1)+1/Psi(elem2)).

Keyword Discretize should have already been used to read the object.

```
See also: interprete (3)
Usage:
```

```
porosites_champ pb ch
where
```

- **pb** *str*: Name of the problem to which the sub-area is attached.
- ch champ_base (15.1): field used to define the porosity field

3.63 postraiter_domaine

Description: To write one or more domains in a file with a specified format (MED,LML,LATA).

```
See also: interprete (3)
Usage:
postraiter_domaine {
      format str into ['lml', 'lata', 'lata_v1', 'lata_v2', 'med']
      [ file|fichier str]
      [domaine str]
      [domaines bloc_lecture]
      [joints_non_postraites int into [0, 1]]
      [ binaire int into [0, 1]]
      [ ecrire_frontiere int into [0, 1]]
}
where
```

- format str into ['lml', 'lata', 'lata v1', 'lata v2', 'med']: File format.
- **filelfichier** *str*: The file name can be changed with the fichier option.
- domaine str: Name of domain
- **domaines** *bloc_lecture* (3.41): Names of domains : { name1 name2 }
- joints_non_postraites int into [0, 1]: The joints_non_postraites (1 by default) will not write the boundaries between the partitioned mesh.
- binaire int into [0, 1]: Binary (binaire 1) or ASCII (binaire 0) may be used. By default, it is 0 for LATA and only ASCII is available for LML and only binary is available for MED.
- ecrire_frontiere int into [0, 1]: This option will write (if set to 1, the default) or not (if set to 0) the boundaries as fields into the file (it is useful to not add the boundaries when writing a domain extracted from another domain)

3.64 precisiongeom

Description: Class to change the way floating-point number comparison is done. By default, two numbers are equal if their absolute difference is smaller than 1e-10. The keyword is useful to modify this value. Moreover, nodes coordinates will be written in .geom files with this same precision.

See also: interprete (3)

Usage:


precisiongeom precision


where

• precision *float*: New value of precision.

3.65 raffiner_anisotrope

Description: Only for VEF discretizations, allows to cut triangle elements in 3, or tetrahedra in 4 parts, by defining a new summit located at the center of the element:

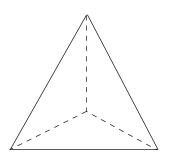

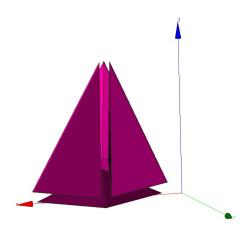

Note that such a cut creates flat elements (anisotropic).

See also: interprete (3)

Usage:

raffiner_anisotrope domain_name

where


• domain_name str: Name of domain.

3.66 raffiner_isotrope


Synonymous: raffiner_simplexes

Description: For VDF and VEF discretizations, allows to cut triangles/quadrangles or tetrahedral/hexaedras

elements respectively in 4 or 8 new ones by defining new summits located at the middle of edges (and center of faces and elements for quadrangles and hexaedra). Such a cut preserves the shape of original elements (isotropic). For 2D elements:

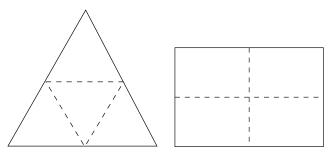

For 3D elements:

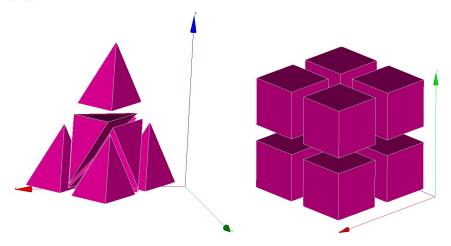

See also: interprete (3)

Usage:

raffiner_isotrope domain_name where

• domain_name str: Name of domain.

3.67 read

Synonymous: lire

Description: Interpretor to read the a_object objet defined between the braces.

See also: interprete (3)

Usage:

read a_object bloc where

- **a_object** *str*: Object to be read.
- bloc str: Definition of the object.

3.68 read_file

Synonymous: lire_fichier

Description: Keyword to read the object name_obj contained in the file filename.

This is notably used when the calculation domain has already been meshed and the mesh contains the file filename, simply write read_file dom filename (where dom is the name of the meshed domain).

If the filename is ;, is to execute a data set given in the file of name name_obj (a space must be entered between the semi-colon and the file name).

See also: interprete (3) read_unsupported_ascii_file_from_icem (3.71) read_file_binary (3.69)

Usage:

read_file name_obj filename

where

- name_obj str: Name of the object to be read.
- filename str: Name of the file.

3.69 read_file_binary

Synonymous: lire_fichier_bin

Description: Keyword to read an object name_obj in the unformatted type file filename.

See also: read_file (3.68)

Usage:

read_file_binary name_obj filename

where

- name_obj str: Name of the object to be read.
- filename str: Name of the file.

3.70 lire_tgrid

Description: Keyword to reaf Tgrid/Gambit mesh files. 2D (triangles or quadrangles) and 3D (tetra or hexa elements) meshes, may be read by TRUST.

See also: interprete (3)

Usage:

lire tgrid dom filename

where

- dom str: Name of domaine.
- **filename** *str*: Name of file containing the mesh.

3.71 read_unsupported_ascii_file_from_icem

Description: not_set

See also: read file (3.68)

Usage:

read_unsupported_ascii_file_from_icem name_obj filename where

- name_obj str: Name of the object to be read.
- filename str: Name of the file.

3.72 orienter_simplexes

Synonymous: rectify_mesh

Description: Keyword to raffine a mesh

See also: interprete (3)

Usage:

orienter_simplexes domain_name

where

• domain_name str: Name of domain.

3.73 redresser_hexaedres_vdf

Description: Keyword to convert a domain (named domain_name) with quadrilaterals/VEF hexaedras which looks like rectangles/VDF hexaedras into a domain with real rectangles/VDF hexaedras.

See also: interprete (3)

Usage:

redresser_hexaedres_vdf domain_name

where

• domain_name str: Name of domain to resequence.

3.74 refine_mesh

Description: not_set

See also: interprete (3)

Usage:

refine_mesh domaine

where

• domaine str

3.75 regroupebord

Description: Keyword to build one boundary new_bord with several boundaries of the domain named domaine.

See also: interprete (3)

Usage:

regroupebord domaine new_bord bords where

• domaine str: Name of domain

• **new_bord** *str*: Name of the new boundary

• **bords** *bloc_lecture* (3.41): { Bound1 Bound2 }


3.76 remove_elem

Description: Keyword to remove element from a VDF mesh (named domaine_name), either from an explicit list of elements or from a geometric condition defined by a condition f(x,y)>0 in 2D and f(x,y,z)>0 in 3D. All the new borders generated are gathered in one boundary called: newBord (to rename it, use RegroupeBord keyword. To split it to different boundaries, use DecoupeBord_Pour_Rayonnement keyword). Example of a removed zone of radius 0.2 centered at (x,y)=(0.5,0.5):


Remove_elem dom { fonction $0.2 * 0.2 - (x - 0.5)^2 - (y - 0.5)^2 > 0$ }

Warning: the thickness of removed zone has to be large enough to avoid singular nodes as decribed below:

UNCORRECT - 2 SINGULAR NODES

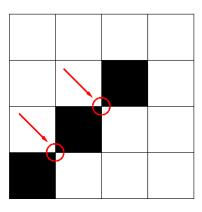

CORRECT

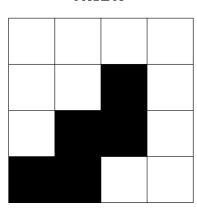

See also: interprete (3)

Usage:

remove_elem domaine bloc where

- domaine str: Name of domain
- **bloc** remove_elem_bloc (3.77)

3.77 remove elem bloc

Description: not_set

```
See also: objet_lecture (32)

Usage:
{
    [liste n n1 n2 ... nn]
    [fonction str]
}
where
    • liste n n1 n2 ... nn
    • fonction str
```

3.78 remove_invalid_internal_boundaries

Description: Keyword to suppress an internal boundary of the domain_name domain. Indeed, some mesh tools may define internal boundaries (eg: for post processing task after the calculation) but TRUST does not support it yet.

See also: interprete (3)

Usage:

 $remove_invalid_internal_boundaries \quad domain_name$

where

• domain_name str: Name of domain.

3.79 reordonner_faces_periodiques

Description: The Reordonner_faces_periodiques keyword is mandatory to first define the periodic boundaries and also to reorder the faces of theses boundaries.

See also: interprete (3)

Usage:

reordonner_faces_periodiques domaine nom_bord_perio where

• domaine str: Name of domain.

• nom_bord_perio str: boundary_name.

3.80 reorienter_tetraedres

Description: This keyword is mandatory for front-tracking computations with the VEF discretization. For each tetrahedral element of the domain, it checks if it has a positive volume. If the volume (determinant of the three vectors) is negative, it swaps two nodes to reverse the orientation of this tetrahedron.

See also: interprete (3)

Usage:

reorienter_tetraedres domain_name

where

• domain_name str: Name of domain.

3.81 reorienter_triangles

Description: not_set

See also: interprete (3)

Usage:

reorienter_triangles domain_name

where

• domain_name str: Name of domain.

3.82 reordonner

Description: The Reordonner interpretor is required sometimes for a VDF mesh which is not produced by the internal mesher. Example where this is used:

Read_file dom fichier.geom

Reordonner dom

Observations: This keyword is redundant when the mesh that is read is correctly sequenced in the TRUST sense. This significant mesh operation may take some time... The message returned by TRUST is not explicit when the Reordonner (Resequencing) keyword is required but not included in the data set...

See also: interprete (3)

Usage:

reordonner domain_name

where

• domain_name str: Name of domain to resequence.

3.83 rotation

Description: Keyword to rotate the geometry of an arbitrary angle around an axis aligned with Ox, Oy or Oz axis.

See also: interprete (3)

Usage:

rotation domain_name dir coord1 coord2 angle

where

- **domain_name** str: Name of domain to wich the transformation is applied.
- dir str into ['X', 'Y', 'Z']: X, Y or Z to indicate the direction of the rotation axis
- **coord1** *float*: coordinates of the center of rotation in the plane orthogonal to the rotation axis. These coordinates must be specified in the direct triad sense.
- coord2 float
- angle float: angle of rotation (in degrees)

3.84 scatter

Description: Class to read a partionned mesh in the files during a parallel calculation. The files are in binary format.

See also: interprete (3) scatterformatte (3.85) scattermed (3.86)

Usage:

scatter file domaine

where

- file str: Name of file.
- domaine str: Name of domain.

3.85 scatterformatte

Description: Class to read a partionned mesh in the files during a parallel calculation. The files are formatted

See also: scatter (3.84)

Usage:

scatterformatte file domaine

where

- file str: Name of file.
- domaine str: Name of domain.

3.86 scattermed

Description: This keyword will read the partition of the domain_name domain into a the MED format files file.med created by Medsplitter.

See also: scatter (3.84)

Usage:

scattermed file domaine

where

- file str: Name of file.
- domaine str: Name of domain.

3.87 solve

Synonymous: resoudre

Description: Interpretor to start calculation with TRUST.

Keyword Discretize should have already been used to read the object.

See also: interprete (3)

Usage:

solve pb

where

• **pb** *str*: Name of problem to be solved.

3.88 supprime_bord

```
Description: Keyword to remove boundaries (named Boundary_name1 Boundary_name2) of the domain
named domain_name.
```

```
See also: interprete (3)
Usage:
supprime_bord domaine bords
where
   • domaine str: Name of domain
```

• **bords** *list_nom* (3.89): { Boundary_name1 Boundaray_name2 }

3.89 list_nom

```
Description: List of name.
See also: listobj (31.3)
Usage:
{ object1 object2 .... }
list of nom_anonyme (22.1)
```

3.90 system

Description: To run Unix commands from the data file. Example: System 'echo The End | mail trust@cea.fr'

```
See also: interprete (3)
```

Usage:

system cmd

where

• cmd str: command to execute.

3.91 test_solveur

```
Description: To test several solvers
See also: interprete (3)
Usage:
```

```
test_solveur {
     [fichier_secmem str]
     [fichier_matrice str]
     [ fichier_solution str]
     [ nb_test int]
     [impr]
     [solveur_sys_base]
     [ fichier_solveur str]
     [ genere_fichier_solveur float]
```

```
[seuil_verification float]
     [ pas_de_solution_initiale ]
     [ascii]
}
where
   • fichier_secmem str: Filename containing the second member B
   • fichier_matrice str: Filename containing the matrix A
   • fichier solution str: Filename containing the solution x
   • nb test int: Number of tests to measure the time resolution (one preconditionnement)
   • impr : To print the convergence solver
   • solveur solveur_sys_base (9.12): To specify a solver
   • fichier_solveur str: To specify a file containing a list of solvers
   • genere_fichier_solveur float: To create a file of the solver with a threshold convergence
   • seuil verification float: Check if the solution satisfy ||Ax-B||precision
   • pas_de_solution_initiale : Resolution isn't initialized with the solution x
   • ascii : Ascii files
3.92 testeur
Description: not_set
See also: interprete (3)
Usage:
testeur data
where
   • data bloc_lecture (3.41)
3.93
      testeur_medcoupling
Description: not_set
See also: interprete (3)
testeur_medcoupling pb_name field_name
where
   • pb name str: Name of domain.
```


3.94 tetraedriser

• field_name str: Name of domain.

Description: To achieve a tetrahedral mesh based on a mesh comprising blocks, the Tetrahedralise) interpretor is used in VEF discretization. Initial block is divided in 6 tetrahedra:

See also: interprete (3) tetraedriser_homogene (3.95) tetraedriser_homogene_fin (3.97) tetraedriser_homogene_compact (3.96) tetraedriser_par_prisme (3.98)

Usage:

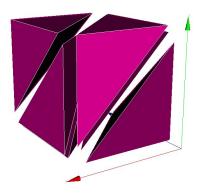


tetraedriser domain_name where

• domain_name str: Name of domain.

3.95 tetraedriser_homogene

Description: Use the Tetraedriser_homogene (Homogeneous_Tetrahedralisation) interpretor in VEF discretization to mesh a block in tetrahedrals. Each block hexahedral is no longer divided into 6 tetrahedrals (keyword Tetraedriser (Tetrahedralise)), it is now broken down into 40 tetrahedrals. Thus a block defined with 11 nodes in each X, Y, Z direction will contain 10*10*10*40=40,000 tetrahedrals. This also allows problems in the mesh corners with the P1NC/P1iso/P1bulle or P1/P1 discretization items to be avoided. Initial block is divided in 40 tetrahedra:

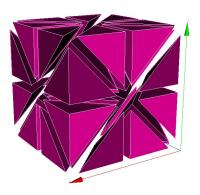

See also: tetraedriser (3.94)

Usage:


tetraedriser_homogene domain_name where

• domain_name str: Name of domain.

3.96 tetraedriser_homogene_compact

Description: This new discretization generates tetrahedral elements from cartesian or non-cartesian hexahedral elements. The process cut each hexahedral in 6 pyramids, each of them being cut then in 4 tetrahedral.

So, in comparison with tetra_homogene, less elements (*24 instead of*40) with more homogeneous volumes are generated. Moreover, this process is done in a faster way. Initial block is divided in 24 tetrahedra:

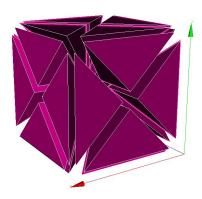

See also: tetraedriser (3.94)

Usage:


tetraedriser_homogene_compact domain_name where

• domain_name str: Name of domain.

3.97 tetraedriser_homogene_fin

Description: Tetraedriser_homogene_fin is the recommended option to tetrahedralise blocks. As an extension (subdivision) of Tetraedriser_homogene_compact, this last one cut each initial block in 48 tetrahedra (against 24, previously). This cutting ensures:

- a correct cutting in the corners (in respect to pressure discretization PreP1B),
- a better isotropy of elements than with Tetraedriser_homogene_compact,
- a better alignment of summits (this could have a benefit effect on calculation near walls since first elements in contact with it are all contained in the same constant thickness and ii/ by the way, a 3D cartesian grid based on summits can be engendered and used to realise spectral analysis in HIT for instance). Initial block is divided in 48 tetrahedra:

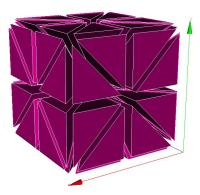

See also: tetraedriser (3.94)


Usage:

tetraedriser_homogene_fin domain_name where

• domain_name str: Name of domain.

3.98 tetraedriser_par_prisme

Description: Tetraedriser_par_prisme generates 6 iso-volume tetrahedral element from primary hexahedral one (contrarily to the 5 elements ordinarily generated by tetraedriser). This element is suitable for calculation of gradients at the summit (coincident with the gravity centre of the jointed elements related with) and spectra (due to a better alignment of the points).

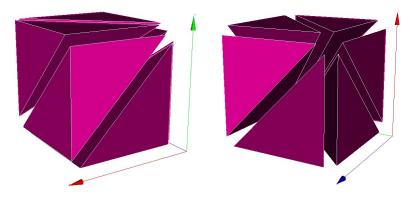

Initial block is divided in 6 prismes.

See also: tetraedriser (3.94)

Usage:

tetraedriser_par_prisme domain_name where

• domain_name str: Name of domain.

3.99 transformer

Description: Keyword to transform the coordinates of the geometry.

Exemple to rotate your mesh by a 90o rotation and to scale the z coordinates by a factor 2: Transformer domain_name -y -x 2*z


See also: interprete (3)

Usage:

transformer domain_name formule where

- domain_name str: Name of domain.
- **formule** *word1 word2 (word3)*: Function_for_x Function_for_y

 $Function_forz$

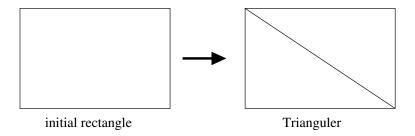

3.100 trianguler

Description: To achieve a triangular mesh from a mesh comprising rectangles (2 triangles per rectangle). Should be used in VEF discretization. Principle:

See also: interprete (3) trianguler_h (3.102) trianguler_fin (3.101)

Usage:

trianguler domain_name

where


• domain_name str: Name of domain.

3.101 trianguler_fin

Description: Trianguler_fin is the recommended option to triangulate rectangles.

As an extension (subdivision) of Triangulate_h option, this one cut each initial rectangle in 8 triangles (against 4, previously). This cutting ensures :

- a correct cutting in the corners (in respect to pressure discretization PreP1B).
- a better isotropy of elements than with Trianguler_h option.
- a better alignment of summits (this could have a benefit effect on calculation near walls since first elements in contact with it are all contained in the same constant thickness, and, by this way, a 2D cartesian grid based on summits can be engendered and used to realize statistical analysis in plane channel configuration for instance). Principle:

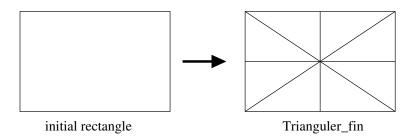

See also: trianguler (3.100)


Usage:

trianguler_fin domain_name where

• domain_name str: Name of domain.

3.102 trianguler_h

Description: To achieve a triangular mesh from a mesh comprising rectangles (4 triangles per rectangle). Should be used in VEF discretization. Principle:

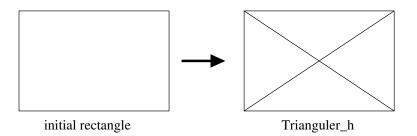

See also: trianguler (3.100)

Usage:

trianguler_h domain_name

where

• **domain_name** *str*: Name of domain.

3.103 verifier_qualite_raffinements

Description: not_set

See also: interprete (3)

Usage:

 $verifier_qualite_raffinements \quad domain_names$

where

• domain_names vect_nom (3.104)

3.104 vect_nom

Description: Vect of name.

See also: listobj (31.3)

Usage:

n object1 object2

list of nom_anonyme (22.1)

3.105 verifier_simplexes

Description: Keyword to raffine a simplexes

See also: interprete (3)

Usage:

```
verifier_simplexes domain_name where
```

• domain_name str: Name of domain.

3.106 verifiercoin

Description: This keyword subdivides inconsistent 2D/3D cells used with VEFPreP1B discretization. Must be used before the mesh is discretized. The Read_file option can be used only if the file.decoupage_som was previously created by TRUST. This option, only in 2D, reverses the common face at two cells (at least one is inconsistent), through the nodes opposed. In 3D, the option has no effect.

The expert_only option deactivates, into the VEFPreP1B divergence operator, the test of inconsistent cells.

```
See also: interprete (3)

Usage:
verifiercoin domain_name bloc
where

• domain_name str: Name of the domaine
• bloc verifiercoin_bloc (3.107)

3.107 verifiercoin_bloc
```

```
Description: not_set

See also: objet_lecture (32)

Usage:
{
    [Lire_fichier|Read_file str]
    [expert_only]
}
where
```

- Lire_fichier|Read_file str: name of the *.decoupage_som file
- expert_only : to not check the mesh

3.108 ecrire

Description: Keyword to write the object of name name_obj to a standard outlet.

```
See also: interprete (3)

Usage:
ecrire name_obj
where
```

• name_obj str: Name of the object to be written.

3.109 ecrire_fichier_bin

Synonymous: ecrire_fichier

Description: Keyword to write the object of name name_obj to a file filename. Since the v1.6.3, the default format is now binary format file.

See also: interprete (3) ecrire_fichier_formatte (3.23)

Usage:

ecrire_fichier_bin name_obj filename

where

- name_obj str: Name of the object to be written.
- filename str: Name of the file.

3.110 ecrire_med

Description: Write a domain to MED format into a file.

See also: interprete (3) ecrire_medfile (3.111)

Usage:

ecrire_med nom_dom file where

- **nom_dom** *str*: Name of domain.
- file str: Name of file.

3.111 ecrire_medfile

Description: Obsolete keyword to write a mesh with MED file API

See also: ecrire_med (3.110)

Usage:

ecrire_medfile nom_dom file where

- nom_dom str: Name of domain.
- file str: Name of file.

4 pb_gen_base

Description: Basic class for problems.

See also: objet_u (33) Pb_base (4.1) probleme_couple (4.7) pbc_med (4.32)

Usage:

4.1 Pb_base

Description: Resolution of equations on a domain. A problem is defined by creating an object and assigning the problem type that the user wishes to resolve. To enter values for the problem objects created, the Lire (Read) interpretor is used with a data block.

Keyword Discretize should have already been used to read the object.

See also: pb_gen_base (4) pb_thermohydraulique (4.20) pb_hydraulique (4.13) pb_hydraulique_turbulent (4.18) pb_thermohydraulique_turbulent (4.28) pb_conduction (4.11) pb_thermohydraulique_qc (4.25) pb_thermohydraulique_turbulent_qc (4.29) pb_hydraulique_concentration (4.14) pb_hydraulique_concentration_turbulent (4.16) pb_thermohydraulique_concentration (4.21) pb_thermohydraulique_concentration_turbulent (4.23) pb_avec_passif (4.9) pb_post (4.19) problem_read_generic (4.34) pb_conduction_milieu_variable (4.12)

```
Usage:
```

```
Pb_base obj Lire obj {
```

```
[ Post_processing|postraitement corps_postraitement]
[ Post_processings|postraitements post_processings]
[ liste_de_postraitements liste_post_ok]
[ liste_postraitements liste_post]
[ sauvegarde format_file]
[ sauvegarde_simple format_file]
[ reprise format_file]
[ resume_last_time format_file]
}
where
```

- Post_processinglpostraitement corps_postraitement (4.2): One post-processing (without name).
- Post_processings|postraitements post_processings (4.3): List of Postraitement objects (with name).
- liste_de_postraitements liste_post_ok (4.4): This
- **liste_postraitements** *liste_post* (4.5): This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6): Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- sauvegarde_simple format_file (4.6): The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6): Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6): Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.2 corps_postraitement

```
Description: not_set

See also: post_processing (4.4.3)

Usage:
{

    [definition_champs definition_champs]
    [Probeslsondes sondes]
    [domaine str]
    [format str into ['lml', 'lata', 'lata_v1', 'lata_v2', 'med', 'med_major']]
    [fieldslchamps champs_posts]
    [statistiques stats_posts]
    [statistiques stats_posts]
    [statistiques_en_serie stats_serie_posts]
    [interfaces champs_posts]
}

where
```

- **definition_champs** *definition_champs* (4.2.1) for inheritance: Keyword to create new or more complex field for advanced postprocessing.
- **Probesisondes** sondes (4.2.3) for inheritance: Probe.
- **domaine** *str* for inheritance: This optional parameter specifies the domain on which the data should be interpolated before it is written in the output file. The default is to write the data on the domain of the current problem (no interpolation).
- format str into ['lml', 'lata', 'lata_v1', 'lata_v2', 'med', 'med_major'] for inheritance: This optional parameter specifies the format of the output file. The basename used for the output file is the basename of the data file. For the fmt parameter, choices are lml or lata. A short description of each format can be found below. The default value is lml.
- **fields/champs** champs posts (4.2.17) for inheritance: Field's write mode.
- **statistiques** *stats_posts* (4.2.20) for inheritance: Statistics between two points fixed : start of integration time and end of integration time.
- fichier str for inheritance: Name of file.
- **statistiques_en_serie** *stats_serie_posts* (4.2.28) for inheritance: Statistics between two points not fixed: on period of integration.
- **interfaces** *champs_posts* (4.2.17) for inheritance: Keyword to read all the caracteristics of the interfaces. Different kind of interfaces exist as well as different interface intitialisations.

4.2.1 definition_champs

```
Description: List of definition champ

See also: listobj (31.3)

Usage:
{ object1 object2 .... }

list of definition_champ (4.2.2)
```

4.2.2 definition_champ

Description: Keyword to create new complex field for advanced postprocessing.

```
See also: objet_lecture (32)
```

```
Usage:
```

name champ_generique

where

- **name** *str*: The name of the new created field.
- champ_generique champ_generique_base (7)

4.2.3 sondes

Description: List of probes.

See also: listobj (31.3)

Usage:

{ object1 object2 } list of *sonde* (4.2.4)

4.2.4 sonde

Description: Keyword is used to define the probes. Observations: the probe coordinates should be given in Cartesian coordinates (X, Y, Z), including axisymmetric.

See also: objet_lecture (32)

Usage:

nom_sonde [special] nom_inco mperiode prd type where

- **nom_sonde** *str*: Name of the file in which the values taken over time will be saved. The complete file name is nom sonde.son.
- **special** *str into ['chsom', 'nodes', 'grav', 'som']*: Option to change the positions of the probes. Several options are available:

grav: each probe is moved to the nearest cell center of the mesh;

som: each probe is moved to the nearest vertex of the mesh

nodes: each probe is moved to the nearest face center of the mesh;

chsom: only available for P1NC sampled field. The values of the probes are calculated according to P1-Conform corresponding field.

- nom_inco str: Name of the sampled field.
- mperiode str into ['periode']: Keyword to set the sampled field measurement frequency.
- **prd** *float*: Period value. Every prd seconds, the field value calculated at the previous time step is written to the nom_sonde.son file.
- **type** *sonde_base* (4.2.5): Type of probe.

4.2.5 sonde base

Description: Basic probe. Probes refer to sensors that allow a value or several points of the domain to be monitored over time. The probes may be a set of points defined one by one (keyword Points) or a set of points evenly distributed over a straight segment (keyword Segment) or arranged according to a layout (keyword Plan) or according to a parallelepiped (keyword Volume). The fields allow all the values of a physical value on the domain to be known at several moments in time.

See also: objet_lecture (32) points (4.2.6) numero_elem_sur_maitre (4.2.10) position_like (4.2.11) segment (4.2.12) plan (4.2.13) volume (4.2.14) circle (4.2.15) circle_3 (4.2.16)

```
sonde_base
4.2.6 points
Description: Keyword to define the number of probe points. The file is arranged in columns.
See also: sonde_base (4.2.5) point (4.2.8) segmentpoints (4.2.9)
Usage:
points points
where
   • points listpoints (4.2.7): Probe points.
4.2.7 listpoints
Description: Points.
See also: listobj (31.3)
Usage:
n object1 object2 ....
list of un_point (3.9.3)
4.2.8 point
Description: Point as class-daughter of Points.
See also: points (4.2.6)
Usage:
point points
where
   • points listpoints (4.2.7): Probe points.
4.2.9 segmentpoints
Description: This keyword is used to define a probe segment from specifics points. The nom_champ field
is sampled at ns specifics points.
See also: points (4.2.6)
Usage:
segmentpoints points
where
```

Usage:

• points listpoints (4.2.7): Probe points.

4.2.10 numero_elem_sur_maitre

Description: Keyword to define a probe at the special element. Useful for min/max sonde.

See also: sonde_base (4.2.5)

Usage:

 $numero_elem_sur_maitre \quad numero$

where

• numero int: element number

4.2.11 position_like

Description: Keyword to define a probe at the same position of another probe named autre_sonde.

See also: sonde_base (4.2.5)

Usage:

position_like autre_sonde

where

• autre_sonde str: Name of the other probe.

4.2.12 segment

Description: Keyword to define the number of probe segment points. The file is arranged in columns.

See also: sonde_base (4.2.5)

Usage:

segment nbr point_deb point_fin

where

- **nbr** *int*: Number of probe points of the segment, evenly distributed.
- **point_deb** *un_point* (3.9.3): First outer probe segment point.
- **point_fin** *un_point* (3.9.3): Second outer probe segment point.

4.2.13 plan

Description: Keyword to set the number of probe layout points. The file format is type .lml

See also: sonde_base (4.2.5)

Usage:

plan nbr nbr2 point_deb point_fin point_fin_2 where

- **nbr** *int*: Number of probes in the first direction.
- **nbr2** *int*: Number of probes in the second direction.
- point_deb un_point (3.9.3): First point defining the angle. This angle should be positive.
- point_fin un_point (3.9.3): Second point defining the angle. This angle should be positive.
- point_fin_2 un_point (3.9.3): Third point defining the angle. This angle should be positive.

4.2.14 volume

Description: Keyword to define the probe volume in a parallelepiped passing through 4 points and the number of probes in each direction.

See also: sonde_base (4.2.5)

Usage:

volume nbr nbr2 nbr3 point_deb point_fin point_fin_2 point_fin_3 where

- **nbr** *int*: Number of probes in the first direction.
- **nbr2** *int*: Number of probes in the second direction.
- **nbr3** *int*: Number of probes in the third direction.
- point_deb un_point (3.9.3): Point of origin.
- **point_fin** *un_point* (3.9.3): Point defining the first direction (from point of origin).
- point_fin_2 un_point (3.9.3): Point defining the second direction (from point of origin).
- point fin 3 un point (3.9.3): Point defining the third direction (from point of origin).

4.2.15 circle

Description: Keyword to define several probes located on a circle.

See also: sonde_base (4.2.5)

Usage:

circle nbr point_deb [direction] radius theta1 theta2 where

- **nbr** *int*: Number of probes between teta1 and teta2 (angles given in degrees).
- point_deb un_point (3.9.3): Center of the circle.
- direction int into [0, 1, 2]: Axis normal to the circle plane (0:x axis, 1:y axis, 2:z axis).
- radius float: Radius of the circle.
- theta1 float: First angle.
- theta2 float: Second angle.

4.2.16 circle_3

Description: Keyword to define several probes located on a circle (in 3-D space).

See also: sonde_base (4.2.5)

Usage:

circle_3 nbr point_deb direction radius theta1 theta2 where

- **nbr** *int*: Number of probes between teta1 and teta2 (angles given in degrees).
- point_deb un_point (3.9.3): Center of the circle.
- direction int into [0, 1, 2]: Axis normal to the circle plane (0:x axis, 1:y axis, 2:z axis).
- radius float: Radius of the circle.
- theta1 float: First angle.
- theta2 float: Second angle.

4.2.17 champs_posts

Description: Field's write mode.

See also: objet lecture (32)

Usage:

[format] mot period fields|champs

where

- format str into ['binaire', 'formatte']: Type of file.
- **mot** *str into* ['dt_post', 'nb_pas_dt_post']: Keyword to set the kind of the field's write frequency. Either a time period or a time step period.
- **period** *str*: Value of the period.
- **fieldslchamps** *champs_a_post* (4.2.18): Post-processed fields.

4.2.18 champs_a_post

Description: Fields to be post-processed.

See also: listobj (31.3)

Usage:

{ object1 object2 }

list of champ a post (4.2.19)

4.2.19 champ a post

Description: Field to be post-processed.

See also: objet_lecture (32)

Usage:

champ [localisation]

where

- **champ** *str*: Name of the post-processed field.
- **localisation** *str into ['elem', 'som', 'faces']*: Localisation of post-processed field values: The two available values are elem, som, or faces (LATA format only) used respectively to select field values at mesh centres (CHAMPMAILLE type field in the lml file) or at mesh nodes (CHAMPPOINT type field in the lml file). If no selection is made, localisation is set to som by default.

4.2.20 stats_posts

Description: Field's write mode.

Dt_post: This keyword is used to set the calculated statistics write period.

dts: frequency value.

t_deb value: Start of integration timet fin value: End of integration time

stat: Set to Moyenne (average) to calculate the average of the field nom_champ (field name) over time or Ecart_type (std_deviation) to calculate the standard deviation (statistic rms) of the field nom_champ (field_name) or Correlation to calculate the correlation between the two fields nom_champ and second_nom_champ.

nom_champ: name of the field on which statistical analysis will be performed. Possible keywords are **Vitesse (velocity)**, **Pression (pressure)**, **Temperature**, **Concentration**,...

localisation: localisation of post-processed field values (elem or som).

Example:

Correlation Vitesse Vitesse }

It will write every **dt_post** the mean, standard deviation and correlation value:

```
 \begin{split} t &<= t_{\text{deb}} : \\ \text{average: } \overline{P(t)} = 0 \\ \text{std\_deviation: } &< P(t) >= 0 \\ \text{correlation: } &< U(t).V(t) >= 0 \\ \end{split}   t > t_{\text{deb}} : \\ \text{average: } \overline{P(t)} = \frac{1}{t - t_{\text{deb}}} \int\limits_{t_{\text{deb}}}^{t} P(t) \text{dt} \\ \text{std\_deviation: } &< P(t) >= \sqrt{\frac{1}{t - t_{\text{deb}}}} \int\limits_{t_{\text{deb}}}^{t} \left[ P(t) - \overline{P(t)} \right]^2 \text{dt} \\ \text{correlation: } &< U(t).V(t) >= \frac{1}{t - t_{\text{deb}}} \int\limits_{t_{\text{deb}}}^{t} \left[ U(t) - \overline{U(t)} \right] . \left[ V(t) - \overline{V(t)} \right] \text{dt} \\ \end{split}
```

See also: objet_lecture (32)

Usage:

mot period fields|champs

where

- **mot** *str into* ['dt_post', 'nb_pas_dt_post']: Keyword to set the kind of the field's write frequency. Either a time period or a time step period.
- **period** *str*: Value of the period.
- **fieldslchamps** *list_stat_post* (4.2.21): Post-processed fields.

4.2.21 list_stat_post

Description: Post-processing for statistics

See also: listobj (31.3)

Usage:

{ object1 object2 } list of stat_post_deriv (4.2.22)

4.2.22 stat_post_deriv

Description: not_set

See also: objet_lecture (32) t_deb (4.2.23) t_fin (4.2.24) moyenne (4.2.25) ecart_type (4.2.26) correlation (4.2.27)

```
Usage:
stat_post_deriv
4.2.23 t_deb
Description: not_set
See also: stat_post_deriv (4.2.22)
Usage:
t_deb val
where
   • val float
4.2.24 t_fin
Description: not_set
See also: stat_post_deriv (4.2.22)
Usage:
t_fin val
where
   • val float
4.2.25 moyenne
Synonymous: champ_post_statistiques_moyenne
Description: not_set
See also: stat_post_deriv (4.2.22)
Usage:
moyenne field [localisation]
where
   • localisation str into ['elem', 'som', 'faces']: Localisation of post-processed field value
4.2.26 ecart_type
Synonymous: champ_post_statistiques_ecart_type
Description: not_set
See also: stat_post_deriv (4.2.22)
Usage:
ecart_type field [ localisation ]
```

where

- field str
- localisation str into ['elem', 'som', 'faces']: Localisation of post-processed field value

4.2.27 correlation

Synonymous: champ_post_statistiques_correlation

Description: not_set

See also: stat_post_deriv (4.2.22)

Usage:

correlation first_field second_field [localisation]

where

- first field str
- second field str
- localisation str into ['elem', 'som', 'faces']: Localisation of post-processed field value

4.2.28 stats_serie_posts

Description: Post-processing for statistics.

Statistiques_en_serie: This keyword is used to set the statistics. Average on **dt_integr** time interval is post-processed every **dt_integr** seconds

dt_integr value : Period of integration and write period.

stat: Set to Moyenne (average) to calculate the average of the field nom_champ (field name) over time or Ecart_type (std_deviation) to calculate the standard deviation (statistic rms) of the field nom_champ (field_name).

nom_champ: name of the field on which statistical analysis will be performed. Possible keywords are **Vitesse (velocity)**, **Pression (pressure)**, **Temperature**, **Concentration**,...

localisation: localisation of post-processed field values (**elem** or **som**).

Example:

Statistiques_en_serie Dt_integr dtst {
Moyenne Pression

Will calculate and write every dtst seconds the mean value:

$$(n+1) \text{dt_integr} > t > n * \text{dt_integr}, \overline{P(t)} = \frac{1}{t-n*\text{dt_integr}} \int\limits_{t_n*\text{dt_integr}}^t P(t) \text{dt}$$

See also: objet_lecture (32)

Usage:

mot dt_integr stat

where

- mot str into ['dt integr']: Keyword is used to set the statistics period of integration and write period.
- dt_integr float: Average on dt_integr time interval is post-processed every dt_integr seconds.
- **stat** *list_stat_post* (4.2.21)

```
4.3 post_processings
Synonymous: postraitements
Description: Keyword to use several results files. List of objects of post-processing (with name).
See also: listobj (31.3)
Usage:
{ object1 object2 .... }
list of un_postraitement (4.3.1)
4.3.1 un_postraitement
Description: An object of post-processing (with name).
See also: objet_lecture (32)
Usage:
nom post
where
   • nom str: Name of the post-processing.
   • post corps_postraitement (4.2): Definition of the post-processing.
4.4 liste_post_ok
Description: Keyword to use several results files. List of objects of post-processing (with name)
See also: listobj (31.3)
Usage:
{ object1 object2 .... }
list of nom_postraitement (4.4.1)
4.4.1 nom_postraitement
Description:
See also: objet_lecture (32)
Usage:
nom post
where
   • nom str: Name of the post-processing.
   • post postraitement_base (4.4.2): the post
4.4.2 postraitement_base
Description: not_set
```

See also: objet_lecture (32) post_processing (4.4.3)

Usage:

4.4.3 post_processing

```
Synonymous: postraitement

Description: An object of post-processing (without name).

See also: postraitement_base (4.4.2) corps_postraitement (4.2)

Usage:
post_processing {

    [definition_champs definition_champs]
    [Probes|sondes sondes]
    [domaine str]
    [format str into ['lml', 'lata', 'lata_v1', 'lata_v2', 'med', 'med_major']]
    [fields|champs champs_posts]
    [statistiques stats_posts]
    [statistiques_en_serie stats_serie_posts]
    [interfaces champs_posts]
}

where
```

- **definition_champs** *definition_champs* (4.2.1): Keyword to create new or more complex field for advanced postprocessing.
- **Probesisondes** sondes (4.2.3): Probe.
- **domaine** *str*: This optional parameter specifies the domain on which the data should be interpolated before it is written in the output file. The default is to write the data on the domain of the current problem (no interpolation).
- format str into ['lml', 'lata', 'lata_v1', 'lata_v2', 'med', 'med_major']: This optional parameter specifies the format of the output file. The basename used for the output file is the basename of the data file. For the fmt parameter, choices are lml or lata. A short description of each format can be found below. The default value is lml.
- **fieldslchamps** *champs_posts* (4.2.17): Field's write mode.
- **statistiques** *stats_posts* (4.2.20): Statistics between two points fixed : start of integration time and end of integration time.
- fichier str: Name of file.
- **statistiques_en_serie** *stats_serie_posts* (4.2.28): Statistics between two points not fixed : on period of integration.
- **interfaces** *champs_posts* (4.2.17): Keyword to read all the caracteristics of the interfaces. Different kind of interfaces exist as well as different interface intitialisations.

4.5 liste post

Description: Keyword to use several results files. List of objects of post-processing (with name)

```
See also: listobj (31.3)

Usage: { object1 object2 .... } list of un_postraitement_spec (4.5.1)
```

```
4.5.1 un_postraitement_spec
Description: An object of post-processing (with type +name).
See also: objet_lecture (32)
Usage:
[ type_un_post ] [ type_postraitement_ft_lata ]
where
   • type_un_post type_un_post (4.5.2)
   • type_postraitement_ft_lata type_postraitement_ft_lata (4.5.3)
4.5.2 type_un_post
Description: not_set
See also: objet_lecture (32)
Usage:
type post
where
   • type str into ['postraitement', 'post_processing']
   • post un_postraitement (4.3.1)
4.5.3 type_postraitement_ft_lata
Description: not_set
See also: objet_lecture (32)
Usage:
type nom bloc
where
   • type str into ['postraitement_ft_lata', 'postraitement_lata']
   • nom str: Name of the post-processing.
   • bloc str
4.6 format_file
Description: File formatted.
See also: objet_lecture (32)
Usage:
[format] name_file
where
   • format str into ['binaire', 'formatte', 'xyz']: Type of file (the file format).
```

• name_file str: Name of file.

4.7 probleme_couple

Description: This instruction causes a probleme_couple type object to be created. This type of object has an associated problem list, that is, the coupling of n problems among them may be processed. Coupling between these problems is carried out explicitly via conditions at particular contact limits. Each problem may be associated either with the Associate keyword or with the Read/groupes keywords. The difference is that in the first case, the four problems exchange values then calculate their timestep, rather in the second case, the same strategy is used for all the problems listed inside one group, but the second group of problem exchange values with the first group of problems after the first group did its timestep. So, the first case may then also be written like this:

```
Probleme_Couple pbc
```

```
Read pbc { groupes { \{ pb1, pb2, pb3, pb4 \} \} \}
```

There is a physical environment per problem (however, the same physical environment could be common to several problems).

Each problem is resolved in a domain.

Warning: Presently, coupling requires coincident meshes. In case of non-coincident meshes, boundary condition 'paroi_contact' in VEF returns error message (see paroi_contact for correcting procedure).

```
See also: pb_gen_base (4)

Usage:
probleme_couple obj Lire obj {
        [ groupes list_list_nom]
}
where
      • groupes list_list_nom (4.8): { groupes { { pb1 , pb2 } , { pb3 , pb4 } } }

4.8 list_list_nom

Description: pour les groupes

See also: listobj (31.3)

Usage:
{ object1 , object2 .... }
list of list_un_pb (31.1) separeted with ,
```

4.9 pb avec passif

Description: Class to create a classical problem with a scalar transport equation (e.g. temperature or concentration) and an additional set of passive scalars (e.g. temperature or concentration) equations.

```
Keyword Discretize should have already been used to read the object.
```

```
See also: Pb_base (4.1) pb_thermohydraulique_concentration_turbulent_scalaires_passifs (4.24) pb_thermohydraulique_concentration_scalaires_passifs (4.22) pb_thermohydraulique_turbulent_scalaires_passifs (4.31) pb_thermohydraulique_scalaires_passifs (4.27) pb_hydraulique_concentration_turbulent_scalaires_passifs (4.17) pb_hydraulique_concentration_scalaires_passifs (4.15) pb_thermohydraulique_qc_fraction_massique (4.26) pb_thermohydraulique_turbulent_qc_fraction_massique (4.30)
```

```
Usage:
```

```
pb_avec_passif obj Lire obj {
```

 ${\bf equations_scalaires_passifs} \quad {\it listeqn}$

```
[ Post_processing|postraitement corps_postraitement]
[ Post_processings|postraitements post_processings]
[ liste_de_postraitements liste_post_ok]
[ liste_postraitements liste_post]
[ sauvegarde format_file]
[ sauvegarde_simple format_file]
[ reprise format_file]
[ resume_last_time format_file]
}
where
```

- equations_scalaires_passifs listeqn (4.10): Passive scalar equations. The unknowns of the passive scalar equation number N are named temperatureN or concentrationN or fraction_massiqueN. This keyword is used to define initial conditions and the post processing fields. This kind of problem is very useful to test in only one data file (and then only one calculation) different schemes or different boundary conditions for the scalar transport equation.
- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings|postraitements** *post_processings* (4.3) for inheritance: List of Postraitement objects (with name).
- liste_de_postraitements liste_post_ok (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.10 listegn

Description: List of equations.

See also: listobj (31.3)

Usage:
{ object1 object2 }
list of eqn_base (5.19)

4.11 pb_conduction

where

```
Description: Resolution of the heat equation.
```

Keyword Discretize should have already been used to read the object.

```
See also: Pb_base (4.1)

Usage:
pb_conduction obj Lire obj {
      [ conduction conduction]
      [ Post_processing|postraitement corps_postraitement]
      [ Post_processings|postraitements post_processings]
      [ liste_de_postraitements liste_post_ok]
      [ liste_postraitements liste_post]
      [ sauvegarde format_file]
      [ sauvegarde_simple format_file]
      [ reprise format_file]
      [ resume_last_time format_file]
}
```

- **conduction** *conduction* (5.1): Heat equation.
- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings**|**postraitements**| post_processings (4.3) for inheritance: List of Postraitement objects (with name).
- liste_de_postraitements liste_post_ok (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.12 pb_conduction_milieu_variable

Description: Resolution of the heat equation.

Keyword Discretize should have already been used to read the object.

```
Usage:

pb_conduction_milieu_variable obj Lire obj {

    [conduction_milieu_variable conduction_milieu_variable]
    [Post_processing|postraitement corps_postraitement]
    [Post_processings|postraitements post_processings]
    [liste_de_postraitements liste_post_ok]
    [liste_postraitements liste_post]
    [sauvegarde format_file]
    [sauvegarde_simple format_file]
    [reprise format_file]
    [resume_last_time format_file]
}
where
```

- **conduction_milieu_variable** *conduction_milieu_variable* (5.8): Heat equation.
- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings|postraitements** *post_processings* (4.3) for inheritance: List of Postraitement objects (with name).
- **liste_de_postraitements** *liste_post_ok* (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- sauvegarde_simple format_file (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.13 pb_hydraulique

Description: Resolution of the Navier-Stokes equations.

Keyword Discretize should have already been used to read the object. See also: Pb_base (4.1)

Usage:

pb_hydraulique obj Lire obj {

```
navier_stokes_standard navier_stokes_standard
[ Post_processing|postraitement corps_postraitement]
[ Post_processings|postraitements post_processings]
[ liste_de_postraitements liste_post_ok]
[ liste_postraitements liste_post]
[ sauvegarde format_file]
[ sauvegarde_simple format_file]
[ reprise format_file]
[ resume_last_time format_file]
]
```

- navier_stokes_standard navier_stokes_standard (5.24): Navier-Stokes equations.
- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings|postraitements** *post_processings* (4.3) for inheritance: List of Postraitement objects (with name).
- liste_de_postraitements liste_post_ok (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.14 pb_hydraulique_concentration

Description: Resolution of Navier-Stokes/multiple constituent transport equations.

Keyword Discretize should have already been used to read the object.

See also: Pb_base (4.1)

Usage:

pb_hydraulique_concentration obj Lire obj {

 [navier_stokes_standard navier_stokes_standard]
 [convection_diffusion_concentration convection_diffusion_concentration]

[**Post_processing|postraitement** corps_postraitement]

```
[ Post_processings|postraitements post_processings]
  [ liste_de_postraitements liste_post_ok]
  [ liste_postraitements liste_post]
  [ sauvegarde format_file]
  [ sauvegarde_simple format_file]
  [ reprise format_file]
  [ resume_last_time format_file]
}
where
```

- navier_stokes_standard navier_stokes_standard (5.24): Navier-Stokes equations.
- **convection_diffusion_concentration** *convection_diffusion_concentration* (5.12): Constituent transport vectorial equation (concentration diffusion convection).
- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings|postraitements** *post_processings* (4.3) for inheritance: List of Postraitement objects (with name).
- **liste_de_postraitements** *liste_post_ok* (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.15 pb_hydraulique_concentration_scalaires_passifs

Description: Resolution of Navier-Stokes/multiple constituent transport equations with the additional passive scalar equations.

```
Keyword Discretize should have already been used to read the object.

See also: pb_avec_passif (4.9)

Usage:
pb_hydraulique_concentration_scalaires_passifs obj Lire obj {

[ navier_stokes_standard navier_stokes_standard]

[ convection_diffusion_concentration convection_diffusion_concentration]
```

```
equations_scalaires_passifs listeqn
[ Post_processing|postraitement corps_postraitement]
[ Post_processings|postraitements post_processings]
[ liste_de_postraitements liste_post_ok]
[ liste_postraitements liste_post]
[ sauvegarde format_file]
[ sauvegarde_simple format_file]
[ reprise format_file]
[ resume_last_time format_file]
]
```

- navier_stokes_standard navier_stokes_standard (5.24): Navier-Stokes equations.
- **convection_diffusion_concentration** *convection_diffusion_concentration* (5.12): Constituent transport equations (concentration diffusion convection).
- equations_scalaires_passifs listeqn (4.10) for inheritance: Passive scalar equations. The unknowns of the passive scalar equation number N are named temperatureN or concentrationN or fraction_massiqueN. This keyword is used to define initial conditions and the post processing fields. This kind of problem is very useful to test in only one data file (and then only one calculation) different schemes or different boundary conditions for the scalar transport equation.
- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings**|**postraitements**| post_processings (4.3) for inheritance: List of Postraitement objects (with name).
- liste_de_postraitements liste_post_ok (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.16 pb hydraulique concentration turbulent

Description: Resolution of Navier-Stokes/multiple constituent transport equations, with turbulence modelling.

Keyword Discretize should have already been used to read the object.

```
Usage:

pb_hydraulique_concentration_turbulent obj Lire obj {

        [ navier_stokes_turbulent navier_stokes_turbulent]

        [ convection_diffusion_concentration_turbulent convection_diffusion_concentration_turbulent]

        [ Post_processing|postraitement corps_postraitement]

        [ Post_processings|postraitements post_processings]

        [ liste_de_postraitements liste_post_ok]

        [ liste_postraitements liste_post]

        [ sauvegarde format_file]

        [ sauvegarde_simple format_file]

        [ reprise format_file]

        [ resume_last_time format_file]

}

where
```

- navier_stokes_turbulent navier_stokes_turbulent (5.25): Navier-Stokes equations as well as the associated turbulence model equations.
- convection_diffusion_concentration_turbulent convection_diffusion_concentration_turbulent (5.13): Constituent transport equations (concentration diffusion convection) as well as the associated turbulence model equations.
- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings**|**postraitements**| post_processings (4.3) for inheritance: List of Postraitement objects (with name).
- **liste_de_postraitements** *liste_post_ok* (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.17 pb_hydraulique_concentration_turbulent_scalaires_passifs

Description: Resolution of Navier-Stokes/multiple constituent transport equations, with turbulence modelling and with the additional passive scalar equations.

Keyword Discretize should have already been used to read the object. See also: pb_avec_passif (4.9) Usage: pb_hydraulique_concentration_turbulent_scalaires_passifs obj Lire obj { [navier stokes turbulent navier stokes turbulent] [convection_diffusion_concentration_turbulent convection_diffusion_concentration_turbulent] equations scalaires passifs listegn [Post_processing|postraitement corps_postraitement] [Post_processings|postraitements post_processings] [liste_de_postraitements liste_post_ok] [liste postraitements liste post] [sauvegarde format_file] [sauvegarde_simple format_file] [reprise format_file] [resume_last_time format_file] } where

- navier_stokes_turbulent navier_stokes_turbulent (5.25): Navier-Stokes equations as well as the associated turbulence model equations.
- convection_diffusion_concentration_turbulent convection_diffusion_concentration_turbulent (5.13): Constituent transport equations (concentration diffusion convection) as well as the associated turbulence model equations.
- equations_scalaires_passifs listeqn (4.10) for inheritance: Passive scalar equations. The unknowns of the passive scalar equation number N are named temperatureN or concentrationN or fraction_massiqueN. This keyword is used to define initial conditions and the post processing fields. This kind of problem is very useful to test in only one data file (and then only one calculation) different schemes or different boundary conditions for the scalar transport equation.
- **Post_processinglpostraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings|postraitements** *post_processings* (4.3) for inheritance: List of Postraitement objects (with name).
- liste_de_postraitements liste_post_ok (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.

• **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.18 pb hydraulique turbulent

where

Description: Resolution of Navier-Stokes equations with turbulence modelling.

Keyword Discretize should have already been used to read the object. See also: Pb_base (4.1)

Usage:
pb_hydraulique_turbulent obj Lire obj {

 navier_stokes_turbulent navier_stokes_turbulent
 [Post_processing|postraitement corps_postraitement]
 [Post_processings|postraitements post_processings]
 [liste_de_postraitements liste_post_ok]
 [liste_postraitements liste_post]
 [sauvegarde format_file]
 [sauvegarde_simple format_file]
 [reprise format_file]
 [resume_last_time format_file]

- navier_stokes_turbulent navier_stokes_turbulent (5.25): Navier-Stokes equations as well as the associated turbulence model equations.
- **Post_processinglpostraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings|postraitements** *post_processings* (4.3) for inheritance: List of Postraitement objects (with name).
- **liste_de_postraitements** *liste_post_ok* (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.19 pb_post

```
Description: not_set

Keyword Discretize should have already been used to read the object. See also: Pb_base (4.1)

Usage:
pb_post obj Lire obj {

    [Post_processing|postraitement corps_postraitement]
    [Post_processings|postraitements post_processings]
    [liste_de_postraitements liste_post_ok]
    [liste_postraitements liste_post]
    [sauvegarde format_file]
    [sauvegarde_simple format_file]
    [reprise format_file]
    [resume_last_time format_file]
}

where
```

- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings|postraitements** *post_processings* (4.3) for inheritance: List of Postraitement objects (with name).
- **liste_de_postraitements** *liste_post_ok* (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- sauvegarde_simple format_file (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.20 pb_thermohydraulique

Description: Resolution of thermohydraulic problem.

Keyword Discretize should have already been used to read the object.

```
Usage:

pb_thermohydraulique obj Lire obj {

    [ navier_stokes_standard navier_stokes_standard]
    [ convection_diffusion_temperature convection_diffusion_temperature]
    [ Post_processing|postraitement corps_postraitement]
    [ Post_processings|postraitements post_processings]
    [ liste_de_postraitements liste_post_ok]
    [ liste_postraitements liste_post]
    [ sauvegarde format_file]
    [ sauvegarde_simple format_file]
    [ reprise format_file]
    [ resume_last_time format_file]
}

where
```

- navier_stokes_standard navier_stokes_standard (5.24): Navier-Stokes equations.
- **convection_diffusion_temperature** *convection_diffusion_temperature* (5.16): Energy equation (temperature diffusion convection).
- **Post_processinglyostraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings**|**postraitements**| post_processings (4.3) for inheritance: List of Postraitement objects (with name).
- **liste_de_postraitements** *liste_post_ok* (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.21 pb_thermohydraulique_concentration

Description: Resolution of Navier-Stokes/energy/multiple constituent transport equations.

Keyword Discretize should have already been used to read the object.

```
Usage:

pb_thermohydraulique_concentration obj Lire obj {

    [navier_stokes_standard navier_stokes_standard]
    [convection_diffusion_concentration convection_diffusion_concentration]
    [convection_diffusion_temperature convection_diffusion_temperature]
    [Post_processinglpostraitement corps_postraitement]
    [Post_processings|postraitements post_processings]
    [liste_de_postraitements liste_post_ok]
    [liste_postraitements liste_post]
    [sauvegarde format_file]
    [sauvegarde_simple format_file]
    [reprise format_file]
    [resume_last_time format_file]
}
where
```

- navier_stokes_standard navier_stokes_standard (5.24): Navier-Stokes equations.
- **convection_diffusion_concentration** *convection_diffusion_concentration* (5.12): Constituent transport equations (concentration diffusion convection).
- **convection_diffusion_temperature** *convection_diffusion_temperature* (5.16): Energy equation (temperature diffusion convection).
- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings|postraitements** *post_processings* (4.3) for inheritance: List of Postraitement objects (with name).
- **liste_de_postraitements** *liste_post_ok* (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.22 pb_thermohydraulique_concentration_scalaires_passifs

Description: Resolution of Navier-Stokes/energy/multiple constituent transport equations, with the additional passive scalar equations.

Keyword Discretize should have already been used to read the object. See also: pb avec passif (4.9) pb thermohydraulique concentration scalaires passifs obj Lire obj { [navier_stokes_standard navier_stokes_standard] [convection_diffusion_concentration convection_diffusion_concentration] [convection_diffusion_temperature convection_diffusion_temperature] equations_scalaires_passifs listeqn [Post_processing|postraitement corps_postraitement] [Post_processings|postraitements post_processings] [liste de postraitements liste post ok] [liste postraitements liste post] [sauvegarde format_file] [sauvegarde simple format file] [reprise format_file] [resume last time format file] }

- navier_stokes_standard navier_stokes_standard (5.24): Navier-Stokes equations.
- **convection_diffusion_concentration** *convection_diffusion_concentration* (5.12): Constituent transport equations (concentration diffusion convection).
- **convection_diffusion_temperature** *convection_diffusion_temperature* (5.16): Energy equations (temperature diffusion convection).
- equations_scalaires_passifs listeqn (4.10) for inheritance: Passive scalar equations. The unknowns of the passive scalar equation number N are named temperatureN or concentrationN or fraction_massiqueN. This keyword is used to define initial conditions and the post processing fields. This kind of problem is very useful to test in only one data file (and then only one calculation) different schemes or different boundary conditions for the scalar transport equation.
- **Post_processinglpostraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings|postraitements** *post_processings* (4.3) for inheritance: List of Postraitement objects (with name).
- **liste_de_postraitements** *liste_post_ok* (4.4) for inheritance: This

where

- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- **reprise** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file

created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.

• **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.23 pb_thermohydraulique_concentration_turbulent

Description: Resolution of Navier-Stokes/energy/multiple constituent transport equations, with turbulence modelling.

Keyword Discretize should have already been used to read the object. See also: Pb base (4.1)

Usage:

```
pb_thermohydraulique_concentration_turbulent obj Lire obj {
```

```
[ navier_stokes_turbulent navier_stokes_turbulent]
[ convection_diffusion_concentration_turbulent convection_diffusion_concentration_turbulent]
[ convection_diffusion_temperature_turbulent convection_diffusion_temperature_turbulent]
[ Post_processing|postraitement corps_postraitement]
[ Post_processings|postraitements post_processings]
[ liste_de_postraitements liste_post_ok]
[ liste_postraitements liste_post]
[ sauvegarde format_file]
[ sauvegarde_simple format_file]
[ reprise format_file]
[ resume_last_time format_file]
]

where
```

- navier_stokes_turbulent navier_stokes_turbulent (5.25): Navier-Stokes equations as well as the associated turbulence model equations.
- convection_diffusion_concentration_turbulent convection_diffusion_concentration_turbulent (5.13): Constituent transport equations (concentration diffusion convection) as well as the associated turbulence model equations.
- **convection_diffusion_temperature_turbulent** *convection_diffusion_temperature_turbulent* (5.18): Energy equation (temperature diffusion convection) as well as the associated turbulence model equations.
- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings**|**postraitements**| post_processings (4.3) for inheritance: List of Postraitement objects (with name).
- **liste_de_postraitements** *liste_post_ok* (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.

- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.24 pb_thermohydraulique_concentration_turbulent_scalaires_passifs

Description: Resolution of Navier-Stokes/energy/multiple constituent transport equations, with turbulence modelling and with the additional passive scalar equations.

```
Keyword Discretize should have already been used to read the object.
See also: pb_avec_passif (4.9)
Usage:
pb_thermohydraulique_concentration_turbulent_scalaires_passifs obj Lire obj {
     [ navier_stokes_turbulent navier_stokes_turbulent]
     [convection diffusion concentration turbulent] convection diffusion concentration turbulent]
     [convection diffusion temperature turbulent convection diffusion temperature turbulent]
     equations scalaires passifs listean
     [ Post_processing|postraitement corps_postraitement]
     [ Post_processings|postraitements post_processings]
     [ liste_de_postraitements liste_post_ok]
     [liste_postraitements liste_post]
     [ sauvegarde format_file]
     [ sauvegarde_simple format_file]
     [ reprise format_file]
     [ resume_last_time format_file]
}
```

• navier_stokes_turbulent navier_stokes_turbulent (5.25): Navier-Stokes equations as well as the associated turbulence model equations.

where

- convection_diffusion_concentration_turbulent convection_diffusion_concentration_turbulent (5.13): Constituent transport equations (concentration diffusion convection) as well as the associated turbulence model equations.
- **convection_diffusion_temperature_turbulent** *convection_diffusion_temperature_turbulent* (5.18): Energy equations (temperature diffusion convection) as well as the associated turbulence model equations.
- equations_scalaires_passifs listeqn (4.10) for inheritance: Passive scalar equations. The unknowns of the passive scalar equation number N are named temperatureN or concentrationN or fraction_massiqueN. This keyword is used to define initial conditions and the post processing fields. This

kind of problem is very useful to test in only one data file (and then only one calculation) different schemes or different boundary conditions for the scalar transport equation.

- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings|postraitements** *post_processings* (4.3) for inheritance: List of Postraitement objects (with name).
- **liste_de_postraitements** *liste_post_ok* (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.25 pb_thermohydraulique_qc

```
Description: Resolution of thermohydraulic problem under low Mach number.
Keywords for the unknowns other than pressure, velocity, temperature are:
masse volumique : density
enthalpie: enthalpy
pression: reduced pressure
pression_tot: total pressure.
Keyword Discretize should have already been used to read the object.
See also: Pb base (4.1)
Usage:
pb_thermohydraulique_qc obj Lire obj {
     navier_stokes_qc navier_stokes_qc
     convection_diffusion_chaleur_qc convection_diffusion_chaleur_qc
     [ Post_processing|postraitement corps_postraitement]
     [ Post processings|postraitements post processings]
     [ liste_de_postraitements liste_post_ok]
     [ liste_postraitements liste_post]
     [ sauvegarde format_file]
     [ sauvegarde_simple format_file]
     [ reprise format_file]
```

```
[ resume_last_time format_file]
}
where
```

- navier stokes qc navier stokes qc (5.20): Navier-Stokes equations under low Mach number.
- **convection_diffusion_chaleur_qc** *convection_diffusion_chaleur_qc* (5.10): Energy equation under low Mach number.
- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings|postraitements** *post_processings* (4.3) for inheritance: List of Postraitement objects (with name).
- liste_de_postraitements liste_post_ok (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.26 pb_thermohydraulique_qc_fraction_massique

Description: Resolution of thermohydraulic problem under low Mach number with passive scalar equations.

```
Keyword Discretize should have already been used to read the object.

See also: pb_avec_passif (4.9)

Usage:
pb_thermohydraulique_qc_fraction_massique obj Lire obj {

    navier_stokes_qc navier_stokes_qc
    convection_diffusion_chaleur_qc convection_diffusion_chaleur_qc
    equations_scalaires_passifs listeqn
    [Post_processing|postraitement corps_postraitement]
    [Post_processings|postraitements post_processings]
    [liste_de_postraitements liste_post_ok]
    [liste_postraitements liste_post]
```

[sauvegarde format_file]

```
[ sauvegarde_simple format_file]
    [ reprise format_file]
    [ resume_last_time format_file]
}
where
```

- navier stokes qc navier stokes qc (5.20): Navier-Stokes equations under low Mach number.
- **convection_diffusion_chaleur_qc** *convection_diffusion_chaleur_qc* (5.10): Energy equation under low Mach number.
- equations_scalaires_passifs listeqn (4.10) for inheritance: Passive scalar equations. The unknowns of the passive scalar equation number N are named temperatureN or concentrationN or fraction_massiqueN. This keyword is used to define initial conditions and the post processing fields. This kind of problem is very useful to test in only one data file (and then only one calculation) different schemes or different boundary conditions for the scalar transport equation.
- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings|postraitements** *post_processings* (4.3) for inheritance: List of Postraitement objects (with name).
- **liste_de_postraitements** *liste_post_ok* (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.27 pb_thermohydraulique_scalaires_passifs

Description: Resolution of thermohydraulic problem, with the additional passive scalar equations.

Keyword Discretize should have already been used to read the object.

See also: pb_avec_passif (4.9)

Usage:
pb_thermohydraulique_scalaires_passifs obj Lire obj {

[navier_stokes_standard]

[convection_diffusion_temperature convection_diffusion_temperature]

```
equations_scalaires_passifs listeqn
[ Post_processing|postraitement corps_postraitement]
[ Post_processings|postraitements post_processings]
[ liste_de_postraitements liste_post_ok]
[ liste_postraitements liste_post]
[ sauvegarde format_file]
[ sauvegarde_simple format_file]
[ reprise format_file]
[ resume_last_time format_file]
]
```

- navier_stokes_standard navier_stokes_standard (5.24): Navier-Stokes equations.
- **convection_diffusion_temperature** *convection_diffusion_temperature* (5.16): Energy equations (temperature diffusion convection).
- equations_scalaires_passifs listeqn (4.10) for inheritance: Passive scalar equations. The unknowns of the passive scalar equation number N are named temperatureN or concentrationN or fraction_massiqueN. This keyword is used to define initial conditions and the post processing fields. This kind of problem is very useful to test in only one data file (and then only one calculation) different schemes or different boundary conditions for the scalar transport equation.
- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings**|**postraitements**| post_processings (4.3) for inheritance: List of Postraitement objects (with name).
- liste de postraitements liste post ok (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.28 pb_thermohydraulique_turbulent

Description: Resolution of thermohydraulic problem, with turbulence modelling.

Keyword Discretize should have already been used to read the object.

```
Usage:

pb_thermohydraulique_turbulent obj Lire obj {

navier_stokes_turbulent navier_stokes_turbulent
convection_diffusion_temperature_turbulent convection_diffusion_temperature_turbulent
[Post_processinglpostraitement corps_postraitement]
[Post_processingslpostraitements post_processings]
[liste_de_postraitements liste_post_ok]
[liste_postraitements liste_post]
[sauvegarde format_file]
[sauvegarde_simple format_file]
[reprise format_file]
[resume_last_time format_file]
}
where
```

- navier_stokes_turbulent navier_stokes_turbulent (5.25): Navier-Stokes equations as well as the associated turbulence model equations.
- **convection_diffusion_temperature_turbulent** *convection_diffusion_temperature_turbulent* (5.18): Energy equation (temperature diffusion convection) as well as the associated turbulence model equations.
- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings**|**postraitements**| post_processings (4.3) for inheritance: List of Postraitement objects (with name).
- **liste_de_postraitements** *liste_post_ok* (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.29 pb_thermohydraulique_turbulent_qc

Description: Resolution of turbulent thermohydraulic problem under low Mach number.

Warning: Available for VDF and VEF P0/P1NC discretization only.

```
Keyword Discretize should have already been used to read the object.
See also: Pb base (4.1)
Usage:
pb_thermohydraulique_turbulent_qc obj Lire obj {
     navier stokes turbulent qc navier stokes turbulent qc
     convection_diffusion_chaleur_turbulent_qc convection_diffusion_chaleur_turbulent_qc
     [ Post_processing|postraitement corps_postraitement]
     [ Post_processings|postraitements post_processings]
     [ liste_de_postraitements liste_post_ok]
     [ liste_postraitements liste_post]
     [ sauvegarde format_file]
     [ sauvegarde_simple format_file]
     [ reprise format_file]
     [ resume_last_time format_file]
}
where
```

- navier_stokes_turbulent_qc navier_stokes_turbulent_qc (5.27): Navier-Stokes equations under low Mach number as well as the associated turbulence model equations.
- **convection_diffusion_chaleur_turbulent_qc** convection_diffusion_chaleur_turbulent_qc (5.11): Energy equation under low Mach number as well as the associated turbulence model equations.
- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings|postraitements** *post_processings* (4.3) for inheritance: List of Postraitement objects (with name).
- liste de postraitements liste post ok (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.30 pb_thermohydraulique_turbulent_qc_fraction_massique

Description: Resolution of turbulent thermohydraulic problem under low Mach number with passive scalar equations.

Keyword Discretize should have already been used to read the object. See also: pb avec passif (4.9) Usage: pb thermohydraulique turbulent qc fraction massique obj Lire obj { **navier_stokes_turbulent_qc** navier_stokes_turbulent_qc **convection_diffusion_chaleur_turbulent_qc** convection_diffusion_chaleur_turbulent_qc equations_scalaires_passifs listeqn [Post_processing|postraitement corps_postraitement] [Post_processings|postraitements post_processings] [liste_de_postraitements liste_post_ok] [liste postraitements liste post] [sauvegarde format file] [sauvegarde_simple format_file] [reprise format file] [resume_last_time format_file] }

- navier_stokes_turbulent_qc navier_stokes_turbulent_qc (5.27): Navier-Stokes equations under low Mach number as well as the associated turbulence model equations.
- convection_diffusion_chaleur_turbulent_qc convection_diffusion_chaleur_turbulent_qc (5.11): Energy equation under low Mach number as well as the associated turbulence model equations.
- equations_scalaires_passifs listeqn (4.10) for inheritance: Passive scalar equations. The unknowns of the passive scalar equation number N are named temperatureN or concentrationN or fraction_massiqueN. This keyword is used to define initial conditions and the post processing fields. This kind of problem is very useful to test in only one data file (and then only one calculation) different schemes or different boundary conditions for the scalar transport equation.
- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings|postraitements** *post_processings* (4.3) for inheritance: List of Postraitement objects (with name).
- liste de postraitements liste post ok (4.4) for inheritance: This

where

- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- **reprise** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on

P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.

• **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.31 pb_thermohydraulique_turbulent_scalaires_passifs

Description: Resolution of thermohydraulic problem, with turbulence modelling and with the additional passive scalar equations.

Keyword Discretize should have already been used to read the object.

See also: pb_avec_passif (4.9)

Usage:
pb_thermohydraulique_turbulent_scalaires_passifs obj Lire obj {

 [navier_stokes_turbulent navier_stokes_turbulent]
 [convection_diffusion_temperature_turbulent convection_diffusion_temperature_turbulent]
 equations_scalaires_passifs listeqn
 [Post_processing|postraitement corps_postraitement]
 [Post_processings|postraitements post_processings]
 [liste_de_postraitements liste_post_ok]
 [liste_postraitements liste_post]
 [sauvegarde format_file]
 [sauvegarde_simple format_file]
 [reprise format_file]
 [resume_last_time format_file]

- navier_stokes_turbulent navier_stokes_turbulent (5.25): Navier-Stokes equations as well as the associated turbulence model equations.
- **convection_diffusion_temperature_turbulent** *convection_diffusion_temperature_turbulent* (5.18): Energy equations (temperature diffusion convection) as well as the associated turbulence model equations.
- equations_scalaires_passifs listeqn (4.10) for inheritance: Passive scalar equations. The unknowns of the passive scalar equation number N are named temperatureN or concentrationN or fraction_massiqueN. This keyword is used to define initial conditions and the post processing fields. This kind of problem is very useful to test in only one data file (and then only one calculation) different schemes or different boundary conditions for the scalar transport equation.
- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings**|**postraitements**| post_processings (4.3) for inheritance: List of Postraitement objects (with name).
- liste_de_postraitements liste_post_ok (4.4) for inheritance: This

where

• **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.

- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error.
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

4.32 pbc_med

See also: pb_gen_base (4)

```
Description: Allows to read med files and post-process them.
```

```
Usage:
pbc_med list_info_med
where
   • list_info_med list_info_med (4.33)
4.33
      list_info_med
Description: not_set
See also: listobj (31.3)
Usage:
{ object1, object2 .... }
list of info_med (4.33.1) separeted with,
4.33.1 info med
Description: not_set
See also: objet_lecture (32)
Usage:
file_med domaine pb_post
where
   • file_med str: Name of the MED file.
   • domaine str: Name of domain.
   • pb_post pb_post (4.19)
```

4.34 problem_read_generic

where

Description: The probleme_read_generic differs rom the rest of the TRUST code: The problem does not state the number of equations that are enclosed in the problem. As the list of equations to be solved in the generic read problem is declared in the data file and not pre-defined in the structure of the problem, each equation has to be distinctively associated with the problem with the Associate keyword.

Keyword Discretize should have already been used to read the object. See also: Pb_base (4.1)

Usage:
problem_read_generic obj Lire obj {

 [Post_processing|postraitement corps_postraitement]
 [Post_processings|postraitements post_processings]
 [liste_de_postraitements liste_post_ok]
 [liste_postraitements liste_post]
 [sauvegarde format_file]
 [sauvegarde_simple format_file]
 [reprise format_file]
 [resume_last_time format_file]
}

- **Post_processing|postraitement** *corps_postraitement* (4.2) for inheritance: One post-processing (without name).
- **Post_processings|postraitements** *post_processings* (4.3) for inheritance: List of Postraitement objects (with name).
- **liste_de_postraitements** *liste_post_ok* (4.4) for inheritance: This
- **liste_postraitements** *liste_post* (4.5) for inheritance: This block defines the output files to be written during the computation. The output format is lata in order to use OpenDX to draw the results. This block can be divided in one or several sub-blocks that can be written at different frequencies and in different directories. Attention. The directory lata used in this example should be created before running the computation or the lata files will be lost.
- **sauvegarde** *format_file* (4.6) for inheritance: Keyword used when calculation results are to be backed up. When a coupling is performed, the backup-recovery file name must be well specified for each problem. In this case, you must save to different files and correctly specify these files when resuming the calculation.
- **sauvegarde_simple** *format_file* (4.6) for inheritance: The same keyword than Sauvegarde except, the last time step only is saved.
- reprise format_file (4.6) for inheritance: Keyword to resume a calculation based on the name_file file (see the class format_file). If format_reprise is xyz, the name_file file should be the .xyz file created by the previous calculation. With this file, it is possible to resume a parallel calculation on P processors, whereas the previous calculation has been run on N (N<>P) processors. Should the calculation be resumed, values for the tinit (see schema_temps_base) time fields are taken from the name_file file. If there is no backup corresponding to this time in the name_file, TRUST exits in error
- **resume_last_time** *format_file* (4.6) for inheritance: Keyword to resume a calculation based on the name_file file, resume the calculation at the last time found in the file (tinit is set to last time of saved files).

5 mor_eqn

```
Description: Class of equation pieces (morceaux d'equation).
See also: objet u (33) eqn base (5.19)
Usage:
5.1 conduction
Description: Heat equation.
Keyword Discretize should have already been used to read the object.
See also: eqn_base (5.19)
conduction obj Lire obj {
     [ diffusion bloc diffusion]
     [initial conditions|conditions initiales condinits]
     [boundary conditions|conditions limites condlims]
     [sources sources]
     [ ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param]
     [ ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param]
     [ parametre_equation parametre_equation_base]
     [ equation_non_resolue str]
}
where
```

- **diffusion** *bloc_diffusion* (5.2) for inheritance: Keyword to specify the diffusion operator.
- initial_conditions|conditions_initiales condinits (5.3) for inheritance: Initial conditions.
- boundary conditions limites condlims (5.4) for inheritance: Boundary conditions.
- **sources** *sources* (5.5) for inheritance: To introduce a source term into an equation (in case of several source terms into the same equation, the blocks corresponding to the various terms need to be separated by a comma)
- ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a text file with the following format: n valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

The created files are named: pbname_fieldname_[boundaryname]_time.dat

• ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a binary file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

The created files are named: pbname fieldname [boundaryname] time.dat

- **parametre_equation** *parametre_equation_base* (5.7) for inheritance: Keyword used to specify additional parameters for the equation
- equation_non_resolue *str* for inheritance: The equation will not be solved while condition(t) is verified if equation_non_resolue keyword is used. Exemple: The Navier-Stokes equations are not solved between time t0 and t1.

```
5.2 bloc_diffusion
Description: not_set
See also: objet_lecture (32)
Usage:
aco [ operateur ] [ op_implicite ] acof
where
   • aco str into ['{'}]: Open accodance sign.
   • operateur diffusion_deriv (5.2.1): if none is specified, the diffusive scheme used is an order 2
   • op_implicite op_implicite (5.2.9): To have diffusive implicitation, it use Uzawa algorithm. Very
      useful when viscosity has large variations.
   • acof str into ['}']: Closed accodance sign.
5.2.1 diffusion_deriv
Description: not_set
See also: objet_lecture (32) negligeable (5.2.2) p1b (5.2.3) p1ncp1b (5.2.4) stab (5.2.5) standard (5.2.6)
option (5.2.8)
Usage:
diffusion_deriv
5.2.2 negligeable
Description: the diffusivity will not taken in count
See also: diffusion_deriv (5.2.1)
Usage:
negligeable
5.2.3 p1b
Description: not_set
See also: diffusion_deriv (5.2.1)
Usage:
p1b
5.2.4 p1ncp1b
Description: not_set
See also: diffusion_deriv (5.2.1)
Usage:
```

Navier_Sokes_Standard

{ equation_non_resolue (t>t0)*(t<t1) }

5.2.5 stab

Description: keyword allowing consistent and stable calculations even in case of obtuse angle meshes.

```
See also: diffusion_deriv (5.2.1)

Usage:
stab {

    [ standard int]
    [ info int]
    [ new_jacobian int]
    [ nu int]
    [ nut int]
    [ nu_transp int]
    [ nut_transp int]
}
where
```

- **standard** *int*: to recover the same results as calculations made by standard laminar diffusion operator. However, no stabilization technique is used and calculations may be unstable when working with obtuse angle meshes (by default 0)
- **info** *int*: developer option to get the stabilizing ratio (by default 0)
- **new_jacobian** *int*: when implicit time schemes are used, this option defines a new jacobian that may be more suitable to get stationary solutions (by default 0)
- **nu** *int*: (respectively nut 1) takes the molecular viscosity (resp. eddy viscosity) into account in the velocity gradient part of the diffusion expression (by default nu=1 and nut=1)
- nut int
- **nu_transp** *int*: (respectively nut_transp 1) takes the molecular viscosity (resp. eddy viscosity) into account in the transposed velocity gradient part of the diffusion expression (by default nu_transp=0 and nut_transp=1)
- nut_transp int

5.2.6 standard

Description: A new keyword, intended for LES calculations, has been developed to optimise and parameterise each term of the diffusion operator. Remark:

- 1. This class requires to define a filtering operator : see solveur_bar
- 2. The former (original) version: diffusion { } -which omitted some of the term of the diffusion operatorcan be recovered by using the following parameters in the new class : diffusion { standard grad_Ubar 0 nu 1 nut 1 nu_transp 0 nut_transp 1 filtrer_resu 0}.

```
See also: diffusion deriv (5.2.1)
```

Usage:

```
standard [ mot1 ] [ bloc_diffusion_standard ] where
```

- mot1 str into ['defaut_bar']: equivalent to grad_Ubar 1 nu 1 nut 1 nu_transp 1 nut_transp 1 filtrer-resu 1
- bloc diffusion standard bloc diffusion standard (5.2.7)

5.2.7 bloc_diffusion_standard

Description: grad_Ubar 1 makes the gradient calculated through the filtered values of velocity (P1-conform). nu 1 (respectively nut 1) takes the molecular viscosity (eddy viscosity) into account in the velocity gradient part of the diffusion expression.

nu_transp 1 (respectively nut_transp 1) takes the molecular viscosity (eddy viscosity) into account according in the TRANSPOSED velocity gradient part of the diffusion expression.

filtrer_resu 1 allows to filter the resulting diffusive fluxes contribution.

```
See also: objet_lecture (32)
Usage:
mot1 val1 mot2 val2 mot3 val3 mot4 val4 mot5 val5 mot6 val6
where
   • mot1 str into ['grad Ubar', 'nu', 'nut', 'nu transp', 'nut transp', 'filtrer resu']
   • val1 int into [0, 1]
   • mot2 str into ['grad_Ubar', 'nu', 'nut', 'nu_transp', 'nut_transp', 'filtrer_resu']
   • val2 int into [0, 1]
   • mot3 str into ['grad_Ubar', 'nu', 'nut', 'nu_transp', 'nut_transp', 'filtrer_resu']
   • val3 int into [0, 1]
   • mot4 str into ['grad_Ubar', 'nu', 'nut', 'nu_transp', 'nut_transp', 'filtrer_resu']
   • val4 int into [0, 1]
   • mot5 str into ['grad_Ubar', 'nu', 'nut', 'nu_transp', 'nut_transp', 'filtrer_resu']
   • val5 int into [0, 1]
   • mot6 str into ['grad_Ubar', 'nu', 'nut', 'nu_transp', 'nut_transp', 'filtrer_resu']
   • val6 int into [0, 1]
5.2.8 option
Description: not set
See also: diffusion_deriv (5.2.1)
Usage:
option bloc_lecture
where
   • bloc_lecture bloc_lecture (3.41)
5.2.9 op_implicite
Description: not_set
See also: objet_lecture (32)
Usage:
implicite mot solveur
where
   • implicite str into ['implicite']
   • mot str into ['solveur']
   • solveur_sys_base (9.12)
```

5.3 condinits

```
Description: Initial conditions.
See also: objet_lecture (32)
Usage:
aco condinit acof
where
   • aco str into ['{'}]: Open accodance sign.
   • condinit condinit (5.3.1): CI
   • acof str into ['}']: Closed accodance sign.
5.3.1 condinit
Description: Initial condition.
See also: objet_lecture (32)
Usage:
nom ch
where
   • nom str: Name of initial condition field.
   • ch champ_base (15.1): Type field and the initial values.
5.4 condlims
Description: Boundary conditions.
See also: listobj (31.3)
Usage:
{ object1 object2 .... }
list of condlimlu (5.4.1)
5.4.1 condlimlu
Description: Boundary condition specified.
See also: objet_lecture (32)
Usage:
bord cl
where
   • bord str: Name of the edge where the boundary condition applies.
```

- cl condlim_base (11): Boundary condition at the boundary called bord (edge).

5.5 sources

```
Description: The sources.

See also: listobj (31.3)

Usage: { object1 , object2 .... } list of source_base (27) separeted with ,
```

5.6 ecrire_fichier_xyz_valeur_param

Description: not_set

Keyword Discretize should have already been used to read the object.

See also: listobj (31.3)

Usage:

n object1, object2....

list of ecrire_fichier_xyz_valeur_item (5.6.1) separeted with,

5.6.1 ecrire_fichier_xyz_valeur_item

Description: To write the values of a field for some boundaries in a text file.

The name of the files is pb_name_field_name_time.dat

Several Ecrire_fichier_xyz_valeur keywords may be written into an equation to write several fields. This kind of files may be read by Champ_don_lu or Champ_front_lu for example.

See also: objet_lecture (32)

Usage:

name dt_ecrire_fic [bords]

where

- name str: Name of the field to write (Champ_Inc, Champ_Fonc or a post_processed field).
- **dt_ecrire_fic** *float*: Time period for printing in the file.
- **bords** bords_ecrire (5.6.2): to post-process only on some boundaries

5.6.2 bords_ecrire

Description: not_set

See also: objet_lecture (32)

Usage:

chaine bords

where

- chaine str into ['bords']
- **bords** *n word1 word2 ... wordn*: Keyword to post-process only on some boundaries :

bords nb_bords boundary1 ... boundaryn

where

nb bords: number of boundaries

boundary1 ... boundaryn: name of the boundaries.

5.7 parametre_equation_base

[crank int into [0, 1]]

[preconditionnement_diag int into [0, 1]] [niter_max_diffusion_implicite int] [seuil_diffusion_implicite float]

```
Description: Basic class for parametre_equation

See also: objet_lecture (32) parametre_diffusion_implicite (5.7.1) parametre_implicite (5.7.2)

Usage:

5.7.1 parametre_diffusion_implicite

Description: To specify additional parameters for the equation when using impliciting diffusion

See also: parametre_equation_base (5.7)

Usage:

parametre_diffusion_implicite {
```

} where

- **crank** *int into* [0, 1]: Use (1) or not (0, default) a Crank Nicholson method for the diffusion implicitation algorithm. Setting crank to 1 increases the order of the algorithm from 1 to 2.
- **preconditionnement_diag** *int into* [0, 1]: The CG used to solve the implicitation of the equation diffusion operator is not preconditioned by default. If this option is set to 1, a diagonal preconditionning is used. Warning: this option is not necessarily more efficient, depending on the treated case.
- **niter_max_diffusion_implicite** *int*: Change the maximum number of iterations for the CG (Conjugate Gradient) algorithm when solving the diffusion implicitation of the equation.
- **seuil_diffusion_implicite** *float*: Change the threshold convergence value used by default for the CG resolution for the diffusion implicitation of this equation.

5.7.2 parametre_implicite

Description: Keyword to change for this equation only the parameter of the implicit scheme used to solve the problem.

```
See also: parametre_equation_base (5.7)

Usage:
parametre_implicite {

    [ seuil_convergence_implicite float]
    [ seuil_convergence_solveur float]
    [ solveur solveur_sys_base]
    [ resolution_explicite ]
    [ equation_non_resolue ]
    [ equation_frequence_resolue str]
}

where
```

- **seuil_convergence_implicite** *float*: Keyword to change for this equation only the value of seuil_convergence_implicite used in the implicit scheme.
- **seuil_convergence_solveur** *float*: Keyword to change for this equation only the value of seuil_convergence_solveur used in the implicit scheme
- **solveur** *solveur_sys_base* (9.12): Keyword to change for this equation only the solver used in the implicit scheme
- resolution_explicite: To solve explicitly the equation whereas the scheme is an implicit scheme.
- equation_non_resolue : Keyword to specify that the equation is not solved.
- equation_frequence_resolue *str*: Keyword to specify that the equation is solved only every n time steps (n is an integer or given by a time-dependent function f(t)).

5.8 conduction_milieu_variable

```
Description: Heat equation.

Keyword Discretize should have already been used to read the object. See also: eqn_base (5.19)

Usage:
conduction_milieu_variable obj Lire obj {

    [convection bloc_convection]
    [diffusion bloc_diffusion]
    [initial_conditions|conditions_initiales condinits]
    [boundary_conditions|conditions_limites condlims]
    [sources sources]
    [ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param]
    [ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param]
    [parametre_equation parametre_equation_base]
    [equation_non_resolue str]
}
where
```

- **convection** *bloc_convection* (5.9) for inheritance: Keyword to alter the convection scheme.
- **diffusion** *bloc_diffusion* (5.2) for inheritance: Keyword to specify the diffusion operator.
- initial_conditions|conditions_initiales condinits (5.3) for inheritance: Initial conditions.
- boundary_conditions|conditions_limites condlims (5.4) for inheritance: Boundary conditions.
- **sources** *sources* (5.5) for inheritance: To introduce a source term into an equation (in case of several source terms into the same equation, the blocks corresponding to the various terms need to be separated by a comma)
- ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a text file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

The created files are named: pbname_fieldname_[boundaryname]_time.dat

• ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a binary file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1 ... x_n y_n [z_n] val_n The created files are named : pbname fieldname [boundaryname] time.dat
```

- parametre_equation parametre_equation_base (5.7) for inheritance: Keyword used to specify additional parameters for the equation
- equation_non_resolue *str* for inheritance: The equation will not be solved while condition(t) is verified if equation_non_resolue keyword is used. Exemple: The Navier-Stokes equations are not solved between time t0 and t1.

Navier_Sokes_Standard { equation_non_resolue (t>t0)*(t<t1) }

5.9 bloc_convection

Description: not_set

See also: objet_lecture (32)

Usage:

aco operateur acof

where

- aco str into ['{'}]: Open accodance sign.
- operateur convection_deriv (5.9.1)
- acof str into ['}']: Closed accodance sign.

5.9.1 convection_deriv

Description: not_set

See also: objet_lecture (32) amont (5.9.2) amont_old (5.9.3) centre (5.9.4) centre4 (5.9.5) centre_old (5.9.6) di_12 (5.9.7) ef (5.9.8) muscl3 (5.9.10) ef_stab (5.9.11) generic (5.9.14) kquick (5.9.15) muscl (5.9.16) muscl_old (5.9.17) muscl_new (5.9.18) negligeable (5.9.19) quick (5.9.20) btd (5.9.21) supg (5.9.22)

Usage:

convection_deriv

5.9.2 amont

Description: Keyword for upwind scheme for VDF or VEF discretizations. In VEF discretization equivalent to generic amont for TRUST version 1.5 or later. The previous upwind scheme can be used with the obsolete in future amont_old keyword.

See also: convection_deriv (5.9.1)

Usage:

amont

5.9.3 amont_old

Description: Only for VEF discretization, obsolete keyword, see amont.

See also: convection_deriv (5.9.1)

Usage:

amont_old

5.9.4 centre

Description: For VDF and VEF discretizations.

See also: convection_deriv (5.9.1)

Usage: centre

5.9.5 centre4

Description: For VDF and VEF discretizations.

See also: convection_deriv (5.9.1)

Usage: centre4

5.9.6 centre_old

Description: Only for VEF discretization.

See also: convection_deriv (5.9.1)

Usage: centre_old

5.9.7 di 12

Description: Only for VEF discretization.

See also: convection_deriv (5.9.1)

Usage: di 12

5.9.8 ef

Description: For VEF calculations, a centred convective scheme based on Finite Elements formulation can be called through the following data:

Convection { EF transportant_bar val transporte_bar val antisym val filtrer_resu val }

This scheme is 2nd order accuracy (and get better the property of kinetic energy conservation). Due to possible problems of instabilities phenomena, this scheme has to be coupled with stabilisation process (see Source_Qdm_lambdaup). These two last data are equivalent from a theoretical point of view in variationnal writing to: div((u. grad ub , vb) - (u. grad vb, ub)), where vb corresponds to the filtered reference test functions.

Remark:

This class requires to define a filtering operator: see solveur_bar

See also: convection_deriv (5.9.1)

Usage:

```
ef [ mot1 ] [ bloc_ef ]
where
   • mot1 str into ['defaut_bar']: equivalent to transportant_bar 0 transporte_bar 1 filtrer_resu 1 antisym
   • bloc_ef bloc_ef (5.9.9)
5.9.9 bloc_ef
Description: not_set
See also: objet_lecture (32)
Usage:
mot1 val1 mot2 val2 mot3 val3 mot4 val4
where
   • mot1 str into ['transportant_bar', 'transporte_bar', 'filtrer_resu', 'antisym']
   • val1 int into [0, 1]
   • mot2 str into ['transportant_bar', 'transporte_bar', 'filtrer_resu', 'antisym']
   • val2 int into [0, 1]
   • mot3 str into ['transportant_bar', 'transporte_bar', 'filtrer_resu', 'antisym']
   • val3 int into [0, 1]
   • mot4 str into ['transportant_bar', 'transporte_bar', 'filtrer_resu', 'antisym']
   • val4 int into [0, 1]
5.9.10 muscl3
Description: Keyword for a scheme using a ponderation between muscl and center schemes in VEF.
See also: convection_deriv (5.9.1)
Usage:
muscl3 {
      [ alpha float]
}
where
   • alpha float: To weight the scheme centering with the factor double (between 0 (full centered) and 1
      (muscl), by default 1).
5.9.11 ef_stab
Description: Keyword for a VEF convective scheme.
See also: convection_deriv (5.9.1)
Usage:
ef_stab {
      [ alpha float]
      [test int]
      [tdivu]
```

```
[ old ]
   [ volumes_etendus ]
   [ volumes_non_etendus ]
   [ amont_sous_zone str]
   [ alpha_sous_zone listsous_zone_valeur]
}
where
```

- **alpha** *float*: To weight the scheme centering with the factor double (between 0 (full centered) and 1 (mix between upwind and centered), by default 1). For scalar equation, it is adviced to use alpha=1 and for the momentum equation, alpha=0.2 is adviced.
- test int: Developer option to compare old and new version of EF_stab
- tdivu: To have the convective operator calculated as div(TU)-TdivU(=UgradT).
- **old**: To use old version of EF_stab scheme (default no).
- volumes_etendus: Option for the scheme to use the extended volumes (default, yes).
- volumes_non_etendus: Option for the scheme to not use the extended volumes (default, no).
- amont_sous_zone str: Option to degenerate EF_stab scheme into Amont (upwind) scheme in the sub zone of name sz_name. The sub zone may be located arbitrarily in the domain but the more often this option will be activated in a zone where EF_stab scheme generates instabilities as for free outlet for example.
- alpha_sous_zone listsous_zone_valeur (5.9.12): Option to change locally the alpha value on N subzones named sub_zone_name_I. Generally, it is used to prevent from a local divergence by increasing locally the alpha parameter.

5.9.12 listsous_zone_valeur

```
Description: List of groups of two words.

See also: listobj (31.3)

Usage:
n object1 object2 ....
list of sous_zone_valeur (5.9.13)

5.9.13 sous_zone_valeur

Description: Two words.

See also: objet_lecture (32)

Usage:
sous_zone_valeur
where

• sous_zone_str: sous zone
• valeur float: value
```

5.9.14 generic

Description: Keyword for generic calling of upwind and muscl convective scheme in VEF discretization. For muscl scheme, limiters and order for fluxes calculations have to be specified. The available limiters are: minmod - vanleer -vanalbada - chakravarthy - superbee, and the order of accuracy is 1 or 2. Note that chakravarthy is a non-symmetric limiter and superbee may engender results out of physical limits. By

```
Examples:
convection { generic amont }
convection { generic muscl minmod 1 }
convection { generic muscl vanleer 2 }
In case of results out of physical limits with muscl scheme (due for instance to strong non-conformal
velocity flow field), user can redefine in data file a lower order and a smoother limiter, as: convection {
generic muscl minmod 1 }
See also: convection_deriv (5.9.1)
Usage:
generic type [limiteur][ordre][alpha]
where
   • type str into ['amont', 'muscl', 'centre']: type of scheme
   • limiteur str into ['minmod', 'vanleer', 'vanalbada', 'chakravarthy', 'superbee']: type of limiter
   • ordre int into [1, 2, 3]: order of accuracy
   • alpha float: alpha
5.9.15 kquick
Description: Only for VEF discretization.
See also: convection deriv (5.9.1)
Usage:
kquick
5.9.16 muscl
Description: Keyword for muscl scheme in VEF discretization equivalent to generic muscl vanleer 2 for the
1.5 version or later. The previous muscl scheme can be used with the obsolete in future muscl old keyword.
See also: convection_deriv (5.9.1)
Usage:
muscl
5.9.17 muscl old
Description: Only for VEF discretization.
See also: convection_deriv (5.9.1)
Usage:
muscl old
5.9.18 muscl_new
Description: Only for VEF discretization.
See also: convection_deriv (5.9.1)
```

consequence, these two limiters are not recommended.

```
Usage:
muscl_new
5.9.19 negligeable
Description: For VDF and VEF discretizations. Suppresses the convection operator.
See also: convection_deriv (5.9.1)
Usage:
negligeable
5.9.20 quick
Description: Only for VDF discretization.
See also: convection_deriv (5.9.1)
Usage:
quick
5.9.21 btd
Description: Only for EF discretization.
See also: convection_deriv (5.9.1)
Usage:
btd {
     btd float
     facteur float
}
where
   • btd float
   • facteur float
5.9.22 supg
Description: Only for EF discretization.
See also: convection_deriv (5.9.1)
Usage:
supg {
     facteur float
}
where
```

• facteur float

5.10 convection_diffusion_chaleur_qc

Description: Energy equation under low Mach number.

```
Keyword Discretize should have already been used to read the object. See also: eqn_base (5.19) convection_diffusion_chaleur_turbulent_qc (5.11)
```

Usage:

```
convection_diffusion_chaleur_qc obj Lire obj {
```

```
[ mode_calcul_convection str into ['ancien', 'divuT_moins_Tdivu', 'divrhouT_moins_Tdivrhou']]
[ convection bloc_convection]
[ diffusion bloc_diffusion]
[ initial_conditions|conditions_initiales condinits]
[ boundary_conditions|conditions_limites condlims]
[ sources sources]
[ ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param]
[ ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param]
[ parametre_equation parametre_equation_base]
[ equation_non_resolue str]
}
```

- mode_calcul_convection str into ['ancien', 'divuT_moins_Tdivu', 'divrhouT_moins_Tdivrhou']: Option to set the form of the convective operator divrhouT_moins_Tdivrhou (the default since 1.6.8): rho.u.gradT = div(rho.u.T) Tdiv(rho.u.1) ancien: u.gradT = div(u.T) T.div(u) divuT_moins_Tdivu : u.gradT = div(u.T) Tdiv(u.1)
- **convection** *bloc_convection* (5.9) for inheritance: Keyword to alter the convection scheme.
- diffusion bloc diffusion (5.2) for inheritance: Keyword to specify the diffusion operator.
- initial_conditions|conditions_initiales condinits (5.3) for inheritance: Initial conditions.
- boundary_conditions|conditions_limites condlims (5.4) for inheritance: Boundary conditions.
- **sources** *sources* (5.5) for inheritance: To introduce a source term into an equation (in case of several source terms into the same equation, the blocks corresponding to the various terms need to be separated by a comma)
- ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a text file with the following format: n valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

The created files are named: pbname_fieldname_[boundaryname]_time.dat

• ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a binary file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

The created files are named: pbname fieldname [boundaryname] time.dat

- parametre_equation parametre_equation_base (5.7) for inheritance: Keyword used to specify additional parameters for the equation
- equation_non_resolue *str* for inheritance: The equation will not be solved while condition(t) is verified if equation_non_resolue keyword is used. Exemple: The Navier-Stokes equations are not solved between time t0 and t1.

```
Navier_Sokes_Standard { equation_non_resolue (t>t0)*(t<t1) }
```

5.11 convection_diffusion_chaleur_turbulent_qc

Description: Energy equation under low Mach number as well as the associated turbulence model equations.

Keyword Discretize should have already been used to read the object. See also: convection_diffusion_chaleur_qc (5.10)

Usage:

convection_diffusion_chaleur_turbulent_qc obj Lire obj {

```
[ modele_turbulence modele_turbulence_scal_base]
[ mode_calcul_convection str into ['ancien', 'divuT_moins_Tdivu', 'divrhouT_moins_Tdivrhou']]
[ convection bloc_convection]
[ diffusion bloc_diffusion]
[ initial_conditions|conditions_initiales condinits]
[ boundary_conditions|conditions_limites condlims]
[ sources sources]
[ ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param]
[ ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param]
[ parametre_equation parametre_equation_base]
[ equation_non_resolue str]
}
where
```

- modele turbulence modele turbulence scal base (21): Turbulence model for the energy equation.
- mode_calcul_convection str into ['ancien', 'divuT_moins_Tdivu', 'divrhouT_moins_Tdivrhou'] for inheritance: Option to set the form of the convective operator divrhouT_moins_Tdivrhou (the default since 1.6.8): rho.u.gradT = div(rho.u.T) Tdiv(rho.u.1) ancien: u.gradT = div(u.T) T.div(u) divuT_moins_Tdivu : u.gradT = div(u.T) Tdiv(u.1)
- **convection** *bloc_convection* (5.9) for inheritance: Keyword to alter the convection scheme.
- **diffusion** bloc_diffusion (5.2) for inheritance: Keyword to specify the diffusion operator.
- initial_conditions|conditions_initiales condinits (5.3) for inheritance: Initial conditions.
- boundary_conditions|conditions_limites condlims (5.4) for inheritance: Boundary conditions.
- **sources** *sources* (5.5) for inheritance: To introduce a source term into an equation (in case of several source terms into the same equation, the blocks corresponding to the various terms need to be separated by a comma)
- ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a text file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
The created files are named : pbname_fieldname_[boundaryname]_time.dat
```

• ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a binary file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
```

```
...
x_n y_n [z_n] val_n
```

- parametre_equation parametre_equation_base (5.7) for inheritance: Keyword used to specify additional parameters for the equation
- equation_non_resolue *str* for inheritance: The equation will not be solved while condition(t) is verified if equation_non_resolue keyword is used. Exemple: The Navier-Stokes equations are not solved between time t0 and t1.

```
Navier_Sokes_Standard { equation_non_resolue (t>t0)*(t<t1) }
```

5.12 convection_diffusion_concentration

Description: Constituent transport vectorial equation (concentration diffusion convection).

```
Keyword Discretize should have already been used to read the object.
See also: eqn base (5.19) convection diffusion concentration turbulent (5.13)
```

Usage:

```
convection_diffusion_concentration obj Lire obj {
```

```
[ nom_inconnue str]
[ masse_molaire float]
[ alias str]
[ convection bloc_convection]
[ diffusion bloc_diffusion]
[ initial_conditions|conditions_initiales condinits]
[ boundary_conditions|conditions_limites condlims]
[ sources sources]
[ ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param]
[ ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param]
[ parametre_equation parametre_equation_base]
[ equation_non_resolue str]
}
where
```

- **nom_inconnue** *str*: Keyword Nom_inconnue will rename the unknown of this equation with the given name. In the postprocessing part, the concentration field will be accessible with this name. This is usefull if you want to track more than one concentration (otherwise, only the concentration field in the first concentration equation can be accessed).
- masse molaire float
- alias str
- convection bloc convection (5.9) for inheritance: Keyword to alter the convection scheme.
- **diffusion** bloc diffusion (5.2) for inheritance: Keyword to specify the diffusion operator.
- initial_conditions|conditions_initiales condinits (5.3) for inheritance: Initial conditions.
- boundary_conditions|conditions_limites condlims (5.4) for inheritance: Boundary conditions.
- **sources** *sources* (5.5) for inheritance: To introduce a source term into an equation (in case of several source terms into the same equation, the blocks corresponding to the various terms need to be separated by a comma)
- ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a text file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
```

```
...
x_n y_n [z_n] val_n
The created files are named: pbname_fieldname_[boundaryname]_time.dat
```

• ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a binary file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

The created files are named: pbname_fieldname_[boundaryname]_time.dat

- parametre_equation parametre_equation_base (5.7) for inheritance: Keyword used to specify additional parameters for the equation
- equation_non_resolue *str* for inheritance: The equation will not be solved while condition(t) is verified if equation_non_resolue keyword is used. Exemple: The Navier-Stokes equations are not solved between time t0 and t1.

```
Navier_Sokes_Standard { equation_non_resolue (t>t0)*(t<t1) }
```

5.13 convection_diffusion_concentration_turbulent

Description: Constituent transport equations (concentration diffusion convection) as well as the associated turbulence model equations.

Keyword Discretize should have already been used to read the object. See also: convection_diffusion_concentration (5.12)

Usage:

convection_diffusion_concentration_turbulent obj Lire obj {

```
[ modele_turbulence modele_turbulence_scal_base]
    [nom_inconnue str]
    [masse_molaire float]
    [alias str]
    [convection bloc_convection]
    [diffusion bloc_diffusion]
    [initial_conditions|conditions_initiales condinits]
    [boundary_conditions|conditions_limites condlims]
    [sources sources]
    [ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param]
    [ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param]
    [parametre_equation parametre_equation_base]
    [equation_non_resolue str]
}
where
```

- modele_turbulence modele_turbulence_scal_base (21): Turbulence model to be used in the constituent transport equations. The only model currently available is Schmidt.
- nom_inconnue *str* for inheritance: Keyword Nom_inconnue will rename the unknown of this equation with the given name. In the postprocessing part, the concentration field will be accessible with this name. This is usefull if you want to track more than one concentration (otherwise, only the concentration field in the first concentration equation can be accessed).
- masse molaire float for inheritance
- alias str for inheritance

- **convection** *bloc_convection* (5.9) for inheritance: Keyword to alter the convection scheme.
- **diffusion** bloc_diffusion (5.2) for inheritance: Keyword to specify the diffusion operator.
- initial conditions|conditions initiales condinits (5.3) for inheritance: Initial conditions.
- boundary_conditions|conditions_limites condlims (5.4) for inheritance: Boundary conditions.
- **sources** *sources* (5.5) for inheritance: To introduce a source term into an equation (in case of several source terms into the same equation, the blocks corresponding to the various terms need to be separated by a comma)
- ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a text file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

• ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a binary file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

• **espece** *espece* (14)

The created files are named: pbname_fieldname_[boundaryname]_time.dat

- parametre_equation parametre_equation_base (5.7) for inheritance: Keyword used to specify additional parameters for the equation
- equation_non_resolue *str* for inheritance: The equation will not be solved while condition(t) is verified if equation_non_resolue keyword is used. Exemple: The Navier-Stokes equations are not solved between time t0 and t1.

```
Navier_Sokes_Standard { equation_non_resolue (t>t0)*(t<t1) }
```

5.14 convection_diffusion_fraction_massique_qc

```
Description: not_set
Keyword Discretize should have already been used to read the object.
See also: eqn_base (5.19)
Usage:
convection_diffusion_fraction_massique_qc obj Lire obj {
     espece espece
     [convection bloc convection]
     [ diffusion bloc_diffusion]
     [initial conditions|conditions initiales condinits]
     [boundary conditions|conditions limites condlims]
     [sources sources]
     [ ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param]
     [ ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param]
     [ parametre equation parametre equation base]
     [ equation_non_resolue str]
}
where
```

- **convection** *bloc_convection* (5.9) for inheritance: Keyword to alter the convection scheme.
- **diffusion** bloc_diffusion (5.2) for inheritance: Keyword to specify the diffusion operator.
- initial conditions|conditions initiales condinits (5.3) for inheritance: Initial conditions.
- boundary_conditions|conditions_limites condlims (5.4) for inheritance: Boundary conditions.
- **sources** *sources* (5.5) for inheritance: To introduce a source term into an equation (in case of several source terms into the same equation, the blocks corresponding to the various terms need to be separated by a comma)
- ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a text file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

• ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a binary file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

where

The created files are named : $pbname_fieldname_[boundaryname]_time.dat$

- parametre_equation parametre_equation_base (5.7) for inheritance: Keyword used to specify additional parameters for the equation
- equation_non_resolue *str* for inheritance: The equation will not be solved while condition(t) is verified if equation_non_resolue keyword is used. Exemple: The Navier-Stokes equations are not solved between time t0 and t1.

```
Navier_Sokes_Standard { equation_non_resolue (t>t0)*(t<t1) }
```

5.15 convection diffusion fraction massique turbulent qc

```
Description: not_set
Keyword Discretize should have already been used to read the object.
See also: eqn_base (5.19)
Usage:
convection_diffusion_fraction_massique_turbulent_qc obj Lire obj {
     [ modele_turbulence modele_turbulence_scal_base]
     espece espece
     [convection bloc_convection]
     [ diffusion bloc diffusion]
     [initial conditions|conditions initiales condinits]
     [boundary conditions|conditions limites condlims]
     [sources sources]
     [ ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param]
     [ ecrire fichier xyz valeur bin ecrire fichier xyz valeur param]
     [parametre_equation parametre_equation_base]
     [ equation_non_resolue str]
}
```

- modele_turbulence modele_turbulence_scal_base (21): Turbulence model to be used.
- espece espece (14)
- convection bloc convection (5.9) for inheritance: Keyword to alter the convection scheme.
- **diffusion** bloc_diffusion (5.2) for inheritance: Keyword to specify the diffusion operator.
- initial conditions|conditions initiales condinits (5.3) for inheritance: Initial conditions.
- boundary_conditions|conditions_limites condlims (5.4) for inheritance: Boundary conditions.
- **sources** *sources* (5.5) for inheritance: To introduce a source term into an equation (in case of several source terms into the same equation, the blocks corresponding to the various terms need to be separated by a comma)
- ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a text file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

• ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a binary file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x n y n [z n] val n
```

The created files are named: pbname_fieldname_[boundaryname]_time.dat

- parametre_equation parametre_equation_base (5.7) for inheritance: Keyword used to specify additional parameters for the equation
- equation_non_resolue *str* for inheritance: The equation will not be solved while condition(t) is verified if equation_non_resolue keyword is used. Exemple: The Navier-Stokes equations are not solved between time t0 and t1.

```
Navier_Sokes_Standard { equation_non_resolue (t>t0)*(t<t1) }
```

5.16 convection_diffusion_temperature

Description: Energy equation (temperature diffusion convection).

Keyword Discretize should have already been used to read the object.

See also: eqn_base (5.19)

Usage:

convection_diffusion_temperature obj Lire obj {

```
[ penalisation_12_ftd pp]
[ convection bloc_convection]
[ diffusion bloc_diffusion]
[ initial_conditions|conditions_initiales condinits]
[ boundary_conditions|conditions_limites condlims]
[ sources sources]
[ ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param]
[ ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param]
[ parametre_equation parametre_equation_base]
[ equation_non_resolue str]
}
where
```

- **penalisation_12_ftd** *pp* (5.17): to activate or not (the default is Direct Forcing method) the Penalized Direct Forcing method to impose the specified temperature on the solid-fluid interface.
- convection bloc convection (5.9) for inheritance: Keyword to alter the convection scheme.
- **diffusion** *bloc_diffusion* (5.2) for inheritance: Keyword to specify the diffusion operator.
- initial_conditions|conditions_initiales condinits (5.3) for inheritance: Initial conditions.
- boundary_conditions|conditions_limites condlims (5.4) for inheritance: Boundary conditions.
- **sources** *sources* (5.5) for inheritance: To introduce a source term into an equation (in case of several source terms into the same equation, the blocks corresponding to the various terms need to be separated by a comma)
- ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a text file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

• ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a binary file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x n y n [z n] val n
```

The created files are named: pbname_fieldname_[boundaryname]_time.dat

- parametre_equation parametre_equation_base (5.7) for inheritance: Keyword used to specify additional parameters for the equation
- equation_non_resolue *str* for inheritance: The equation will not be solved while condition(t) is verified if equation_non_resolue keyword is used. Exemple: The Navier-Stokes equations are not solved between time t0 and t1.

```
Navier_Sokes_Standard { equation_non_resolue (t>t0)*(t<t1) }
```

5.17 pp

```
Description: not_set

See also: listobj (31.3)

Usage:
{ object1 object2 .... }
list of penalisation_l2_ftd_lec (5.17.1)

5.17.1 penalisation_l2_ftd_lec

Description: not_set

See also: objet_lecture (32)

Usage:
bord val
where

• bord str
```

• val n x1 x2 ... xn

5.18 convection_diffusion_temperature_turbulent

Description: Energy equation (temperature diffusion convection) as well as the associated turbulence model equations.

Keyword Discretize should have already been used to read the object.

See also: eqn_base (5.19)

Usage:
convection_diffusion_temperature_turbulent obj Lire obj {
 [modele_turbulence modele_turbulence_scal_base]
 [convection bloc_convection]
 [diffusion bloc_diffusion]
 [initial_conditions|conditions_initiales condinits]
 [boundary_conditions|conditions_limites condlims]
 [sources sources]
 [ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param]
 [ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param]

[parametre_equation parametre_equation_base]

[equation non resolue str]

} where

- modele_turbulence modele_turbulence_scal_base (21): Turbulence model for the energy equation.
- convection bloc_convection (5.9) for inheritance: Keyword to alter the convection scheme.
- **diffusion** *bloc_diffusion* (5.2) for inheritance: Keyword to specify the diffusion operator.
- initial conditions londitions initiales condinits (5.3) for inheritance: Initial conditions.
- boundary conditions limites condlims (5.4) for inheritance: Boundary conditions.
- **sources** *sources* (5.5) for inheritance: To introduce a source term into an equation (in case of several source terms into the same equation, the blocks corresponding to the various terms need to be separated by a comma)
- ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a text file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

The created files are named: pbname_fieldname_[boundaryname]_time.dat

• ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a binary file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

The created files are named: pbname fieldname [boundaryname] time.dat

- parametre_equation parametre_equation_base (5.7) for inheritance: Keyword used to specify additional parameters for the equation
- equation_non_resolue *str* for inheritance: The equation will not be solved while condition(t) is verified if equation_non_resolue keyword is used. Exemple: The Navier-Stokes equations are not solved between time t0 and t1.

```
Navier_Sokes_Standard { equation_non_resolue (t>t0)*(t<t1) }
```

5.19 eqn_base

Description: Basic class for equations.

Keyword Discretize should have already been used to read the object.

See also: mor_eqn (5) navier_stokes_standard (5.24) convection_diffusion_temperature (5.16) convection_diffusion_temperature_turbulent (5.18) conduction (5.1) convection_diffusion_chaleur_qc (5.10) transport_k_epsilon (5.28) convection_diffusion_concentration (5.12) convection_diffusion_fraction_massique_qc (5.14) convection_diffusion_fraction_massique_turbulent_qc (5.15) conduction_milieu_variable (5.8)

Usage:

```
eqn_base obj Lire obj {
    [ convection bloc_convection]
    [ diffusion bloc_diffusion]
    [ initial_conditions|conditions_initiales condinits]
    [ boundary_conditions|conditions_limites condlims]
    [ sources sources]
    [ ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param]
    [ ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param]
    [ parametre_equation parametre_equation_base]
    [ equation_non_resolue str]
}
where
```

- **convection** *bloc_convection* (5.9): Keyword to alter the convection scheme.
- **diffusion** *bloc_diffusion* (5.2): Keyword to specify the diffusion operator.
- initial_conditions|conditions_initiales condinits (5.3): Initial conditions.
- **boundary_conditions|conditions_limites** *condlims* (5.4): Boundary conditions.
- **sources** *sources* (5.5): To introduce a source term into an equation (in case of several source terms into the same equation, the blocks corresponding to the various terms need to be separated by a comma)
- ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param (5.6): This keyword is used to write the values of a field for the whole domain or only for some boundaries in a text file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

The created files are named: pbname_fieldname_[boundaryname]_time.dat

• ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param (5.6): This keyword is used to write the values of a field for the whole domain or only for some boundaries in a binary file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

The created files are named: pbname_fieldname_[boundaryname]_time.dat

- parametre_equation parametre_equation_base (5.7): Keyword used to specify additional parameters for the equation
- equation_non_resolue *str*: The equation will not be solved while condition(t) is verified if equation_non_resolue keyword is used. Exemple: The Navier-Stokes equations are not solved between time t0 and t1.

```
Navier_Sokes_Standard { equation non resolue (t>t0)*(t<t1) }
```

5.20 navier_stokes_qc

[sources sources]

where

[equation_non_resolue str]

Description: Navier-Stokes equations under low Mach number.

[boundary_conditions|conditions_limites condlims]

[parametre_equation parametre_equation_base]

[ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param] [ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param]

- methode_calcul_pression_initiale str into ['avec_les_cl', 'avec_sources', 'avec_sources_et_operateurs', 'sans_rien'] for inheritance: Keyword to select an option for the pressure calculation before the fist time step. Options are: avec_les_cl (default option lapP=0 is solved with Neuman boundary conditions on pressure if any), avec_sources (lapP=f is solved with Neuman boundaries conditions and f integrating the source terms of the Navier-Stokes equations) and avec_sources_et_operateurs (lapP=f is solved as with the previous option avec_sources but f integrating also some operators of the Navier-Stokes equations). The two last options are useful and sometime necessary when source terms are implicited when using an implicit time scheme to solve the Navier-Stokes equations.
- **projection_initiale** *int* for inheritance: Keyword to suppress, if boolean equals 0, the initial projection which checks DivU=0. By default, boolean equals 1.
- solveur_pression solveur_sys_base (9.12) for inheritance: Linear pressure system resolution method.
- **solveur_bar** *solveur_sys_base* (9.12) for inheritance: This keyword is used to define when filtering operation is called (typically for EF convective scheme, standard diffusion operator and Source_Qdm_lambdaup). A file (solveur.bar) is then created and used for inversion procedure. Syntax is the same then for pressure solver (GCP is required for multi-processor calculations and, in a general way, for big meshes).
- **dt_projection** *deuxmots* (5.21) for inheritance: nb value: This keyword checks every nb time-steps the equality of velocity divergence to zero. value is the criteria convergency for the solver used.
- seuil_divU floatfloat (5.22) for inheritance: value factor: this keyword is intended to minimise the number of iterations during the pressure system resolution. The convergence criteria during this step ('seuil' in solveur_pression) is dynamically adapted according to the mass conservation. At tn, the linear system Ax=B is considered as solved if the residual ||Ax-B||<seuil(tn). For tn+1, the threshold value seuil(tn+1) will be evualated as:

```
If ( lmax(DivU)*dtl<value )
Seuil(tn+1)= Seuil(tn)*factor
Else
Seuil(tn+1)= Seuil(tn)*factor
Endif
```

The first parameter (value) is the mass evolution the user is ready to accept per timestep, and the second one (factor) is the factor of evolution for 'seuil' (for example 1.1, so 10

- **traitement_particulier** *traitement_particulier* (5.23) for inheritance: Keyword to post-process particular values.
- **convection** *bloc_convection* (5.9) for inheritance: Keyword to alter the convection scheme.
- **diffusion** *bloc_diffusion* (5.2) for inheritance: Keyword to specify the diffusion operator.
- initial_conditions|conditions_initiales condinits (5.3) for inheritance: Initial conditions.
- boundary_conditions|conditions_limites condlims (5.4) for inheritance: Boundary conditions.
- **sources** *sources* (5.5) for inheritance: To introduce a source term into an equation (in case of several source terms into the same equation, the blocks corresponding to the various terms need to be separated by a comma)
- ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a text file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x n y n [z n] val n
```

The created files are named: pbname_fieldname_[boundaryname]_time.dat

• ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a binary file with the following format: n valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

The created files are named : $pbname_fieldname_[boundaryname]_time.dat$

- parametre_equation parametre_equation_base (5.7) for inheritance: Keyword used to specify additional parameters for the equation
- equation_non_resolue *str* for inheritance: The equation will not be solved while condition(t) is verified if equation_non_resolue keyword is used. Exemple: The Navier-Stokes equations are not solved between time t0 and t1.

```
Navier_Sokes_Standard { equation_non_resolue (t>t0)*(t<t1) }
```

5.21 deuxmots

```
Description: Two words.

See also: objet_lecture (32)

Usage:
mot_1 mot_2
where

• mot_1 str: First word.
• mot 2 str: Second word.
```

```
5.22 floatfloat
```

```
Description: Two reals.
See also: objet_lecture (32)
Usage:
a b
where
   • a float: First real.
   • b float: Second real.
5.23 traitement_particulier
Description: Auxiliary class to post-process particular values.
See also: objet_lecture (32)
Usage:
aco trait_part acof
where
   • aco str into ['{'}]: Open accodance sign.
   • trait_part traitement_particulier_base (5.23.1): Type of traitement_particulier.
   • acof str into ['}']: Closed accodance sign.
5.23.1 traitement_particulier_base
Description: Basic class to post-process particular values.
See also: objet_lecture (32) temperature (5.23.2) canal (5.23.3) ec (5.23.4) thi (5.23.5) chmoy_faceperio
(5.23.6)
Usage:
5.23.2 temperature
Description: not_set
See also: traitement_particulier_base (5.23.1)
Usage:
temperature {
      bord str
      direction int
}
where
   • bord str
   • direction int
```

5.23.3 canal

Description: Keyword for statistics on a periodic plane channel.

```
See also: traitement_particulier_base (5.23.1)

Usage:
canal {

    [dt_impr_moy_spat float]
    [dt_impr_moy_temp float]
    [debut_stat float]
    [fin_stat float]
    [pulsation_w float]
    [nb_points_par_phase int]
    [reprise str]
}

where
```

- **dt_impr_moy_spat** *float*: Period to print the spatial average (default value is 1e6).
- dt impr moy temp float: Period to print the temporal average (default value is 1e6).
- **debut_stat** *float*: Time to start the temporal averaging (default value is 1e6).
- fin_stat float: Time to end the temporal averaging (default value is 1e6).
- **pulsation_w** *float*: Pulsation for phase averaging (in case of pulsating forcing term) (no default value).
- **nb_points_par_phase** *int*: Number of samples to represent phase average all along a period (no default value).
- **reprise** *str*: val_moy_temp_xxxxxx.sauv : Keyword to resume a calculation with previous averaged quantities.

Note that for thermal and turbulent problems, averages on temperature and turbulent viscosity are automatically calculated. To resume a calculation with phase averaging, val_moy_temp_xxxxxx.sauv_phase file is required on the directory where the job is submitted (this last file will be then automatically loaded by TRUST).

5.23.4 ec

Description: Keyword to print total kinetic energy into the referential linked to the domain (keyword Ec). In the case where the domain is moving into a Galilean referential, the keyword Ec_dans_repere_fixe will print total kinetic energy in the Galilean referential whereas Ec will print the value calculated into the moving referential linked to the domain

See also: traitement_particulier_base (5.23.1)

Usage:
ec {

 [Ec]
 [Ec_dans_repere_fixe]
 [periode float]
}

where

• Ec

- Ec_dans_repere_fixe
- **periode** *float*: periode is the keyword to set the period of printing into the file datafile_Ec.son or datafile_Ec_dans_repere_fixe.son.

5.23.5 thi

Description: Keyword for a THI (Homogeneous Isotropic Turbulence) calculation.

```
Usage:
thi {

init_Ec int
[val_Ec float]
[facon_init int into [0, 1]]
[calc_spectre int into [0, 1]]
[periode_calc_spectre float]
[3D int into [0, 1]]
[1D int into [0, 1]]
[conservation_Ec]
[longueur_boite float]
}
where
```

See also: traitement_particulier_base (5.23.1)

- init_Ec int: Keyword to renormalize initial velocity so that kinetic energy equals to the value given by keyword val_Ec.
- val_Ec *float*: Keyword to impose a value for kinetic energy by velocity renormalizated if init_Ec value is 1.
- facon_init int into [0, 1]: Keyword to specify how kinetic energy is computed (0 or 1).
- calc spectre int into [0, 1]: Calculate or not the spectrum of kinetic energy.

Files called Sorties_THI are written with inside four columns:

time:t global kinetic energy:Ec enstrophy:D skewness:S

If calc_spectre is set to 1, a file Sorties_THI2_2 is written with three columns :

time:t kinetic_energy_at_kc=32 enstrophy_at_kc=32

If calc_spectre is set to 1, a file spectre_xxxxx is written with two columns at each time xxxxx : frequency:k energy:E(k).

- periode_calc_spectre float: Period for calculating spectrum of kinetic energy
- 3D int into [0, 1]: Calculate or not the 3D spectrum
- 1D int into [0, 1]: Calculate or not the 1D spectrum
- **conservation_Ec**: If set to 1, velocity field will be changed as to have a constant kinetic energy (default 0)
- longueur_boite float: Length of the calculation domain

5.23.6 chmoy_faceperio

```
Description: non documente

See also: traitement_particulier_base (5.23.1)

Usage:
chmoy_faceperio bloc
where
```

• bloc bloc_lecture (3.41)

5.24 navier_stokes_standard

where

```
Description: Navier-Stokes equations.
Keyword Discretize should have already been used to read the object.
See also: eqn_base (5.19) navier_stokes_turbulent (5.25) navier_stokes_qc (5.20)
Usage:
navier_stokes_standard obj Lire obj {
     operateurs', 'sans rien']
     [ projection_initiale int]
     [solveur_pression solveur_sys_base]
     [solveur_bar solveur_sys_base]
     [dt_projection deuxmots]
     [ seuil_divU floatfloat]
     [traitement_particulier traitement_particulier]
     [convection bloc_convection]
     [ diffusion bloc diffusion]
     [initial_conditions|conditions_initiales condinits]
     [boundary_conditions|conditions_limites condlims]
     [sources sources]
     [ ecrire fichier xyz valeur ecrire fichier xyz valeur param]
     [ ecrire fichier xyz valeur bin ecrire fichier xyz valeur param]
     [ parametre_equation parametre_equation_base]
     [ equation_non_resolue str]
}
```

- methode_calcul_pression_initiale str into ['avec_les_cl', 'avec_sources', 'avec_sources_et_operateurs', 'sans_rien']: Keyword to select an option for the pressure calculation before the fist time step. Options are: avec_les_cl (default option lapP=0 is solved with Neuman boundary conditions on pressure if any), avec_sources (lapP=f is solved with Neuman boundaries conditions and f integrating the source terms of the Navier-Stokes equations) and avec_sources_et_operateurs (lapP=f is solved as with the previous option avec_sources but f integrating also some operators of the Navier-Stokes equations). The two last options are useful and sometime necessary when source terms are implicited when using an implicit time scheme to solve the Navier-Stokes equations.
- **projection_initiale** *int*: Keyword to suppress, if boolean equals 0, the initial projection which checks DivU=0. By default, boolean equals 1.
- **solveur_pression** *solveur_sys_base* (9.12): Linear pressure system resolution method.
- **solveur_sys_base** (9.12): This keyword is used to define when filtering operation is called (typically for EF convective scheme, standard diffusion operator and Source_Qdm_lambdaup). A file (solveur.bar) is then created and used for inversion procedure. Syntax is the same then for pressure solver (GCP is required for multi-processor calculations and, in a general way, for big meshes).
- **dt_projection** *deuxmots* (5.21): nb value: This keyword checks every nb time-steps the equality of velocity divergence to zero. value is the criteria convergency for the solver used.
- **seuil_divU** *floatfloat* (5.22): value factor: this keyword is intended to minimise the number of iterations during the pressure system resolution. The convergence criteria during this step ('seuil' in solveur_pression) is dynamically adapted according to the mass conservation. At tn, the linear

system Ax=B is considered as solved if the residual ||Ax-B|| < seuil(tn). For tn+1, the threshold value seuil(tn+1) will be evualated as:

```
If ( |max(DivU)*dt|<value )
Seuil(tn+1)= Seuil(tn)*factor
```

Else

Seuil(tn+1) = Seuil(tn)*factor

Endif

The first parameter (value) is the mass evolution the user is ready to accept per timestep, and the second one (factor) is the factor of evolution for 'seuil' (for example 1.1, so 10

- traitement_particulier traitement_particulier (5.23): Keyword to post-process particular values.
- **convection** *bloc_convection* (5.9) for inheritance: Keyword to alter the convection scheme.
- **diffusion** *bloc_diffusion* (5.2) for inheritance: Keyword to specify the diffusion operator.
- initial_conditions|conditions_initiales condinits (5.3) for inheritance: Initial conditions.
- boundary_conditions|conditions_limites condlims (5.4) for inheritance: Boundary conditions.
- **sources** *sources* (5.5) for inheritance: To introduce a source term into an equation (in case of several source terms into the same equation, the blocks corresponding to the various terms need to be separated by a comma)
- ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a text file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

The created files are named: pbname_fieldname_[boundaryname]_time.dat

• ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a binary file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1 ... 
x_n y_n [z_n] val_n
```

The created files are named: pbname_fieldname_[boundaryname]_time.dat

- parametre_equation parametre_equation_base (5.7) for inheritance: Keyword used to specify additional parameters for the equation
- equation_non_resolue *str* for inheritance: The equation will not be solved while condition(t) is verified if equation_non_resolue keyword is used. Exemple: The Navier-Stokes equations are not solved between time t0 and t1.

```
Navier_Sokes_Standard { equation_non_resolue (t>t0)*(t<t1) }
```

5.25 navier_stokes_turbulent

Description: Navier-Stokes equations as well as the associated turbulence model equations.

```
Keyword Discretize should have already been used to read the object. See also: navier_stokes_standard (5.24) navier_stokes_turbulent_qc (5.27)
```

```
Usage:
```

```
navier_stokes_turbulent obj Lire obj {
```

```
[ modele_turbulence modele_turbulence_hyd_deriv]
[ methode_calcul_pression_initiale str into ['avec_les_cl', 'avec_sources', 'avec_sources_et-
_operateurs', 'sans_rien']]
[ projection_initiale int]
```

```
[solveur_pression solveur_sys_base]
     [solveur_bar solveur_sys_base]
     [ dt projection deuxmots]
     [ seuil_divU floatfloat]
     [traitement_particulier traitement_particulier]
     [convection bloc_convection]
     [ diffusion bloc diffusion]
     [initial conditions|conditions initiales condinits]
     [boundary conditions|conditions limites condlims]
     [sources sources]
     [ ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param]
     [ ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param]
     [ parametre_equation parametre_equation_base]
     [ equation_non_resolue str]
}
where
```

- **modele_turbulence** *modele_turbulence_hyd_deriv* (5.26): Turbulence model for Navier-Stokes equations.
- methode_calcul_pression_initiale str into ['avec_les_cl', 'avec_sources', 'avec_sources_et_operateurs', 'sans_rien'] for inheritance: Keyword to select an option for the pressure calculation before the fist time step. Options are: avec_les_cl (default option lapP=0 is solved with Neuman boundary conditions on pressure if any), avec_sources (lapP=f is solved with Neuman boundaries conditions and f integrating the source terms of the Navier-Stokes equations) and avec_sources_et_operateurs (lapP=f is solved as with the previous option avec_sources but f integrating also some operators of the Navier-Stokes equations). The two last options are useful and sometime necessary when source terms are implicited when using an implicit time scheme to solve the Navier-Stokes equations.
- **projection_initiale** *int* for inheritance: Keyword to suppress, if boolean equals 0, the initial projection which checks DivU=0. By default, boolean equals 1.
- solveur_pression solveur_sys_base (9.12) for inheritance: Linear pressure system resolution method.
- **solveur_bar** *solveur_sys_base* (9.12) for inheritance: This keyword is used to define when filtering operation is called (typically for EF convective scheme, standard diffusion operator and Source_Qdm_lambdaup). A file (solveur.bar) is then created and used for inversion procedure. Syntax is the same then for pressure solver (GCP is required for multi-processor calculations and, in a general way, for big meshes).
- **dt_projection** *deuxmots* (5.21) for inheritance: nb value: This keyword checks every nb time-steps the equality of velocity divergence to zero. value is the criteria convergency for the solver used.
- seuil_divU floatfloat (5.22) for inheritance: value factor: this keyword is intended to minimise the number of iterations during the pressure system resolution. The convergence criteria during this step ('seuil' in solveur_pression) is dynamically adapted according to the mass conservation. At tn, the linear system Ax=B is considered as solved if the residual ||Ax-B||<seuil(tn). For tn+1, the threshold value seuil(tn+1) will be evualated as:

```
If ( |max(DivU)*dt|<value )
Seuil(tn+1)= Seuil(tn)*factor
Else
Seuil(tn+1)= Seuil(tn)*factor
Endif
```

The first parameter (value) is the mass evolution the user is ready to accept per timestep, and the second one (factor) is the factor of evolution for 'seuil' (for example 1.1, so 10

- **traitement_particulier** *traitement_particulier* (5.23) for inheritance: Keyword to post-process particular values.
- **convection** *bloc_convection* (5.9) for inheritance: Keyword to alter the convection scheme.
- diffusion bloc diffusion (5.2) for inheritance: Keyword to specify the diffusion operator.

- initial_conditions|conditions_initiales condinits (5.3) for inheritance: Initial conditions.
- boundary_conditions|conditions_limites condlims (5.4) for inheritance: Boundary conditions.
- **sources** *sources* (5.5) for inheritance: To introduce a source term into an equation (in case of several source terms into the same equation, the blocks corresponding to the various terms need to be separated by a comma)
- ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a text file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

• ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a binary file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

The created files are named: pbname_fieldname_[boundaryname]_time.dat

- parametre_equation parametre_equation_base (5.7) for inheritance: Keyword used to specify additional parameters for the equation
- equation_non_resolue *str* for inheritance: The equation will not be solved while condition(t) is verified if equation_non_resolue keyword is used. Exemple: The Navier-Stokes equations are not solved between time t0 and t1.

```
Navier_Sokes_Standard { equation non resolue (t>t0)*(t<t1) }
```

5.26 modele turbulence hyd deriv

Description: Basic class for turbulence model for Navier-Stokes equations.

```
See also: objet_lecture (32) NUL (5.26.2) mod_turb_hyd_ss_maille (5.26.3) mod_turb_hyd_rans (5.26.10)
```

```
Usage:
modele_turbulence_hyd_deriv {

        [ correction_visco_turb_pour_controle_pas_de_temps ]
        [ correction_visco_turb_pour_controle_pas_de_temps_parametre float]
        [ turbulence_paroi turbulence_paroi_base]
        [ dt_impr_ustar float]
        [ dt_impr_ustar_mean_only dt_impr_ustar_mean_only]
        [ nut_max float]
}
where
```

- correction_visco_turb_pour_controle_pas_de_temps: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is calculated so that diffusive time-step is equal or higher than convective time-step. For a stationary flow, the correction for turbulent viscosity should apply only during the first time steps and not when permanent state is reached. To check that, we could post process the corr_visco_turb field which is the correction of turbulent viscosity: it should be 1. on the whole domain.
- correction_visco_turb_pour_controle_pas_de_temps_parametre float: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is

the ratio between diffusive time-step and convective time-step is higher or equal to the given value

- turbulence paroi turbulence paroi base (29): Keyword to set the wall law.
- dt_impr_ustar float: This keyword is used to print the values (U +, d+, u⋆) obtained with the wall laws into a file named datafile ProblemName Ustar.face and periode refers to the printing period, this value is expressed in seconds.
- dt_impr_ustar_mean_only dt_impr_ustar_mean_only (5.26.1): This keyword is used to print the mean values of u* (obtained with the wall laws) on each boundary, into a file named datafile-ProblemName Ustar mean only.out. periode refers to the printing period, this value is expressed in seconds. If you don't use the optional keyword boundaries, all the boundaries will be considered. If you use it, you must specify nb boundaries which is the number of boundaries on which you want to calculate the mean values of u*, then you have to specify their names.
- **nut_max** *float*: Upper limitation of turbulent viscosity (default value 1.e8).

5.26.1 dt_impr_ustar_mean_only

```
Description: not set
See also: objet_lecture (32)
Usage:
{
     dt impr float
     [boundaries n word1 word2 ... wordn]
}
where
   • dt_impr float
   • boundaries n word1 word2 ... wordn
5.26.2 NUL
Description: not_set
See also: modele_turbulence_hyd_deriv (5.26)
Usage:
```

NUL [correction_visco_turb_pour_controle_pas_de_temps][correction_visco_turb_pour_controle-_pas_de_temps_parametre] [turbulence_paroi] [dt_impr_ustar] [dt_impr_ustar_mean_only] [nut max]

where

- correction_visco_turb_pour_controle_pas_de_temps : Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is calculated so that diffusive time-step is equal or higher than convective time-step. For a stationary flow, the correction for turbulent viscosity should apply only during the first time steps and not when permanent state is reached. To check that, we could post process the corr_visco_turb field which is the correction of turbulent viscosity: it should be 1. on the whole domain.
- correction_visco_turb_pour_controle_pas_de_temps_parametre float: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is the ratio between diffusive time-step and convective time-step is higher or equal to the given value [0-1]
- turbulence paroi turbulence paroi base (29): Keyword to set the wall law.

- **dt_impr_ustar** *float*: This keyword is used to print the values (U +, d+, u*) obtained with the wall laws into a file named datafile_ProblemName_Ustar.face and periode refers to the printing period, this value is expressed in seconds.
- dt_impr_ustar_mean_only dt_impr_ustar_mean_only (5.26.1): This keyword is used to print the mean values of u* (obtained with the wall laws) on each boundary, into a file named datafile_ProblemName_Ustar_mean_only.out. periode refers to the printing period, this value is expressed in seconds. If you don't use the optional keyword boundaries, all the boundaries will be considered. If you use it, you must specify nb_boundaries which is the number of boundaries on which you want to calculate the mean values of u*, then you have to specify their names.
- **nut max** *float*: Upper limitation of turbulent viscosity (default value 1.e8).

5.26.3 mod_turb_hyd_ss_maille

Description: Class for sub-grid turbulence model for Navier-Stokes equations.

See also: modele_turbulence_hyd_deriv (5.26) sous_maille_wale (5.26.5) sous_maille_smago (5.26.6) combinaison (5.26.7) longueur_melange (5.26.8) sous_maille (5.26.9)

```
Usage:
```

```
mod_turb_hyd_ss_maille {
    [formulation_a_nb_points form_a_nb_points]
    [longueur_maille str into ['volume', 'volume_sans_lissage', 'scotti', 'arrete']]
    [correction_visco_turb_pour_controle_pas_de_temps]
    [correction_visco_turb_pour_controle_pas_de_temps_parametre float]
    [turbulence_paroi turbulence_paroi_base]
    [dt_impr_ustar float]
    [dt_impr_ustar_mean_only dt_impr_ustar_mean_only]
    [nut_max float]
}
where
```

- **formulation_a_nb_points** *form_a_nb_points* (5.26.4): The structure fonction is calculated on nb points and we should add the 2 directions (0:OX, 1:OY, 2:OZ) constituting the homegeneity planes. Example for channel flows, planes parallel to the walls.
- longueur_maille str into ['volume', 'volume_sans_lissage', 'scotti', 'arrete']: different ways to calculate the characteristic length may be specified:
 - volume: It is the default option. Characteristic length is based on the cubic root of the volume cells. A smoothing procedure is applied to avoid discontinuities of this quantity in VEF from a cell to another.
 - volume_sans_lissage : For VEF only. Characteristic length is based on the cubic root of the volume cells (without smoothing procedure).
 - scotti : Characteristic length is based on the cubic root of the volume cells and the Scotti correction is applied to take into account the stretching of the cell in the case of anisotropic meshes.
 - arete: For VEF only. Characteristic length relies on the max edge (+ smoothing procedure) is taken into account.
- correction_visco_turb_pour_controle_pas_de_temps for inheritance: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is calculated so that diffusive time-step is equal or higher than convective time-step. For a stationary flow, the correction for turbulent viscosity should apply only during the first time steps and not when permanent state is reached. To check that, we could post process the corr_visco_turb field which is the correction of turbulent viscosity: it should be 1. on the whole domain.

- correction_visco_turb_pour_controle_pas_de_temps_parametre float for inheritance: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is the ratio between diffusive time-step and convective time-step is higher or equal to the given value [0-1]
- turbulence_paroi turbulence_paroi_base (29) for inheritance: Keyword to set the wall law.
- **dt_impr_ustar** *float* for inheritance: This keyword is used to print the values (U +, d+, u*) obtained with the wall laws into a file named datafile_ProblemName_Ustar.face and periode refers to the printing period, this value is expressed in seconds.
- **dt_impr_ustar_mean_only** *dt_impr_ustar_mean_only* (5.26.1) for inheritance: This keyword is used to print the mean values of u* (obtained with the wall laws) on each boundary, into a file named datafile_ProblemName_Ustar_mean_only.out. periode refers to the printing period, this value is expressed in seconds. If you don't use the optional keyword boundaries, all the boundaries will be considered. If you use it, you must specify nb_boundaries which is the number of boundaries on which you want to calculate the mean values of u*, then you have to specify their names.
- nut_max float for inheritance: Upper limitation of turbulent viscosity (default value 1.e8).

5.26.4 form_a_nb_points

Description: The structure function is calculated on nb points and we should add the 2 directions (0:OX, 1:OY, 2:OZ) constituting the homegeneity planes. Example for channel flows, planes parallel to the walls.

```
See also: objet_lecture (32)

Usage:
nb dir1 dir2
where

• nb int into [4]: Number of points.
• dir1 int: First direction.
• dir2 int: Second direction.
```

5.26.5 sous_maille_wale

Description: This is the WALE-model. It is a new sub-grid scale model for eddy-viscosity in LES that has the following properties:

- it goes naturally to 0 at the wall (it doesn't need any information on the wall position or geometry)
- it has the proper wall scaling in o(y3) in the vicinity of the wall
- it reproduces correctly the laminar to turbulent transition.

```
Usage:
sous_maille_wale {

[ cw float]

[ formulation_a_nb_points form_a_nb_points]

[ longueur_maille str into ['volume', 'volume_sans_lissage', 'scotti', 'arrete']]

[ correction_visco_turb_pour_controle_pas_de_temps ]

[ correction_visco_turb_pour_controle_pas_de_temps_parametre float]

[ turbulence_paroi turbulence_paroi_base]

[ dt_impr_ustar_float]

[ dt_impr_ustar_mean_only dt_impr_ustar_mean_only]

[ nut_max float]
```

```
}
where
```

- cw float: The unique parameter (constant) of the WALE-model (by default value 0.5).
- **formulation_a_nb_points** *form_a_nb_points* (5.26.4) for inheritance: The structure fonction is calculated on nb points and we should add the 2 directions (0:OX, 1:OY, 2:OZ) constituting the homegeneity planes. Example for channel flows, planes parallel to the walls.
- **longueur_maille** *str into ['volume', 'volume_sans_lissage', 'scotti', 'arrete']* for inheritance: different ways to calculate the characteristic length may be specified:
 - volume: It is the default option. Characteristic length is based on the cubic root of the volume cells. A smoothing procedure is applied to avoid discontinuities of this quantity in VEF from a cell to another
 - volume_sans_lissage : For VEF only. Characteristic length is based on the cubic root of the volume cells (without smoothing procedure).
 - scotti: Characteristic length is based on the cubic root of the volume cells and the Scotti correction is applied to take into account the stretching of the cell in the case of anisotropic meshes.
 - arete: For VEF only. Characteristic length relies on the max edge (+ smoothing procedure) is taken into account.
- correction_visco_turb_pour_controle_pas_de_temps for inheritance: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is calculated so that diffusive time-step is equal or higher than convective time-step. For a stationary flow, the correction for turbulent viscosity should apply only during the first time steps and not when permanent state is reached. To check that, we could post process the corr_visco_turb field which is the correction of turbulent viscosity: it should be 1. on the whole domain.
- correction_visco_turb_pour_controle_pas_de_temps_parametre *float* for inheritance: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is the ratio between diffusive time-step and convective time-step is higher or equal to the given value [0-1]
- turbulence_paroi turbulence_paroi_base (29) for inheritance: Keyword to set the wall law.
- dt_impr_ustar float for inheritance: This keyword is used to print the values (U +, d+, u⋆) obtained with the wall laws into a file named datafile_ProblemName_Ustar.face and periode refers to the printing period, this value is expressed in seconds.
- **dt_impr_ustar_mean_only** *dt_impr_ustar_mean_only* (5.26.1) for inheritance: This keyword is used to print the mean values of u* (obtained with the wall laws) on each boundary, into a file named datafile_ProblemName_Ustar_mean_only.out. periode refers to the printing period, this value is expressed in seconds. If you don't use the optional keyword boundaries, all the boundaries will be considered. If you use it, you must specify nb_boundaries which is the number of boundaries on which you want to calculate the mean values of u*, then you have to specify their names.
- nut max *float* for inheritance: Upper limitation of turbulent viscosity (default value 1.e8).

5.26.6 sous maille smago

```
Description: Smagorinsky sub-grid turbulence model.

Nut=Cs1*Cs1*l*l*sqrt(2*S*S)

K=Cs2*Cs2*l*l*2*S

See also: mod_turb_hyd_ss_maille (5.26.3)

Usage:
sous_maille_smago {

[cs float]

[formulation_a_nb_points form_a_nb_points]

[longueur_maille str into ['volume', 'volume_sans_lissage', 'scotti', 'arrete']]
```

```
[ correction_visco_turb_pour_controle_pas_de_temps ]
    [ correction_visco_turb_pour_controle_pas_de_temps_parametre float]
    [ turbulence_paroi turbulence_paroi_base]
    [ dt_impr_ustar float]
    [ dt_impr_ustar_mean_only dt_impr_ustar_mean_only]
    [ nut_max float]
}
where
```

- **cs** *float*: This is an optional keyword and the value is used to set the constant used in the Smagorinsky model (This is currently only valid for Smagorinsky models and it is set to 0.18 by default).
- **formulation_a_nb_points** *form_a_nb_points* (5.26.4) for inheritance: The structure fonction is calculated on nb points and we should add the 2 directions (0:OX, 1:OY, 2:OZ) constituting the homegeneity planes. Example for channel flows, planes parallel to the walls.
- **longueur_maille** *str into ['volume', 'volume_sans_lissage', 'scotti', 'arrete']* for inheritance: different ways to calculate the characteristic length may be specified:
 - volume: It is the default option. Characteristic length is based on the cubic root of the volume cells. A smoothing procedure is applied to avoid discontinuities of this quantity in VEF from a cell to another.
 - volume_sans_lissage : For VEF only. Characteristic length is based on the cubic root of the volume cells (without smoothing procedure).
 - scotti : Characteristic length is based on the cubic root of the volume cells and the Scotti correction is applied to take into account the stretching of the cell in the case of anisotropic meshes.
 - arete: For VEF only. Characteristic length relies on the max edge (+ smoothing procedure) is taken into account.
- correction_visco_turb_pour_controle_pas_de_temps for inheritance: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is calculated so that diffusive time-step is equal or higher than convective time-step. For a stationary flow, the correction for turbulent viscosity should apply only during the first time steps and not when permanent state is reached. To check that, we could post process the corr_visco_turb field which is the correction of turbulent viscosity: it should be 1. on the whole domain.
- correction_visco_turb_pour_controle_pas_de_temps_parametre float for inheritance: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is the ratio between diffusive time-step and convective time-step is higher or equal to the given value [0-1]
- turbulence_paroi_turbulence_paroi_base (29) for inheritance: Keyword to set the wall law.
- **dt_impr_ustar** *float* for inheritance: This keyword is used to print the values (U +, d+, u*) obtained with the wall laws into a file named datafile_ProblemName_Ustar.face and periode refers to the printing period, this value is expressed in seconds.
- **dt_impr_ustar_mean_only** *dt_impr_ustar_mean_only* (5.26.1) for inheritance: This keyword is used to print the mean values of u* (obtained with the wall laws) on each boundary, into a file named datafile_ProblemName_Ustar_mean_only.out. periode refers to the printing period, this value is expressed in seconds. If you don't use the optional keyword boundaries, all the boundaries will be considered. If you use it, you must specify nb_boundaries which is the number of boundaries on which you want to calculate the mean values of u*, then you have to specify their names.
- nut_max *float* for inheritance: Upper limitation of turbulent viscosity (default value 1.e8).

5.26.7 combinaison

Description: This keyword specifies a turbulent viscosity model where the turbulent viscosity is user-defined.

```
See also: mod turb hyd ss maille (5.26.3)
```

```
Usage:

combinaison {

    [nb_var n word1 word2 ... wordn]
    [fonction str]
    [formulation_a_nb_points form_a_nb_points]
    [longueur_maille str into ['volume', 'volume_sans_lissage', 'scotti', 'arrete']]
    [correction_visco_turb_pour_controle_pas_de_temps]
    [correction_visco_turb_pour_controle_pas_de_temps_parametre float]
    [turbulence_paroi turbulence_paroi_base]
    [dt_impr_ustar_float]
    [dt_impr_ustar_mean_only dt_impr_ustar_mean_only]
    [nut_max float]
}
where
```

- **nb_var** *n word1 word2* ... *wordn*: Number and names of variables which will be used in the turbulent viscosity definition (by default 0)
- function str: Fonction for turbulent viscosity. X,Y,Z and variables defined previously can be used.
- **formulation_a_nb_points** *form_a_nb_points* (5.26.4) for inheritance: The structure fonction is calculated on nb points and we should add the 2 directions (0:OX, 1:OY, 2:OZ) constituting the homegeneity planes. Example for channel flows, planes parallel to the walls.
- **longueur_maille** *str into ['volume', 'volume_sans_lissage', 'scotti', 'arrete']* for inheritance: different ways to calculate the characteristic length may be specified:
 - volume: It is the default option. Characteristic length is based on the cubic root of the volume cells. A smoothing procedure is applied to avoid discontinuities of this quantity in VEF from a cell to another
 - volume_sans_lissage : For VEF only. Characteristic length is based on the cubic root of the volume cells (without smoothing procedure).
 - scotti : Characteristic length is based on the cubic root of the volume cells and the Scotti correction is applied to take into account the stretching of the cell in the case of anisotropic meshes.
 - arete: For VEF only. Characteristic length relies on the max edge (+ smoothing procedure) is taken into account.
- correction_visco_turb_pour_controle_pas_de_temps for inheritance: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is calculated so that diffusive time-step is equal or higher than convective time-step. For a stationary flow, the correction for turbulent viscosity should apply only during the first time steps and not when permanent state is reached. To check that, we could post process the corr_visco_turb field which is the correction of turbulent viscosity: it should be 1. on the whole domain.
- correction_visco_turb_pour_controle_pas_de_temps_parametre *float* for inheritance: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is the ratio between diffusive time-step and convective time-step is higher or equal to the given value [0-1]
- turbulence paroi turbulence paroi base (29) for inheritance: Keyword to set the wall law.
- **dt_impr_ustar** *float* for inheritance: This keyword is used to print the values (U +, d+, u*) obtained with the wall laws into a file named datafile_ProblemName_Ustar.face and periode refers to the printing period, this value is expressed in seconds.
- **dt_impr_ustar_mean_only** *dt_impr_ustar_mean_only* (5.26.1) for inheritance: This keyword is used to print the mean values of u* (obtained with the wall laws) on each boundary, into a file named datafile_ProblemName_Ustar_mean_only.out. periode refers to the printing period, this value is expressed in seconds. If you don't use the optional keyword boundaries, all the boundaries will be considered. If you use it, you must specify nb_boundaries which is the number of boundaries on which you want to calculate the mean values of u*, then you have to specify their names.

• nut_max float for inheritance: Upper limitation of turbulent viscosity (default value 1.e8).

5.26.8 longueur_melange

Description: This model is based on mixing length modelling. For a non academic configuration, formulation used in the code can be expressed basically as:

```
nu\_t = (Kappa.y)^2.dU/dy
```

Till a maximum distance (dmax) set by the user in the data file, y is set equal to the distance from the wall (dist_w) calculated previously and saved in file Wall_length.xyz. [see Distance_paroi keyword]

Then (from y=dmax), y decreases as an exponential function: y=dmax*exp[-2.*(dist w-dmax)/dmax]

```
See also: mod_turb_hyd_ss_maille (5.26.3)
```

Usage:

```
longueur melange {
     [canalx float]
     [tuyauz float]
     [verif_dparoi str]
     [ dmax float]
     [fichier str]
     [fichier ecriture K Eps str]
     [formulation a nb points form a nb points]
     [longueur_maille str into ['volume', 'volume_sans_lissage', 'scotti', 'arrete']]
     [ correction visco turb pour controle pas de temps ]
     [correction_visco_turb_pour_controle_pas_de_temps_parametre float]
     [turbulence paroi turbulence paroi base]
     [ dt impr ustar float]
     [ dt_impr_ustar_mean_only dt_impr_ustar_mean_only]
     [ nut_max float]
}
where
```

- **canalx** *float*: [height]: plane channel according to Ox direction (for the moment, formulation in the code relies on fixed heigh: H=2).
- **tuyauz** *float*: [diameter] : pipe according to Oz direction (for the moment, formulation in the code relies on fixed diameter : D=2).
- verif dparoi str
- dmax float: Maximum distance.
- fichier str
- fichier_ecriture_K_Eps str: When a resume with k-epsilon model is envisaged, this keyword allows to generate external MED-format file with evaluation of k and epsilon quantities (based on eddy turbulent viscosity and turbulent characteristic length returned by mixing length model). The frequency of the MED file print is set equal to dt_impr_ustar. Moreover, k-eps MED field is automatically saved at the last time step. MED file is then used for resuming a K-Epsilon calculation with the Champ_Fonc_Med keyword.
- **formulation_a_nb_points** *form_a_nb_points* (5.26.4) for inheritance: The structure fonction is calculated on nb points and we should add the 2 directions (0:OX, 1:OY, 2:OZ) constituting the homegeneity planes. Example for channel flows, planes parallel to the walls.
- **longueur_maille** *str into* ['volume', 'volume_sans_lissage', 'scotti', 'arrete'] for inheritance: different ways to calculate the characteristic length may be specified: volume: It is the default option. Characteristic length is based on the cubic root of the volume cells. A smoothing procedure is applied to avoid discontinuities of this quantity in VEF from a cell to another.

volume_sans_lissage : For VEF only. Characteristic length is based on the cubic root of the volume cells (without smoothing procedure).

scotti : Characteristic length is based on the cubic root of the volume cells and the Scotti correction is applied to take into account the stretching of the cell in the case of anisotropic meshes.

arete : For VEF only. Characteristic length relies on the max edge (+ smoothing procedure) is taken into account.

- correction_visco_turb_pour_controle_pas_de_temps for inheritance: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is calculated so that diffusive time-step is equal or higher than convective time-step. For a stationary flow, the correction for turbulent viscosity should apply only during the first time steps and not when permanent state is reached. To check that, we could post process the corr_visco_turb field which is the correction of turbulent viscosity: it should be 1. on the whole domain.
- correction_visco_turb_pour_controle_pas_de_temps_parametre float for inheritance: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is the ratio between diffusive time-step and convective time-step is higher or equal to the given value [0-1]
- turbulence_paroi turbulence_paroi_base (29) for inheritance: Keyword to set the wall law.
- **dt_impr_ustar** *float* for inheritance: This keyword is used to print the values (U +, d+, u*) obtained with the wall laws into a file named datafile_ProblemName_Ustar.face and periode refers to the printing period, this value is expressed in seconds.
- **dt_impr_ustar_mean_only** *dt_impr_ustar_mean_only* (5.26.1) for inheritance: This keyword is used to print the mean values of u* (obtained with the wall laws) on each boundary, into a file named datafile_ProblemName_Ustar_mean_only.out. periode refers to the printing period, this value is expressed in seconds. If you don't use the optional keyword boundaries, all the boundaries will be considered. If you use it, you must specify nb_boundaries which is the number of boundaries on which you want to calculate the mean values of u*, then you have to specify their names.
- nut_max *float* for inheritance: Upper limitation of turbulent viscosity (default value 1.e8).

5.26.9 sous_maille

```
Description: Structure sub-grid function model.

See also: mod_turb_hyd_ss_maille (5.26.3)

Usage:
sous_maille {

    [formulation_a_nb_points form_a_nb_points]
    [longueur_maille str into ['volume', 'volume_sans_lissage', 'scotti', 'arrete']]
    [correction_visco_turb_pour_controle_pas_de_temps]
    [correction_visco_turb_pour_controle_pas_de_temps_parametre float]
    [turbulence_paroi turbulence_paroi_base]
    [dt_impr_ustar_float]
    [dt_impr_ustar_mean_only dt_impr_ustar_mean_only]
    [nut_max float]
}
where
```

- **formulation_a_nb_points** *form_a_nb_points* (5.26.4) for inheritance: The structure fonction is calculated on nb points and we should add the 2 directions (0:OX, 1:OY, 2:OZ) constituting the homegeneity planes. Example for channel flows, planes parallel to the walls.
- **longueur_maille** *str into ['volume', 'volume_sans_lissage', 'scotti', 'arrete']* for inheritance: different ways to calculate the characteristic length may be specified:

volume: It is the default option. Characteristic length is based on the cubic root of the volume cells. A smoothing procedure is applied to avoid discontinuities of this quantity in VEF from a cell to another.

volume_sans_lissage : For VEF only. Characteristic length is based on the cubic root of the volume cells (without smoothing procedure).

scotti: Characteristic length is based on the cubic root of the volume cells and the Scotti correction is applied to take into account the stretching of the cell in the case of anisotropic meshes.

arete: For VEF only. Characteristic length relies on the max edge (+ smoothing procedure) is taken into account.

- correction_visco_turb_pour_controle_pas_de_temps for inheritance: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is calculated so that diffusive time-step is equal or higher than convective time-step. For a stationary flow, the correction for turbulent viscosity should apply only during the first time steps and not when permanent state is reached. To check that, we could post process the corr_visco_turb field which is the correction of turbulent viscosity: it should be 1. on the whole domain.
- correction_visco_turb_pour_controle_pas_de_temps_parametre *float* for inheritance: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is the ratio between diffusive time-step and convective time-step is higher or equal to the given value [0-1]
- turbulence_paroi turbulence_paroi_base (29) for inheritance: Keyword to set the wall law.
- dt_impr_ustar float for inheritance: This keyword is used to print the values (U +, d+, u★) obtained with the wall laws into a file named datafile_ProblemName_Ustar.face and periode refers to the printing period, this value is expressed in seconds.
- **dt_impr_ustar_mean_only** *dt_impr_ustar_mean_only* (5.26.1) for inheritance: This keyword is used to print the mean values of u* (obtained with the wall laws) on each boundary, into a file named datafile_ProblemName_Ustar_mean_only.out. periode refers to the printing period, this value is expressed in seconds. If you don't use the optional keyword boundaries, all the boundaries will be considered. If you use it, you must specify nb_boundaries which is the number of boundaries on which you want to calculate the mean values of u*, then you have to specify their names.
- nut_max float for inheritance: Upper limitation of turbulent viscosity (default value 1.e8).

5.26.10 mod_turb_hyd_rans

Description: Class for RANS turbulence model for Navier-Stokes equations.

See also: modele turbulence hyd deriv (5.26) k epsilon (5.26.11)

```
Usage:
```

```
| consider. |
| consider. |
| consider. |
| correction_visco_turb_pour_controle_pas_de_temps |
| correction_visco_turb_pour_controle_pas_de_temps |
| correction_visco_turb_pour_controle_pas_de_temps_parametre |
| furbulence_paroi | turbulence_paroi_base |
| correction_visco_turb_pour_controle_pas_de_temps_parametre |
| furbulence_paroi | turbulence_paroi_base |
| correction_visco_turb_pour_controle_pas_de_temps_parametre |
| furbulence_paroi | turbulence_paroi_base |
| correction_visco_turb_pour_controle_pas_de_temps_parametre |
| float |
| float |
| correction_visco_turb_pour_controle_pas_de_temps_parametre |
| float |
| float |
| correction_visco_turb_pour_controle_pas_de_temps_parametre |
| float |
```

• **eps_min** *float*: Lower limitation of epsilon (default value 1.e-10).

- eps_max *float*: Upper limitation of epsilon (default value 1.e+10).
- **k_min** *float*: Lower limitation of k (default value 1.e-10).
- quiet : To disable printing of information about k and epsilon.
- correction_visco_turb_pour_controle_pas_de_temps for inheritance: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is calculated so that diffusive time-step is equal or higher than convective time-step. For a stationary flow, the correction for turbulent viscosity should apply only during the first time steps and not when permanent state is reached. To check that, we could post process the corr_visco_turb field which is the correction of turbulent viscosity: it should be 1. on the whole domain.
- correction_visco_turb_pour_controle_pas_de_temps_parametre float for inheritance: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is the ratio between diffusive time-step and convective time-step is higher or equal to the given value [0-1]
- turbulence_paroi turbulence_paroi_base (29) for inheritance: Keyword to set the wall law.
- **dt_impr_ustar** *float* for inheritance: This keyword is used to print the values (U +, d+, u*) obtained with the wall laws into a file named datafile_ProblemName_Ustar.face and periode refers to the printing period, this value is expressed in seconds.
- **dt_impr_ustar_mean_only** *dt_impr_ustar_mean_only* (5.26.1) for inheritance: This keyword is used to print the mean values of u* (obtained with the wall laws) on each boundary, into a file named datafile_ProblemName_Ustar_mean_only.out. periode refers to the printing period, this value is expressed in seconds. If you don't use the optional keyword boundaries, all the boundaries will be considered. If you use it, you must specify nb_boundaries which is the number of boundaries on which you want to calculate the mean values of u*, then you have to specify their names.
- **nut_max** *float* for inheritance: Upper limitation of turbulent viscosity (default value 1.e8).

5.26.11 **k_epsilon**

```
Description: Turbulence model (k-eps).
See also: mod_turb_hyd_rans (5.26.10)
Usage:
k_epsilon {
     transport_k_epsilon transport_k_epsilon
     [ modele_fonc_bas_reynolds modele_fonction_bas_reynolds_base]
     [ cmu float]
     [ prandtl_k float]
     [ prandtl_eps float]
     [eps min float]
     [ eps_max float]
     [k_min float]
     [quiet]
     [ correction visco turb pour controle pas de temps ]
     [correction_visco_turb_pour_controle_pas_de_temps_parametre float]
     [turbulence_paroi turbulence_paroi_base]
     [ dt_impr_ustar float]
     [ dt_impr_ustar_mean_only dt_impr_ustar_mean_only]
     [ nut_max float]
}
where
```

• **transport_k_epsilon** *transport_k_epsilon* (5.28): Keyword to define the (k-eps) transportation equation.

- modele_fonc_bas_reynolds modele_fonction_bas_reynolds_base (5.26.12): This keyword is used to set the bas Reynolds model used.
- cmu float: Keyword to modify the Cmu constant of k-eps model: Nut=Cmu*k*k/eps Default value is 0.09
- **prandtl_k** *float*: Keyword to change the Prk value (default 1.0).
- prandtl_eps float: Keyword to change the Pre value (default 1.3).
- eps_min float for inheritance: Lower limitation of epsilon (default value 1.e-10).
- eps_max float for inheritance: Upper limitation of epsilon (default value 1.e+10).
- **k min** *float* for inheritance: Lower limitation of k (default value 1.e-10).
- quiet for inheritance: To disable printing of information about k and epsilon.
- correction_visco_turb_pour_controle_pas_de_temps for inheritance: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is calculated so that diffusive time-step is equal or higher than convective time-step. For a stationary flow, the correction for turbulent viscosity should apply only during the first time steps and not when permanent state is reached. To check that, we could post process the corr_visco_turb field which is the correction of turbulent viscosity: it should be 1. on the whole domain.
- correction_visco_turb_pour_controle_pas_de_temps_parametre float for inheritance: Keyword to set a limitation to low time steps due to high values of turbulent viscosity. The limit for turbulent viscosity is the ratio between diffusive time-step and convective time-step is higher or equal to the given value [0-1]
- turbulence_paroi_turbulence_paroi_base (29) for inheritance: Keyword to set the wall law.
- dt_impr_ustar float for inheritance: This keyword is used to print the values (U +, d+, u⋆) obtained with the wall laws into a file named datafile_ProblemName_Ustar.face and periode refers to the printing period, this value is expressed in seconds.
- **dt_impr_ustar_mean_only** *dt_impr_ustar_mean_only* (5.26.1) for inheritance: This keyword is used to print the mean values of u* (obtained with the wall laws) on each boundary, into a file named datafile_ProblemName_Ustar_mean_only.out. periode refers to the printing period, this value is expressed in seconds. If you don't use the optional keyword boundaries, all the boundaries will be considered. If you use it, you must specify nb_boundaries which is the number of boundaries on which you want to calculate the mean values of u*, then you have to specify their names.
- nut_max *float* for inheritance: Upper limitation of turbulent viscosity (default value 1.e8).

5.26.12 modele fonction bas revnolds base

```
Description: not_set

See also: objet_lecture (32)

Usage:
```

5.27 navier_stokes_turbulent_qc

Description: Navier-Stokes equations under low Mach number as well as the associated turbulence model equations.

```
Keyword Discretize should have already been used to read the object.

See also: navier_stokes_turbulent (5.25)

Usage:
navier_stokes_turbulent_qc obj Lire obj {
```

```
[ modele_turbulence modele_turbulence_hyd_deriv]
[ methode_calcul_pression_initiale str into ['avec_les_cl', 'avec_sources', 'avec_sources_et_operateurs', 'sans_rien']]
```

```
[ projection_initiale int]
     [solveur_pression solveur_sys_base]
     [solveur bar solveur sys base]
     [dt_projection deuxmots]
     [ seuil_divU floatfloat]
     [traitement_particulier traitement_particulier]
     [convection bloc convection]
     [ diffusion bloc diffusion]
     [initial conditions|conditions initiales condinits]
     [boundary conditions|conditions limites condlims]
     [sources sources]
     [ ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param]
     [ ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param]
     [ parametre_equation parametre_equation_base]
     [ equation_non_resolue str]
}
where
```

- modele_turbulence modele_turbulence_hyd_deriv (5.26) for inheritance: Turbulence model for Navier-Stokes equations.
- methode_calcul_pression_initiale str into ['avec_les_cl', 'avec_sources', 'avec_sources_et_operateurs', 'sans_rien'] for inheritance: Keyword to select an option for the pressure calculation before the fist time step. Options are: avec_les_cl (default option lapP=0 is solved with Neuman boundary conditions on pressure if any), avec_sources (lapP=f is solved with Neuman boundaries conditions and f integrating the source terms of the Navier-Stokes equations) and avec_sources_et_operateurs (lapP=f is solved as with the previous option avec_sources but f integrating also some operators of the Navier-Stokes equations). The two last options are useful and sometime necessary when source terms are implicited when using an implicit time scheme to solve the Navier-Stokes equations.
- **projection_initiale** *int* for inheritance: Keyword to suppress, if boolean equals 0, the initial projection which checks DivU=0. By default, boolean equals 1.
- solveur_pression solveur_sys_base (9.12) for inheritance: Linear pressure system resolution method.
- **solveur_bar** *solveur_sys_base* (9.12) for inheritance: This keyword is used to define when filtering operation is called (typically for EF convective scheme, standard diffusion operator and Source_Qdm_lambdaup). A file (solveur.bar) is then created and used for inversion procedure. Syntax is the same then for pressure solver (GCP is required for multi-processor calculations and, in a general way, for big meshes).
- **dt_projection** *deuxmots* (5.21) for inheritance: nb value: This keyword checks every nb time-steps the equality of velocity divergence to zero. value is the criteria convergency for the solver used.
- seuil_divU floatfloat (5.22) for inheritance: value factor: this keyword is intended to minimise the number of iterations during the pressure system resolution. The convergence criteria during this step ('seuil' in solveur_pression) is dynamically adapted according to the mass conservation. At tn, the linear system Ax=B is considered as solved if the residual ||Ax-B||<seuil(tn). For tn+1, the threshold value seuil(tn+1) will be evualated as:

```
If ( lmax(DivU)*dtl<value )
Seuil(tn+1)= Seuil(tn)*factor
Else
Seuil(tn+1)= Seuil(tn)*factor
Endif
```

The first parameter (value) is the mass evolution the user is ready to accept per timestep, and the second one (factor) is the factor of evolution for 'seuil' (for example 1.1, so 10

- **traitement_particulier** *traitement_particulier* (5.23) for inheritance: Keyword to post-process particular values.
- convection bloc convection (5.9) for inheritance: Keyword to alter the convection scheme.

- **diffusion** bloc_diffusion (5.2) for inheritance: Keyword to specify the diffusion operator.
- initial_conditions|conditions_initiales condinits (5.3) for inheritance: Initial conditions.
- boundary conditions limites condlims (5.4) for inheritance: Boundary conditions.
- **sources** *sources* (5.5) for inheritance: To introduce a source term into an equation (in case of several source terms into the same equation, the blocks corresponding to the various terms need to be separated by a comma)
- ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a text file with the following format: n valeur

```
x_1 y_1 [z_1] val_1 ... 
x_n y_n [z_n] val_n
```

The created files are named: pbname_fieldname_[boundaryname]_time.dat

• ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a binary file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

The created files are named: pbname_fieldname_[boundaryname]_time.dat

- parametre_equation parametre_equation_base (5.7) for inheritance: Keyword used to specify additional parameters for the equation
- equation_non_resolue *str* for inheritance: The equation will not be solved while condition(t) is verified if equation_non_resolue keyword is used. Exemple: The Navier-Stokes equations are not solved between time t0 and t1.

```
Navier_Sokes_Standard { equation_non_resolue (t>t0)*(t<t1) }
```

5.28 transport k epsilon

Description: The (k-eps) transport equation. To resume from a previous mixing length calculation, an external MED-format file containing reconstructed K and Epsilon quantities can be read (see fichier_ecriture-k eps) thanks to the Champ fonc MED keyword.

Warning, When used with the Quasi-compressible model, k and eps should be viewed as rho k and rho epsilon when defining initial and boundary conditions or when visualizing values for k and eps. This bug will be fixed in a future version.

Keyword Discretize should have already been used to read the object. See also: eqn_base (5.19)

Usage:

transport_k_epsilon obj Lire obj {

```
[ with_nu str into ['yes', 'no']]
[ convection bloc_convection]
[ diffusion bloc_diffusion]
[ initial_conditions|conditions_initiales condinits]
[ boundary_conditions|conditions_limites condlims]
[ sources sources]
[ ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param]
[ ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param]
[ parametre_equation parametre_equation_base]
[ equation_non_resolue str]
```

```
}
where
```

- with_nu str into ['yes', 'no']: yes/no
- **convection** *bloc_convection* (5.9) for inheritance: Keyword to alter the convection scheme.
- **diffusion** *bloc_diffusion* (5.2) for inheritance: Keyword to specify the diffusion operator.
- initial_conditions|conditions_initiales condinits (5.3) for inheritance: Initial conditions.
- boundary_conditions|conditions_limites condlims (5.4) for inheritance: Boundary conditions.
- **sources** *sources* (5.5) for inheritance: To introduce a source term into an equation (in case of several source terms into the same equation, the blocks corresponding to the various terms need to be separated by a comma)
- ecrire_fichier_xyz_valeur ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a text file with the following format: n valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

The created files are named: pbname_fieldname_[boundaryname]_time.dat

• ecrire_fichier_xyz_valeur_bin ecrire_fichier_xyz_valeur_param (5.6) for inheritance: This keyword is used to write the values of a field for the whole domain or only for some boundaries in a binary file with the following format: n_valeur

```
x_1 y_1 [z_1] val_1
...
x_n y_n [z_n] val_n
```

The created files are named: pbname_fieldname_[boundaryname]_time.dat

- parametre_equation parametre_equation_base (5.7) for inheritance: Keyword used to specify additional parameters for the equation
- equation_non_resolue *str* for inheritance: The equation will not be solved while condition(t) is verified if equation_non_resolue keyword is used. Exemple: The Navier-Stokes equations are not solved between time t0 and t1.

```
Navier_Sokes_Standard { equation_non_resolue (t>t0)*(t<t1) }
```

6 /*

6.1 /*

Description: bloc of Comment in a data file.

```
See also: objet_u (33)
Usage:
```

/* comm where

• comm str: Text to be commented.

7 champ_generique_base

```
Description: not_set

See also: objet_u (33) champ_post_de_champs_post (7.1) predefini (7.15) champ_post_refchamp (7.17)

Usage:
```

7.1 champ_post_de_champs_post

Usage:

```
Description: not_set
See also: champ_generique_base (7) champ_post_operateur_eqn (7.5) champ_post_transformation (7.19)
champ_post_operateur_base (7.4) champ_post_statistiques_base (7.6) champ_post_extraction (7.10) champ-
_post_morceau_equation (7.13) champ_post_tparoi_vef (7.18) champ_post_interpolation (7.12) champ-
_post_reduction_0d (7.16)
Usage:
champ_post_de_champs_post obj Lire obj {
     [ source champ_generique_base]
     [ nom source str]
     [ source_reference str]
     [ sources_reference list_nom_virgule]
     [sources listchamp_generique]
where
   • source champ_generique_base (7): the source field.
   • nom_source str: To name a source field with the nom_source keyword
   • source_reference str
   • sources_reference list_nom_virgule (7.2)
   • sources listchamp_generique (7.3): sources { Champ_Post.... { ... } Champ_Post... { ... }}
7.2 list_nom_virgule
Description: List of name.
See also: listobj (31.3)
Usage:
{ object1, object2.... }
list of nom_anonyme (22.1) separeted with,
7.3 listchamp_generique
Description: XXX
See also: listobj (31.3)
Usage:
{ object1, object2.... }
list of champ_generique_base (7) separeted with,
7.4 champ_post_operateur_base
Description: not_set
See also: champ_post_de_champs_post (7.1) champ_post_operateur_gradient (7.11) champ_post_operateur-
_divergence (7.8)
```

```
champ_post_operateur_base obj Lire obj {
     [ source champ_generique_base]
     [ nom source str]
     [ source_reference str]
     [sources reference list nom virgule]
     [sources listchamp_generique]
}
where
   • source champ_generique_base (7) for inheritance: the source field.
   • nom_source str for inheritance: To name a source field with the nom_source keyword
   • source reference str for inheritance
   • sources_reference list_nom_virgule (7.2) for inheritance
   • sources listchamp_generique (7.3) for inheritance: sources { Champ_Post... { ... } Champ_Post...
     { ... }}
7.5 champ_post_operateur_eqn
Synonymous: operateur_eqn
Description: not_set
See also: champ_post_de_champs_post (7.1)
Usage:
champ_post_operateur_eqn obj Lire obj {
     [ numero_op int]
     [ numero_source int]
     [ sans_solveur_masse ]
     [ source champ_generique_base]
     [ nom_source str]
     [ source_reference str]
     [ sources_reference list_nom_virgule]
     [sources listchamp_generique]
}
where
   • numero_op int
   • numero source int
   • sans_solveur_masse
   • source champ_generique_base (7) for inheritance: the source field.
   • nom_source str for inheritance: To name a source field with the nom_source keyword
   • source_reference str for inheritance
   • sources_reference list_nom_virgule (7.2) for inheritance
   • sources listchamp_generique (7.3) for inheritance: sources { Champ_Post... { ... } Champ_Post...
     { ... }}
```

```
7.6 champ_post_statistiques_base
```

```
Description: not_set
See also: champ_post_de_champs_post (7.1) correlation (7.7) moyenne (7.14) ecart_type (7.9)
Usage:
champ_post_statistiques_base obj Lire obj {
     t_deb float
     t_fin float
     [ source champ_generique_base]
     [ nom_source str]
     [ source_reference str]
     [ sources_reference list_nom_virgule]
     [sources listchamp_generique]
}
where
   • t_deb float: Start of integration time
   • t_fin float: End of integration time
   • source champ_generique_base (7) for inheritance: the source field.
   • nom source str for inheritance: To name a source field with the nom source keyword
   • source_reference str for inheritance
   • sources_reference list_nom_virgule (7.2) for inheritance
   • sources listchamp_generique (7.3) for inheritance: sources { Champ_Post.... { ... } Champ_Post...
      { ... }}
7.7 correlation
Synonymous: champ post statistiques correlation
Description: to calculate the correlation between the two fields.
See also: champ_post_statistiques_base (7.6)
Usage:
correlation obj Lire obj {
     t_deb float
     t fin float
     [source champ_generique_base]
     [ nom_source str]
     [ source_reference str]
     [ sources_reference list_nom_virgule]
     [sources listchamp_generique]
}
where
   • t_deb float for inheritance: Start of integration time
   • t_fin float for inheritance: End of integration time
```

• nom source str for inheritance: To name a source field with the nom source keyword

• **source** champ generique base (7) for inheritance: the source field.

```
• source_reference str for inheritance
   • sources_reference list_nom_virgule (7.2) for inheritance
   • sources listchamp_generique (7.3) for inheritance: sources { Champ_Post.... { ... } Champ_Post...
      { ... }}
7.8 champ_post_operateur_divergence
Synonymous: divergence
Description: To calculate divergency of a given field.
See also: champ_post_operateur_base (7.4)
Usage:
champ_post_operateur_divergence obj Lire obj {
     [source champ_generique_base]
     [ nom source str]
     [ source_reference str]
     [ sources_reference list_nom_virgule]
     [sources listchamp_generique]
where
   • source champ generique base (7) for inheritance: the source field.
   • nom_source str for inheritance: To name a source field with the nom_source keyword
   • source reference str for inheritance
   • sources_reference list_nom_virgule (7.2) for inheritance
   • sources listchamp_generique (7.3) for inheritance: sources { Champ_Post... { ... } Champ_Post...
      { ... }}
7.9 ecart_type
Synonymous: champ_post_statistiques_ecart_type
Description: to calculate the standard deviation (statistic rms) of the field nom_champ.
See also: champ_post_statistiques_base (7.6)
Usage:
ecart_type obj Lire obj {
     t_deb float
     t_fin float
     [source champ_generique_base]
     [ nom source str]
     [ source_reference str]
```

• t_deb float for inheritance: Start of integration time

[sources_reference list_nom_virgule] [sources listchamp_generique]

}

} where

- t_fin float for inheritance: End of integration time
- **source** *champ_generique_base* (7) for inheritance: the source field.
- nom_source str for inheritance: To name a source field with the nom_source keyword
- source reference str for inheritance
- sources_reference list_nom_virgule (7.2) for inheritance
- **sources** *listchamp_generique* (7.3) for inheritance: sources { Champ_Post.... { ... } Champ_Post... { ... }}

7.10 champ_post_extraction

```
Synonymous: extraction
```

Description: To create a surface field (values at the boundary) of a volume field

```
See also: champ_post_de_champs_post (7.1)
```

Usage:

```
champ_post_extraction obj Lire obj {
    domaine str
    nom_frontiere str
    [ methode str into ['trace', 'champ_frontiere']]
    [ source champ_generique_base]
    [ nom_source str]
    [ source_reference str]
    [ sources_reference list_nom_virgule]
    [ sources listchamp_generique]
}
where
```

- **domaine** str: name of the volume field
- nom_frontiere str: boundary name where the values of the volume field will be picked
- **methode** *str into ['trace', 'champ_frontiere']*: name of the extraction method (trace by_default or champ_frontiere)
- **source** *champ_generique_base* (7) for inheritance: the source field.
- nom_source str for inheritance: To name a source field with the nom_source keyword
- source reference str for inheritance
- **sources_reference** *list_nom_virgule* (7.2) for inheritance
- **sources** *listchamp_generique* (7.3) for inheritance: sources { Champ_Post.... { ... } Champ_Post... { ... }}

7.11 champ_post_operateur_gradient

```
Synonymous: gradient

Description: To calculate gradient of a given field.

See also: champ_post_operateur_base (7.4)

Usage:
champ_post_operateur_gradient obj Lire obj {

[source champ_generique_base]
```

```
[ nom_source str]
[ source_reference str]
[ sources_reference list_nom_virgule]
[ sources listchamp_generique]
}
where
```

- **source** *champ_generique_base* (7) for inheritance: the source field.
- nom source str for inheritance: To name a source field with the nom source keyword
- source reference str for inheritance
- **sources_reference** *list_nom_virgule* (7.2) for inheritance
- **sources** *listchamp_generique* (7.3) for inheritance: sources { Champ_Post... { ... } Champ_Post... { ... }}

7.12 champ_post_interpolation

Synonymous: interpolation

Description: To create a field which is an interpolation of the field given by the keyword source.

```
See also: champ_post_de_champs_post (7.1)
```

Usage:

where

```
champ_post_interpolation obj Lire obj {
    localisation str
    [methode str]
    [domaine str]
    [optimisation_sous_maillage str into ['default', 'yes', 'no']]
    [source champ_generique_base]
    [nom_source str]
    [source_reference str]
    [sources_reference list_nom_virgule]
    [sources listchamp_generique]
}
```

- **localisation** *str*: type_loc indicate where is done the interpolation (elem for element or som for node).
- methode str: The optional keyword methode is limited to calculer champ post for the moment.
- domaine str: the domain name where the interpolation is done (by default, the calculation domain)
- optimisation_sous_maillage str into ['default', 'yes', 'no']
- source champ generique base (7) for inheritance: the source field.
- nom source str for inheritance: To name a source field with the nom source keyword
- source reference str for inheritance
- **sources_reference** *list_nom_virgule* (7.2) for inheritance
- **sources** *listchamp_generique* (7.3) for inheritance: sources { Champ_Post.... { ... } Champ_Post... { ... }}

7.13 champ_post_morceau_equation

Synonymous: morceau_equation

Description: To calculate a field related to a piece of equation. For the moment, the field which can be calculated is the stability time step of an operator equation. The problem name and the unknown of the equation should be given by Source refChamp { Pb_Champ problem_name unknown_field_of_equation }

See also: champ_post_de_champs_post (7.1)

Usage:
champ_post_morceau_equation obj Lire obj {

 type str
 numero int
 option str into ['stabilite', 'flux_bords']
 [compo int]
 [source champ_generique_base]
 [nom_source str]
 [source_reference str]
 [sources_reference list_nom_virgule]
 [sources listchamp_generique]
}

- **type** *str*: can only be operateur for equation operators.
- **numero** *int*: numero will be 0 (diffusive operator) or 1 (convective operator).
- **option** *str into ['stabilite', 'flux_bords']:* option is stability for time steps or flux_bords for boundary fluxes.
- **compo** *int*: compo will specify the number component of the boundary flux (for boundary fluxes, in this case compo permits to specify the number component of the boundary flux choosen).
- **source** *champ_generique_base* (7) for inheritance: the source field.
- nom_source str for inheritance: To name a source field with the nom_source keyword
- source_reference str for inheritance
- sources_reference list_nom_virgule (7.2) for inheritance
- **sources** *listchamp_generique* (7.3) for inheritance: sources { Champ_Post.... { ... } Champ_Post... { ... }}

7.14 movenne

where

```
Synonymous: champ_post_statistiques_moyenne

Description: to calculate the average of the field over time

See also: champ_post_statistiques_base (7.6)

Usage:
moyenne obj Lire obj {

[ moyenne_convergee champ_base]
    t_deb float
    t_fin float
```

[source champ_generique_base]

[nom source str]

```
[ source_reference str]
     [ sources_reference list_nom_virgule]
     [sources listchamp_generique]
}
where
```

- movenne convergee champ base (15.1): This option allows to read a converged time averaged field in a .xyz file in order to calculate, when resuming the calculation, the statistics fields (rms, correlation) which depend on this average. In that case, the time averaged field is not updated during the resume of calculation. In this case, the time averaged field must be fully converged to avoid errors when calculating high order statistics.
- t_deb float for inheritance: Start of integration time
- t_fin float for inheritance: End of integration time
- source champ generique base (7) for inheritance: the source field.
- nom_source str for inheritance: To name a source field with the nom_source keyword
- source reference str for inheritance
- sources_reference list_nom_virgule (7.2) for inheritance
- sources listchamp_generique (7.3) for inheritance: sources { Champ_Post... { ... } Champ_Post... { ... }}

7.15 predefini

Description: This keyword is used to post process predefined postprocessing fields. For the moment, only kinetic energy (energie_cinetique keyword to use for field_name) is available.

```
See also: champ_generique_base (7)
Usage:
predefini obj Lire obj {
     pb_champ deuxmots
}
where
```

• pb_champ deuxmots (5.21): { Pb_champ nom_pb nom_champ } : nom_pb is the problem name and nom champ is the selected field name.

7.16 champ_post_reduction_0d

Synonymous: reduction_0d

'left value']

Description: To calculate the min, max, sum, average, weighted sum, weighted average, weighted sum by porosity, weighted average by porosity, euclidian norm, normalized euclidian norm, L1 norm, L2 norm of a field.

```
See also: champ_post_de_champs_post (7.1)
Usage:
champ_post_reduction_0d obj Lire obj {
     methode str into ['min', 'max', 'moyenne', 'average', 'moyenne_ponderee', 'weighted_average',
```

'somme', 'sum', 'somme_ponderee', 'weighted_sum', 'somme_ponderee_porosite', 'weighted_sum-_porosity', 'euclidian_norm', 'normalized_euclidian_norm', 'L1_norm', 'L2_norm', 'valeur_a_gauche',

```
[ source champ_generique_base]
  [ nom_source str]
  [ source_reference str]
  [ sources_reference list_nom_virgule]
  [ sources listchamp_generique]
}
where
```

- methode str into ['min', 'max', 'moyenne', 'average', 'moyenne_ponderee', 'weighted_average', 'somme', 'sum', 'somme_ponderee', 'weighted_sum', 'somme_ponderee_porosite', 'weighted_sum-porosity', 'euclidian_norm', 'normalized_euclidian_norm', 'L1_norm', 'L2_norm', 'valeur_a_gauche', 'left_value']: name of the reduction method:
 - min for the minimum value,
 - max for the maximum value,
 - average (or moyenne) for a mean,
 - weighted_average (or moyenne_ponderee) for a mean ponderated by integration volumes, e.g. cell volumes for temperature and pressure in VDF, volumes around faces for velocity and temperature in VEF,
 - sum (or somme) for the sum of all the values of the field,
 - weighted_sum (or somme_ponderee) for a weighted sum (integral),
 - weighted_average_porosity (or moyenne_ponderee_porosite) and weighted_sum_porosity (or somme_ponderee_porosite) for the mean and sum weighted by the volumes of the elements, only for ELEM localisation,
 - euclidian_norm for the euclidian norm,
 - normalized_euclidian_norm for the euclidian norm normalized,
 - L1 norm for norm L1,
 - L2 norm for norm L2
- **source** *champ_generique_base* (7) for inheritance: the source field.
- nom_source str for inheritance: To name a source field with the nom_source keyword
- source_reference str for inheritance
- **sources_reference** *list_nom_virgule* (7.2) for inheritance
- **sources** *listchamp_generique* (7.3) for inheritance: sources { Champ_Post.... { ... } Champ_Post... { ... }}

7.17 champ post refchamp

```
Synonymous: refchamp

Description: Field of prolem

See also: champ_generique_base (7)

Usage:
champ_post_refchamp obj Lire obj {
    pb_champ deuxmots
    [nom_source str]
}

where
```

- **pb_champ** *deuxmots* (5.21): { Pb_champ nom_pb nom_champ } : nom_pb is the problem name and nom_champ is the selected field name.
- nom_source str: The alias name for the field

7.18 champ_post_tparoi_vef

See also: champ_post_de_champs_post (7.1)

Synonymous: tparoi_vef

where

Description: This keyword is used to post process (only for VEF discretization) the temperature field with a slight difference on boundaries with Neumann condition where law of the wall is applied on the temperature field. nom_pb is the problem name and field_name is the selected field name. A keyword (temperature physique) is available to post process this field without using Definition champs.

```
Usage:
champ_post_tparoi_vef obj Lire obj {
     [ source champ_generique_base]
     [ nom_source str]
     [ source_reference str]
     [sources reference list nom virgule]
     [sources listchamp generique]
}
where
   • source champ_generique_base (7) for inheritance: the source field.
   • nom_source str for inheritance: To name a source field with the nom_source keyword
   • source reference str for inheritance
   • sources_reference list_nom_virgule (7.2) for inheritance
   • sources listchamp_generique (7.3) for inheritance: sources { Champ_Post... { ... } Champ_Post...
     { ... }}
       champ_post_transformation
Synonymous: transformation
Description: To create a field with a transformation.
See also: champ_post_de_champs_post (7.1)
Usage:
champ_post_transformation obj Lire obj {
     methode str into ['produit scalaire', 'norme', 'vecteur', 'formule', 'composante']
     [ expression n word1 word2 ... wordn]
     [ numero int]
     [localisation str]
     [ source champ_generique_base]
     [ nom_source str]
     [source reference str]
     [ sources_reference list_nom_virgule]
     [sources listchamp_generique]
```

- methode str into ['produit_scalaire', 'norme', 'vecteur', 'formule', 'composante']: methode norme : will calculate the norm of a vector given by a source field methode produit_scalaire: will calculate the dot product of two vectors given by two sources fields methode composante numero integer: will create a field by extracting the integer component of a field given by a source field methode formule expression 1: will create a scalar field located to elements using expressions with x,y,z,t parameters and field names given by a source field or several sources fields. methode vecteur expression N f1(x,y,z,t) fN(x,y,z,t): will create a vector field located to elements by defining its N components with N expressions with x,y,z,t parameters and field names given by a source field or several sources fields.
- expression n word1 word2 ... wordn: see methodes formule and vecteur
- numero int: see methode composante
- **localisation** *str*: type_loc indicate where is done the interpolation (elem for element or som for node). The optional keyword methode is limited to calculer_champ_post for the moment
- **source** *champ_generique_base* (7) for inheritance: the source field.
- nom_source str for inheritance: To name a source field with the nom_source keyword
- source_reference str for inheritance
- **sources_reference** *list_nom_virgule* (7.2) for inheritance
- **sources** *listchamp_generique* (7.3) for inheritance: sources { Champ_Post.... { ... } Champ_Post... { ... }}

8 chimie

Description: Keyword to describe the chmical reactions

```
See also: objet_u (33)

Usage:
chimie obj Lire obj {

reactions reactions
[modele_micro_melange int]
[constante_modele_micro_melange float]
[espece_en_competition_micro_melange str]
}
where
```

- **reactions** *reactions* (8.1): list of reactions
- modele_micro_melange int: modele_micro_melange (0 by default)
- constante_modele_micro_melange float: constante of modele (1 by default)
- espece_en_competition_micro_melange str: espece in competition in reactions

8.1 reactions

```
Description: list of reactions

See also: listobj (31.3)

Usage:
{ object1 , object2 .... }

list of reaction (8.1.1) separeted with ,
```

```
8.1.1 reaction
```

```
Description: Keyword to describe reaction:
w = K pow(T,beta) \exp(-Ea/(RT)) \prod pow(Reactif_i,activitivity_i).
If K inv >0,
w= K pow(T,beta) exp(-Ea/( R T)) ( Π pow(Reactif_i,activitivity_i) - Kinv/exp(-c_r_Ea/(R T)) Π pow(Produit-
_i,activitivity_i ))
See also: objet_lecture (32)
Usage:
     reactifs str
     produits str
     [constante_taux_reaction float]
     [ coefficients_activites bloc_lecture]
     enthalpie reaction float
     energie activation float
     exposant_beta float
     [contre reaction float]
     [contre_energie_activation float]
}
where
   • reactifs str: LHS of equation (ex CH4+2*O2)
   • produits str: RHS of equation (ex CO2+2*H20)
   • constante_taux_reaction float: constante of cinetic K
   • coefficients_activites bloc_lecture (3.41): coefficients od ativity (exemple { CH4 1 O2 2 })
   • enthalpie reaction float: DH
   • energie_activation float: Ea
   • exposant_beta float: Beta
   • contre_reaction float: K_inv
   • contre energie activation float: c r Ea
    class_generic
Description: not_set
See also: objet_u (33) dt_start (9.5) solveur_sys_base (9.12)
Usage:
9.1 cholesky
Description: Cholesky direct method.
See also: solveur_sys_base (9.12)
Usage:
cholesky obj Lire obj {
     [impr]
     [quiet]
```

```
where
   • impr: Keyword which may be used to print the resolution time.
   • quiet : To disable printing of information
9.2 dt_calc
Description: The time step at first iteration is calculated in agreement with CFL condition.
See also: dt_start (9.5)
Usage:
dt_calc
9.3 dt fixe
Description: The first time step is fixed by the user (recommended when resuming calculation with Crank
Nicholson temporal scheme to ensure continuity).
See also: dt_start (9.5)
Usage:
dt_fixe value
where
   • value float: first time step.
9.4 dt_min
Description: The first iteration is based on dt_min.
See also: dt_start (9.5)
Usage:
dt_min
9.5 dt_start
Description: not_set
See also: class_generic (9) dt_calc (9.2) dt_min (9.4) dt_fixe (9.3)
Usage:
dt_start
9.6 gcp_ns
Description: not_set
See also: gcp(9.11)
Usage:
gcp_ns obj Lire obj {
```

}

```
solveur0 solveur_sys_base
solveur1 solveur_sys_base
[ precond precond_base]
[ precond_nul ]
seuil float
[ impr ]
[ quiet ]
[ save_matrix|save_matrice ]
[ optimized ]
[ nb_it_max int]
}
```

- **solveur**0 *solveur_sys_base* (9.12): Solver type.
- solveur1 solveur sys base (9.12): Solver type.
- **precond** *precond_base* (24) for inheritance: Keyword to define system preconditioning in order to accelerate resolution by the conjugated gradient. Many parallel preconditioning methods are not equivalent to their sequential counterpart, and you should therefore expect differences, especially when you select a high value of the final residue (seuil). The result depends on the number of processors and on the mesh splitting. It is sometimes useful to run the solver with no preconditioning at all. In particular:
 - when the solver does not converge during initial projection,
 - when comparing sequential and parallel computations.

With no preconditioning, except in some particular cases (no open boundary), the sequential and the parallel computations should provide exactly the same results within fpu accuracy. If not, there might be a coding error or the system of equations is singular.

- **precond_nul** for inheritance: Keyword to not use a preconditioning method.
- **seuil** *float* for inheritance: Value of the final residue. The gradient ceases iteration when the Euclidean residue standard ||Ax-B|| is less than this value.
- **impr** for inheritance: Keyword which is used to request display of the Euclidean residue standard each time this iterates through the conjugated gradient (display to the standard outlet).
- quiet for inheritance: To not displaying any outputs of the solver.
- save_matrix|save_matrice for inheritance: to save the matrix in a file.
- **optimized** for inheritance: This keyword triggers a memory and network optimized algorithms useful for strong scaling (when computing less than 100 000 elements per processor). The matrix and the vectors are duplicated, common items removed and only virtual items really used in the matrix are exchanged.

Warning: this is experimental and known to fail in some VEF computations (L2 projection step will not converge). Works well in VDF.

• **nb_it_max** *int* for inheritance: Keyword to set the maximum iterations number for the Gcp.

9.7 gen

```
Description: not_set

See also: solveur_sys_base (9.12)

Usage:
gen data
where

• data bloc_lecture (3.41)
```

9.8 gmres

```
See also: solveur_sys_base (9.12)

Usage:
gmres obj Lire obj {

    [impr]
    [quiet]
    [seuil float]
    [diag]
    [nb_it_max int]
    [controle_residu int into [0, 1]]
    [save_matrix|save_matrice]
    [dim_espace_krilov int]
}
```

Description: Gmres method (for non symetric matrix).

- impr: Keyword which may be used to print the convergence.
- quiet : To disable printing of information
- seuil *float*: Convergence value.
- diag: Keyword to use diagonal preconditionner (in place of pilut that is not parallel).
- **nb_it_max** *int*: Keyword to set the maximum iterations number for the Gmres.
- **controle_residu** *int into* [0, 1]: Keyword of Boolean type (by default 0). If set to 1, the convergence occurs if the residu suddenly increases.
- save_matrix|save_matrice : to save the matrix in a file.
- dim_espace_krilov int

9.9 optimal

where

Description: Optimal is a solver which tests several solvers of the previous list to choose the fastest one for the considered linear system.

```
See also: solveur_sys_base (9.12)

Usage:
optimal obj Lire obj {

    seuil float
    [impr]
    [quiet]
    [save_matrix|save_matrice]
    [frequence_recalc int]
    [nom_fichier_solveur str]
    [fichier_solveur_non_recree]
}
where
```

- seuil float: Convergence threshold
- impr : To print the convergency of the fastest solver
- quiet : To disable printing of information

- save_matrix|save_matrice : To save the linear system (A, x, B) into a file
- frequence_recalc int: To set a time step period (by default, 100) for re-checking the fatest solver
- nom fichier solveur str: To specify the file containing the list of the tested solvers
- fichier_solveur_non_recree : To avoid the creation of the file containing the list

9.10 petsc

Description: Solveur via Petsc API

Usage:

```
Solveur_pression Petsc Solver { precond Precond [ seuil seuil | nb_it_max integer ] [ impr | quiet ] [ save_matrix | read_matrix] }
```

Solver: Several solvers through PETSc API are available:

GCP: Conjugate Gradient

PIPECG: Pipelined Conjugate Gradient (possible reduced CPU cost during massive parallel calculation due to a single non-blocking reduction per iteration, if TRUST is built with a MPI-3 implementation).

GMRES: Generalized Minimal Residual

BICGSTAB: Stabilized Bi-Conjugate Gradient

IBICGSTAB: Improved version of previous one for massive parallel computations (only a single global reduction operation instead of the usual 3 or 4).

CHOLESKY: Parallelized version of Cholesky from MUMPS library. This solver accepts since the 1.6.7 version an option to select a different ordering than the automatic selected one by MUMPS (and printed by using the **impr** option). The possible choices are **Metis | Scotch | PT-Scotch | Parmetis**. The two last options can't only be used during a parallel calculation, whereas the two first are available for sequential or parallel calculations. It seems that the CPU cost of A=LU factorization but also of the backward/forward elimination steps may sometimes be reduced by selecting a different ordering than the default one. Notice that this solver requires a huge amont of memory compared to iterative methods. To know how many RAM you will need by core, then use the **impr** option to have detailled informations during the analysis phase and before the factorisation phase (in the following output, you will learn that the largest memory is taken by the 0th CPU with 108MB):


```
** Rank of proc needing largest memory in IC facto : 0

** Estimated corresponding MBYTES for IC facto : 108
```

Thanks to the following graph, you read that in order to solve for instance a flow on a mesh with 2.6e6 cells, you will need to run a parallel calculation on 32 CPUs if you have cluster nodes with only 4GB/core (6.2GB*0.42~2.6GB):

Relative evolution compare to a 16 CPUs parallel calculation on a 2.6e6 cells mesh (163000 cells/CPU) where:

Peak RAM/CPU is 6.2GB A=LU in factorization in 206 s x=A-1.B solve in 0.83 s

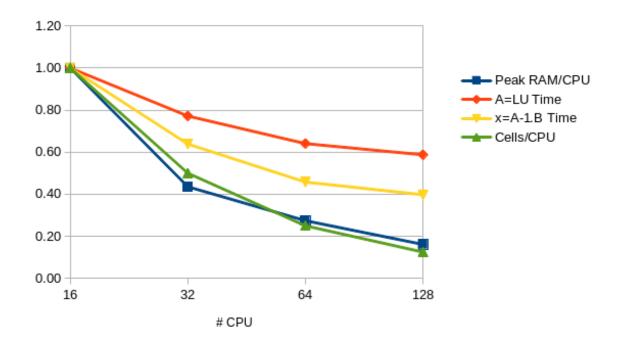

CHOLESKY_OUT_OF_CORE: Same as the previous one but with a written LU decomposition of disc (save RAM memory but add an extra CPU cost during Ax=B solve)

CHOLESKY_SUPERLU: Parallelized Cholesky from SUPERLU_DIST library (less CPU and RAM efficient than the previous one)

CHOLESKY_PASTIX: Parallelized Cholesky from PASTIX library

CHOLESKY_UMFPACK: Sequential Cholesky from UMFPACK library (seems fast).

CLI { string } : Command Line Interface. Should be used only by advanced users, to access the whole solver/preconditioners from the PETSC API. To find all the available options, run your calculation with the -ksp_view -help options:

trust datafile [N] -ksp_view -help

. .

Preconditioner (PC) Options -----

-pc_type Preconditioner:(one of) none jacobi pbjacobi bjacobi sor lu shell mg

eisenstat ilu icc cholesky asm ksp composite redundant nn mat fieldsplit galerkin openmp spai hypre tfs (PCSetType)

HYPRE preconditioner options

-pc_hypre_type <pilut> (choose one of) pilut parasails boomeramg

HYPRE ParaSails Options

- -pc_hypre_parasails_nlevels <1>: Number of number of levels (None)
- -pc_hypre_parasails_thresh <0.1>: Threshold (None)
- -pc_hypre_parasails_filter <0.1>: filter (None)
- -pc_hypre_parasails_loadbal <0>: Load balance (None)
- -pc_hypre_parasails_logging: <FALSE> Print info to screen (None)

-pc_hypre_parasails_reuse: <FALSE> Reuse nonzero pattern in preconditioner (None)

-pc_hypre_parasails_sym <nonsymmetric> (choose one of) nonsymmetric SPD nonsymmetric,SPD

Krylov Method (KSP) Options -----

- -ksp_type Krylov method:(one of) cg cgne stcg gltr richardson chebychev gmres tcqmr bcgs bcgsl cgs tfqmr cr lsqr preonly qcg bicg fgmres minres symmlq lgmres lcd (KSPSetType)
- -ksp_max_it <10000>: Maximum number of iterations (KSPSetTolerances)
- -ksp_rtol <0>: Relative decrease in residual norm (KSPSetTolerances)
- -ksp_atol <1e-12>: Absolute value of residual norm (KSPSetTolerances)
- -ksp divtol <10000>: Residual norm increase cause divergence (KSPSetTolerances)
- -ksp_converged_use_initial_residual_norm: Use initial residual residual norm for computing relative convergence
- -ksp_monitor_singular_value <stdout>: Monitor singular values (KSPMonitorSet)
- -ksp_monitor_short <stdout>: Monitor preconditioned residual norm with fewer digits (KSPMonitorSet)
- -ksp_monitor_draw: Monitor graphically preconditioned residual norm (KSPMonitorSet)
- -ksp_monitor_draw_true_residual: Monitor graphically true residual norm (KSPMonitorSet)

Example to use the multigrid method as a solver, not only as a preconditioner:

Solveur_pression Petsc CLI { -ksp_type richardson -pc_type hypre -pc_hypre_type boomeramg -ksp_atol 1.e-7 }

Precond: Several preconditioners are available:

NULL { }: No preconditioner used

BLOCK_JACOBI_ICC { level k ordering natural | rcm } : Incomplete Cholesky factorization for symmetric matrix with the PETSc implementation. The integer k is the factorization level (default value, 1). In parallel, the factorization is done by block (one per processor by default). The ordering of the local matrix is **natural** by default, but **rcm** ordering, which reduces the bandwith of the local matrix, may interestingly improves the quality of the decomposition and reduces the number of iterations.

SSOR { **omega** double } : Symmetric Successive Over Relaxation algorithm. **omega** (default value, 1.5) defines the relaxation factor.

EISENTAT { **omega** double } : SSOR version with Eisenstat trick which reduces the number of computations and thus CPU cost

SPAI { **level** nlevels **epsilon** thresh } : Spai Approximate Inverse algorithm from Parasails Hypre library. Two parameters are available, nlevels and thresh.

PILUT { **level** k **epsilon** thresh }: Dual Threashold Incomplete LU factorization. The integer k is the factorization level and **epsilon** is the drop tolerance.

DIAG { }: Diagonal (Jacobi) preconditioner.

BOOMERAMG { }: Multigrid preconditioner (no option is available yet, look at CLI command and Petsc documentation to try other options).

seuil corresponds to the iterative solver convergence value. The iterative solver converges when the Euclidean residue standard ||Ax-B|| is less than the value *seuil*.

nb_it_max integer: In order to specify a given number of iterations instead of a condition on the residue with the keyword **seuil**. May be useful when defining a PETSc solver for the implicit time scheme where convergence is very fast: 5 or less iterations seems enough.

impr is the keyword which is used to request display of the Euclidean residue standard each time this iterates through the conjugated gradient (display to the standard outlet).

quiet is a keyword which is used to not displaying any outputs of the solver.

save_matrix|read_matrix are the keywords to savelread into a file the constant matrix A of the linear system Ax=B solved (eg: matrix from the pressure linear system for an incompressible flow). It is useful

when you want to minimize the MPI communications on massive parallel calculation. Indeed, in VEF discretization, the overlapping width (generaly 2, specified with the **largeur_joint** option in the partition keyword **partition**) can be reduced to 1, once the matrix has been properly assembled and saved. The cost of the MPI communications in TRUST itself (not in PETSc) will be reduced with length messages divided by 2. So the strategy is:

- I) Partition your VEF mesh with a largeur_joint value of 2
- II) Run your parallel calculation on 0 time step, to build and save the matrix with the **save_matrix** option. A file named *Matrix_NBROWS_rows_NCPUS_cpus.petsc* will be saved to the disk (where NBROWS is the number of rows of the matrix and NCPUS the number of CPUs used).
- III) Partition your VEF mesh with a largeur joint value of 1
- IV) Run your parallel calculation completly now and substitute the **save_matrix** option by the **read_matrix** option. Some interesting gains have been noticed when the cost of linear system solve with PETSc is small compared to all the other operations.

TIPS:

A) Solver for symmetric linear systems (e.g. Pressure system from Navier-Stokes equations):

- -The **CHOLESKY** parallel solver is from MUMPS library. It offers better performance than all others solvers if you have enough RAM for your calculation. A parallel calculation on a cluster with 4GBytes on each processor, 40000 cells/processor seems the upper limit. Seems to be very slow to initialize above 500 cpus/cores.
- -When running a parallel calculation with a high number of cpus/cores (typically more than 500) where preconditioner scalability is the key for CPU performance, consider **BICGSTAB** with **BLOCK_JACOBI_ICC(1)** as preconditioner or if not converges, **GCP** with **BLOCK_JACOBI_ICC(1)** as preconditioner.
- -For other situations, the first choice should be **GCP/SSOR**. In order to fine tune the solver choice, each one of the previous list should be considered. Indeed, the CPU speed of a solver depends of a lot of parameters. You may give a try to the **OPTIMAL** solver to help you to find the fastest solver on your study.
- B) Solver for non symmetric linear systems (e.g.: Implicit schemes): The **BICGSTAB/DIAG** solver seems to offer the best performances.

Additional information is available into the PETSC documentation available there: \$TRUST_ROOT/lib/src/LIBPETSC/petsc/*/do

```
Usage:

petsc solveur option_solveur

where

• solveur str

• option_solveur bloc_lecture (3.41)

9.11 gcp

Description: Preconditioned conjugated gradient.

See also: solveur_sys_base (9.12) gcp_ns (9.6)

Usage:
gcp obj Lire obj {
```

See also: solveur_sys_base (9.12)

```
[ precond precond_base]
  [ precond_nul ]
  seuil float
  [ impr ]
  [ quiet ]
  [ save_matrix|save_matrice ]
  [ optimized ]
  [ nb_it_max int]
}
where
```

- **precond** *precond_base* (24): Keyword to define system preconditioning in order to accelerate resolution by the conjugated gradient. Many parallel preconditioning methods are not equivalent to their sequential counterpart, and you should therefore expect differences, especially when you select a high value of the final residue (seuil). The result depends on the number of processors and on the mesh splitting. It is sometimes useful to run the solver with no preconditioning at all. In particular:
 - when the solver does not converge during initial projection,
 - when comparing sequential and parallel computations.

With no preconditioning, except in some particular cases (no open boundary), the sequential and the parallel computations should provide exactly the same results within fpu accuracy. If not, there might be a coding error or the system of equations is singular.

- **precond_nul**: Keyword to not use a preconditioning method.
- **seuil** *float*: Value of the final residue. The gradient ceases iteration when the Euclidean residue standard ||Ax-B|| is less than this value.
- **impr**: Keyword which is used to request display of the Euclidean residue standard each time this iterates through the conjugated gradient (display to the standard outlet).
- quiet: To not displaying any outputs of the solver.
- save_matrix|save_matrice : to save the matrix in a file.
- **optimized**: This keyword triggers a memory and network optimized algorithms useful for strong scaling (when computing less than 100 000 elements per processor). The matrix and the vectors are duplicated, common items removed and only virtual items really used in the matrix are exchanged. Warning: this is experimental and known to fail in some VEF computations (L2 projection step will not converge). Works well in VDF.
- **nb_it_max** *int*: Keyword to set the maximum iterations number for the Gcp.

9.12 solveur_sys_base

Description: Basic class to solve the linear system.

See also: class_generic (9) optimal (9.9) gen (9.7) petsc (9.10) gcp (9.11) cholesky (9.1) gmres (9.8)

Usage:

10

10.1

Description: Comments in a data file.

See also: objet_u (33)

Usage:

comm

where

• comm str: Text to be commented.

11 condlim_base

Description: Basic class of boundary conditions.

See also: objet_u (33) paroi_fixe (11.33) symetrie (11.42) periodique (11.39) paroi_decalee_robin (11.25) paroi_adiabatique (11.22) dirichlet (11.4) neumann (11.21) paroi_contact (11.23) paroi_contact_fictif (11.24) paroi_echange_contact_vdf (11.29) paroi_echange_externe_impose (11.30) paroi_echange_global_impose (11.32) Paroi (11.3) frontiere_ouverte_k_eps_impose (11.13) paroi_flux_impose (11.35) frontiere_ouverte_fraction_massique_imposee (11.8) paroi_echange_contact_correlation_vdf (11.27) paroi_echange_contact_correlation_vef (11.28) Neumann_homogene (11.1)

Usage:

condlim_base

11.1 Neumann_homogene

Description: Homogeneous neumann boundary condition

See also: condlim_base (11) Neumann_paroi_adiabatique (11.2)

Usage:

Neumann_homogene

11.2 Neumann_paroi_adiabatique

Description: Adiabatic wall neumann boundary condition

See also: Neumann_homogene (11.1)

Usage:

Neumann_paroi_adiabatique

11.3 Paroi

Description: Impermeability condition at a wall called bord (edge) (standard flux zero). This condition must be associated with a wall type hydraulic condition.

See also: condlim_base (11)

Usage:

Paroi

11.4 dirichlet

Description: Dirichlet condition at the boundary called bord (edge): 1). For Navier-Stokes equations, velocity imposed at the boundary; 2). For scalar transport equation, scalar imposed at the boundary.

See also: condlim_base (11) paroi_defilante (11.26) paroi_knudsen_non_negligeable (11.36) paroi_rugueuse

```
(11.37) frontiere_ouverte_vitesse_imposee (11.19) frontiere_ouverte_temperature_imposee (11.18) frontiere_ouverte_concentration_imposee (11.7) paroi_temperature_imposee (11.38) scalaire_impose_paroi (11.40)
```

Usage:

dirichlet

11.5 entree_temperature_imposee_h

Description: Particular case of class frontiere_ouverte_temperature_imposee for enthalpy equation.

See also: frontiere_ouverte_temperature_imposee (11.18)

Usage:

entree_temperature_imposee_h ch

where

• **ch** *champ_front_base* (16.1): Boundary field type.

11.6 frontiere_ouverte

Description: Boundary outlet condition on the boundary called bord (edge) (diffusion flux zero). This condition must be associated with a boundary outlet hydraulic condition.

See also: neumann (11.21)

Usage:

frontiere_ouverte var_name ch where

- var_name str into ['T_ext', 'C_ext', 'K_Eps_ext', 'Fluctu_Temperature_ext', 'Flux_Chaleur_Turb-_ext', 'V2_ext']: Field name.
- ch champ_front_base (16.1): Boundary field type.

11.7 frontiere_ouverte_concentration_imposee

Description: Imposed concentration condition at an open boundary called bord (edge) (situation corresponding to a fluid inlet). This condition must be associated with an imposed inlet velocity condition.

See also: dirichlet (11.4)

Usage:

frontiere_ouverte_concentration_imposee ch

where

• **ch** *champ_front_base* (16.1): Boundary field type.

11.8 frontiere_ouverte_fraction_massique_imposee

Description: not_set

See also: condlim_base (11)

Usage:

frontiere_ouverte_fraction_massique_imposee ch where

• **ch** *champ_front_base* (16.1): Boundary field type.

11.9 frontiere_ouverte_gradient_pression_impose

Description: Normal imposed pressure gradient condition on the open boundary called bord (edge). This boundary condition may be only used in VDF discretization. The imposed $\partial P/\partial n$ value is expressed in Pa.m-1.

See also: neumann (11.21) frontiere_ouverte_gradient_pression_impose_vefprep1b (11.10)

Usage:

frontiere_ouverte_gradient_pression_impose ch where

• ch champ_front_base (16.1): Boundary field type.

11.10 frontiere_ouverte_gradient_pression_impose_vefprep1b

Description: Keyword for an outlet boundary condition in VEF P1B/P1NC on the gradient of the pressure.

See also: frontiere_ouverte_gradient_pression_impose (11.9)

Usage:

 ${\bf frontiere_ouverte_gradient_pression_impose_vefprep1b} \quad {\bf ch} \\ {\bf where} \\$

• ch champ front base (16.1): Boundary field type.

11.11 frontiere_ouverte_gradient_pression_libre_vef

Description: Class for outlet boundary condition in VEF like Orlansky. There is no reference for pressure for theses boundary conditions so it is better to add pressure condition (with Frontiere_ouverte_pression_imposee) on one or two cells (for symmetry in a channel) of the boundary where Orlansky conditions are imposed.

See also: neumann (11.21)

Usage:

frontiere_ouverte_gradient_pression_libre_vef

11.12 frontiere_ouverte_gradient_pression_libre_vefprep1b

Description: Class for outlet boundary condition in VEF P1B/P1NC like Orlansky.

See also: neumann (11.21)

Usage:

frontiere_ouverte_gradient_pression_libre_vefprep1b

11.13 frontiere_ouverte_k_eps_impose

Description: Turbulence condition imposed on an open boundary called bord (edge) (this situation corresponds to a fluid inlet). This condition must be associated with an imposed inlet velocity condition.

```
See also: condlim_base (11)

Usage:
frontiere_ouverte_k_eps_impose ch
where
```

• ch champ_front_base (16.1): Boundary field type.

11.14 frontiere_ouverte_pression_imposee

Description: Imposed pressure condition at the open boundary called bord (edge). The imposed pressure field is expressed in Pa.

```
See also: neumann (11.21)
```

Usage:

frontiere_ouverte_pression_imposee ch where

• ch champ front base (16.1): Boundary field type.

11.15 frontiere_ouverte_pression_imposee_orlansky

Description: This boundary condition may only be used with VDF discretization. There is no reference for pressure for this boundary condition so it is better to add pressure condition (with Frontiere_ouverte_pression_imposee) on one or two cells (for symetry in a channel) of the boundary where Orlansky conditions are imposed.

```
See also: neumann (11.21)
```

Usage:

frontiere_ouverte_pression_imposee_orlansky

11.16 frontiere_ouverte_pression_moyenne_imposee

Description: Class for open boundary with pressure mean level imposed.

```
See also: neumann (11.21)
```

Usage:

frontiere_ouverte_pression_moyenne_imposee pext where

• pext *float*: Mean pressure.

11.17 frontiere_ouverte_rho_u_impose

Description: This keyword is used to designate a condition of imposed mass rate at an open boundary called bord (edge). The imposed mass rate field at the inlet is vectorial and the imposed velocity values are expressed in kg.s-1. This boundary condition can be used only with the Quasi compressible model.

See also: frontiere_ouverte_vitesse_imposee_sortie (11.20)

Usage:

frontiere_ouverte_rho_u_impose ch where

• ch champ_front_base (16.1): Boundary field type.

11.18 frontiere_ouverte_temperature_imposee

Description: Imposed temperature condition at the open boundary called bord (edge) (in the case of fluid inlet). This condition must be associated with an imposed inlet velocity condition. The imposed temperature value is expressed in oC or K.

See also: dirichlet (11.4) entree temperature imposee h (11.5)

Usage:

frontiere_ouverte_temperature_imposee ch where

• **ch** *champ_front_base* (16.1): Boundary field type.

11.19 frontiere_ouverte_vitesse_imposee

Description: Class for velocity-inlet boundary condition. The imposed velocity field at the inlet is vectorial and the imposed velocity values are expressed in m.s-1.

See also: dirichlet (11.4) frontiere_ouverte_vitesse_imposee_sortie (11.20)

Usage:

frontiere_ouverte_vitesse_imposee ch

• **ch** *champ_front_base* (16.1): Boundary field type.

11.20 frontiere_ouverte_vitesse_imposee_sortie

Description: Sub-class for velocity boundary condition. The imposed velocity field at the open boundary is vectorial and the imposed velocity values are expressed in m.s-1.

See also: frontiere_ouverte_vitesse_imposee (11.19) frontiere_ouverte_rho_u_impose (11.17)

Usage:

frontiere_ouverte_vitesse_imposee_sortie ch where

• **ch** *champ_front_base* (16.1): Boundary field type.

11.21 neumann

Description: Neumann condition at the boundary called bord (edge): 1). For Navier-Stokes equations, constraint imposed at the boundary; 2). For scalar transport equation, flux imposed at the boundary.

See also: condlim_base (11) frontiere_ouverte_gradient_pression_libre_vef (11.11) frontiere_ouverte_gradient_pression_libre_vefprep1b (11.12) frontiere_ouverte_gradient_pression_impose (11.9) frontiere_ouverte_pression_imposee (11.14) frontiere_ouverte_pression_imposee_orlansky (11.15) frontiere_ouverte_pression_moyenne_imposee (11.16) frontiere_ouverte (11.6) sortie_libre_temperature_imposee_h (11.41)

Usage:

neumann

11.22 paroi adiabatique

Description: Normal zero flux condition at the wall called bord (edge).

See also: condlim_base (11)

Usage:

paroi_adiabatique

11.23 paroi_contact

Description: Thermal condition between two domains. Important: the name of the boundaries in the two domains should be the same. (Warning: there is also an old limitation not yet fixed on the sequential algorithm in VDF to detect the matching faces on the two boundaries: faces should be ordered in the same way). The kind of condition depends on the discretization. In VDF, it is a heat exchange condition, and in VEF, a temperature condition.

Such a coupling requires coincident meshes for the moment. In case of non-coincident meshes, run is stopped and two external files are automatically generated in VEF (connectivity_failed_boundary_name and connectivity_failed_pb_name.med). In 2D, the keyword Decouper_bord_coincident associated to the connectivity failed boundary name file allows to generate a new coincident mesh.

In 3D, for a first preliminary cut domain with HOMARD (fluid for instance), the second problem associated to pb_name (solide in a fluid/solid coupling problem) has to be submitted to HOMARD cutting procedure with connectivity_failed_pb_name.med.

Such a procedure works as while the primary refined mesh (fluid in our example) impacts the fluid/solid interface with a compact shape as described below (values 2 or 4 indicates the number of division from primary faces obtained in fluid domain at the interface after HOMARD cutting):

```
2-2-2-2-2
2-4-4-4-4-2 2-2-2
2-4-4-4-4-2 2-4-2
2-2-2-2-2 2-2
OK
2-2 2-2-2
2-4-2 2-2
2-2 2-2
NOT OK
```

See also: condlim_base (11)

Usage:

paroi_contact autrepb nameb

where

- autrepb str: Name of other problem.
- nameb str: boundary name of the remote problem which should be the same than the local name

11.24 paroi_contact_fictif

Description: This keyword is derivated from paroi_contact and is especially dedicated to compute coupled fluid/solid/fluid problem in case of thin material. Thanks to this option, solid is considered as a fictitious media (no mesh, no domain associated), and coupling is performed by considering instantaneous thermal equilibrium in it (for the moment).

See also: condlim_base (11)

Usage:
paroi_contact_fictif autrepb nameb conduct_fictif ep_fictive
where

• autrepb str: Name of other problem.
• nameb str: Name of bord.
• conduct_fictif float: thermal conductivity

• ep_fictive float: thickness of the fictitious media

11.25 paroi_decalee_robin

Description: This keyword is used to designate a Robin boundary condition (a.u+b.du/dn=c) associated with the Pironneau methodology for the wall laws. The value of given by the delta option is the distance between the mesh (where symmetry boundary condition is applied) and the fictious wall. This boundary condition needs the definition of the dedicated source terms (Source_Robin or Source_Robin_Scalaire) according the equations used.

```
See also: condlim_base (11)

Usage:
paroi_decalee_robin obj Lire obj {
    delta float
}
where
• delta float
```

11.26 paroi defilante

Description: Keyword to designate a condition where tangential velocity is imposed on the wall called bord (edge). If the velocity components set by the user is not tangential, projection is used.

```
See also: dirichlet (11.4)

Usage:
paroi_defilante ch
where

• ch champ_front_base (16.1): Boundary field type.
```

11.27 paroi_echange_contact_correlation_vdf

Description: Class to define a thermohydraulic 1D model which will apply to a boundary of 2D or 3D domain.

Warning: For parallel calculation, the only possible partition will be according the axis of the model with the keyword Tranche.

```
See also: condlim base (11)
Usage:
paroi_echange_contact_correlation_vdf obj Lire obj {
     dir int
     tinf float
     tsup float
     lambda str
     rho str
     cp float
     dt impr float
     mu str
     debit float
     dh float
     volume str
     nu str
     [reprise_correlation]
}
```

- dir int: Direction (0 : axis X, 1 : axis Y, 2 : axis Z) of the 1D model.
- tinf *float*: Inlet fluid temperature of the 1D model (oC or K).
- **tsup** *float*: Outlet fluid temperature of the 1D model (oC or K).
- lambda str: Thermal conductivity of the fluid (W.m-1.K-1).
- **rho** *str*: Mass density of the fluid (kg.m-3) which may be a function of the temperature T.
- cp float: Calorific capacity value at a constant pressure of the fluid (J.kg-1.K-1).
- **dt_impr** *float*: Printing period in name_of_data_file_time.dat files of the 1D model results.
- mu str: Dynamic viscosity of the fluid (kg.m-1.s-1) which may be a function of the temperature T.
- **debit** *float*: Surface flow rate (kg.s-1.m-2) of the fluid into the channel.
- **dh** *float*: Hydraulic diameter may be a function f(x) with x position along the 1D axis (xinf <= x <= xsup)
- **volume** *str*: Exact volume of the 1D domain (m3) which may be a function of the hydraulic diameter (Dh) and the lateral surface (S) of the meshed boundary.
- **nu** *str*: Nusselt number which may be a function of the Reynolds number (Re) and the Prandtl number (Pr).
- reprise_correlation : Keyword in the case of a resuming calculation with this correlation.

11.28 paroi_echange_contact_correlation_vef

Description: Class to define a thermohydraulic 1D model which will apply to a boundary of 2D or 3D domain.

Warning: For parallel calculation, the only possible partition will be according the axis of the model with the keyword Tranche_geom.

```
See also: condlim_base (11)
```

where

```
Usage:
```

```
paroi_echange_contact_correlation_vef obj Lire obj {
     dir int
     tinf float
     tsup float
     lambda str
     rho str
     cp float
     dt_impr float
     mu str
     debit float
     dh float
     n int
     surface str
     nu str
     xinf float
     xsup float
     [ emissivite_pour_rayonnement_entre_deux_plaques_quasi_infinies float]
     [reprise correlation]
}
where
```

- dir int: Direction (0 : axis X, 1 : axis Y, 2 : axis Z) of the 1D model.
- **tinf** *float*: Inlet fluid temperature of the 1D model (oC or K).
- tsup *float*: Outlet fluid temperature of the 1D model (oC or K).
- lambda str: Thermal conductivity of the fluid (W.m-1.K-1).
- rho str: Mass density of the fluid (kg.m-3) which may be a function of the temperature T.
- cp float: Calorific capacity value at a constant pressure of the fluid (J.kg-1.K-1).
- dt_impr float: Printing period in name_of_data_file_time.dat files of the 1D model results.
- mu str: Dynamic viscosity of the fluid (kg.m-1.s-1) which may be a function of the temperature T.
- **debit** *float*: Surface flow rate (kg.s-1.m-2) of the fluid into the channel.
- **dh** *float*: Hydraulic diameter may be a function f(x) with x position along the 1D axis (xinf <= x <= xsup)
- **n** *int*: Number of 1D cells of the 1D mesh.
- surface str: Section surface of the channel which may be function f(Dh,x) of the hydraulic diameter (Dh) and x position along the 1D axis (xinf $\le x \le x$)
- **nu** *str*: Nusselt number which may be a function of the Reynolds number (Re) and the Prandtl number (Pr).
- xinf *float*: Position of the inlet of the 1D mesh on the axis direction.
- xsup float: Position of the outlet of the 1D mesh on the axis direction.
- emissivite_pour_rayonnement_entre_deux_plaques_quasi_infinies float: Coefficient of emissivity for radiation between two quasi infinite plates.
- reprise_correlation : Keyword in the case of a resuming calculation with this correlation.

11.29 paroi_echange_contact_vdf

Description: Boundary condition type to model the heat flux between two problems. Important: the name of the boundaries in the two problems should be the same.

See also: condlim_base (11)

Usage:

paroi_echange_contact_vdf autrepb nameb temp h
where

- autrepb str: Name of other problem.
- nameb str: Name of bord.
- temp str: Name of field.
- **h** *float*: Value assigned to a coefficient (expressed in W.K-1m-2) that characterises the contact between the two mediums. In order to model perfect contact, h must be taken to be infinite. This value must obviously be the same in both the two problems blocks.

The surface thermal flux exchanged between the two mediums is represented by :

fi = h (T1-T2) where $1/h = d1/lambda1 + 1/val_h_contact + d2/lambda2$

where di : distance between the node where Ti and the wall is found.

11.30 paroi_echange_externe_impose

Description: External type exchange condition with a heat exchange coefficient and an imposed external temperature.

See also: condlim_base (11) paroi_echange_externe_impose_h (11.31)

Usage:

paroi_echange_externe_impose h_imp himpc text ch
where

- **h_imp** *str*: Heat exchange coefficient value (expressed in W.m-2.K-1).
- himpc champ front base (16.1): Boundary field type.
- **text** *str*: External temperature value (expressed in oC or K).
- ch champ_front_base (16.1): Boundary field type.

11.31 paroi_echange_externe_impose_h

Description: Particular case of class paroi echange externe impose for enthalpy equation.

See also: paroi echange externe impose (11.30)

Usage:

paroi_echange_externe_impose_h h_imp himpc text ch
where

- **h_imp** *str*: Heat exchange coefficient value (expressed in W.m-2.K-1).
- himpc champ_front_base (16.1): Boundary field type.
- **text** *str*: External temperature value (expressed in oC or K).
- ch champ_front_base (16.1): Boundary field type.

11.32 paroi_echange_global_impose

Description: Global type exchange condition (internal) that is to say that diffusion on the first fluid mesh is not taken into consideration.

See also: condlim_base (11)

Usage:

paroi_echange_global_impose h_imp himpc text ch
where

- h_imp str: Global exchange coefficient value. The global exchange coefficient value is expressed in W.m-2.K-1.
- himpc champ_front_base (16.1): Boundary field type.
- text str: External temperature value. The external temperature value is expressed in oC or K.
- ch champ_front_base (16.1): Boundary field type.

11.33 paroi_fixe

Description: Keyword to designate a situation of adherence to the wall called bord (edge) (normal and tangential velocity at the edge is zero).

See also: condlim_base (11) paroi_fixe_iso_Genepi2_sans_contribution_aux_vitesses_sommets (11.34)

Usage:

paroi_fixe

11.34 paroi_fixe_iso_Genepi2_sans_contribution_aux_vitesses_sommets

Description: Boundary condition to obtain iso Geneppi2, without interest

See also: paroi_fixe (11.33)

Usage:

paroi_fixe_iso_Genepi2_sans_contribution_aux_vitesses_sommets

11.35 paroi_flux_impose

Description: Normal flux condition at the wall called bord (edge). The surface area of the flux (W.m-1 in 2D or W.m-2 in 3D) is imposed at the boundary according to the following convention: a positive flux is a flux that enters into the domain according to convention.

See also: condlim base (11)

Usage:

paroi_flux_impose ch

where

• ch champ_front_base (16.1): Boundary field type.

11.36 paroi_knudsen_non_negligeable

Description: Boundary condition for number of Knudsen (Kn) above 0.001 where slip-flow condition appears: the velocity near the wall depends on the shear stress: Kn=l/L with l is the mean-free-path of the molecules and L a characteristic length scale.

U(y=0)-Uwall=k(dU/dY)

Where k is a coefficient given by several laws:

Mawxell: k=(2-s)*l/s

Bestok&Karniadakis :k=(2-s)/s*L*Kn/(1+Kn)

```
Xue&Fan :k=(2-s)/s*L*tanh(Kn)
s is a value between 0 and 2 named accomodation coefficient. s=1 seems a good value.
Warning : The keyword is available for VDF calculation only for the moment.

See also: dirichlet (11.4)

Usage:
paroi_knudsen_non_negligeable name_champ_1 champ_1 name_champ_2 champ_2
where

• name_champ_1 str into ['vitesse_paroi', 'k']: Field name.
• champ_1 champ_front_base (16.1): Boundary field type.
• name_champ_2 str into ['vitesse_paroi', 'k']: Field name.
• champ_2 champ_front_base (16.1): Boundary field type.
```

11.37 paroi_rugueuse

```
Description: Rough wall boundary

See also: dirichlet (11.4)

Usage:
paroi_rugueuse obj Lire obj {
    erugu float
}
where
```

• erugu float: Constant value for roughness

11.38 paroi_temperature_imposee

Description: Imposed temperature condition at the wall called bord (edge).

```
See also: dirichlet (11.4) temperature_imposee_paroi (11.43)
```

Usage:

paroi_temperature_imposee ch where

• **ch** *champ_front_base* (16.1): Boundary field type.

11.39 periodique

Description: 1). For Navier-Stokes equations, this keyword is used to indicate that the horizontal inlet velocity values are the same as the outlet velocity values, at every moment. As regards meshing, the inlet and outlet edges bear the same name.; 2). For scalar transport equation, this keyword is used to set a periodic condition on scalar. The two edges dealing with this periodic condition bear the same name.

```
See also: condlim_base (11)
Usage:
periodique
```

11.40 scalaire_impose_paroi

Description: Imposed temperature condition at the wall called bord (edge).

See also: dirichlet (11.4)

Usage:

 $scalaire_impose_paroi \ ch$

where

• **ch** *champ_front_base* (16.1): Boundary field type.

11.41 sortie_libre_temperature_imposee_h

Description: Open boundary for heat equation with enthalpy as unknown.

See also: neumann (11.21)

Usage:

sortie_libre_temperature_imposee_h ch

where

• ch champ_front_base (16.1): Boundary field type.

11.42 symetrie

Description: 1). For Navier-Stokes equations, this keyword is used to designate a symmetry condition concerning the velocity at the boundary called bord (edge) (normal velocity at the edge equal to zero and tangential velocity gradient at the edge equal to zero); 2). For scalar transport equation, this keyword is used to set a symmetry condition on scalar on the boundary named bord (edge).

See also: condlim base (11)

Usage:

symetrie

11.43 temperature_imposee_paroi

Description: Imposed temperature condition at the wall called bord (edge).

See also: paroi_temperature_imposee (11.38)

Usage:

temperature imposee paroi ch

where

• **ch** *champ_front_base* (16.1): Boundary field type.

12 discretisation base

Description: Basic class for space discretization of thermohydraulic turbulent problems.

See also: objet_u (33) vdf (12.2) vef (12.3) ef (12.1)

Usage:

12.1 ef

```
Description: Element Finite discretization.
```

```
See also: discretisation_base (12)
```

Usage:

12.2 vdf

Description: Finite difference volume discretization.

```
See also: discretisation_base (12)
```

Usage:

12.3 vef

Description: Finite element volume discretization (P1NC/P0 element)

Warning: it becomes an obsolete discretization.

```
See also: discretisation_base (12) vefprep1b (12.4)
```

Usage:

12.4 vefprep1b

Description: Finite element volume discretization (P1NC/P1-bubble element). Since the 1.5.5 version, several new discretizations are available thanks to the optional keyword Read. By default, the VEFPreP1B keyword is equivalent to the former VEFPreP1B formulation (v1.5.4 and sooner). P0P1 (if used with the strong formulation for imposed pressure boundary) is equivalent to VEFPreP1B but the convergence is slower. VEFPreP1B dis is equivalent to VEFPreP1B dis Read dis { P0 P1 Changement_de_base_P1Bulle 1 C1 pression sommet faible 0 }

```
See also: vef (12.3)

Usage:
vefprep1b obj Lire obj {
      [p0]
      [p1]
      [pa]
      [changement_de_base_p1bulle int into [0, 1]]
      [cl_pression_sommet_faible int into [0, 1]]
      [modif_div_face_dirichlet int into [0, 1]]
}
where
```

- **p0**: Pressure nodes are added on element centres
- p1 : Pressure nodes are added on vertices
- pa : Only available in 3D, pressure nodes are added on bones
- **changement_de_base_p1bulle** *int into [0, 1]*: This option may be used to have the P1NC/P0P1 formulation (value set to 0) or the P1NC/P1Bulle formulation (value set to 1, the default).

- cl_pression_sommet_faible int into [0, 1]: This option is used to specify a strong formulation (value set to 0, the default) or a weak formulation (value set to 1) for an imposed pressure boundary condition. The first formulation converges quicker and is stable in general cases. The second formulation should be used if there are several outlet boundaries with Neumann condition (see Ecoulement Neumann test case for example).
- modif_div_face_dirichlet int into [0, 1]: This option (by default 0) is used to extend control volumes for the momentum equation.

13 domaine

```
Description: Keyword to create a domain.
See also: objet_u (33)
Usage:
14
      espece
Description: not_set
See also: objet_u (33)
Usage:
espece obj Lire obj {
     cp champ_base
     lambda champ_base
     mu champ_base
     masse_molaire float
}
where
   • cp champ_base (15.1): Specific heat value (J.kg-1.K-1).
   • lambda champ_base (15.1): Conductivity value (W.m-1.K-1).
   • mu champ_base (15.1): Dynamic viscosity value (kg.m-1.s-1).
   • masse_molaire float: Gas molar mass.
```

15 champ_base

15.1 champ_base

Description: Basic class of fields.

See also: objet_u (33) champ_don_base (15.3) champ_ostwald (15.16) champ_input_base (15.14) champ_fonc_med (15.7) field_uniform_keps_from_ud (15.24) Champ_Fonc_MEDfile (15.2)

Usage:

15.2 Champ_Fonc_MEDfile

Description: Obsolete keyword to read a field with MED file API

See also: champ_base (15.1)

Usage:

15.3 champ_don_base

Description: Basic class for data fields (not calculated), p.e. physics properties.

See also: champ_base (15.1) uniform_field (15.27) champ_uniforme_morceaux (15.20) champ_fonc_xyz (15.23) champ_fonc_txyz (15.22) champ_don_lu (15.4) init_par_partie (15.25) champ_tabule_temps (15.19) champ_fonc_t (15.10) champ_fonc_tabule (15.11) champ_init_canal_sinal (15.12) champ_som_lu_vdf (15.17) champ_som_lu_vef (15.18) tayl_green (15.26) champ_fonc_reprise (15.8)

Usage:

15.4 champ_don_lu

Description: Field to read a data field (values located at the center of the cells) in a file.

See also: champ_don_base (15.3)

Usage:

champ_don_lu dom nb_comp file where

- **dom** *str*: Name of the domain.
- **nb_comp** *int*: Number of field components.
- file str: Name of the file.

This file has the following format:

nb val lues -> Number of values readen in th file

Xi Yi Zi -> Coordinates readen in the file

Ui Vi Wi -> Value of the field

15.5 champ_fonc_fonction

Description: Field that is a function of another field.

See also: champ_fonc_tabule (15.11) champ_fonc_fonction_txyz (15.6)

Usage:

champ_fonc_fonction dim inco bloc
where

- dim int: Number of field components.
- inco str: Name of the field (for example: temperature).
- **bloc** *bloc_lecture* (3.41): Values (the table (the value of the field at any time is calculated by linear interpolation from this table) or the analytical expression (with keyword expression to use an analytical expression)).

15.6 champ_fonc_fonction_txyz

Description: this refers to a field that is a function of another field and time and/or space coordinates

See also: champ_fonc_fonction (15.5)

Usage:

champ_fonc_fonction_txyz dim inco bloc
where

- dim int: Number of field components.
- inco str: Name of the field (for example: temperature).
- **bloc** *bloc_lecture* (3.41): Values (the table (the value of the field at any time is calculated by linear interpolation from this table) or the analytical expression (with keyword expression to use an analytical expression)).

15.7 champ_fonc_med

Description: Field to read a data field in a MED-format file .med at a specified time. It is very useful, for example, to resume a calculation with a new or refined geometry. The field post-processed on the new geometry at med format is used as initial condition for the resume.

See also: champ_base (15.1)

Usage:

 $champ_fonc_med~[~use_existing_domain~]~[~last_time~]~filename~domain_name~field_name~location~time$

where

- use existing domain str into ['use existing domain']
- last_time str into ['last_time']: to use the last time of the MED file instead of the specified time.
- filename str: Name of the .med file.
- **domain_name** *str*: Name of the domain.
- **field_name** *str*: Name of the problem unknown.
- location str into ['som', 'elem']: To indicate where the field has been post-processed.
- time float: Time of the field in the .med file.

15.8 champ_fonc_reprise

Description: This field is used to read a data field in a save file (.xyz or .sauv) at a specified time. It is very useful, for example, to run a thermohydraulic calculation with velocity initial condition read into a save file from a previous hydraulic calculation.

See also: champ_don_base (15.3)

Usage:

champ_fonc_reprise [format] filename pb_name champ [fonction] temps
where

• **format** *str into* ['binaire', 'formatte', 'xyz']: Type of file (the file format). If xyz format is activated, the .xyz file from the previous calculation will be given for filename, and if formatte or binaire is choosen, the .sauv file of the previous calculation will be specified for filename. In the case of a parallel calculation, if the mesh partition does not changed between the previous calculation and the next one, the binaire format should be preferred, because is faster than the xyz format.

- **filename** *str*: Name of the save file.
- **pb_name** *str*: Name of the problem.
- **champ** *str*: Name of the problem unknown. It may also be the temporal average of a problem unknown (like moyenne_vitesse, moyenne_temperature,...)
- **fonction** *fonction_champ_reprise* (15.9): Optional keyword to apply a function on the field being read in the save file (e.g. to read a temperature field in Celsius units and convert it for the calculation on Kelvin units, you will use: fonction 1 273.+val)
- **temps** *str*: Time of the saved field in the save file or last_time. If you give the keyword last_time instead, the last time saved in the save file will be used.

15.9 fonction_champ_reprise

Description: not_set

See also: objet_lecture (32)

Usage:

mot fonction

where

- mot str into ['fonction']
- **fonction** *n word1 word2 ... wordn*: n f1(val) f2(val) ... fn(val)] time

15.10 champ_fonc_t

Description: Field that is constant in space and is a function of time.

See also: champ_don_base (15.3)

Usage:

champ_fonc_t val

where

• val n word1 word2 ... wordn: Values of field components (time dependant functions).

15.11 champ_fonc_tabule

Description: Field that is tabulated as a function of another field.

See also: champ_don_base (15.3) champ_fonc_fonction (15.5)

Usage:

champ_fonc_tabule dim inco bloc

where

- dim int: Number of field components.
- inco str: Name of the field (for example: temperature).
- **bloc** *bloc_lecture* (3.41): Values (the table (the value of the field at any time is calculated by linear interpolation from this table) or the analytical expression (with keyword expression to use an analytical expression)).

15.12 champ_init_canal_sinal

Description: For a parabolic profile on U velocity with an unpredictable disturbance on V and W and a sinusoidal disturbance on V velocity.

```
See also: champ_don_base (15.3)

Usage:
champ_init_canal_sinal dim bloc
where

• dim int: Number of field components.
• bloc bloc_lec_champ_init_canal_sinal (15.13): Parameters for the class champ_init_canal_sinal.
```

15.13 bloc_lec_champ_init_canal_sinal

```
Description: Parameters for the class champ init canal sinal.
in 2D:
U=ucent*y(2h-y)/h/h
V=ampli bruit*rand+ampli sin*sin(omega*x)
rand: unpredictable value between -1 and 1.
in 3D:
U=ucent*y(2h-y)/h/h
V=ampli_bruit*rand1+ampli_sin*sin(omega*x)
W=ampli_bruit*rand2
rand1 and rand2: unpredictables values between -1 and 1.
See also: objet_lecture (32)
Usage:
{
     ucent float
     h float
     ampli_bruit float
     [ ampli_sin float]
     omega float
     [ dir_flow int into [0, 1, 2]]
     [ dir_wall int into [0, 1, 2]]
     [ min_dir_flow float]
     [ min_dir_wall float]
}
where
   • ucent float: Velocity value at the center of the channel.
```

- h *float*: Half hength of the channel.
- ampli bruit *float*: Amplitude for the disturbance.
- ampli_sin float: Amplitude for the sinusoidal disturbance (by default equals to ucent/10).
- omega *float*: Value of pulsation for the of the sinusoidal disturbance.
- dir_flow int into [0, 1, 2]: Flow direction for the initialization of the flow in a channel.
 - if dir_flow=0, the flow direction is X
 if dir_flow=1, the flow direction is Y
 if dir_flow=2, the flow direction is Z
 Default value for dir_flow is 0

- dir_wall int into [0, 1, 2]: Wall direction for the initialization of the flow in a channel.
 - if dir_wall=0, the normal to the wall is in X direction
 - if dir_wall=1, the normal to the wall is in Y direction
 - if $\mbox{dir_wall=2},$ the normal to the wall is in Z direction

Default value for dir_flow is 1

- min_dir_flow float: Value of the minimum coordinate in the flow direction for the initialization of the flow in a channel. Default value for dir_flow is 0.
- min_dir_wall *float*: Value of the minimum coordinate in the wall direction for the initialization of the flow in a channel. Default value for dir flow is 0.

15.14 champ_input_base

Description: not_set

```
See also: champ_base (15.1) champ_input_p0 (15.15)
champ_input_base obj Lire obj {
      nb comp int
      nom str
      [initial_value n \times 1 \times 2 \dots \times n]
      probleme str
      [ sous_zone str]
where
   • nb_comp int
   • nom str
   • initial_value n x1 x2 ... xn
   • probleme str
   • sous_zone str
15.15
         champ_input_p0
Description: not_set
See also: champ_input_base (15.14)
Usage:
champ_input_p0 obj Lire obj {
     nb_comp int
      nom str
      [ initial_value n \times 1 \times 2 \dots \times n]
      probleme str
      [ sous_zone str]
}
where
```

nb_comp int for inheritancenom str for inheritance

- initial_value n x1 x2 ... xn for inheritance
- probleme str for inheritance
- sous zone str for inheritance

15.16 champ_ostwald

Description: This keyword is used to define the viscosity variation law:

Mu(T) = K(T)*(D:D/2)**((n-1)/2)

See also: champ_base (15.1)

Usage:

champ_ostwald

15.17 champ_som_lu_vdf

Description: Keyword to read in a file values located at the nodes of a mesh in VDF discretization.

See also: champ_don_base (15.3)

Usage:

champ_som_lu_vdf domain_name dim tolerance file where

- domain name str: Name of the domain.
- dim int: Value of the dimension of the field.
- tolerance float: Value of the tolerance to check the coordinates of the nodes.
- file str: name of the file

This file has the following format:

Xi Yi Zi -> Coordinates of the node

Ui Vi Wi -> Value of the field on this node

Xi+1 Yi+1 Zi+1 -> Next point

Ui+1 Vi+1 Zi+1 -> Next value ...

15.18 champ_som_lu_vef

Description: Keyword to read in a file values located at the nodes of a mesh in VEF discretization.

See also: champ_don_base (15.3)

Usage:

champ_som_lu_vef domain_name dim tolerance file

where

- domain_name str: Name of the domain.
- dim int: Value of the dimension of the field.
- **tolerance** *float*: Value of the tolerance to check the coordinates of the nodes.
- file str: Name of the file.

This file has the following format:

Xi Yi Zi -> Coordinates of the node

Ui Vi Wi -> Value of the field on this node

Xi+1 Yi+1 Zi+1 -> Next point

Ui+1 Vi+1 Zi+1 -> Next value ...

15.19 champ_tabule_temps

Description: Field that is constant in space and tabulated as a function of time.

See also: champ_don_base (15.3)

Usage:

$champ_tabule_temps \ dim \ bloc$

where

- dim int: Number of field components.
- **bloc** *bloc_lecture* (3.41): Values as a table. The value of the field at any time is calculated by linear interpolation from this table.

15.20 champ_uniforme_morceaux

Description: Field which is partly constant in space and stationary.

See also: champ_don_base (15.3) champ_uniforme_morceaux_tabule_temps (15.21) valeur_totale_sur_volume (15.28)

Usage:

champ_uniforme_morceaux nom_dom nb_comp data where

- nom dom str: Name of the domain to which the sub-areas belong.
- **nb_comp** *int*: Number of field components.
- data bloc_lecture (3.41): { Defaut val_def sous_zone_1 val_1 ... sous_zone_i val_i } By default, the value val_def is assigned to the field. It takes the sous_zone_i identifier Sous_Zone (sub_area) type object value, val_i. Sous_Zone (sub_area) type objects must have been previously defined if the operator wishes to use a Champ_Uniforme_Morceaux(partly_uniform_field) type object.

15.21 champ_uniforme_morceaux_tabule_temps

Description: this type of field is constant in space on one or several sub_zones and tabulated as a function of time.

See also: champ_uniforme_morceaux (15.20)

Usage:

champ_uniforme_morceaux_tabule_temps nom_dom nb_comp data where

- nom_dom str: Name of the domain to which the sub-areas belong.
- **nb_comp** *int*: Number of field components.
- data bloc_lecture (3.41): { Defaut val_def sous_zone_1 val_1 ... sous_zone_i val_i } By default, the value val_def is assigned to the field. It takes the sous_zone_i identifier Sous_Zone (sub_area) type object value, val_i. Sous_Zone (sub_area) type objects must have been previously defined if the operator wishes to use a Champ_Uniforme_Morceaux(partly_uniform_field) type object.

15.22 champ_fonc_txyz

Description: Field defined by analytical functions. It makes it possible the definition of a field that depends on the time and the space.

```
See also: champ_don_base (15.3)

Usage:
champ_fonc_txyz dom val
where

• dom str: Name of domain of calculation.
• val n word1 word2 ... wordn: List of functions on (t,x,y,z).
```

15.23 champ_fonc_xyz

Description: Field defined by analytical functions. It makes it possible the definition of a field that depends on (x,y,z).

```
See also: champ_don_base (15.3)

Usage:
champ_fonc_xyz dom val
where

• dom str: Name of domain of calculation.
• val n word1 word2 ... wordn: List of functions on (x,y,z).
```

15.24 field uniform keps from ud

Description: field which allows to impose on a domain K and EPS values derived from U velocity and D hydraulic diameter

```
See also: champ_base (15.1)

Usage:
field_uniform_keps_from_ud obj Lire obj {
    u float
    d float
}
where
```

- u *float*: value of velocity specified in boundary condition.
- **d** float: value of hydraulic diameter specified in boundary condition

15.25 init_par_partie

```
Description: ne marche que pour n_comp=1

See also: champ_don_base (15.3)

Usage:
init_par_partie n_comp val1 val2 val3
where
```

- **n_comp** *int into* [1]
- val1 float
- val2 float
- val3 float

15.26 tayl_green

Description: Class Tayl_green.

See also: champ_don_base (15.3)

Usage:

tayl_green dim

where

• dim int: Dimension.

15.27 uniform_field

Synonymous: champ_uniforme

Description: Field that is constant in space and stationary.

See also: champ_don_base (15.3)

Usage:

uniform field val

where

• val n x1 x2 ... xn: Values of field components.

15.28 valeur_totale_sur_volume

Description: Similar as Champ_Uniforme_Morceaux with the same syntax. Used for source terms when we want to specify a source term with a value given for the volume (eg: heat in Watts) and not a value per volume unit (eg: heat in Watts/m3).

See also: champ_uniforme_morceaux (15.20)

Usage:

valeur_totale_sur_volume nom_dom nb_comp data where

- nom_dom str: Name of the domain to which the sub-areas belong.
- **nb_comp** *int*: Number of field components.
- data bloc_lecture (3.41): { Defaut val_def sous_zone_1 val_1 ... sous_zone_i val_i } By default, the value val_def is assigned to the field. It takes the sous_zone_i identifier Sous_Zone (sub_area) type object value, val_i. Sous_Zone (sub_area) type objects must have been previously defined if the operator wishes to use a Champ_Uniforme_Morceaux(partly_uniform_field) type object.

16 champ_front_base

16.1 champ_front_base

Description: Basic class for fields at domain boundaries.

See also: objet_u (33) champ_front_uniforme (16.22) champ_front_fonc_xyz (16.14) champ_front_fonc_txyz (16.13) champ_front_fonc_pois_ipsn (16.11) champ_front_fonc_pois_tube (16.12) champ_front_tabule (16.20) champ_front_fonction (16.15) champ_front_bruite (16.7) champ_front_tangentiel_vef (16.21) champ_front_lu (16.16) boundary_field_inward (16.2) champ_front_pression_from_u (16.18) champ_front_contact_vef (16.9) champ_front_calc (16.8) champ_front_recyclage (16.19) ch_front_input (16.4) boundary_field_uniform_keps_from_ud (16.3) champ_front_normal_vef (16.17) champ_front_MED (16.6) champ_front_debit (16.10)

Usage:

16.2 boundary_field_inward

Description: this field is used to define the normal vector field standard at the boundary in VDF or VEF discretization.

```
See also: champ_front_base (16.1)

Usage:
boundary_field_inward obj Lire obj {

normal_value str
}
where
```

• **normal_value** *str*: normal vector value (positive value for a vector oriented outside to inside) which can depend of the time.

16.3 boundary_field_uniform_keps_from_ud

Description: field which allows to impose on a boundary K and EPS values derived from U velocity and D hydraulic diameter

```
See also: champ_front_base (16.1)

Usage:
boundary_field_uniform_keps_from_ud obj Lire obj {
            u float
            d float
}

where

• u float: value of velocity
```

• d float: value of hydraulic diameter

16.4 ch_front_input

```
Description: not_set
See also: champ_front_base (16.1) ch_front_input_uniforme (16.5)
Usage:
ch_front_input obj Lire obj {
      nb_comp int
      nom str
      [ initial_value n \times 1 \times 2 \dots \times n]
      probleme str
      [ sous_zone str]
}
where
   • nb_comp int
   • nom str
   • initial_value n x1 x2 ... xn
   • probleme str
   • sous_zone str
```

16.5 ch_front_input_uniforme

Description: for coupling, you can use ch_front_input_uniforme which is a champ_front_uniforme, which use an external value. It must be used with Problem.setInputField.

```
See also: ch_front_input (16.4)

Usage:
ch_front_input_uniforme obj Lire obj {

    nb_comp int
    nom str
    [initial_value n x1 x2 ... xn]
    probleme str
    [sous_zone str]
}

where

• nb_comp int for inheritance
• nom str for inheritance
• initial_value n x1 x2 ... xn for inheritance
• probleme str for inheritance
• probleme str for inheritance
• sous_zone str for inheritance
```

16.6 champ_front_MED

Description: Field allowing the loading of a boundary condition from a MED file using Champ_fonc_med

```
See also: champ_front_base (16.1)
```

Usage:

champ_front_MED champ_fonc_med

where

• **champ_fonc_med** *champ_base* (15.1): a champ_fonc_med loading the values of the unknown on a domain boundary

16.7 champ_front_bruite

Description: Field which is variable in time and space in a random manner.

See also: champ_front_base (16.1)

Usage:

champ_front_bruite nb_comp bloc

where

- **nb_comp** *int*: Number of field components.
- **bloc** *bloc_lecture* (3.41): { [N val L val] Moyenne m_1....[m_i] Amplitude A_1....[A_ i]}: Random nois: If N and L are not defined, the ith component of the field varies randomly around an average value m i with a maximum amplitude A i.

White noise: If N and L are defined, these two additional parameters correspond to L, the domain length and N, the number of nodes in the domain. Noise frequency will be between 2*Pi/L and 2*Pi*N/(4*L).

For example, formula for velocity: u=U0(t) $v=U1(t)Uj(t)=Mj+2*Aj*bruit_blanc$ where bruit_blanc (white_noise) is the formula given in the mettre_a_jour (update) method of the Champ_front_bruite (noise_boundary_field) (Refer to the Ch_fr_bruite.cpp file).

16.8 champ_front_calc

Description: This keyword is used on a boundary to get a field from another boundary. The local and remote boundaries should have the same mesh. If not, the Champ_front_recyclage keyword could be used instead. It is used in the condition block at the limits of equation which itself refers to a problem called pb1. We are working under the supposition that pb1 is coupled to another problem.

See also: champ_front_base (16.1)

Usage:

champ_front_calc problem_name bord field_name

where

- **problem_name** *str*: Name of the other problem to which pb1 is coupled.
- **bord** *str*: Name of the side which is the boundary between the 2 domains in the domain object description associated with the problem_name object.
- **field_name** *str*: Name of the field containing the value that the user wishes to use at the boundary. The field_name object must be recognized by the problem_name object.

16.9 champ_front_contact_vef

Description: This field is used on a boundary between a solid and fluid domain to exchange a calculated temperature at the contact face of the two domains according to the flux of the two problems.

See also: champ_front_base (16.1)

Usage:

champ_front_contact_vef local_pb local_boundary remote_pb remote_boundary where

- **local_pb** *str*: Name of the problem.
- local_boundary str: Name of the boundary.
- **remote_pb** *str*: Name of the second problem.
- remote_boundary str: Name of the boundary in the second problem.

16.10 champ_front_debit

Description: This field is used to define a flow rate field instead of a velocity field for a Dirichlet boundary condition on Navier-Stokes equations.

See also: champ_front_base (16.1)

Usage:

champ_front_debit ch

where

• **ch** *champ_front_base* (16.1): uniform field in space to define the flow rate. It could be, for example, champ_front_uniforme, ch_front_input_uniform or champ_front_fonc_txyz that depends only on time.

16.11 champ_front_fonc_pois_ipsn

Description: Boundary field champ_front_fonc_pois_ipsn.

See also: champ_front_base (16.1)

Usage:

champ_front_fonc_pois_ipsn r_tube umoy r_loc where

- r_tube float
- **umoy** n x1 x2 ... xn
- \mathbf{r} _loc $x1 \ x2 \ (x3)$

16.12 champ_front_fonc_pois_tube

Description: Boundary field champ_front_fonc_pois_tube.

See also: champ_front_base (16.1)

Usage:

where

- r_tube float
- **umoy** n x1 x2 ... xn
- $r_{loc} x1 x2 (x3)$
- r_loc_mult n1 n2 (n3)

16.13 champ_front_fonc_txyz

Description: Boundary field which is not constant in space and in time.

See also: champ_front_base (16.1)

Usage:

 $champ_front_fonc_txyz \quad val$

where

• val n word1 word2 ... wordn: Values of field components (mathematical expressions).

16.14 champ_front_fonc_xyz

Description: Boundary field which is not constant in space.

See also: champ_front_base (16.1)

Usage:

champ front fonc xyz val

where

• val n word1 word2 ... wordn: Values of field components (mathematical expressions).

16.15 champ_front_fonction

Description: boundary field that is function of another field

See also: champ_front_base (16.1)

Usage:

champ_front_fonction dim inco expression

where

- dim int: Number of field components.
- inco str: Name of the field (for example: temperature).
- **expression** *str*: keyword to use a analytical expression like 10.*EXP(-0.1*val) where val be the keyword for the field.

16.16 champ_front_lu

Description: boundary field which is given from data issued from a read file. The format of this file has to be the same that the one generated by Ecrire_fichier_xyz_valeur

Example for K and epsilon quantities to be defined for inlet condition in a boundary named 'entree': entree frontiere_ouverte_K_Eps_impose Champ_Front_lu dom 2pb_K_EPS_PERIO_1006.306198.dat

See also: champ_front_base (16.1)

Usage:

champ_front_lu domaine dim file where

- domaine str: Name of domain
- dim int: number of components
- file str: path for the read file

16.17 champ_front_normal_vef

Description: Field to define the normal vector field standard at the boundary in VEF discretization.

See also: champ front base (16.1)

Usage:

champ_front_normal_vef mot vit_tan

where

- mot str into ['valeur_normale']: Name of vector field.
- vit_tan float: normal vector value (positive value for a vector oriented outside to inside).

16.18 champ_front_pression_from_u

Description: this field is used to define a pressure field depending of a velocity field.

See also: champ_front_base (16.1)

Usage:

champ_front_pression_from_u expression where

• expression str: value depending of a velocity (like $2 * u_moy^2$).

16.19 champ_front_recyclage

Description: This keyword is used on a boundary to get a field from another boundary. New keyword since the 1.6.1 version which replaces and generalizes several obsolete ones:

Champ_front_calc_intern

Champ_front_calc_recycl_fluct_pbperio

Champ_front_calc_recycl_champ

Champ_front_calc_intern_2pbs

Champ front calc recycl fluct

It is to use, in a general way, on a boundary of a local_pb problem, a field calculated from a linear combination of an imposed field g(x,y,z,t) with an instantaneous f(x,y,z,t) and a spatial mean field f(x,y,z) extracted from a plane of a problem named pb (pb may be local_pb itself): For each component i, the field F applied on the boundary will be:

 $F_i(x,y,z,t) = alpha_i *g_i(x,y,z,t) + xsi_i *[f_i(x,y,z,t) - beta_i *< fi>]$

Usage:

Champ_front_recyclage {

```
pb_champ_evaluateur problem_name field nb_comp
[ distance_plan x1 x2 (x3) ]
    [ moyenne_imposee methode_moy [fichier file [second_file]] ]
    [ moyenne_recyclee methode_recyc [fichier file [second_file]] ]
    [ direction_anisotrope int ]
    [ ampli_moyenne_imposee n x1 x2 ... xn ]
    [ ampli_moyenne_recyclee n x1 x2 ... xn ]
    [ ampli_fluctuation n x1 x2 ... xn ]
}
where:
```

- **pb_champ_evaluateur** *problem_name field nb_comp*: To give the name of the problem, the name of the field of the problem and its number of components nb_comp.
- **distance_plan** x1 x2 (x3): Vector which gives the distance between the boundary and the plane from where the field F will be extracted. By default, the vector is zero, that should imply the two domains have coincident boundaries.
- ampli_moyenne_imposee 2|3 alpha(0) alpha(1) [alpha(2)]: alpha_i coefficients (by default =1)
- ampli_moyenne_recyclee 2|3 beta(0) beta(1) [beta(2)]: beta_i coefficients (by default =1)
- ampli_fluctuation 2|3 gamma(0) gamma(1) [gamma(2)]: gamma_i coefficients (by default =1)
- **direction_anisotrope** *int into* [1,2,3]: If an integer is given for direction (X:1, Y:2, Z:3, by default, direction is negative), the imposed field g will be 0 for the 2 other directions.
- moyenne_imposee methode_moy: Value of the imposed g field. The methode_moy option can be:

profil [2|3] valx(x,y,z,t) valy(x,y,z,t) [valz(x,y,z,t)]: To specify analytic profile for the imposed g field.

interpolation fichier *file*: To create an imposed field built by interpolation of values read from a file. The imposed field is applied on the direction given by the keyword direction_anisotrope (the field is zero for the other directions). The format of the file is:

```
pos(1) val(1)
pos(2) val(2)
...
pos(N) val(N)
```

If direction given by direction_anisotrope is 1 (or 2 or 3), then pos will be X (or Y or Z) coordinate and val will be X value (or Y value, or Z value) of the imposed field.

connexion_approchee fichier *file*: To read the imposed field from a file where positions and values are given (it is not necessary that the coordinates of points match the coordinates of the boundary faces, indeed, the nearest point of each face of the boundary will be used). The format of the file is:

```
N
x(1) y(1) [z(1)] valx(1) valy(1) [valz(1)]
x(2) y(2) [z(2)] valx(2) valy(2) [valz(2)]
...
x(N) y(N) [z(N)] valx(N) valy(N) [valz(N)]
```

connection_exacte fichier *file second_file*: To read the imposed field from two files. The first file contains the points coordinates (which should be the same as the coordinates of the boundary faces) and the second file contains the mean values. The format of the first file is:

```
N
1 x(1) y(1) [z(1)]
2 x(2) y(2) [z(2)]
...
N x(N) y(N) [z(N)]
```

while the format of the second_file is:

N
1 valx(1) valy(1) [valz(1)]
2 valx(2) valy(2) [valz(2)]
...
N valx(N) valy(N) [valz(N)]

logarithmique diametre *float* **u_tau** *float* **visco_cin** *float* **direction** *int*: To specify the imposed field (in this case, velocity) by an analytical logarithmic law of the wall: $g(x,y,z) = u_tau * (log(0.5*diametre*u_tau/visco_cin)/Kappa + 5.1)$ with g(x,y,z)=u(x,y,z) if **direction** is set to 1 (g=v(x,y,z) if **direction** is set to 2, and g=w(w,y,z) if it is set to 3)

• moyenne_recylee methode_recyc: Method used to perform a spatial or a temporal averaging of f field to specify <f>. <f> can be the surface mean of f on the plane (surface option, see below) or it can be read from several files (for example generated by the chmoy_faceperio option of the Traitement_particulier keyword to obtain a temporal mean field). The option methode_recyc can be:

surfacique: Surface mean for <f> from f values on the plane

Or one of the following methode, mov ontions applied to read a tem

Or one of the following $methode_moy$ options applied to read a temporal mean field <f>(x,y,z):

interpolation

connexion_approchee connexion_exacte

See also: champ front base (16.1)

Usage:

champ_front_recyclage bloc
where

• bloc str

16.20 champ_front_tabule

Description: Constant field on the boundary, tabulated as a function of time.

See also: champ_front_base (16.1)

Usage:

champ_front_tabule nb_comp bloc
where

- **nb_comp** *int*: Number of field components.
- **bloc** bloc_lecture (3.41): {nt1 t2 t3tn u1 [v1 w1 ...] u2 [v2 w2 ...] u3 [v3 w3 ...] ... un [vn wn ...] }

Values are entered into a table based on n couples (ti, ui) if nb_comp value is 1. The value of a field at a given time is calculated by linear interpolation from this table.

16.21 champ_front_tangentiel_vef

Description: Field to define the tangential velocity vector field standard at the boundary in VEF discretization.

See also: champ_front_base (16.1)

Usage:

champ_front_tangentiel_vef mot vit_tan
where

- mot str into ['vitesse_tangentielle']: Name of vector field.
- vit_tan float: Vector field standard [m/s].

16.22 champ_front_uniforme

Description: Boundary field which is constant in space and stationary.

See also: champ_front_base (16.1)

Usage:

champ_front_uniforme val

where

• val n x1 x2 ... xn: Values of field components.

17 loi etat base

Description: Basic class for state laws.

See also: objet_u (33) gaz_parfait (17.3) gaz_reel_rhot (17.1) melange_gaz_parfait (17.2)

Usage:

17.1 gaz_reel_rhot

Description: Real gas.

See also: loi_etat_base (17)

Usage:

gaz_reel_rhot bloc

where

• **bloc** *bloc_lecture* (3.41): Description.

17.2 melange_gaz_parfait

Description: Mixing of perfect gas.

See also: loi_etat_base (17)

Usage:

melange_gaz_parfait obj Lire obj {

```
sc float
     [ cp float]
     [ prandtl float]
     [correction_fraction]
     [ignore_check_fraction]
     [ dtol_fraction float]
}
where
   • sc float: Schmidt number of the gas Sc=nu/D (D: diffusion coefficient of the mixing).
   • cp float: Specific heat at constant pressure of the gas Cp.
   • prandtl float: Prandtl number of the gas Pr=mu*Cp/lambda
   • correction_fraction: To force mass fractions between 0. and 1.
   • ignore_check_fraction: Not to check if mass fractions between 0. and 1.
   • dtol_fraction float: Delta tolerance on mass fractions for check testing (default value 1.e-6).
17.3
       gaz_parfait
Description: Perfect gas.
See also: loi_etat_base (17)
Usage:
gaz_parfait obj Lire obj {
     Cp float
     [ Cv float]
     [gamma float]
     Prandtl float
     [rho_constant_pour_debug champ_base]
}
where
   • Cp float: Specific heat at constant pressure (J/kg/K).
   • Cv float: Specific heat at constant volume (J/kg/K).
   • gamma float: Cp/Cv
   • Prandtl float: Prandtl number of the gas Pr=mu*Cp/lambda
   • rho_constant_pour_debug champ_base (15.1)
18
      loi fermeture base
Description: Class for appends fermeture to problem
Keyword Discretize should have already been used to read the object.
See also: objet_u (33) loi_fermeture_test (18.1)
Usage:
```

18.1 loi_fermeture_test

Description: Loi for test only

Keyword Discretize should have already been used to read the object.

```
See also: loi_fermeture_base (18)
Usage:
loi_fermeture_test obj Lire obj {
     [ coef float]
}
where
   • coef float: coefficient
19
      loi_horaire
Description: to define the movement with a time-dependant law for the solid interface.
See also: objet_u (33)
Usage:
loi_horaire obj Lire obj {
     position n word1 word2 ... wordn
     vitesse n word1 word2 ... wordn
     [ rotation n word1 word2 ... wordn]
     [ derivee_rotation n word1 word2 ... wordn]
where
   • position n word1 word2 ... wordn
   • vitesse n word1 word2 ... wordn
   • rotation n word1 word2 ... wordn
   • derivee_rotation n word1 word2 ... wordn
20
      milieu_base
Description: Basic class for medium (physics properties of medium).
See also: objet_u (33) solide (20.6) constituant (20.1) fluide_incompressible (20.2) solide_milieu_variable
(20.7)
Usage:
milieu_base obj Lire obj {
     [ rho champ_base]
     [cp champ_base]
     [lambda champ_base]
}
where
   • rho champ_base (15.1): Density (kg.m-3).
   • cp champ_base (15.1): Specific heat (J.kg-1.K-1).
   • lambda champ_base (15.1): Conductivity (W.m-1.K-1).
```

```
20.1 constituant
```

```
Description: Constituent.
See also: milieu base (20)
Usage:
constituant obj Lire obj {
     [coefficient_diffusion champ_base]
     [ rho champ_base]
     [cp champ_base]
     [lambda champ_base]
}
where
   • coefficient diffusion champ base (15.1): Constituent diffusion coefficient value (m2.s-1). If a
     multi-constituent problem is being processed, the diffusivite will be a vectorial and each components
     will be the diffusion of the constituent.
   • rho champ_base (15.1) for inheritance: Density (kg.m-3).
   • cp champ_base (15.1) for inheritance: Specific heat (J.kg-1.K-1).
   • lambda champ_base (15.1) for inheritance: Conductivity (W.m-1.K-1).
20.2
       fluide_incompressible
Description: This is a uncompressible fluid.
See also: milieu_base (20) fluide_quasi_compressible (20.4) fluide_ostwald (20.3)
Usage:
fluide incompressible obj Lire obj {
     [ beta_th champ_base]
     [ mu champ_base]
     [beta_co champ_base]
     [indice champ_base]
     [ kappa champ_base]
     [rho champ_base]
     [ cp champ_base]
     [lambda champ_base]
}
where
   • beta_th champ_base (15.1): Thermal expansion (K-1).
   • mu champ_base (15.1): Dynamic viscosity (kg.m-1.s-1).
   • beta_co champ_base (15.1): Volume expansion coefficient values in concentration.
   • indice champ_base (15.1): Refractivity of fluid.
   • kappa champ_base (15.1): Absorptivity of fluid (m-1).
   • rho champ_base (15.1) for inheritance: Density (kg.m-3).
   • cp champ_base (15.1) for inheritance: Specific heat (J.kg-1.K-1).
   • lambda champ_base (15.1) for inheritance: Conductivity (W.m-1.K-1).
```

20.3 fluide_ostwald

```
Description: Non-Newtonian fluids governed by Ostwald's law. The law applicable to stress tensor is:
tau=K(T)*(D:D/2)**((n-1)/2)*D Where:
D refers to the deformation tensor
K refers to fluid consistency (may be a function of the temperature T)
n refers to the fluid structure index n=1 for a Newtonian fluid, n<1 for a rheofluidifier fluid, n>1 for a
rheothickening fluid.
See also: fluide_incompressible (20.2)
Usage:
fluide_ostwald obj Lire obj {
     [k champ_base]
     [n champ_base]
     [ beta_th champ_base]
     [ mu champ_base]
     [beta_co champ_base]
     [indice champ_base]
     [kappa champ_base]
     [ rho champ_base]
     [cp champ_base]
     [lambda champ_base]
}
where
   • k champ_base (15.1): Fluid consistency.
   • n champ_base (15.1): Fluid structure index.
   • beta th champ base (15.1) for inheritance: Thermal expansion (K-1).
   • mu champ_base (15.1) for inheritance: Dynamic viscosity (kg.m-1.s-1).
   • beta_co champ_base (15.1) for inheritance: Volume expansion coefficient values in concentration.
   • indice champ_base (15.1) for inheritance: Refractivity of fluid.
   • kappa champ_base (15.1) for inheritance: Absorptivity of fluid (m-1).
   • rho champ_base (15.1) for inheritance: Density (kg.m-3).
   • cp champ_base (15.1) for inheritance: Specific heat (J.kg-1.K-1).
   • lambda champ_base (15.1) for inheritance: Conductivity (W.m-1.K-1).
20.4
       fluide_quasi_compressible
Description: Compressible flow at low mach number.
See also: fluide_incompressible (20.2)
Usage:
fluide_quasi_compressible obj Lire obj {
     [ sutherland bloc_sutherland]
     [ pression float]
     [loi_etat loi_etat_base]
     [traitement_pth str into ['edo', 'constant', 'conservation_masse']]
     [traitement_rho_gravite str into ['standard', 'moins_rho_moyen']]
     [temps_debut_prise_en_compte_drho_dt float]
```

[omega_relaxation_drho_dt float]

```
[ mu champ_base]
[ indice champ_base]
[ kappa champ_base]
[ rho champ_base]
[ cp champ_base]
[ lambda champ_base]
}
where
```

- sutherland bloc_sutherland (20.5): Sutherland law for viscosity and for conductivity.
- pression *float*: Initial pression.
- loi_etat loi_etat_base (17): State law.
- **traitement_pth** *str into ['edo', 'constant', 'conservation_masse']*: Particular treatment for the thermodynamic pressure Pth; there are three possibilities:
 - 1) with the keyword 'edo' the code computes Pth solving an O.D.E.; in this case, the mass is not strictly conserved (it is the default case for quasi compressible computation):
 - 2) the keyword 'conservation_masse' forces the conservation of the mass (closed geometry or with periodic boundaries condition)
 - 3) the keyword 'constant' makes it possible to have a constant Pth; it's the good choice when the flow is open (e.g. with pressure boundary conditions).
- **traitement_rho_gravite** *str into* ['standard', 'moins_rho_moyen']: It may be :1) standard: the gravity term is evaluated with rho*g (It is the default). 2) moins_rho_moyen: the gravity term is evaluated with (rho-rhomoy) *g.
- **temps_debut_prise_en_compte_drho_dt** *float*: While time<value, dRho/dt is set to zero (Rho, volumic mass). Useful for some calculation during the first time steps with big variation of temperature and volumic mass.
- omega_relaxation_drho_dt *float*: Optional option to have a relaxed algorithm to solve the mass equation. value is used (1 per default) to specify omega.
- mu champ_base (15.1) for inheritance: Dynamic viscosity (kg.m-1.s-1).
- indice champ_base (15.1) for inheritance: Refractivity of fluid.
- **kappa** *champ_base* (15.1) for inheritance: Absorptivity of fluid (m-1).
- **rho** *champ_base* (15.1) for inheritance: Density (kg.m-3).
- **cp** *champ_base* (15.1) for inheritance: Specific heat (J.kg-1.K-1).
- lambda champ_base (15.1) for inheritance: Conductivity (W.m-1.K-1).

20.5 bloc_sutherland

Description: Sutherland law for viscosity mu(T)=mu0*((T0+C)/(T+C))*(T/T0)**1.5 and (optional) for conductivity lambda(T)=mu0*Cp/Prandtl*((T0+Slambda)/(T+Slambda))*(T/T0)**1.5

```
See also: objet_lecture (32)

Usage:

m mu0 t t0 [ms][s] mc c

where

• m str into ['mu0']

• mu0 float

• t str into ['T0']

• t0 float

• ms str into ['Slambda']

• s float

• mc str into ['C']

• c float
```

```
20.6 solide
```

} where

```
Description: Solid.
See also: milieu_base (20)
Usage:
solide obj Lire obj {
     [ rho champ_base]
     [ cp champ_base]
     [lambda champ base]
}
where
   • rho champ_base (15.1) for inheritance: Density (kg.m-3).
   • cp champ_base (15.1) for inheritance: Specific heat (J.kg-1.K-1).
   • lambda champ_base (15.1) for inheritance: Conductivity (W.m-1.K-1).
20.7
       solide_milieu_variable
Description: Solid with cp and/or rho non-uniform.
See also: milieu_base (20)
Usage:
solide_milieu_variable obj Lire obj {
     [ rho champ_base]
     [cp champ_base]
     [lambda champ_base]
}
where
   • rho champ_base (15.1) for inheritance: Density (kg.m-3).
   • cp champ_base (15.1) for inheritance: Specific heat (J.kg-1.K-1).
   • lambda champ_base (15.1) for inheritance: Conductivity (W.m-1.K-1).
21
      modele_turbulence_scal_base
Description: Basic class for turbulence model for energy equation.
See also: objet_u (33) prandtl (21.1) schmidt (21.2)
Usage:
modele_turbulence_scal_base obj Lire obj {
     [turbulence_paroi turbulence_paroi_scalaire_base]
     [ dt_impr_nusselt float]
```

• turbulence_paroi_turbulence_paroi_scalaire_base (30): Keyword to set the wall law.

• **dt_impr_nusselt** *float*: Keyword to print local values of Nusselt number and temperature near a wall during a turbulent calculation. The values will be printed in the _Nusselt.face file each dt_impr_nusselt time period. The local Nusselt expression is as follows: Nu = ((lambda+lambda_t)/lambda)*d_wall/d_eq where d_wall is the distance from the first mesh to the wall and d_eq is given by the wall law. This option also gives the value of d_eq and h = (lambda+lambda_t)/d_eq and the fluid temperature of the first mesh near the wall.

For the Neumann boundary conditions (flux_impose), the «equivalent» wall temperature given by the wall law is also printed (Tparoi equiv.) preceded for VEF calculation by the edge temperature «T face de bord».

21.1 prandtl

Description: The Prandtl model. For the scalar equations, only the model based on Reynolds analogy is available. If K_Epsilon was selected in the hydraulic equation, Prandtl must be selected for the convection-diffusion temperature equation coupled to the hydraulic equation and Schmidt for the concentration equations.

```
See also: modele_turbulence_scal_base (21)

Usage:
prandtl obj Lire obj {
      [ prdt str]
      [ prandt_turbulent_fonction_nu_t_alpha str]
      [ turbulence_paroi turbulence_paroi_scalaire_base]
      [ dt_impr_nusselt float]
}
```

- **prdt** *str*: Keyword to modify the constant (Prdt) of Prandtl model : Alphat=Nut/Prdt Default value is 0.9
- **prandt_turbulent_fonction_nu_t_alpha** *str*: Optional keyword to specify turbulent diffusivity (by default, alpha_t=nu_t/Prt) with another formulae, for example: alpha_t=nu_t2/(0,7*alpha+0,85*nu_t) with the string nu_t*nu_t/(0,7*alpha+0,85*nu_t) where alpha is the thermal diffusivity.
- **turbulence_paroi** *turbulence_paroi_scalaire_base* (30) for inheritance: Keyword to set the wall law.
- **dt_impr_nusselt** *float* for inheritance: Keyword to print local values of Nusselt number and temperature near a wall during a turbulent calculation. The values will be printed in the _Nusselt.face file each dt_impr_nusselt time period. The local Nusselt expression is as follows: Nu = ((lambda+lambda_t)/lambda)*d_wall/d_eq where d_wall is the distance from the first mesh to the wall and d_eq is given by the wall law. This option also gives the value of d_eq and h = (lambda+lambda_t)/d_eq and the fluid temperature of the first mesh near the wall.

For the Neumann boundary conditions (flux_impose), the «equivalent» wall temperature given by the wall law is also printed (Tparoi equiv.) preceded for VEF calculation by the edge temperature «T face de bord».

21.2 schmidt

Description: The Schmidt model. For the scalar equations, only the model based on Reynolds analogy is available. If K_Epsilon was selected in the hydraulic equation, Prandtl must be selected for the convection-diffusion temperature equation coupled to the hydraulic equation and Schmidt for the concentration equations.

```
See also: modele_turbulence_scal_base (21)

Usage:
schmidt obj Lire obj {
    [scturb float]
    [turbulence_paroi turbulence_paroi_scalaire_base]
    [dt_impr_nusselt float]
}
where
```

- scturb float: Keyword to modify the constant (Sct) of Schmlidt model: Dt=Nut/Sct Default value is 0.7.
- **turbulence_paroi** *turbulence_paroi_scalaire_base* (30) for inheritance: Keyword to set the wall law.
- **dt_impr_nusselt** *float* for inheritance: Keyword to print local values of Nusselt number and temperature near a wall during a turbulent calculation. The values will be printed in the _Nusselt.face file each dt_impr_nusselt time period. The local Nusselt expression is as follows: Nu = ((lambda+lambda_t)/lambda)*d_wall/d_eq where d_wall is the distance from the first mesh to the wall and d_eq is given by the wall law. This option also gives the value of d_eq and h = (lambda+lambda_t)/d_eq and the fluid temperature of the first mesh near the wall.

For the Neumann boundary conditions (flux_impose), the «equivalent» wall temperature given by the wall law is also printed (Tparoi equiv.) preceded for VEF calculation by the edge temperature «T face de bord».

22 nom

```
Description: Class to name the TRUST objects.
```

```
See also: objet_u (33) nom_anonyme (22.1)

Usage:
nom [ mot ]
where
```

• mot str: Chain of characters.

22.1 nom_anonyme

```
Description: not_set

See also: nom (22)

Usage:
[ mot ]
where
```

• mot str: Chain of characters.

23 partitionneur_deriv

```
Description: not_set

See also: objet_u (33) metis (23.2) sous_zones (23.4) tranche (23.5) partition (23.3) fichier_decoupage (23.1)

Usage: partitionneur_deriv obj Lire obj {
      [nb_parts int]
}
where
```

• **nb_parts** *int*: The number of non empty parts that must be generated (generally equal to the number of processors in the parallel run).

23.1 fichier_decoupage

Description: This algorithm reads an array of integer values on the disc, one value for each mesh element. Each value is interpreted as the target part number n>=0 for this element. The number of parts created is the highest value in the array plus one. Empty parts can be created if some values are not present in the array.

The file format is ASCII, and contains space, tab or carriage-return separated integer values. The first value is the number nb_elem of elements in the domain, followed by nb_elem integer values (positive or zero). This algorithm has been designed to work together with the 'ecrire_decoupage' option. You can generate a partition with any other algorithm, write it to disc, modify it, and read it again to generate the .Zone files. Contrary to other partitioning algorithms, no correction is applied by default to the partition (eg. element 0 on processor 0 and corrections for periodic boundaries). If 'corriger_partition' is specified, these corrections are applied.

```
See also: partitionneur_deriv (23)

Usage:
fichier_decoupage obj Lire obj {
    fichier str
       [corriger_partition]
       [nb_parts int]

}
where
```

- fichier str: FILENAME
- corriger_partition
- **nb_parts** *int* for inheritance: The number of non empty parts that must be generated (generally equal to the number of processors in the parallel run).

23.2 metis

Description: Metis is an external partitionning library. It is a general algorithm that will generate a partition of the domain.

```
See also: partitionneur_deriv (23)

Usage:
metis obj Lire obj {

    [kmetis]
    [use_weights]
    [nb_parts int]

}

where
```

- **kmetis**: The default values are pmetis, default parameters are automatically chosen by Metis. 'kmetis' is faster than pmetis option but the last option produces better partitioning quality. In both cases, the partitioning quality may be slightly improved by increasing the nb_essais option (by default N=1). It will compute N partitions and will keep the best one (smallest edge cut number). But this option is CPU expensive, taking N=10 will multiply the CPU cost of partitioning by 10. Experiments show that only marginal improvements can be obtained with non default parameters.
- use_weights: If use_weights is specified, weighting of the element-element links in the graph is used to force metis to keep opposite periodic elements on the same processor. This option can slightly improve the partitionning quality but it consumes more memory and takes more time. It is not mandatory since a correction algorithm is always applied afterwards to ensure a correct partitionning for periodic boundaries.
- **nb_parts** *int* for inheritance: The number of non empty parts that must be generated (generally equal to the number of processors in the parallel run).

23.3 partition

Synonymous: decouper

Description: This algorithm re-use the partition of the domain named DOMAINE_NAME. It is useful to partition for example a post processing domain. The partition should match with the calculation domain.

```
See also: partitionneur_deriv (23)

Usage:
partition obj Lire obj {
    domaine str
    [nb_parts int]
}
where
```

- domaine str: domain name
- **nb_parts** *int* for inheritance: The number of non empty parts that must be generated (generally equal to the number of processors in the parallel run).

23.4 sous zones

Description: This algorithm will create one part for each specified subzone. All elements contained in the first subzone are put in the first part, all remaining elements contained in the second subzone in the second part, etc...

If all elements of the domain are contained in the specified subzones, then N parts are created, otherwise, a

supplemental part is created with the remaining elements.

If no subzone is specified, all subzones defined in the domain are used to split the mesh.

```
See also: partitionneur_deriv (23)

Usage:
sous_zones obj Lire obj {

sous_zones n word1 word2 ... wordn
[nb_parts int]
}
where
```

- sous_zones n word1 word2 ... wordn: N SUBZONE_NAME_1 SUBZONE_NAME_2 ...
- **nb_parts** *int* for inheritance: The number of non empty parts that must be generated (generally equal to the number of processors in the parallel run).

23.5 tranche

Description: This algorithm will create a geometrical partitionning by slicing the mesh in the two or three axis directions, based on the geometric center of each mesh element. nz must be given if dimension=3. Each slice contains the same number of elements (slices don't have the same geometrical width, and for VDF meshes, slice boundaries are generally not flat except if the number of mesh elements in each direction is an exact multiple of the number of slices). First, nx slices in the X direction are created, then each slice is split in ny slices in the Y direction, and finally, each part is split in nz slices in the Z direction. The resulting number of parts is nx*ny*nz. If one particular direction has been declared periodic, the default slicing (0, 1, 2, ..., n-1) is replaced by (0, 1, 2, ... n-1, 0), each of the two '0' slices having twice less elements than the other slices.

```
See also: partitionneur_deriv (23)

Usage:
tranche obj Lire obj {

[tranches n1 n2 (n3)]

[nb_parts int]
}
where
```

- **tranches** *n1 n2 (n3)*: Partitioned by nx in the X direction, ny in the Y direction, nz in the Z direction. Works only for structured meshes. No warranty for unstructured meshes.
- **nb_parts** *int* for inheritance: The number of non empty parts that must be generated (generally equal to the number of processors in the parallel run).

24 precond base

```
Description: Basic class for preconditioning.

See also: objet_u (33) ssor (24.2) ssor_bloc (24.3) precondsolv (24.1)

Usage:
```

```
24.1 precondsolv
```

```
Description: not_set
See also: precond_base (24)
Usage:
precondsolv solveur
where
   • solveur_sys_base (9.12): Solver type.
24.2 ssor
Description: Symmetric successive over-relaxation algorithm.
See also: precond_base (24)
Usage:
ssor obj Lire obj {
     omega float
}
where
   • omega float: Over-relaxation facteur (between 1 and 2, optimal value around 1.5-1.6).
24.3 ssor_bloc
Description: not_set
See also: precond_base (24)
Usage:
ssor_bloc obj Lire obj {
     [ alpha_0 float]
     [ precond0 precond_base]
     [ alpha_1 float]
     [ precond1 precond_base]
     [ alpha_a float]
     [ preconda precond_base]
}
where
   • alpha_0 float
   • precond0 precond_base (24)
   • alpha_1 float
   • precond1 precond_base (24)
   • alpha_a float
   • preconda precond_base (24)
```

25 schema_temps_base

schema_temps_base obj Lire obj {

[disable_progress] [disable_dt_ev]

} where

Description: Basic class for time schemes. This scheme will be associated with a problem and the equations of this problem.

See also: objet_u (33) scheme_euler_explicit (25.3) schema_predictor_corrector (25.16) Sch_CN_iteratif (25.2) runge_kutta_ordre_3 (25.5) runge_kutta_ordre_4_d3p (25.6) leap_frog (25.4) runge_kutta_rationnel_ordre_2 (25.7) schema_implicite_base (25.15) schema_adams_bashforth_order_2 (25.8) schema_adams_bashforth_order_3 (25.9)

Usage:

```
[tinit float]
[tmax float]
[tcpumax float]
[ dt_min float]
[ dt_max float]
[ dt_sauv float]
[ dt_impr float]
[ facsec float]
[ seuil_statio float]
[ seuil_statio_relatif_deconseille int]
[ diffusion_implicite int]
[ seuil_diffusion_implicite float]
[impr diffusion implicite int]
[ no error if not converged diffusion implicite int]
[ no conv subiteration diffusion implicite int]
[ dt_start dt_start]
[ nb pas dt max int]
[ niter max diffusion implicite int]
[ precision impr int]
[ periode sauvegarde securite en heures int]
[ no_check_disk_space ]
```

- **tinit** *float*: Value of initial calculation time (0 by default).
- tmax *float*: Time during which the calculation will be stopped (1e30s by default).
- **tcpumax** *float*: CPU time limit (must be specified in hours) for which the calculation is stopped (1e30s by default).
- **dt_min** *float*: Minimum calculation time step (1e-16s by default).
- dt max float: Maximum calculation time step (1e30s by default).
- **dt_sauv** *float*: Save time step value (1e30s by default). Every dt_sauv, fields are saved in the .sauv file. The file contains all the information saved over time. If this instruction is not entered, results are saved only upon calculation completion. To disable the writing of the .sauv files, you must specify 0.
- **dt_impr** *float*: Scheme parameter printing time step in time (1e30s by default). The time steps and the flux balances are printed (incorporated onto every side of processed domains) into the .out file.
- **facsec** *float*: Value assigned to the safety factor for the time step (1. by default). The time step calculated is multiplied by the safety factor. The first thing to try when a calculation does not converge with an explicit time scheme is to reduce the facsec to 0.5.

- Warning: Some schemes needs a facsec lower than 1 (0.5 is a good start), for example Schema_Adams_Bashforth_order_3.
- seuil_statio float: Value of the convergence threshold (1e-12 by default). Problems using this type of time scheme converge when the derivatives dGi/dt of all the unknown transported values Gi have a combined absolute value less than this value. This is the keyword used to set the permanent rating threshold.
- seuil_statio_relatif_deconseille int
- **diffusion_implicite** *int*: Keyword to make the diffusive term in the Navier-Stokes equations implicit (in this case, vrel should be set to 1). The stability time step is then only based on the convection time step (dt=facsec*dt_convection). Thus, in some circumstances, an important gain is achieved with respect to the time step (large diffusion with respect to convection on tightened meshes). Caution: It is however recommended that the user avoids exceeding the convection time step by selecting a too large facsec value. Start with a facsec value of 1 and then increase this gradually if you wish to accelerate calculation. In addition, for a natural convection calculation with a zero initial velocity, in the first time step, the convection time is infinite and therefore dt=facsec*dt_max.
- **seuil_diffusion_implicite** *float*: This keyword changes the default value (1e-6) of convergency criteria for the resolution by conjugate gradient used for implicit diffusion.
- **impr_diffusion_implicite** *int*: Unactivate (default) or not the printing of the convergence during the resolution of the conjugate gradient.
- no_error_if_not_converged_diffusion_implicite int
- no_conv_subiteration_diffusion_implicite int
- **dt_start** *dt_start* (9.5): dt_start dt_min: the first iteration is based on dt_min. dt_start dt_calc: the time step at first iteration is calculated in agreement with CFL condition. dt_start dt_fixe value: the first time step is fixed by the user (recommended when resuming calculation with Crank Nicholson temporal scheme to ensure continuity). By default, the first iteration is based on dt_calc.
- **nb_pas_dt_max** *int*: Maximum number of calculation time steps (1e9 by default).
- **niter_max_diffusion_implicite** *int*: This keyword changes the default value (number of unknowns) of the maximal iterations number in the conjugate gradient method used for implicit diffusion.
- **precision_impr** *int*: Optional keyword to define the digit number for flux values printed into .out files (by default 3).
- **periode_sauvegarde_securite_en_heures** *int*: To change the default period (23 hours) between the save of the fields in .sauv file.
- no_check_disk_space: To disable the check of the available amount of disk space during the calculation.
- disable_progress: To disable the writing of the .progress file.
- **disable_dt_ev**: To disable the writing of the .dt_ev file.

25.1 Sch_CN_EX_iteratif

Description: This keyword also describes a Crank-Nicholson method of second order accuracy but here, for scalars, because of instablities encountered when dt>dt_CFL, the Crank Nicholson scheme is not applied to scalar quantities. Scalars are treated according to Euler-Explicite scheme at the end of the CN treatment for velocity flow fields (by doing p Euler explicite under-iterations at dt<=dt_CFL). Parameters are the sames (but default values may change) compare to the Sch_CN_iterative scheme plus a relaxation keyword: niter_min (2 by default), niter_max (6 by default), niter_avg (3 by default), facsec_max (20 by default), seuil (0.05 by default)

```
See also: Sch_CN_iteratif (25.2)

Usage:
Sch_CN_EX_iteratif obj Lire obj {

[ omega float]
```

```
[ niter_min int]
     [ niter_max int]
     [ niter avg int]
     [facsec_max float]
     [ seuil float]
     [tinit float]
     [tmax float]
     [tcpumax float]
     [ dt_min float]
     [ dt_max float]
     [ dt sauv float]
     [ dt_impr float]
     [facsec float]
     [ seuil_statio float]
     [ seuil_statio_relatif_deconseille int]
     [ diffusion_implicite int]
     [ seuil_diffusion_implicite float]
     [ impr_diffusion_implicite int]
     [ no_error_if_not_converged_diffusion_implicite int]
     [ no conv subiteration diffusion implicite int]
     [ dt_start dt_start]
     [ nb pas dt max int]
     [ niter_max_diffusion_implicite int]
     [ precision_impr int]
     [ periode sauvegarde securite en heures int]
     [ no check disk space ]
     [disable progress]
     [disable dt ev ]
where
```

- omega *float*: relaxation factor (0.1 by default)
- **niter_min** *int* for inheritance: minimal number of p-iterations to satisfy convergence criteria (2 by default)
- **niter_max** *int* for inheritance: number of maximum p-iterations allowed to satisfy convergence criteria (6 by default)
- **niter_avg** *int* for inheritance: threshold of p-iterations (3 by default). If the number of p-iterations is greater than niter_avg, facsec is reduced, if lesser than niter_avg, facsec is increased (but limited by the facsec max value).
- **facsec_max** *float* for inheritance: maximum ratio allowed between dynamical time step returned by iterative process and stability time returned by CFL condition (2 by default).
- seuil *float* for inheritance: criteria for ending iterative process (Max(|| u(p) u(p-1)||/Max || u(p) ||) < seuil) (0.001 by default)
- **tinit** *float* for inheritance: Value of initial calculation time (0 by default).
- tmax *float* for inheritance: Time during which the calculation will be stopped (1e30s by default).
- **tcpumax** *float* for inheritance: CPU time limit (must be specified in hours) for which the calculation is stopped (1e30s by default).
- **dt_min** *float* for inheritance: Minimum calculation time step (1e-16s by default).
- **dt_max** *float* for inheritance: Maximum calculation time step (1e30s by default).
- **dt_sauv** *float* for inheritance: Save time step value (1e30s by default). Every dt_sauv, fields are saved in the .sauv file. The file contains all the information saved over time. If this instruction is not entered, results are saved only upon calculation completion. To disable the writing of the .sauv files, you must specify 0.

- **dt_impr** *float* for inheritance: Scheme parameter printing time step in time (1e30s by default). The time steps and the flux balances are printed (incorporated onto every side of processed domains) into the .out file.
- **facsec** *float* for inheritance: Value assigned to the safety factor for the time step (1. by default). The time step calculated is multiplied by the safety factor. The first thing to try when a calculation does not converge with an explicit time scheme is to reduce the facsec to 0.5.
 - Warning: Some schemes needs a facsec lower than 1 (0.5 is a good start), for example Schema-Adams Bashforth order 3.
- **seuil_statio** *float* for inheritance: Value of the convergence threshold (1e-12 by default). Problems using this type of time scheme converge when the derivatives dGi/dt of all the unknown transported values Gi have a combined absolute value less than this value. This is the keyword used to set the permanent rating threshold.
- seuil_statio_relatif_deconseille int for inheritance
- diffusion_implicite int for inheritance: Keyword to make the diffusive term in the Navier-Stokes equations implicit (in this case, vrel should be set to 1). The stability time step is then only based on the convection time step (dt=facsec*dt_convection). Thus, in some circumstances, an important gain is achieved with respect to the time step (large diffusion with respect to convection on tightened meshes). Caution: It is however recommended that the user avoids exceeding the convection time step by selecting a too large facsec value. Start with a facsec value of 1 and then increase this gradually if you wish to accelerate calculation. In addition, for a natural convection calculation with a zero initial velocity, in the first time step, the convection time is infinite and therefore dt=facsec*dt-max.
- **seuil_diffusion_implicite** *float* for inheritance: This keyword changes the default value (1e-6) of convergency criteria for the resolution by conjugate gradient used for implicit diffusion.
- **impr_diffusion_implicite** *int* for inheritance: Unactivate (default) or not the printing of the convergence during the resolution of the conjugate gradient.
- no_error_if_not_converged_diffusion_implicite int for inheritance
- no_conv_subiteration_diffusion_implicite int for inheritance
- **dt_start** *dt_start* (9.5) for inheritance: dt_start dt_min: the first iteration is based on dt_min. dt_start dt_calc: the time step at first iteration is calculated in agreement with CFL condition. dt_start dt_fixe value: the first time step is fixed by the user (recommended when resuming calculation with Crank Nicholson temporal scheme to ensure continuity). By default, the first iteration is based on dt_calc.
- nb_pas_dt_max int for inheritance: Maximum number of calculation time steps (1e9 by default).
- **niter_max_diffusion_implicite** *int* for inheritance: This keyword changes the default value (number of unknowns) of the maximal iterations number in the conjugate gradient method used for implicit diffusion.
- **precision_impr** *int* for inheritance: Optional keyword to define the digit number for flux values printed into .out files (by default 3).
- **periode_sauvegarde_securite_en_heures** *int* for inheritance: To change the default period (23 hours) between the save of the fields in .sauv file.
- no_check_disk_space for inheritance: To disable the check of the available amount of disk space during the calculation.
- **disable_progress** for inheritance: To disable the writing of the .progress file.
- disable dt ev for inheritance: To disable the writing of the .dt ev file.

25.2 Sch CN iteratif

Description: The Crank-Nicholson method of second order accuracy. A mid-point rule formulation is used (Euler-centered scheme). The basic scheme is:

$$u(t+1) = u(t) + du/dt(t+1/2) * dt$$

The estimation of the time derivative du/dt at the level (t+1/2) is obtained either by iterative process. The time derivative du/dt at the level (t+1/2) is calculated iteratively with a simple under-relaxations method. Since the method is implicit, neither the cfl nor the fourier stability criteria must be respected. The time step is calculated in a way that the iterative procedure converges with the less iterations as possible.

Remark: for stationary or RANS calculations, no limitation can be given for time step through high value of facsec_max parameter (for instance: facsec_max 1000). In counterpart, for LES calculations, high values of facsec max may engender numerical instabilities.

```
See also: schema temps base (25) Sch CN EX iteratif (25.1)
Usage:
Sch_CN_iteratif obj Lire obj {
     [ niter min int]
     [ niter_max int]
      [ niter_avg int]
     [ facsec_max float]
     [seuil float]
     [tinit float]
     [tmax float]
     [tcpumax float]
     [ dt_min float]
     [ dt_max float]
     [ dt_sauv float]
     [dt impr float]
     [facsec float]
      [ seuil_statio float]
      [ seuil_statio_relatif_deconseille int]
      [ diffusion_implicite int]
     [ seuil_diffusion_implicite float]
      [impr diffusion implicite int]
     [ no_error_if_not_converged_diffusion_implicite int]
     [ no_conv_subiteration_diffusion_implicite int]
      [ dt_start dt_start]
      [ nb_pas_dt_max int]
     [ niter max diffusion implicite int]
     [ precision impr int]
      [periode_sauvegarde_securite_en_heures int]
     [ no_check_disk_space ]
     [ disable_progress ]
     [ disable_dt_ev ]
}
```

where

- niter_min int: minimal number of p-iterations to satisfy convergence criteria (2 by default)
- **niter_max** *int*: number of maximum p-iterations allowed to satisfy convergence criteria (6 by default)
- **niter_avg** *int*: threshold of p-iterations (3 by default). If the number of p-iterations is greater than niter_avg, facsec is reduced, if lesser than niter_avg, facsec is increased (but limited by the facsec_max value).
- **facsec_max** *float*: maximum ratio allowed between dynamical time step returned by iterative process and stability time returned by CFL condition (2 by default).
- seuil *float*: criteria for ending iterative process (Max($\| u(p) u(p-1)\|$ /Max $\| u(p) \|$) < seuil) (0.001 by default)

- **tinit** *float* for inheritance: Value of initial calculation time (0 by default).
- tmax *float* for inheritance: Time during which the calculation will be stopped (1e30s by default).
- **tcpumax** *float* for inheritance: CPU time limit (must be specified in hours) for which the calculation is stopped (1e30s by default).
- dt_min *float* for inheritance: Minimum calculation time step (1e-16s by default).
- dt_max float for inheritance: Maximum calculation time step (1e30s by default).
- **dt_sauv** *float* for inheritance: Save time step value (1e30s by default). Every dt_sauv, fields are saved in the .sauv file. The file contains all the information saved over time. If this instruction is not entered, results are saved only upon calculation completion. To disable the writing of the .sauv files, you must specify 0.
- **dt_impr** *float* for inheritance: Scheme parameter printing time step in time (1e30s by default). The time steps and the flux balances are printed (incorporated onto every side of processed domains) into the .out file.
- **facsec** *float* for inheritance: Value assigned to the safety factor for the time step (1. by default). The time step calculated is multiplied by the safety factor. The first thing to try when a calculation does not converge with an explicit time scheme is to reduce the facsec to 0.5.
 - Warning: Some schemes needs a facsec lower than 1 (0.5 is a good start), for example Schema_Adams_Bashforth_order_3.
- **seuil_statio** *float* for inheritance: Value of the convergence threshold (1e-12 by default). Problems using this type of time scheme converge when the derivatives dGi/dt of all the unknown transported values Gi have a combined absolute value less than this value. This is the keyword used to set the permanent rating threshold.
- seuil_statio_relatif_deconseille int for inheritance
- **diffusion_implicite** *int* for inheritance: Keyword to make the diffusive term in the Navier-Stokes equations implicit (in this case, vrel should be set to 1). The stability time step is then only based on the convection time step (dt=facsec*dt_convection). Thus, in some circumstances, an important gain is achieved with respect to the time step (large diffusion with respect to convection on tightened meshes). Caution: It is however recommended that the user avoids exceeding the convection time step by selecting a too large facsec value. Start with a facsec value of 1 and then increase this gradually if you wish to accelerate calculation. In addition, for a natural convection calculation with a zero initial velocity, in the first time step, the convection time is infinite and therefore dt=facsec*dt_max.
- **seuil_diffusion_implicite** *float* for inheritance: This keyword changes the default value (1e-6) of convergency criteria for the resolution by conjugate gradient used for implicit diffusion.
- **impr_diffusion_implicite** *int* for inheritance: Unactivate (default) or not the printing of the convergence during the resolution of the conjugate gradient.
- no error if not converged diffusion implicite int for inheritance
- no_conv_subiteration_diffusion_implicite int for inheritance
- **dt_start** *dt_start* (9.5) for inheritance: dt_start dt_min: the first iteration is based on dt_min. dt_start dt_calc: the time step at first iteration is calculated in agreement with CFL condition. dt_start dt_fixe value: the first time step is fixed by the user (recommended when resuming calculation with Crank Nicholson temporal scheme to ensure continuity). By default, the first iteration is based on dt_calc.
- **nb_pas_dt_max** *int* for inheritance: Maximum number of calculation time steps (1e9 by default).
- **niter_max_diffusion_implicite** *int* for inheritance: This keyword changes the default value (number of unknowns) of the maximal iterations number in the conjugate gradient method used for implicit diffusion.
- **precision_impr** *int* for inheritance: Optional keyword to define the digit number for flux values printed into .out files (by default 3).
- **periode_sauvegarde_securite_en_heures** *int* for inheritance: To change the default period (23 hours) between the save of the fields in .sauv file.
- **no_check_disk_space** for inheritance: To disable the check of the available amount of disk space during the calculation.
- **disable progress** for inheritance: To disable the writing of the .progress file.

• disable_dt_ev for inheritance: To disable the writing of the .dt_ev file.

25.3 scheme_euler_explicit

```
Synonymous: schema_euler_explicite
Description: This is the Euler explicit scheme.
See also: schema_temps_base (25)
Usage:
scheme euler explicit obj Lire obj {
     [tinit float]
     [tmax float]
     [tcpumax float]
     [ dt_min float]
     [ dt_max float]
     [ dt_sauv float]
      [ dt_impr float]
     [facsec float]
     [ seuil_statio float]
     [ seuil_statio_relatif_deconseille int]
     [ diffusion_implicite int]
     [ seuil diffusion implicite float]
     [impr diffusion implicite int]
     [ no error if not converged diffusion implicite int]
     [ no conv subiteration diffusion implicite int]
     [ dt_start dt_start]
     [ nb_pas_dt_max int]
     [ niter max diffusion implicite int]
     [ precision_impr int]
     [ periode_sauvegarde_securite_en_heures int]
     [ no_check_disk_space ]
     [ disable_progress ]
     [ disable_dt_ev ]
}
where
```

- **tinit** *float* for inheritance: Value of initial calculation time (0 by default).
- tmax float for inheritance: Time during which the calculation will be stopped (1e30s by default).
- **tcpumax** *float* for inheritance: CPU time limit (must be specified in hours) for which the calculation is stopped (1e30s by default).
- dt min float for inheritance: Minimum calculation time step (1e-16s by default).
- **dt_max** *float* for inheritance: Maximum calculation time step (1e30s by default).
- **dt_sauv** *float* for inheritance: Save time step value (1e30s by default). Every dt_sauv, fields are saved in the .sauv file. The file contains all the information saved over time. If this instruction is not entered, results are saved only upon calculation completion. To disable the writing of the .sauv files, you must specify 0.
- **dt_impr** *float* for inheritance: Scheme parameter printing time step in time (1e30s by default). The time steps and the flux balances are printed (incorporated onto every side of processed domains) into the .out file.

- **facsec** *float* for inheritance: Value assigned to the safety factor for the time step (1. by default). The time step calculated is multiplied by the safety factor. The first thing to try when a calculation does not converge with an explicit time scheme is to reduce the facsec to 0.5.
 - Warning: Some schemes needs a facsec lower than 1 (0.5 is a good start), for example Schema_Adams_Bashforth_order_3.
- **seuil_statio** *float* for inheritance: Value of the convergence threshold (1e-12 by default). Problems using this type of time scheme converge when the derivatives dGi/dt of all the unknown transported values Gi have a combined absolute value less than this value. This is the keyword used to set the permanent rating threshold.
- seuil statio relatif deconseille int for inheritance
- diffusion_implicite int for inheritance: Keyword to make the diffusive term in the Navier-Stokes equations implicit (in this case, vrel should be set to 1). The stability time step is then only based on the convection time step (dt=facsec*dt_convection). Thus, in some circumstances, an important gain is achieved with respect to the time step (large diffusion with respect to convection on tightened meshes). Caution: It is however recommended that the user avoids exceeding the convection time step by selecting a too large facsec value. Start with a facsec value of 1 and then increase this gradually if you wish to accelerate calculation. In addition, for a natural convection calculation with a zero initial velocity, in the first time step, the convection time is infinite and therefore dt=facsec*dt-max
- **seuil_diffusion_implicite** *float* for inheritance: This keyword changes the default value (1e-6) of convergency criteria for the resolution by conjugate gradient used for implicit diffusion.
- **impr_diffusion_implicite** *int* for inheritance: Unactivate (default) or not the printing of the convergence during the resolution of the conjugate gradient.
- no_error_if_not_converged_diffusion_implicite int for inheritance
- no conv subiteration diffusion implicite int for inheritance
- **dt_start** *dt_start* (9.5) for inheritance: dt_start dt_min: the first iteration is based on dt_min. dt_start dt_calc: the time step at first iteration is calculated in agreement with CFL condition. dt_start dt_fixe value: the first time step is fixed by the user (recommended when resuming calculation with Crank Nicholson temporal scheme to ensure continuity). By default, the first iteration is based on dt_calc.
- nb_pas_dt_max int for inheritance: Maximum number of calculation time steps (1e9 by default).
- niter_max_diffusion_implicite int for inheritance: This keyword changes the default value (number of unknowns) of the maximal iterations number in the conjugate gradient method used for implicit diffusion.
- **precision_impr** *int* for inheritance: Optional keyword to define the digit number for flux values printed into .out files (by default 3).
- **periode_sauvegarde_securite_en_heures** *int* for inheritance: To change the default period (23 hours) between the save of the fields in .sauv file.
- no_check_disk_space for inheritance: To disable the check of the available amount of disk space during the calculation.
- **disable_progress** for inheritance: To disable the writing of the .progress file.
- **disable_dt_ev** for inheritance: To disable the writing of the .dt_ev file.

25.4 leap_frog

Description: This is the leap-frog scheme.

See also: schema_temps_base (25)

Usage:
leap_frog obj Lire obj {
 [tinit float]

```
[tmax float]
     [tcpumax float]
     [ dt min float]
     [ dt_max float]
     [ dt_sauv float]
     [ dt_impr float]
     [facsec float]
     [ seuil statio float]
     [ seuil statio relatif deconseille int]
     [ diffusion implicite int]
     [ seuil diffusion implicite float]
     [impr diffusion implicite int]
     [ no_error_if_not_converged_diffusion_implicite int]
     [ no_conv_subiteration_diffusion_implicite int]
     [ dt_start dt_start]
     [ nb_pas_dt_max int]
     [ niter_max_diffusion_implicite int]
     [ precision_impr int]
     [ periode_sauvegarde_securite_en_heures int]
     [ no check disk space ]
     [ disable_progress ]
     [disable dt ev ]
}
```

- where
 - **tinit** *float* for inheritance: Value of initial calculation time (0 by default).
 - tmax *float* for inheritance: Time during which the calculation will be stopped (1e30s by default).
 - **tcpumax** *float* for inheritance: CPU time limit (must be specified in hours) for which the calculation is stopped (1e30s by default).
 - **dt_min** *float* for inheritance: Minimum calculation time step (1e-16s by default).
 - **dt_max** *float* for inheritance: Maximum calculation time step (1e30s by default).
 - **dt_sauv** *float* for inheritance: Save time step value (1e30s by default). Every dt_sauv, fields are saved in the .sauv file. The file contains all the information saved over time. If this instruction is not entered, results are saved only upon calculation completion. To disable the writing of the .sauv files, you must specify 0.
 - **dt_impr** *float* for inheritance: Scheme parameter printing time step in time (1e30s by default). The time steps and the flux balances are printed (incorporated onto every side of processed domains) into the .out file.
 - **facsec** *float* for inheritance: Value assigned to the safety factor for the time step (1. by default). The time step calculated is multiplied by the safety factor. The first thing to try when a calculation does not converge with an explicit time scheme is to reduce the facsec to 0.5.
 - Warning: Some schemes needs a facsec lower than 1 (0.5 is a good start), for example Schema_Adams_Bashforth_order_3.
 - **seuil_statio** *float* for inheritance: Value of the convergence threshold (1e-12 by default). Problems using this type of time scheme converge when the derivatives dGi/dt of all the unknown transported values Gi have a combined absolute value less than this value. This is the keyword used to set the permanent rating threshold.
 - seuil_statio_relatif_deconseille int for inheritance
 - **diffusion_implicite** *int* for inheritance: Keyword to make the diffusive term in the Navier-Stokes equations implicit (in this case, vrel should be set to 1). The stability time step is then only based on the convection time step (dt=facsec*dt_convection). Thus, in some circumstances, an important gain is achieved with respect to the time step (large diffusion with respect to convection on tightened meshes). Caution: It is however recommended that the user avoids exceeding the convection time step by selecting a too large facsec value. Start with a facsec value of 1 and then increase this

gradually if you wish to accelerate calculation. In addition, for a natural convection calculation with a zero initial velocity, in the first time step, the convection time is infinite and therefore dt=facsec*dt-max.

- seuil_diffusion_implicite *float* for inheritance: This keyword changes the default value (1e-6) of convergency criteria for the resolution by conjugate gradient used for implicit diffusion.
- **impr_diffusion_implicite** *int* for inheritance: Unactivate (default) or not the printing of the convergence during the resolution of the conjugate gradient.
- no error if not converged diffusion implicite int for inheritance
- no_conv_subiteration_diffusion_implicite int for inheritance
- **dt_start** *dt_start* (9.5) for inheritance: dt_start dt_min: the first iteration is based on dt_min. dt_start dt_calc: the time step at first iteration is calculated in agreement with CFL condition. dt_start dt_fixe value: the first time step is fixed by the user (recommended when resuming calculation with Crank Nicholson temporal scheme to ensure continuity). By default, the first iteration is based on dt_calc.
- nb_pas_dt_max int for inheritance: Maximum number of calculation time steps (1e9 by default).
- **niter_max_diffusion_implicite** *int* for inheritance: This keyword changes the default value (number of unknowns) of the maximal iterations number in the conjugate gradient method used for implicit diffusion.
- **precision_impr** *int* for inheritance: Optional keyword to define the digit number for flux values printed into .out files (by default 3).
- **periode_sauvegarde_securite_en_heures** *int* for inheritance: To change the default period (23 hours) between the save of the fields in .sauv file.
- **no_check_disk_space** for inheritance: To disable the check of the available amount of disk space during the calculation.
- **disable progress** for inheritance: To disable the writing of the .progress file.
- disable dt ev for inheritance: To disable the writing of the .dt ev file.

25.5 runge kutta ordre 3

[nb_pas_dt_max int]

Description: This is the Runge-Kutta scheme of third order.

```
See also: schema_temps_base (25)
Usage:
runge_kutta_ordre_3 obj Lire obj {
     [tinit float]
     [tmax float]
     [tcpumax float]
     [ dt_min float]
     [ dt max float]
     [ dt_sauv float]
     [dt impr float]
     [ facsec float]
     [ seuil statio float]
     [ seuil statio relatif deconseille int]
     [ diffusion implicite int]
     [ seuil diffusion implicite float]
     [impr diffusion implicite int]
     [ no_error_if_not_converged_diffusion_implicite int]
     [ no_conv_subiteration_diffusion_implicite int]
     [ dt_start dt_start]
```

```
[ niter_max_diffusion_implicite int]
  [ precision_impr int]
  [ periode_sauvegarde_securite_en_heures int]
  [ no_check_disk_space ]
  [ disable_progress ]
  [ disable_dt_ev ]
}
where
```

- **tinit** *float* for inheritance: Value of initial calculation time (0 by default).
- tmax *float* for inheritance: Time during which the calculation will be stopped (1e30s by default).
- **tcpumax** *float* for inheritance: CPU time limit (must be specified in hours) for which the calculation is stopped (1e30s by default).
- **dt_min** *float* for inheritance: Minimum calculation time step (1e-16s by default).
- **dt_max** *float* for inheritance: Maximum calculation time step (1e30s by default).
- **dt_sauv** *float* for inheritance: Save time step value (1e30s by default). Every dt_sauv, fields are saved in the .sauv file. The file contains all the information saved over time. If this instruction is not entered, results are saved only upon calculation completion. To disable the writing of the .sauv files, you must specify 0.
- **dt_impr** *float* for inheritance: Scheme parameter printing time step in time (1e30s by default). The time steps and the flux balances are printed (incorporated onto every side of processed domains) into the .out file.
- **facsec** *float* for inheritance: Value assigned to the safety factor for the time step (1. by default). The time step calculated is multiplied by the safety factor. The first thing to try when a calculation does not converge with an explicit time scheme is to reduce the facsec to 0.5.
 - Warning: Some schemes needs a facsec lower than 1 (0.5 is a good start), for example Schema_Adams_Bashforth_order_3.
- **seuil_statio** *float* for inheritance: Value of the convergence threshold (1e-12 by default). Problems using this type of time scheme converge when the derivatives dGi/dt of all the unknown transported values Gi have a combined absolute value less than this value. This is the keyword used to set the permanent rating threshold.
- seuil_statio_relatif_deconseille int for inheritance
- **diffusion_implicite** *int* for inheritance: Keyword to make the diffusive term in the Navier-Stokes equations implicit (in this case, vrel should be set to 1). The stability time step is then only based on the convection time step (dt=facsec*dt_convection). Thus, in some circumstances, an important gain is achieved with respect to the time step (large diffusion with respect to convection on tightened meshes). Caution: It is however recommended that the user avoids exceeding the convection time step by selecting a too large facsec value. Start with a facsec value of 1 and then increase this gradually if you wish to accelerate calculation. In addition, for a natural convection calculation with a zero initial velocity, in the first time step, the convection time is infinite and therefore dt=facsec*dt-max.
- **seuil_diffusion_implicite** *float* for inheritance: This keyword changes the default value (1e-6) of convergency criteria for the resolution by conjugate gradient used for implicit diffusion.
- **impr_diffusion_implicite** *int* for inheritance: Unactivate (default) or not the printing of the convergence during the resolution of the conjugate gradient.
- no_error_if_not_converged_diffusion_implicite int for inheritance
- no_conv_subiteration_diffusion_implicite int for inheritance
- **dt_start** *dt_start* (9.5) for inheritance: dt_start dt_min: the first iteration is based on dt_min. dt_start dt_calc: the time step at first iteration is calculated in agreement with CFL condition. dt_start dt_fixe value: the first time step is fixed by the user (recommended when resuming calculation with Crank Nicholson temporal scheme to ensure continuity). By default, the first iteration is based on dt_calc.
- nb_pas_dt_max int for inheritance: Maximum number of calculation time steps (1e9 by default).

- **niter_max_diffusion_implicite** *int* for inheritance: This keyword changes the default value (number of unknowns) of the maximal iterations number in the conjugate gradient method used for implicit diffusion.
- **precision_impr** *int* for inheritance: Optional keyword to define the digit number for flux values printed into .out files (by default 3).
- **periode_sauvegarde_securite_en_heures** *int* for inheritance: To change the default period (23 hours) between the save of the fields in .sauv file.
- no_check_disk_space for inheritance: To disable the check of the available amount of disk space during the calculation.
- disable_progress for inheritance: To disable the writing of the .progress file.
- **disable_dt_ev** for inheritance: To disable the writing of the .dt_ev file.

25.6 runge_kutta_ordre_4_d3p

where

```
Description: not_set
See also: schema temps base (25)
Usage:
runge_kutta_ordre_4_d3p obj Lire obj {
     [tinit float]
     [tmax float]
     [tcpumax float]
     [ dt_min float]
     [ dt max float]
     [ dt sauv float]
     [ dt_impr float]
     [ facsec float]
     [ seuil_statio float]
     [ seuil statio relatif deconseille int]
      [ diffusion_implicite int]
     [ seuil_diffusion_implicite float]
     [ impr_diffusion_implicite int]
      [ no_error_if_not_converged_diffusion_implicite int]
     [ no_conv_subiteration_diffusion_implicite int]
     [ dt start dt start]
     [ nb_pas_dt_max int]
      [ niter_max_diffusion_implicite int]
     [ precision_impr int]
     [ periode_sauvegarde_securite_en_heures int]
     [ no_check_disk_space ]
     [ disable_progress ]
     [ disable_dt_ev ]
}
```

- **tinit** *float* for inheritance: Value of initial calculation time (0 by default).
- tmax float for inheritance: Time during which the calculation will be stopped (1e30s by default).
- **tcpumax** *float* for inheritance: CPU time limit (must be specified in hours) for which the calculation is stopped (1e30s by default).
- **dt_min** *float* for inheritance: Minimum calculation time step (1e-16s by default).
- **dt_max** *float* for inheritance: Maximum calculation time step (1e30s by default).

- **dt_sauv** *float* for inheritance: Save time step value (1e30s by default). Every dt_sauv, fields are saved in the .sauv file. The file contains all the information saved over time. If this instruction is not entered, results are saved only upon calculation completion. To disable the writing of the .sauv files, you must specify 0.
- **dt_impr** *float* for inheritance: Scheme parameter printing time step in time (1e30s by default). The time steps and the flux balances are printed (incorporated onto every side of processed domains) into the out file.
- **facsec** *float* for inheritance: Value assigned to the safety factor for the time step (1. by default). The time step calculated is multiplied by the safety factor. The first thing to try when a calculation does not converge with an explicit time scheme is to reduce the facsec to 0.5.
 - Warning: Some schemes needs a facsec lower than 1 (0.5 is a good start), for example Schema_Adams_Bashforth_order_3.
- **seuil_statio** *float* for inheritance: Value of the convergence threshold (1e-12 by default). Problems using this type of time scheme converge when the derivatives dGi/dt of all the unknown transported values Gi have a combined absolute value less than this value. This is the keyword used to set the permanent rating threshold.
- seuil_statio_relatif_deconseille int for inheritance
- **diffusion_implicite** *int* for inheritance: Keyword to make the diffusive term in the Navier-Stokes equations implicit (in this case, vrel should be set to 1). The stability time step is then only based on the convection time step (dt=facsec*dt_convection). Thus, in some circumstances, an important gain is achieved with respect to the time step (large diffusion with respect to convection on tightened meshes). Caution: It is however recommended that the user avoids exceeding the convection time step by selecting a too large facsec value. Start with a facsec value of 1 and then increase this gradually if you wish to accelerate calculation. In addition, for a natural convection calculation with a zero initial velocity, in the first time step, the convection time is infinite and therefore dt=facsec*dt-max.
- **seuil_diffusion_implicite** *float* for inheritance: This keyword changes the default value (1e-6) of convergency criteria for the resolution by conjugate gradient used for implicit diffusion.
- **impr_diffusion_implicite** *int* for inheritance: Unactivate (default) or not the printing of the convergence during the resolution of the conjugate gradient.
- no_error_if_not_converged_diffusion_implicite int for inheritance
- no_conv_subiteration_diffusion_implicite int for inheritance
- **dt_start** *dt_start* (9.5) for inheritance: dt_start dt_min: the first iteration is based on dt_min. dt_start dt_calc: the time step at first iteration is calculated in agreement with CFL condition. dt_start dt_fixe value: the first time step is fixed by the user (recommended when resuming calculation with Crank Nicholson temporal scheme to ensure continuity). By default, the first iteration is based on dt_calc.
- **nb pas dt max** int for inheritance: Maximum number of calculation time steps (1e9 by default).
- **niter_max_diffusion_implicite** *int* for inheritance: This keyword changes the default value (number of unknowns) of the maximal iterations number in the conjugate gradient method used for implicit diffusion.
- **precision_impr** *int* for inheritance: Optional keyword to define the digit number for flux values printed into .out files (by default 3).
- **periode_sauvegarde_securite_en_heures** *int* for inheritance: To change the default period (23 hours) between the save of the fields in .sauv file.
- **no_check_disk_space** for inheritance: To disable the check of the available amount of disk space during the calculation.
- disable_progress for inheritance: To disable the writing of the .progress file.
- disable_dt_ev for inheritance: To disable the writing of the .dt_ev file.

25.7 runge_kutta_rationnel_ordre_2

Description: This is the Runge-Kutta rational scheme of second order. The method is described in the note: Wambeck - Rational Runge-Kutta methods for solving systems of ordinary differential equations, at the link: https://link.springer.com/article/10.1007/BF02252381. Although rational methods require more computational work than linear ones, they can have some other properties, such as a stable behaviour with explicitness, which make them preferable. The CFD application of this RRK2 scheme is described in the note: https://link.springer.com/content/pdf/10.1007%2F3-540-13917-6 112.pdf.

```
See also: schema_temps_base (25)
Usage:
runge_kutta_rationnel_ordre_2 obj Lire obj {
     [tinit float]
     [tmax float]
      [tcpumax float]
     [ dt_min float]
     [ dt_max float]
     [ dt_sauv float]
      [ dt_impr float]
     [facsec float]
     [ seuil statio float]
     [ seuil_statio_relatif_deconseille int]
      [ diffusion implicite int]
     [ seuil diffusion implicite float]
     [impr diffusion implicite int]
     [ no error if not converged diffusion implicite int]
     [ no conv subiteration diffusion implicite int]
     [ dt_start dt_start]
     [ nb_pas_dt_max int]
      [ niter_max_diffusion_implicite int]
      [ precision_impr int]
      [ periode_sauvegarde_securite_en_heures int]
     [ no_check_disk_space ]
     [ disable_progress ]
     [ disable_dt_ev ]
}
```

where

- **tinit** *float* for inheritance: Value of initial calculation time (0 by default).
- tmax *float* for inheritance: Time during which the calculation will be stopped (1e30s by default).
- **tcpumax** *float* for inheritance: CPU time limit (must be specified in hours) for which the calculation is stopped (1e30s by default).
- **dt_min** *float* for inheritance: Minimum calculation time step (1e-16s by default).
- dt max *float* for inheritance: Maximum calculation time step (1e30s by default).
- **dt_sauv** *float* for inheritance: Save time step value (1e30s by default). Every dt_sauv, fields are saved in the .sauv file. The file contains all the information saved over time. If this instruction is not entered, results are saved only upon calculation completion. To disable the writing of the .sauv files, you must specify 0.
- **dt_impr** *float* for inheritance: Scheme parameter printing time step in time (1e30s by default). The time steps and the flux balances are printed (incorporated onto every side of processed domains) into the .out file.
- **facsec** *float* for inheritance: Value assigned to the safety factor for the time step (1. by default). The time step calculated is multiplied by the safety factor. The first thing to try when a calculation does

not converge with an explicit time scheme is to reduce the facsec to 0.5.

Warning: Some schemes needs a facsec lower than 1 (0.5 is a good start), for example Schema_Adams_Bashforth_order_3.

- **seuil_statio** *float* for inheritance: Value of the convergence threshold (1e-12 by default). Problems using this type of time scheme converge when the derivatives dGi/dt of all the unknown transported values Gi have a combined absolute value less than this value. This is the keyword used to set the permanent rating threshold.
- seuil statio relatif deconseille int for inheritance
- diffusion_implicite int for inheritance: Keyword to make the diffusive term in the Navier-Stokes equations implicit (in this case, vrel should be set to 1). The stability time step is then only based on the convection time step (dt=facsec*dt_convection). Thus, in some circumstances, an important gain is achieved with respect to the time step (large diffusion with respect to convection on tightened meshes). Caution: It is however recommended that the user avoids exceeding the convection time step by selecting a too large facsec value. Start with a facsec value of 1 and then increase this gradually if you wish to accelerate calculation. In addition, for a natural convection calculation with a zero initial velocity, in the first time step, the convection time is infinite and therefore dt=facsec*dt-max.
- **seuil_diffusion_implicite** *float* for inheritance: This keyword changes the default value (1e-6) of convergency criteria for the resolution by conjugate gradient used for implicit diffusion.
- **impr_diffusion_implicite** *int* for inheritance: Unactivate (default) or not the printing of the convergence during the resolution of the conjugate gradient.
- no_error_if_not_converged_diffusion_implicite int for inheritance
- no_conv_subiteration_diffusion_implicite int for inheritance
- **dt_start** *dt_start* (9.5) for inheritance: dt_start dt_min: the first iteration is based on dt_min. dt_start dt_calc: the time step at first iteration is calculated in agreement with CFL condition. dt_start dt_fixe value: the first time step is fixed by the user (recommended when resuming calculation with Crank Nicholson temporal scheme to ensure continuity). By default, the first iteration is based on dt_calc.
- nb_pas_dt_max int for inheritance: Maximum number of calculation time steps (1e9 by default).
- **niter_max_diffusion_implicite** *int* for inheritance: This keyword changes the default value (number of unknowns) of the maximal iterations number in the conjugate gradient method used for implicit diffusion.
- **precision_impr** *int* for inheritance: Optional keyword to define the digit number for flux values printed into .out files (by default 3).
- **periode_sauvegarde_securite_en_heures** *int* for inheritance: To change the default period (23 hours) between the save of the fields in .sauv file.
- no_check_disk_space for inheritance: To disable the check of the available amount of disk space during the calculation.
- **disable_progress** for inheritance: To disable the writing of the .progress file.
- **disable_dt_ev** for inheritance: To disable the writing of the .dt_ev file.

25.8 schema_adams_bashforth_order_2

```
Description: not_set

See also: schema_temps_base (25)

Usage:
schema_adams_bashforth_order_2 obj Lire obj {

    [tinit float]
    [tmax float]
    [tcpumax float]
```

```
[ dt_min float]
     [ dt_max float]
     [dt sauv float]
     [ dt_impr float]
     [facsec float]
     [ seuil_statio float]
     [ seuil statio relatif deconseille int]
     [ diffusion implicite int]
      [ seuil diffusion implicite float]
     [impr diffusion implicite int]
     [ no error if not converged diffusion implicite int]
     [ \ \textbf{no\_conv\_subiteration\_diffusion\_implicite} \quad int]
     [ dt_start dt_start]
     [ nb_pas_dt_max int]
     [ niter_max_diffusion_implicite int]
      [ precision_impr int]
     [ periode_sauvegarde_securite_en_heures int]
     [ no_check_disk_space ]
     [ disable_progress ]
     [disable dt ev ]
}
where
```

- **tinit** *float* for inheritance: Value of initial calculation time (0 by default).
- tmax *float* for inheritance: Time during which the calculation will be stopped (1e30s by default).
- **tcpumax** *float* for inheritance: CPU time limit (must be specified in hours) for which the calculation is stopped (1e30s by default).
- **dt_min** *float* for inheritance: Minimum calculation time step (1e-16s by default).
- dt_max float for inheritance: Maximum calculation time step (1e30s by default).
- **dt_sauv** *float* for inheritance: Save time step value (1e30s by default). Every dt_sauv, fields are saved in the .sauv file. The file contains all the information saved over time. If this instruction is not entered, results are saved only upon calculation completion. To disable the writing of the .sauv files, you must specify 0.
- **dt_impr** *float* for inheritance: Scheme parameter printing time step in time (1e30s by default). The time steps and the flux balances are printed (incorporated onto every side of processed domains) into the .out file.
- **facsec** *float* for inheritance: Value assigned to the safety factor for the time step (1. by default). The time step calculated is multiplied by the safety factor. The first thing to try when a calculation does not converge with an explicit time scheme is to reduce the facsec to 0.5.
 - Warning: Some schemes needs a facsec lower than 1 (0.5 is a good start), for example Schema_Adams_Bashforth_order_3.
- seuil_statio float for inheritance: Value of the convergence threshold (1e-12 by default). Problems using this type of time scheme converge when the derivatives dGi/dt of all the unknown transported values Gi have a combined absolute value less than this value. This is the keyword used to set the permanent rating threshold.
- seuil_statio_relatif_deconseille int for inheritance
- **diffusion_implicite** *int* for inheritance: Keyword to make the diffusive term in the Navier-Stokes equations implicit (in this case, vrel should be set to 1). The stability time step is then only based on the convection time step (dt=facsec*dt_convection). Thus, in some circumstances, an important gain is achieved with respect to the time step (large diffusion with respect to convection on tightened meshes). Caution: It is however recommended that the user avoids exceeding the convection time step by selecting a too large facsec value. Start with a facsec value of 1 and then increase this gradually if you wish to accelerate calculation. In addition, for a natural convection calculation with

a zero initial velocity, in the first time step, the convection time is infinite and therefore dt=facsec*dt-max.

- **seuil_diffusion_implicite** *float* for inheritance: This keyword changes the default value (1e-6) of convergency criteria for the resolution by conjugate gradient used for implicit diffusion.
- **impr_diffusion_implicite** *int* for inheritance: Unactivate (default) or not the printing of the convergence during the resolution of the conjugate gradient.
- no_error_if_not_converged_diffusion_implicite int for inheritance
- no conv subiteration diffusion implicite int for inheritance
- **dt_start** *dt_start* (9.5) for inheritance: dt_start dt_min: the first iteration is based on dt_min. dt_start dt_calc: the time step at first iteration is calculated in agreement with CFL condition. dt_start dt_fixe value: the first time step is fixed by the user (recommended when resuming calculation with Crank Nicholson temporal scheme to ensure continuity). By default, the first iteration is based on dt_calc.
- nb_pas_dt_max int for inheritance: Maximum number of calculation time steps (1e9 by default).
- **niter_max_diffusion_implicite** *int* for inheritance: This keyword changes the default value (number of unknowns) of the maximal iterations number in the conjugate gradient method used for implicit diffusion.
- **precision_impr** *int* for inheritance: Optional keyword to define the digit number for flux values printed into .out files (by default 3).
- **periode_sauvegarde_securite_en_heures** *int* for inheritance: To change the default period (23 hours) between the save of the fields in .sauv file.
- no_check_disk_space for inheritance: To disable the check of the available amount of disk space during the calculation.
- disable_progress for inheritance: To disable the writing of the .progress file.
- disable dt ev for inheritance: To disable the writing of the .dt ev file.

25.9 schema_adams_bashforth_order_3

```
Description: not set
See also: schema_temps_base (25)
Usage:
schema adams bashforth order 3 obj Lire obj {
     [tinit float]
     [tmax float]
     [tcpumax float]
     [ dt_min float]
     [ dt_max float]
     [ dt sauv float]
     [ dt_impr float]
     [facsec float]
     [ seuil statio float]
     [ seuil statio relatif deconseille int]
     [ diffusion implicite int]
     [ seuil_diffusion_implicite float]
     [impr diffusion implicite int]
     [ no error if not converged diffusion implicite int]
     [ no_conv_subiteration_diffusion_implicite int]
     [ dt_start dt_start]
     [ nb_pas_dt_max int]
     [ niter_max_diffusion_implicite int]
```

```
[ precision_impr int]
  [ periode_sauvegarde_securite_en_heures int]
  [ no_check_disk_space ]
  [ disable_progress ]
  [ disable_dt_ev ]
}
where
```

- **tinit** *float* for inheritance: Value of initial calculation time (0 by default).
- tmax *float* for inheritance: Time during which the calculation will be stopped (1e30s by default).
- **tcpumax** *float* for inheritance: CPU time limit (must be specified in hours) for which the calculation is stopped (1e30s by default).
- **dt_min** *float* for inheritance: Minimum calculation time step (1e-16s by default).
- **dt_max** *float* for inheritance: Maximum calculation time step (1e30s by default).
- **dt_sauv** *float* for inheritance: Save time step value (1e30s by default). Every dt_sauv, fields are saved in the .sauv file. The file contains all the information saved over time. If this instruction is not entered, results are saved only upon calculation completion. To disable the writing of the .sauv files, you must specify 0.
- **dt_impr** *float* for inheritance: Scheme parameter printing time step in time (1e30s by default). The time steps and the flux balances are printed (incorporated onto every side of processed domains) into the .out file.
- **facsec** *float* for inheritance: Value assigned to the safety factor for the time step (1. by default). The time step calculated is multiplied by the safety factor. The first thing to try when a calculation does not converge with an explicit time scheme is to reduce the facsec to 0.5.
 - Warning: Some schemes needs a facsec lower than 1 (0.5 is a good start), for example Schema-Adams Bashforth order 3.
- **seuil_statio** *float* for inheritance: Value of the convergence threshold (1e-12 by default). Problems using this type of time scheme converge when the derivatives dGi/dt of all the unknown transported values Gi have a combined absolute value less than this value. This is the keyword used to set the permanent rating threshold.
- seuil_statio_relatif_deconseille int for inheritance
- **diffusion_implicite** *int* for inheritance: Keyword to make the diffusive term in the Navier-Stokes equations implicit (in this case, vrel should be set to 1). The stability time step is then only based on the convection time step (dt=facsec*dt_convection). Thus, in some circumstances, an important gain is achieved with respect to the time step (large diffusion with respect to convection on tightened meshes). Caution: It is however recommended that the user avoids exceeding the convection time step by selecting a too large facsec value. Start with a facsec value of 1 and then increase this gradually if you wish to accelerate calculation. In addition, for a natural convection calculation with a zero initial velocity, in the first time step, the convection time is infinite and therefore dt=facsec*dt_max.
- **seuil_diffusion_implicite** *float* for inheritance: This keyword changes the default value (1e-6) of convergency criteria for the resolution by conjugate gradient used for implicit diffusion.
- **impr_diffusion_implicite** *int* for inheritance: Unactivate (default) or not the printing of the convergence during the resolution of the conjugate gradient.
- no error if not converged diffusion implicite int for inheritance
- **no_conv_subiteration_diffusion_implicite** *int* for inheritance
- **dt_start** *dt_start* (9.5) for inheritance: dt_start dt_min: the first iteration is based on dt_min. dt_start dt_calc: the time step at first iteration is calculated in agreement with CFL condition. dt_start dt_fixe value: the first time step is fixed by the user (recommended when resuming calculation with Crank Nicholson temporal scheme to ensure continuity). By default, the first iteration is based on dt_calc.
- nb_pas_dt_max int for inheritance: Maximum number of calculation time steps (1e9 by default).
- niter_max_diffusion_implicite int for inheritance: This keyword changes the default value (number of unknowns) of the maximal iterations number in the conjugate gradient method used for im-

plicit diffusion.

- **precision_impr** *int* for inheritance: Optional keyword to define the digit number for flux values printed into .out files (by default 3).
- **periode_sauvegarde_securite_en_heures** *int* for inheritance: To change the default period (23 hours) between the save of the fields in .sauv file.
- **no_check_disk_space** for inheritance: To disable the check of the available amount of disk space during the calculation.
- disable progress for inheritance: To disable the writing of the .progress file.
- disable dt ev for inheritance: To disable the writing of the .dt ev file.

25.10 schema_adams_moulton_order_2

```
Description: not_set
See also: schema_implicite_base (25.15)
schema_adams_moulton_order_2 obj Lire obj {
     [facsec max float]
     [ max_iter_implicite int]
     solveur solveur_implicite_base
     [tinit float]
     [tmax float]
     [tcpumax float]
     [ dt min float]
     [ dt max float]
     [ dt_sauv float]
     [ dt_impr float]
     [facsec float]
     [ seuil statio float]
      [ seuil_statio_relatif_deconseille int]
     [ diffusion_implicite int]
     [ seuil_diffusion_implicite float]
      [ impr_diffusion_implicite int]
     [ no_error_if_not_converged_diffusion_implicite int]
     [ no conv subiteration diffusion implicite int]
     [ dt_start dt_start]
      [ nb_pas_dt_max int]
     [ niter_max_diffusion_implicite int]
     [ precision impr int]
     [ periode_sauvegarde_securite_en_heures int]
      [ no check disk space ]
     [ disable_progress ]
     [disable dt ev ]
}
where
```

• facsec_max float: Maximum ratio allowed between time step and stability time returned by CFL condition. The initial ratio given by facsec keyword is changed during the calculation with the implicit scheme but it couldn't be higher than facsec_max value.

Warning: Some implicit schemes do not permit high facsec_max, example Schema_Adams_Moulton_order_3 needs facsec=facsec_max=1.

Advice:

The calculation may start with a facsec specified by the user and increased by the algorithm up to the facsec_max limit. But the user can also choose to specify a constant facsec (facsec_max will be set to facsec value then). Faster convergence has been seen and depends on the kind of calculation:

- -Hydraulic only or thermal hydraulic with forced convection and low coupling between velocity and temperature (Boussinesq value beta low), facsec between 20-30
- -Thermal hydraulic with forced convection and strong coupling between velocity and temperature (Boussinesq value beta high), facsec between 90-100
- -Thermohydralic with natural convection, facsec around 300
- -Conduction only, facsec can be set to a very high value (1e8) as if the scheme was unconditionally stable

These values can also be used as rule of thumb for initial facsec with a facsec_max limit higher.

- max_iter_implicite int for inheritance: Maximum number of iterations allowed for the solver (by default 200).
- solveur solveur_implicite_base (26) for inheritance: This keyword is used to designate the solver selected in the situation where the time scheme is an implicit scheme. solver is the name of the solver that allows equation diffusion and convection operators to be set as implicit terms. Keywords corresponding to this functionality are Simple (SIMPLE type algorithm), Simpler (SIMPLER type algorithm) for incompressible systems, Piso (Pressure Implicit with Split Operator), and Implicite (similar to PISO, but as it looks like a simplified solver, it will use fewer timesteps. But it may run faster because the pressure matrix is not re-assembled and thus provides CPU gains.

- **tinit** *float* for inheritance: Value of initial calculation time (0 by default).
- tmax *float* for inheritance: Time during which the calculation will be stopped (1e30s by default).
- **tcpumax** *float* for inheritance: CPU time limit (must be specified in hours) for which the calculation is stopped (1e30s by default).
- **dt_min** *float* for inheritance: Minimum calculation time step (1e-16s by default).
- **dt_max** *float* for inheritance: Maximum calculation time step (1e30s by default).
- **dt_sauv** *float* for inheritance: Save time step value (1e30s by default). Every dt_sauv, fields are saved in the .sauv file. The file contains all the information saved over time. If this instruction is not entered, results are saved only upon calculation completion. To disable the writing of the .sauv files, you must specify 0.
- **dt_impr** *float* for inheritance: Scheme parameter printing time step in time (1e30s by default). The time steps and the flux balances are printed (incorporated onto every side of processed domains) into the .out file.
- **facsec** *float* for inheritance: Value assigned to the safety factor for the time step (1. by default). The time step calculated is multiplied by the safety factor. The first thing to try when a calculation does not converge with an explicit time scheme is to reduce the facsec to 0.5.
 - Warning: Some schemes needs a facsec lower than 1 (0.5 is a good start), for example Schema_Adams_Bashforth_order_3.
- **seuil_statio** *float* for inheritance: Value of the convergence threshold (1e-12 by default). Problems using this type of time scheme converge when the derivatives dGi/dt of all the unknown transported values Gi have a combined absolute value less than this value. This is the keyword used to set the permanent rating threshold.
- seuil statio relatif deconseille int for inheritance
- **diffusion_implicite** *int* for inheritance: Keyword to make the diffusive term in the Navier-Stokes equations implicit (in this case, vrel should be set to 1). The stability time step is then only based on the convection time step (dt=facsec*dt_convection). Thus, in some circumstances, an important gain is achieved with respect to the time step (large diffusion with respect to convection on tightened meshes). Caution: It is however recommended that the user avoids exceeding the convection time

step by selecting a too large facsec value. Start with a facsec value of 1 and then increase this gradually if you wish to accelerate calculation. In addition, for a natural convection calculation with a zero initial velocity, in the first time step, the convection time is infinite and therefore dt=facsec*dt_max.

- **seuil_diffusion_implicite** *float* for inheritance: This keyword changes the default value (1e-6) of convergency criteria for the resolution by conjugate gradient used for implicit diffusion.
- **impr_diffusion_implicite** *int* for inheritance: Unactivate (default) or not the printing of the convergence during the resolution of the conjugate gradient.
- no error if not converged diffusion implicite int for inheritance
- no conv subiteration diffusion implicite int for inheritance
- **dt_start** *dt_start* (9.5) for inheritance: dt_start dt_min: the first iteration is based on dt_min. dt_start dt_calc: the time step at first iteration is calculated in agreement with CFL condition. dt_start dt_fixe value: the first time step is fixed by the user (recommended when resuming calculation with Crank Nicholson temporal scheme to ensure continuity). By default, the first iteration is based on dt_calc.
- nb_pas_dt_max int for inheritance: Maximum number of calculation time steps (1e9 by default).
- **niter_max_diffusion_implicite** *int* for inheritance: This keyword changes the default value (number of unknowns) of the maximal iterations number in the conjugate gradient method used for implicit diffusion.
- **precision_impr** *int* for inheritance: Optional keyword to define the digit number for flux values printed into .out files (by default 3).
- **periode_sauvegarde_securite_en_heures** *int* for inheritance: To change the default period (23 hours) between the save of the fields in .sauv file.
- no_check_disk_space for inheritance: To disable the check of the available amount of disk space during the calculation.
- **disable progress** for inheritance: To disable the writing of the .progress file.
- **disable_dt_ev** for inheritance: To disable the writing of the .dt_ev file.

25.11 schema adams moulton order 3

```
Description: not set
See also: schema implicite base (25.15)
Usage:
schema adams moulton order 3 obj Lire obj {
     [ facsec_max float]
     [ max iter implicite int]
     solveur solveur_implicite_base
     [tinit float]
     [tmax float]
     [tcpumax float]
     [ dt_min float]
     [ dt max float]
     [ dt_sauv float]
     [ dt_impr float]
     [facsec float]
     [ seuil_statio float]
     [ seuil_statio_relatif_deconseille int]
     [ diffusion_implicite int]
     [ seuil_diffusion_implicite float]
     [ impr_diffusion_implicite int]
```

```
[ no_error_if_not_converged_diffusion_implicite int]
     [ no_conv_subiteration_diffusion_implicite int]
     [ dt_start dt_start]
     [ nb_pas_dt_max int]
     [ niter_max_diffusion_implicite int]
     [ precision_impr int]
     [ periode_sauvegarde_securite_en_heures int]
     [ no_check_disk_space ]
     [ disable_progress ]
     [ disable_dt_ev ]
}
where
```

• facsec_max float: Maximum ratio allowed between time step and stability time returned by CFL condition. The initial ratio given by facsec keyword is changed during the calculation with the implicit scheme but it couldn't be higher than facsec_max value.

Warning: Some implicit schemes do not permit high facsec_max, example Schema_Adams_Moulton_order_3 needs facsec=facsec_max=1.

Advice:

The calculation may start with a facsec specified by the user and increased by the algorithm up to the facsec_max limit. But the user can also choose to specify a constant facsec (facsec_max will be set to facsec value then). Faster convergence has been seen and depends on the kind of calculation:

- -Hydraulic only or thermal hydraulic with forced convection and low coupling between velocity and temperature (Boussinesq value beta low), facsec between 20-30
- -Thermal hydraulic with forced convection and strong coupling between velocity and temperature (Boussinesq value beta high), facsec between 90-100
- -Thermohydralic with natural convection, facsec around 300
- -Conduction only, facsec can be set to a very high value (1e8) as if the scheme was unconditionally stable

These values can also be used as rule of thumb for initial facsec with a facsec_max limit higher.

- max_iter_implicite int for inheritance: Maximum number of iterations allowed for the solver (by default 200).
- solveur solveur_implicite_base (26) for inheritance: This keyword is used to designate the solver selected in the situation where the time scheme is an implicit scheme. solver is the name of the solver that allows equation diffusion and convection operators to be set as implicit terms. Keywords corresponding to this functionality are Simple (SIMPLE type algorithm), Simpler (SIMPLER type algorithm) for incompressible systems, Piso (Pressure Implicit with Split Operator), and Implicite (similar to PISO, but as it looks like a simplified solver, it will use fewer timesteps. But it may run faster because the pressure matrix is not re-assembled and thus provides CPU gains.

- **tinit** *float* for inheritance: Value of initial calculation time (0 by default).
- tmax *float* for inheritance: Time during which the calculation will be stopped (1e30s by default).
- **tcpumax** *float* for inheritance: CPU time limit (must be specified in hours) for which the calculation is stopped (1e30s by default).
- dt_min float for inheritance: Minimum calculation time step (1e-16s by default).
- **dt_max** *float* for inheritance: Maximum calculation time step (1e30s by default).
- **dt_sauv** *float* for inheritance: Save time step value (1e30s by default). Every dt_sauv, fields are saved in the .sauv file. The file contains all the information saved over time. If this instruction is not entered, results are saved only upon calculation completion. To disable the writing of the .sauv files, you must specify 0.

- **dt_impr** *float* for inheritance: Scheme parameter printing time step in time (1e30s by default). The time steps and the flux balances are printed (incorporated onto every side of processed domains) into the .out file.
- **facsec** *float* for inheritance: Value assigned to the safety factor for the time step (1. by default). The time step calculated is multiplied by the safety factor. The first thing to try when a calculation does not converge with an explicit time scheme is to reduce the facsec to 0.5.
 - Warning: Some schemes needs a facsec lower than 1 (0.5 is a good start), for example Schema-Adams Bashforth order 3.
- seuil_statio float for inheritance: Value of the convergence threshold (1e-12 by default). Problems using this type of time scheme converge when the derivatives dGi/dt of all the unknown transported values Gi have a combined absolute value less than this value. This is the keyword used to set the permanent rating threshold.
- seuil_statio_relatif_deconseille int for inheritance
- **diffusion_implicite** *int* for inheritance: Keyword to make the diffusive term in the Navier-Stokes equations implicit (in this case, vrel should be set to 1). The stability time step is then only based on the convection time step (dt=facsec*dt_convection). Thus, in some circumstances, an important gain is achieved with respect to the time step (large diffusion with respect to convection on tightened meshes). Caution: It is however recommended that the user avoids exceeding the convection time step by selecting a too large facsec value. Start with a facsec value of 1 and then increase this gradually if you wish to accelerate calculation. In addition, for a natural convection calculation with a zero initial velocity, in the first time step, the convection time is infinite and therefore dt=facsec*dt-max.
- **seuil_diffusion_implicite** *float* for inheritance: This keyword changes the default value (1e-6) of convergency criteria for the resolution by conjugate gradient used for implicit diffusion.
- **impr_diffusion_implicite** *int* for inheritance: Unactivate (default) or not the printing of the convergence during the resolution of the conjugate gradient.
- no_error_if_not_converged_diffusion_implicite int for inheritance
- no_conv_subiteration_diffusion_implicite int for inheritance
- **dt_start** *dt_start* (9.5) for inheritance: dt_start dt_min: the first iteration is based on dt_min. dt_start dt_calc: the time step at first iteration is calculated in agreement with CFL condition. dt_start dt_fixe value: the first time step is fixed by the user (recommended when resuming calculation with Crank Nicholson temporal scheme to ensure continuity). By default, the first iteration is based on dt_calc.
- nb_pas_dt_max int for inheritance: Maximum number of calculation time steps (1e9 by default).
- **niter_max_diffusion_implicite** *int* for inheritance: This keyword changes the default value (number of unknowns) of the maximal iterations number in the conjugate gradient method used for implicit diffusion.
- **precision_impr** *int* for inheritance: Optional keyword to define the digit number for flux values printed into .out files (by default 3).
- **periode_sauvegarde_securite_en_heures** *int* for inheritance: To change the default period (23 hours) between the save of the fields in .sauv file.
- **no_check_disk_space** for inheritance: To disable the check of the available amount of disk space during the calculation.
- **disable_progress** for inheritance: To disable the writing of the .progress file.
- disable dt ev for inheritance: To disable the writing of the .dt ev file.

25.12 schema_backward_differentiation_order_2

Description: not_set

See also: schema_implicite_base (25.15)

Usage:

schema_backward_differentiation_order_2 obj Lire obj {

```
[facsec max float]
     [ max iter implicite int]
     solveur solveur implicite base
     [tinit float]
     [tmax float]
     [tcpumax float]
     [ dt_min float]
     [ dt max float]
     [ dt_sauv float]
      [ dt_impr float]
     [facsec float]
      [ seuil statio float]
      [ seuil_statio_relatif_deconseille int]
      [ diffusion implicite int]
     [ seuil_diffusion_implicite float]
     [impr_diffusion_implicite int]
     [ no error if not converged diffusion implicite int]
      [ no conv subiteration diffusion implicite int]
     [ dt start dt start]
     [ nb pas dt max int]
     [ niter_max_diffusion_implicite int]
     [ precision impr int]
      [ periode sauvegarde securite en heures int]
     [ no check disk space ]
      [ disable_progress ]
     [ disable_dt_ev ]
}
where
```

• facsec_max float: Maximum ratio allowed between time step and stability time returned by CFL condition. The initial ratio given by facsec keyword is changed during the calculation with the implicit scheme but it couldn't be higher than facsec_max value.

Warning: Some implicit schemes do not permit high facsec_max, example Schema_Adams_Moulton_order_3 needs facsec=facsec_max=1.

Advice:

The calculation may start with a facsec specified by the user and increased by the algorithm up to the facsec_max limit. But the user can also choose to specify a constant facsec (facsec_max will be set to facsec value then). Faster convergence has been seen and depends on the kind of calculation:

- -Hydraulic only or thermal hydraulic with forced convection and low coupling between velocity and temperature (Boussinesq value beta low), facsec between 20-30
- -Thermal hydraulic with forced convection and strong coupling between velocity and temperature (Boussinesq value beta high), facsec between 90-100
- -Thermohydralic with natural convection, facsec around 300
- -Conduction only, facsec can be set to a very high value (1e8) as if the scheme was unconditionally stable

These values can also be used as rule of thumb for initial facsec with a facsec_max limit higher.

- max_iter_implicite int for inheritance: Maximum number of iterations allowed for the solver (by default 200).
- **solveur** *solveur_implicite_base* (26) for inheritance: This keyword is used to designate the solver selected in the situation where the time scheme is an implicit scheme. solver is the name of the solver that allows equation diffusion and convection operators to be set as implicit terms. Keywords corresponding to this functionality are Simple (SIMPLE type algorithm), Simpler (SIMPLER type

algorithm) for incompressible systems, Piso (Pressure Implicit with Split Operator), and Implicite (similar to PISO, but as it looks like a simplified solver, it will use fewer timesteps. But it may run faster because the pressure matrix is not re-assembled and thus provides CPU gains.

- **tinit** *float* for inheritance: Value of initial calculation time (0 by default).
- tmax *float* for inheritance: Time during which the calculation will be stopped (1e30s by default).
- **tcpumax** *float* for inheritance: CPU time limit (must be specified in hours) for which the calculation is stopped (1e30s by default).
- **dt_min** *float* for inheritance: Minimum calculation time step (1e-16s by default).
- **dt_max** *float* for inheritance: Maximum calculation time step (1e30s by default).
- **dt_sauv** *float* for inheritance: Save time step value (1e30s by default). Every dt_sauv, fields are saved in the .sauv file. The file contains all the information saved over time. If this instruction is not entered, results are saved only upon calculation completion. To disable the writing of the .sauv files, you must specify 0.
- **dt_impr** *float* for inheritance: Scheme parameter printing time step in time (1e30s by default). The time steps and the flux balances are printed (incorporated onto every side of processed domains) into the out file.
- **facsec** *float* for inheritance: Value assigned to the safety factor for the time step (1. by default). The time step calculated is multiplied by the safety factor. The first thing to try when a calculation does not converge with an explicit time scheme is to reduce the facsec to 0.5.
 - Warning: Some schemes needs a facsec lower than 1 (0.5 is a good start), for example Schema-Adams Bashforth order 3.
- **seuil_statio** *float* for inheritance: Value of the convergence threshold (1e-12 by default). Problems using this type of time scheme converge when the derivatives dGi/dt of all the unknown transported values Gi have a combined absolute value less than this value. This is the keyword used to set the permanent rating threshold.
- seuil_statio_relatif_deconseille int for inheritance
- diffusion_implicite int for inheritance: Keyword to make the diffusive term in the Navier-Stokes equations implicit (in this case, vrel should be set to 1). The stability time step is then only based on the convection time step (dt=facsec*dt_convection). Thus, in some circumstances, an important gain is achieved with respect to the time step (large diffusion with respect to convection on tightened meshes). Caution: It is however recommended that the user avoids exceeding the convection time step by selecting a too large facsec value. Start with a facsec value of 1 and then increase this gradually if you wish to accelerate calculation. In addition, for a natural convection calculation with a zero initial velocity, in the first time step, the convection time is infinite and therefore dt=facsec*dt-max
- **seuil_diffusion_implicite** *float* for inheritance: This keyword changes the default value (1e-6) of convergency criteria for the resolution by conjugate gradient used for implicit diffusion.
- **impr_diffusion_implicite** *int* for inheritance: Unactivate (default) or not the printing of the convergence during the resolution of the conjugate gradient.
- no error if not converged diffusion implicite int for inheritance
- **no_conv_subiteration_diffusion_implicite** *int* for inheritance
- **dt_start** *dt_start* (9.5) for inheritance: dt_start dt_min: the first iteration is based on dt_min. dt_start dt_calc: the time step at first iteration is calculated in agreement with CFL condition. dt_start dt_fixe value: the first time step is fixed by the user (recommended when resuming calculation with Crank Nicholson temporal scheme to ensure continuity). By default, the first iteration is based on dt_calc.
- nb_pas_dt_max int for inheritance: Maximum number of calculation time steps (1e9 by default).
- **niter_max_diffusion_implicite** *int* for inheritance: This keyword changes the default value (number of unknowns) of the maximal iterations number in the conjugate gradient method used for im-

plicit diffusion.

where

- **precision_impr** *int* for inheritance: Optional keyword to define the digit number for flux values printed into .out files (by default 3).
- **periode_sauvegarde_securite_en_heures** *int* for inheritance: To change the default period (23 hours) between the save of the fields in .sauv file.
- **no_check_disk_space** for inheritance: To disable the check of the available amount of disk space during the calculation.
- disable progress for inheritance: To disable the writing of the .progress file.
- disable dt ev for inheritance: To disable the writing of the .dt ev file.

25.13 schema_backward_differentiation_order_3

```
Description: not_set
See also: schema_implicite_base (25.15)
schema_backward_differentiation_order_3 obj Lire obj {
     [facsec max float]
     [ max_iter_implicite int]
     solveur solveur_implicite_base
     [tinit float]
     [tmax float]
     [tcpumax float]
     [ dt min float]
     [ dt max float]
     [ dt_sauv float]
     [ dt_impr float]
     [facsec float]
     [ seuil statio float]
      [ seuil_statio_relatif_deconseille int]
      [ diffusion_implicite int]
     [ seuil_diffusion_implicite float]
      [ impr_diffusion_implicite int]
     [ no_error_if_not_converged_diffusion_implicite int]
     [ no conv subiteration diffusion implicite int]
     [ dt_start dt_start]
      [ nb_pas_dt_max int]
     [ niter_max_diffusion_implicite int]
     [ precision impr int]
     [ periode_sauvegarde_securite_en_heures int]
      [ no check disk space ]
     [ disable_progress ]
     [disable dt ev ]
}
```

• facsec_max float: Maximum ratio allowed between time step and stability time returned by CFL condition. The initial ratio given by facsec keyword is changed during the calculation with the implicit scheme but it couldn't be higher than facsec_max value.

Warning: Some implicit schemes do not permit high facsec_max, example Schema_Adams_Moulton_order_3 needs facsec=facsec_max=1.

Advice:

The calculation may start with a facsec specified by the user and increased by the algorithm up to the facsec_max limit. But the user can also choose to specify a constant facsec (facsec_max will be set to facsec value then). Faster convergence has been seen and depends on the kind of calculation:

- -Hydraulic only or thermal hydraulic with forced convection and low coupling between velocity and temperature (Boussinesq value beta low), facsec between 20-30
- -Thermal hydraulic with forced convection and strong coupling between velocity and temperature (Boussinesq value beta high), facsec between 90-100
- -Thermohydralic with natural convection, facsec around 300
- -Conduction only, facsec can be set to a very high value (1e8) as if the scheme was unconditionally stable

These values can also be used as rule of thumb for initial facsec with a facsec_max limit higher.

- max_iter_implicite int for inheritance: Maximum number of iterations allowed for the solver (by default 200).
- solveur solveur_implicite_base (26) for inheritance: This keyword is used to designate the solver selected in the situation where the time scheme is an implicit scheme. solver is the name of the solver that allows equation diffusion and convection operators to be set as implicit terms. Keywords corresponding to this functionality are Simple (SIMPLE type algorithm), Simpler (SIMPLER type algorithm) for incompressible systems, Piso (Pressure Implicit with Split Operator), and Implicite (similar to PISO, but as it looks like a simplified solver, it will use fewer timesteps. But it may run faster because the pressure matrix is not re-assembled and thus provides CPU gains.

- **tinit** *float* for inheritance: Value of initial calculation time (0 by default).
- tmax *float* for inheritance: Time during which the calculation will be stopped (1e30s by default).
- **tcpumax** *float* for inheritance: CPU time limit (must be specified in hours) for which the calculation is stopped (1e30s by default).
- **dt_min** *float* for inheritance: Minimum calculation time step (1e-16s by default).
- **dt_max** *float* for inheritance: Maximum calculation time step (1e30s by default).
- **dt_sauv** *float* for inheritance: Save time step value (1e30s by default). Every dt_sauv, fields are saved in the .sauv file. The file contains all the information saved over time. If this instruction is not entered, results are saved only upon calculation completion. To disable the writing of the .sauv files, you must specify 0.
- **dt_impr** *float* for inheritance: Scheme parameter printing time step in time (1e30s by default). The time steps and the flux balances are printed (incorporated onto every side of processed domains) into the .out file.
- **facsec** *float* for inheritance: Value assigned to the safety factor for the time step (1. by default). The time step calculated is multiplied by the safety factor. The first thing to try when a calculation does not converge with an explicit time scheme is to reduce the facsec to 0.5.
 - Warning: Some schemes needs a facsec lower than 1 (0.5 is a good start), for example Schema_Adams_Bashforth_order_3.
- **seuil_statio** *float* for inheritance: Value of the convergence threshold (1e-12 by default). Problems using this type of time scheme converge when the derivatives dGi/dt of all the unknown transported values Gi have a combined absolute value less than this value. This is the keyword used to set the permanent rating threshold.
- seuil_statio_relatif_deconseille int for inheritance
- **diffusion_implicite** *int* for inheritance: Keyword to make the diffusive term in the Navier-Stokes equations implicit (in this case, vrel should be set to 1). The stability time step is then only based on the convection time step (dt=facsec*dt_convection). Thus, in some circumstances, an important gain is achieved with respect to the time step (large diffusion with respect to convection on tightened meshes). Caution: It is however recommended that the user avoids exceeding the convection time

step by selecting a too large facsec value. Start with a facsec value of 1 and then increase this gradually if you wish to accelerate calculation. In addition, for a natural convection calculation with a zero initial velocity, in the first time step, the convection time is infinite and therefore dt=facsec*dt_max.

- **seuil_diffusion_implicite** *float* for inheritance: This keyword changes the default value (1e-6) of convergency criteria for the resolution by conjugate gradient used for implicit diffusion.
- **impr_diffusion_implicite** *int* for inheritance: Unactivate (default) or not the printing of the convergence during the resolution of the conjugate gradient.
- no_error_if_not_converged_diffusion_implicite int for inheritance
- no conv subiteration diffusion implicite int for inheritance
- **dt_start** *dt_start* (9.5) for inheritance: dt_start dt_min: the first iteration is based on dt_min. dt_start dt_calc: the time step at first iteration is calculated in agreement with CFL condition. dt_start dt_fixe value: the first time step is fixed by the user (recommended when resuming calculation with Crank Nicholson temporal scheme to ensure continuity). By default, the first iteration is based on dt_calc.
- nb_pas_dt_max int for inheritance: Maximum number of calculation time steps (1e9 by default).
- **niter_max_diffusion_implicite** *int* for inheritance: This keyword changes the default value (number of unknowns) of the maximal iterations number in the conjugate gradient method used for implicit diffusion.
- **precision_impr** *int* for inheritance: Optional keyword to define the digit number for flux values printed into .out files (by default 3).
- **periode_sauvegarde_securite_en_heures** *int* for inheritance: To change the default period (23 hours) between the save of the fields in .sauv file.
- no_check_disk_space for inheritance: To disable the check of the available amount of disk space during the calculation.
- **disable progress** for inheritance: To disable the writing of the .progress file.
- **disable_dt_ev** for inheritance: To disable the writing of the .dt_ev file.

25.14 scheme euler implicit

```
Synonymous: schema_euler_implicite
Description: This is the Euler implicit scheme.
See also: schema_implicite_base (25.15)
Usage:
scheme_euler_implicit obj Lire obj {
     [ facsec_max float]
     [ max iter implicite int]
     solveur_implicite_base
     [tinit float]
     [tmax float]
     [tcpumax float]
     [ dt_min float]
     [ dt_max float]
     [ dt sauv float]
     [ dt_impr float]
     [ facsec float]
     [ seuil_statio float]
     [ seuil_statio_relatif_deconseille int]
     [ diffusion_implicite int]
```

```
[ seuil_diffusion_implicite float]
[ impr_diffusion_implicite int]
[ no_error_if_not_converged_diffusion_implicite int]
[ no_conv_subiteration_diffusion_implicite int]
[ dt_start dt_start]
[ nb_pas_dt_max int]
[ niter_max_diffusion_implicite int]
[ precision_impr int]
[ periode_sauvegarde_securite_en_heures int]
[ no_check_disk_space ]
[ disable_progress ]
[ disable_dt_ev ]
}
where
```

• facsec_max *float*: Maximum ratio allowed between time step and stability time returned by CFL condition. The initial ratio given by facsec keyword is changed during the calculation with the implicit scheme but it couldn't be higher than facsec_max value.

Warning: Some implicit schemes do not permit high facsec_max, example Schema_Adams_Moulton_order_3 needs facsec=facsec_max=1.

Advice:

The calculation may start with a facsec specified by the user and increased by the algorithm up to the facsec_max limit. But the user can also choose to specify a constant facsec (facsec_max will be set to facsec value then). Faster convergence has been seen and depends on the kind of calculation:

- -Hydraulic only or thermal hydraulic with forced convection and low coupling between velocity and temperature (Boussinesq value beta low), facsec between 20-30
- -Thermal hydraulic with forced convection and strong coupling between velocity and temperature (Boussinesq value beta high), facsec between 90-100
- -Thermohydralic with natural convection, facsec around 300
- -Conduction only, facsec can be set to a very high value (1e8) as if the scheme was unconditionally stable

These values can also be used as rule of thumb for initial facsec with a facsec max limit higher.

- max_iter_implicite int for inheritance: Maximum number of iterations allowed for the solver (by default 200).
- **solveur** *solveur_implicite_base* (26) for inheritance: This keyword is used to designate the solver selected in the situation where the time scheme is an implicit scheme. solver is the name of the solver that allows equation diffusion and convection operators to be set as implicit terms. Keywords corresponding to this functionality are Simple (SIMPLE type algorithm), Simpler (SIMPLER type algorithm) for incompressible systems, Piso (Pressure Implicit with Split Operator), and Implicite (similar to PISO, but as it looks like a simplified solver, it will use fewer timesteps. But it may run faster because the pressure matrix is not re-assembled and thus provides CPU gains.

- **tinit** *float* for inheritance: Value of initial calculation time (0 by default).
- tmax *float* for inheritance: Time during which the calculation will be stopped (1e30s by default).
- **tcpumax** *float* for inheritance: CPU time limit (must be specified in hours) for which the calculation is stopped (1e30s by default).
- **dt_min** *float* for inheritance: Minimum calculation time step (1e-16s by default).
- **dt_max** *float* for inheritance: Maximum calculation time step (1e30s by default).
- **dt_sauv** *float* for inheritance: Save time step value (1e30s by default). Every dt_sauv, fields are saved in the .sauv file. The file contains all the information saved over time. If this instruction is not

- entered, results are saved only upon calculation completion. To disable the writing of the .sauv files, you must specify 0.
- **dt_impr** *float* for inheritance: Scheme parameter printing time step in time (1e30s by default). The time steps and the flux balances are printed (incorporated onto every side of processed domains) into the .out file.
- **facsec** *float* for inheritance: Value assigned to the safety factor for the time step (1. by default). The time step calculated is multiplied by the safety factor. The first thing to try when a calculation does not converge with an explicit time scheme is to reduce the facsec to 0.5.
 - Warning: Some schemes needs a facsec lower than 1 (0.5 is a good start), for example Schema-Adams Bashforth order 3.
- **seuil_statio** *float* for inheritance: Value of the convergence threshold (1e-12 by default). Problems using this type of time scheme converge when the derivatives dGi/dt of all the unknown transported values Gi have a combined absolute value less than this value. This is the keyword used to set the permanent rating threshold.
- seuil_statio_relatif_deconseille int for inheritance
- **diffusion_implicite** *int* for inheritance: Keyword to make the diffusive term in the Navier-Stokes equations implicit (in this case, vrel should be set to 1). The stability time step is then only based on the convection time step (dt=facsec*dt_convection). Thus, in some circumstances, an important gain is achieved with respect to the time step (large diffusion with respect to convection on tightened meshes). Caution: It is however recommended that the user avoids exceeding the convection time step by selecting a too large facsec value. Start with a facsec value of 1 and then increase this gradually if you wish to accelerate calculation. In addition, for a natural convection calculation with a zero initial velocity, in the first time step, the convection time is infinite and therefore dt=facsec*dt-max.
- **seuil_diffusion_implicite** *float* for inheritance: This keyword changes the default value (1e-6) of convergency criteria for the resolution by conjugate gradient used for implicit diffusion.
- **impr_diffusion_implicite** *int* for inheritance: Unactivate (default) or not the printing of the convergence during the resolution of the conjugate gradient.
- no_error_if_not_converged_diffusion_implicite int for inheritance
- no_conv_subiteration_diffusion_implicite int for inheritance
- **dt_start** *dt_start* (9.5) for inheritance: dt_start dt_min: the first iteration is based on dt_min. dt_start dt_calc: the time step at first iteration is calculated in agreement with CFL condition. dt_start dt_fixe value: the first time step is fixed by the user (recommended when resuming calculation with Crank Nicholson temporal scheme to ensure continuity). By default, the first iteration is based on dt_calc.
- nb_pas_dt_max int for inheritance: Maximum number of calculation time steps (1e9 by default).
- **niter_max_diffusion_implicite** *int* for inheritance: This keyword changes the default value (number of unknowns) of the maximal iterations number in the conjugate gradient method used for implicit diffusion.
- **precision_impr** *int* for inheritance: Optional keyword to define the digit number for flux values printed into .out files (by default 3).
- **periode_sauvegarde_securite_en_heures** *int* for inheritance: To change the default period (23 hours) between the save of the fields in .sauv file.
- no_check_disk_space for inheritance: To disable the check of the available amount of disk space during the calculation.
- disable_progress for inheritance: To disable the writing of the .progress file.
- disable_dt_ev for inheritance: To disable the writing of the .dt_ev file.

25.15 schema_implicite_base

Description: Basic class for implicite time scheme.

See also: schema temps base (25) scheme euler implicit (25.14) schema adams moulton order 2 (25.10)

schema_adams_moulton_order_3 (25.11) schema_backward_differentiation_order_2 (25.12) schema_backward_differentiation_order_3 (25.13)

Usage:

```
schema implicite base obj Lire obj {
     [ max iter implicite int]
     solveur solveur_implicite_base
     [tinit float]
     [tmax float]
     [tcpumax float]
      [ dt_min float]
     [ dt_max float]
     [ dt_sauv float]
      [ dt_impr float]
     [facsec float]
     [ seuil_statio float]
     [ seuil statio relatif deconseille int]
      [ diffusion implicite int]
     [ seuil_diffusion_implicite float]
     [impr diffusion implicite int]
     [ no_error_if_not_converged_diffusion_implicite int]
     [ no conv subiteration diffusion implicite int]
     [ dt_start dt_start]
     [ nb pas dt max int]
     [ niter_max_diffusion_implicite int]
      [ precision_impr int]
      [ periode_sauvegarde_securite_en_heures int]
     [ no_check_disk_space ]
      [ disable_progress ]
     [disable dt ev ]
}
where
```

- max iter implicite int: Maximum number of iterations allowed for the solver (by default 200).
- solveur solveur_implicite_base (26): This keyword is used to designate the solver selected in the situation where the time scheme is an implicit scheme. solver is the name of the solver that allows equation diffusion and convection operators to be set as implicit terms. Keywords corresponding to this functionality are Simple (SIMPLE type algorithm), Simpler (SIMPLER type algorithm) for incompressible systems, Piso (Pressure Implicit with Split Operator), and Implicite (similar to PISO, but as it looks like a simplified solver, it will use fewer timesteps. But it may run faster because the pressure matrix is not re-assembled and thus provides CPU gains.

- **tinit** *float* for inheritance: Value of initial calculation time (0 by default).
- tmax float for inheritance: Time during which the calculation will be stopped (1e30s by default).
- **tcpumax** *float* for inheritance: CPU time limit (must be specified in hours) for which the calculation is stopped (1e30s by default).
- dt min float for inheritance: Minimum calculation time step (1e-16s by default).
- dt_max float for inheritance: Maximum calculation time step (1e30s by default).

- **dt_sauv** *float* for inheritance: Save time step value (1e30s by default). Every dt_sauv, fields are saved in the .sauv file. The file contains all the information saved over time. If this instruction is not entered, results are saved only upon calculation completion. To disable the writing of the .sauv files, you must specify 0.
- **dt_impr** *float* for inheritance: Scheme parameter printing time step in time (1e30s by default). The time steps and the flux balances are printed (incorporated onto every side of processed domains) into the out file.
- **facsec** *float* for inheritance: Value assigned to the safety factor for the time step (1. by default). The time step calculated is multiplied by the safety factor. The first thing to try when a calculation does not converge with an explicit time scheme is to reduce the facsec to 0.5.
 - Warning: Some schemes needs a facsec lower than 1 (0.5 is a good start), for example Schema_Adams_Bashforth_order_3.
- **seuil_statio** *float* for inheritance: Value of the convergence threshold (1e-12 by default). Problems using this type of time scheme converge when the derivatives dGi/dt of all the unknown transported values Gi have a combined absolute value less than this value. This is the keyword used to set the permanent rating threshold.
- seuil_statio_relatif_deconseille int for inheritance
- **diffusion_implicite** *int* for inheritance: Keyword to make the diffusive term in the Navier-Stokes equations implicit (in this case, vrel should be set to 1). The stability time step is then only based on the convection time step (dt=facsec*dt_convection). Thus, in some circumstances, an important gain is achieved with respect to the time step (large diffusion with respect to convection on tightened meshes). Caution: It is however recommended that the user avoids exceeding the convection time step by selecting a too large facsec value. Start with a facsec value of 1 and then increase this gradually if you wish to accelerate calculation. In addition, for a natural convection calculation with a zero initial velocity, in the first time step, the convection time is infinite and therefore dt=facsec*dt-max.
- **seuil_diffusion_implicite** *float* for inheritance: This keyword changes the default value (1e-6) of convergency criteria for the resolution by conjugate gradient used for implicit diffusion.
- **impr_diffusion_implicite** *int* for inheritance: Unactivate (default) or not the printing of the convergence during the resolution of the conjugate gradient.
- no_error_if_not_converged_diffusion_implicite int for inheritance
- no_conv_subiteration_diffusion_implicite int for inheritance
- **dt_start** *dt_start* (9.5) for inheritance: dt_start dt_min: the first iteration is based on dt_min. dt_start dt_calc: the time step at first iteration is calculated in agreement with CFL condition. dt_start dt_fixe value: the first time step is fixed by the user (recommended when resuming calculation with Crank Nicholson temporal scheme to ensure continuity). By default, the first iteration is based on dt_calc.
- nb_pas_dt_max int for inheritance: Maximum number of calculation time steps (1e9 by default).
- **niter_max_diffusion_implicite** *int* for inheritance: This keyword changes the default value (number of unknowns) of the maximal iterations number in the conjugate gradient method used for implicit diffusion.
- **precision_impr** *int* for inheritance: Optional keyword to define the digit number for flux values printed into .out files (by default 3).
- **periode_sauvegarde_securite_en_heures** *int* for inheritance: To change the default period (23 hours) between the save of the fields in .sauv file.
- **no_check_disk_space** for inheritance: To disable the check of the available amount of disk space during the calculation.
- **disable_progress** for inheritance: To disable the writing of the .progress file.
- **disable_dt_ev** for inheritance: To disable the writing of the .dt_ev file.

25.16 schema_predictor_corrector

See also: schema_temps_base (25)

Description: This is the predictor-corrector scheme (second order). It is more accurate and economic than MacCormack scheme. It gives best results with a second ordre convective scheme like quick, centre (VDF).

```
Usage:
schema predictor corrector obj Lire obj {
     [tinit float]
      [tmax float]
     [tcpumax float]
     [ dt_min float]
      [ dt_max float]
     [ dt_sauv float]
     [ dt_impr float]
     [facsec float]
     [seuil statio float]
     [ seuil_statio_relatif_deconseille int]
     [ diffusion implicite int]
     [ seuil_diffusion_implicite float]
      [impr diffusion implicite int]
     [ no error if not converged diffusion implicite int]
     [ no conv subiteration diffusion implicite int]
     [ dt_start dt_start]
     [ nb_pas_dt_max int]
     [ niter_max_diffusion_implicite int]
     [ precision_impr int]
      [ periode_sauvegarde_securite_en_heures int]
      [ no_check_disk_space ]
     [ disable_progress ]
     [disable dt ev ]
}
where
```

- **tinit** *float* for inheritance: Value of initial calculation time (0 by default).
- tmax *float* for inheritance: Time during which the calculation will be stopped (1e30s by default).
- **tcpumax** *float* for inheritance: CPU time limit (must be specified in hours) for which the calculation is stopped (1e30s by default).
- **dt_min** *float* for inheritance: Minimum calculation time step (1e-16s by default).
- **dt_max** *float* for inheritance: Maximum calculation time step (1e30s by default).
- **dt_sauv** *float* for inheritance: Save time step value (1e30s by default). Every dt_sauv, fields are saved in the .sauv file. The file contains all the information saved over time. If this instruction is not entered, results are saved only upon calculation completion. To disable the writing of the .sauv files, you must specify 0.
- **dt_impr** *float* for inheritance: Scheme parameter printing time step in time (1e30s by default). The time steps and the flux balances are printed (incorporated onto every side of processed domains) into the .out file.
- **facsec** *float* for inheritance: Value assigned to the safety factor for the time step (1. by default). The time step calculated is multiplied by the safety factor. The first thing to try when a calculation does not converge with an explicit time scheme is to reduce the facsec to 0.5.
 - Warning: Some schemes needs a facsec lower than 1 (0.5 is a good start), for example Schema-Adams Bashforth order 3.

- seuil_statio float for inheritance: Value of the convergence threshold (1e-12 by default). Problems using this type of time scheme converge when the derivatives dGi/dt of all the unknown transported values Gi have a combined absolute value less than this value. This is the keyword used to set the permanent rating threshold.
- seuil_statio_relatif_deconseille int for inheritance
- **diffusion_implicite** *int* for inheritance: Keyword to make the diffusive term in the Navier-Stokes equations implicit (in this case, vrel should be set to 1). The stability time step is then only based on the convection time step (dt=facsec*dt_convection). Thus, in some circumstances, an important gain is achieved with respect to the time step (large diffusion with respect to convection on tightened meshes). Caution: It is however recommended that the user avoids exceeding the convection time step by selecting a too large facsec value. Start with a facsec value of 1 and then increase this gradually if you wish to accelerate calculation. In addition, for a natural convection calculation with a zero initial velocity, in the first time step, the convection time is infinite and therefore dt=facsec*dt_max.
- **seuil_diffusion_implicite** *float* for inheritance: This keyword changes the default value (1e-6) of convergency criteria for the resolution by conjugate gradient used for implicit diffusion.
- **impr_diffusion_implicite** *int* for inheritance: Unactivate (default) or not the printing of the convergence during the resolution of the conjugate gradient.
- no_error_if_not_converged_diffusion_implicite int for inheritance
- no_conv_subiteration_diffusion_implicite int for inheritance
- **dt_start** *dt_start* (9.5) for inheritance: dt_start dt_min: the first iteration is based on dt_min. dt_start dt_calc: the time step at first iteration is calculated in agreement with CFL condition. dt_start dt_fixe value: the first time step is fixed by the user (recommended when resuming calculation with Crank Nicholson temporal scheme to ensure continuity). By default, the first iteration is based on dt_calc.
- nb_pas_dt_max int for inheritance: Maximum number of calculation time steps (1e9 by default).
- niter_max_diffusion_implicite int for inheritance: This keyword changes the default value (number of unknowns) of the maximal iterations number in the conjugate gradient method used for implicit diffusion.
- **precision_impr** *int* for inheritance: Optional keyword to define the digit number for flux values printed into .out files (by default 3).
- periode_sauvegarde_securite_en_heures int for inheritance: To change the default period (23 hours) between the save of the fields in .sauv file.
- **no_check_disk_space** for inheritance: To disable the check of the available amount of disk space during the calculation.
- disable_progress for inheritance: To disable the writing of the .progress file.
- disable dt ev for inheritance: To disable the writing of the .dt ev file.

26 solveur_implicite_base

Description: Class for solver in the situation where the time scheme is the implicit scheme. Solver allows equation diffusion and convection operators to be set as implicit terms.

See also: objet_u (33) solveur_lineaire_std (26.5) simpler (26.4)

Usage:

26.1 implicite

Description: similar to PISO, but as it looks like a simplified solver, it will use fewer timesteps. But it may run faster because the pressure matrix is not re-assembled and thus provides CPU gains.

See also: piso (26.2)

```
Usage:
implicite obj Lire obj {

    [ seuil_convergence_implicite float]
    [ nb_corrections_max int]
    [ seuil_convergence_solveur float]
    [ seuil_generation_solveur float]
    [ seuil_verification_solveur float]
    [ seuil_test_preliminaire_solveur float]
    [ solveur solveur_sys_base]
    [ no_qdm ]
    [ nb_it_max int]
    [ controle_residu ]
}
where
```

- seuil_convergence_implicite float for inheritance: Convergence criteria.
- **nb_corrections_max** *int* for inheritance: Maximum number of corrections performed by the PISO algorithm to achieve the projection of the velocity field. The algorithm may perform less corrections then nb_corrections_max if the accuracy of the projection is sufficient. (By default nb_corrections_max is set to 21).
- seuil_convergence_solveur *float* for inheritance: value of the convergence criteria for the resolution of the implicit system build by solving several times per time step the Navier_Stokes equation and the scalar equations if any. This value MUST be used when a coupling between problems is considered (should be set to a value typically of 0.1 or 0.01).
- **seuil_generation_solveur** *float* for inheritance: Option to create a GMRES solver and use vrel as the convergence threshold (implicit linear system Ax=B will be solved if residual error ||Ax-B|| is lesser than vrel).
- seuil_verification_solveur *float* for inheritance: Option to check if residual error ||Ax-B|| is lesser than vrel after the implicit linear system Ax=B has been solved.
- **seuil_test_preliminaire_solveur** *float* for inheritance: Option to decide if the implicit linear system Ax=B should be solved by checking if the residual error ||Ax-B|| is bigger than vrel.
- **solveur** *solveur_sys_base* (9.12) for inheritance: Method (different from the default one, Gmres with diagonal preconditioning) to solve the linear system.
- **no_qdm** for inheritance: Keyword to not solve qdm equation (and turbulence models of these equation).
- **nb it max** *int* for inheritance: Keyword to set the maximum iterations number for the Gmres.
- **controle_residu** for inheritance: Keyword of Boolean type (by default 0). If set to 1, the convergence occurs if the residu suddenly increases.

26.2 piso

Description: Piso (Pressure Implicit with Split Operator) - method to solve N S.

```
See also: simpler (26.4) implicite (26.1) simple (26.3)

Usage:
piso obj Lire obj {

[ seuil_convergence_implicite float]

[ nb_corrections_max int]

[ seuil_convergence_solveur float]
```

```
[ seuil_generation_solveur float]
    [ seuil_verification_solveur float]
    [ seuil_test_preliminaire_solveur float]
    [ solveur solveur_sys_base]
    [ no_qdm ]
    [ nb_it_max int]
    [ controle_residu ]
}
where
```

- seuil_convergence_implicite float: Convergence criteria.
- **nb_corrections_max** *int*: Maximum number of corrections performed by the PISO algorithm to achieve the projection of the velocity field. The algorithm may perform less corrections then nb_corrections_max if the accuracy of the projection is sufficient. (By default nb_corrections_max is set to 21).
- seuil_convergence_solveur *float* for inheritance: value of the convergence criteria for the resolution of the implicit system build by solving several times per time step the Navier_Stokes equation and the scalar equations if any. This value MUST be used when a coupling between problems is considered (should be set to a value typically of 0.1 or 0.01).
- seuil_generation_solveur *float* for inheritance: Option to create a GMRES solver and use vrel as the convergence threshold (implicit linear system Ax=B will be solved if residual error ||Ax-B|| is lesser than vrel).
- **seuil_verification_solveur** *float* for inheritance: Option to check if residual error ||Ax-B|| is lesser than vrel after the implicit linear system Ax=B has been solved.
- **seuil_test_preliminaire_solveur** *float* for inheritance: Option to decide if the implicit linear system Ax=B should be solved by checking if the residual error ||Ax-B|| is bigger than vrel.
- **solveur** *solveur_sys_base* (9.12) for inheritance: Method (different from the default one, Gmres with diagonal preconditioning) to solve the linear system.
- **no_qdm** for inheritance: Keyword to not solve qdm equation (and turbulence models of these equation).
- **nb it max** int for inheritance: Keyword to set the maximum iterations number for the Gmres.
- **controle_residu** for inheritance: Keyword of Boolean type (by default 0). If set to 1, the convergence occurs if the residu suddenly increases.

26.3 simple

```
Description: SIMPLE type algorithm

See also: piso (26.2)

Usage:
simple obj Lire obj {

relax_pression float
    [seuil_convergence_implicite float]
    [nb_corrections_max int]
    [seuil_convergence_solveur float]
    [seuil_generation_solveur float]
    [seuil_verification_solveur float]
    [seuil_test_preliminaire_solveur float]
    [solveur solveur_sys_base]
    [no_qdm]
    [nb_it_max int]
```

```
[ controle_residu ]
}
where
```

- **relax_pression** *float*: Value between 0 and 1 (by default 1), this keyword is used only by the SIM-PLE algorithm for relaxing the increment of pressure.
- seuil_convergence_implicite float for inheritance: Convergence criteria.
- **nb_corrections_max** *int* for inheritance: Maximum number of corrections performed by the PISO algorithm to achieve the projection of the velocity field. The algorithm may perform less corrections then nb_corrections_max if the accuracy of the projection is sufficient. (By default nb_corrections_max is set to 21).
- **seuil_convergence_solveur** *float* for inheritance: value of the convergence criteria for the resolution of the implicit system build by solving several times per time step the Navier_Stokes equation and the scalar equations if any. This value MUST be used when a coupling between problems is considered (should be set to a value typically of 0.1 or 0.01).
- seuil_generation_solveur *float* for inheritance: Option to create a GMRES solver and use vrel as the convergence threshold (implicit linear system Ax=B will be solved if residual error ||Ax-B|| is lesser than vrel).
- **seuil_verification_solveur** *float* for inheritance: Option to check if residual error ||Ax-B|| is lesser than vrel after the implicit linear system Ax=B has been solved.
- **seuil_test_preliminaire_solveur** *float* for inheritance: Option to decide if the implicit linear system Ax=B should be solved by checking if the residual error ||Ax-B|| is bigger than vrel.
- **solveur** *solveur_sys_base* (9.12) for inheritance: Method (different from the default one, Gmres with diagonal preconditioning) to solve the linear system.
- **no_qdm** for inheritance: Keyword to not solve qdm equation (and turbulence models of these equation).
- **nb it max** *int* for inheritance: Keyword to set the maximum iterations number for the Gmres.
- **controle_residu** for inheritance: Keyword of Boolean type (by default 0). If set to 1, the convergence occurs if the residu suddenly increases.

26.4 simpler

Description: Simpler method for incompressible systems.

```
See also: solveur_implicite_base (26) piso (26.2)

Usage:
simpler obj Lire obj {

seuil_convergence_implicite float
[seuil_convergence_solveur float]
[seuil_generation_solveur float]
[seuil_verification_solveur float]
[seuil_test_preliminaire_solveur float]
[solveur solveur_sys_base]
[no_qdm ]
[nb_it_max int]
[controle_residu ]
}

where
```

• seuil_convergence_implicite *float*: Keyword to set the value of the convergence criteria for the resolution of the implicit system build to solve either the Navier_Stokes equation (only for Simple

and Simpler algorithms) or a scalar equation. It is adviced to use the default value (1e6) to solve the implicit system only once by time step. This value must be decreased when a coupling between problems is considered.

- seuil_convergence_solveur *float*: value of the convergence criteria for the resolution of the implicit system build by solving several times per time step the Navier_Stokes equation and the scalar equations if any. This value MUST be used when a coupling between problems is considered (should be set to a value typically of 0.1 or 0.01).
- **seuil_generation_solveur** *float*: Option to create a GMRES solver and use vrel as the convergence threshold (implicit linear system Ax=B will be solved if residual error ||Ax-B|| is lesser than vrel).
- seuil_verification_solveur *float*: Option to check if residual error ||Ax-B|| is lesser than vrel after the implicit linear system Ax=B has been solved.
- **seuil_test_preliminaire_solveur** *float*: Option to decide if the implicit linear system Ax=B should be solved by checking if the residual error ||Ax-B|| is bigger than vrel.
- **solveur** *solveur_sys_base* (9.12): Method (different from the default one, Gmres with diagonal preconditioning) to solve the linear system.
- no_qdm: Keyword to not solve qdm equation (and turbulence models of these equation).
- **nb_it_max** *int*: Keyword to set the maximum iterations number for the Gmres.
- **controle_residu**: Keyword of Boolean type (by default 0). If set to 1, the convergence occurs if the residu suddenly increases.

26.5 solveur_lineaire_std

```
Description: not_set

See also: solveur_implicite_base (26)

Usage:
solveur_lineaire_std obj Lire obj {
      [solveur solveur_sys_base]
}
where
• solveur solveur_sys_base (9.12)
```

27 source_base

Description: Basic class of source terms introduced in the equation.

See also: objet_u (33) source_generique (27.19) boussinesq_temperature (27.4) boussinesq_concentration (27.3) dirac (27.8) puissance_thermique (27.17) source_qdm_lambdaup (27.21) source_th_tdivu (27.25) source_robin (27.22) source_robin_scalaire (27.23) canal_perio (27.5) source_constituant (27.18) source_transport_k_eps (27.26) acceleration (27.2) coriolis (27.6) source_qdm (27.20) perte_charge_singuliere (27.16) perte_charge_directionnelle (27.12) perte_charge_isotrope (27.13) perte_charge_anisotrope (27.10) perte_charge_circulaire (27.11) darcy (27.7) forchheimer (27.9) perte_charge_reguliere (27.14)

Usage:

27.1 Source_Transport_K_Eps_anisotherme

Description: Keywords to modify the source term constants in the anisotherm standard k-eps model epsilon transport equation. By default, these constants are set to: C1_eps=1.44 C2_eps=1.92 C3_eps=1.0

```
See also: source_transport_k_eps (27.26)

Usage:
Source_Transport_K_Eps_anisotherme obj Lire obj {
        [ c3_eps float]
        [ c1_eps float]
        [ c2_eps float]
}
where

• c3_eps float: Third constant.
• c1_eps float for inheritance: First constant.
• c2_eps float for inheritance: Second constant.
```

27.2 acceleration

Description: Momentum source term to take in account the forces due to rotation or translation of a non Galilean referential R' (centre 0') into the Galilean referential R (centre 0).

```
See also: source_base (27)

Usage:
acceleration obj Lire obj {
    [ vitesse champ_base]
    [ acceleration champ_base]
    [ omega champ_base]
    [ domegadt champ_base]
    [ centre_rotation champ_base]
    [ option str into ['terme_complet', 'coriolis_seul', 'entrainement_seul']]
}
where
```

- **vitesse** *champ_base* (15.1): Keyword for the velocity of the referential R' into the R referential (dOO'/dt term [m.s-1]). The velocity is mandatory when you want to print the total cinetic energy into the non-mobile Galilean referential R (see Ec_dans_repere_fixe keyword).
- acceleration *champ_base* (15.1): Keyword for the acceleration of the referential R' into the R referential (d2OO'/dt2 term [m.s-2]). field_base is a time dependant field (eg: Champ_Fonc_t).
- omega champ_base (15.1): Keyword for a rotation of the referential R' into the R referential [rad.s-1]. field_base is a 3D time dependant field specified for example by a Champ_Fonc_t keyword. The time_field field should have 3 components even in 2D (In 2D: 0 0 omega).
- **domegadt** *champ_base* (15.1): Keyword to define the time derivative of the previous rotation [rad.s-2]. Should be zero if the rotation is constant. The time_field field should have 3 components even in 2D (In 2D: 0 0 domegadt).
- **centre_rotation** *champ_base* (15.1): Keyword to specify the centre of rotation (expressed in R' coordinates) of R' into R (if the domain rotates with the R' referential, the centre of rotation is 0'=(0,0,0)). The time_field should have 2 or 3 components according the dimension 2 or 3.
- **option** *str into ['terme_complet', 'coriolis_seul', 'entrainement_seul']:* Keyword to specify the kind of calculation: terme_complet (default option) will calculate both the Coriolis and centrifugal forces, coriolis_seul will calculate the first one only, entrainement_seul will calculate the second one only.

27.3 boussinesq_concentration

Description: Class to describe a source term that couples the movement quantity equation and constituent transport equation with the Boussinesq hypothesis.

```
See also: source_base (27)

Usage:
boussinesq_concentration obj Lire obj {
    c0 n x1 x2 ... xn
    [verif_boussinesq int]
}
where
```

- **c0** *n x1 x2 ... xn*: Reference concentration field type. The only field type currently available is Champ Uniform (Uniform field).
- **verif_boussinesq** *int*: Keyword to check (1) or not (0) the reference concentration in comparison with the mean concentration value in the domain. It is set to 1 by default.

27.4 boussinesq_temperature

Description: Class to describe a source term that couples the movement quantity equation and energy equation with the Boussinesq hypothesis.

```
See also: source_base (27)

Usage:
boussinesq_temperature obj Lire obj {

t0 str
[verif_boussinesq int]
}
where
```

- **t0** *str*: Reference temperature value (oC or K). It can also be a time dependant function since the 1.6.6 version.
- **verif_boussinesq** *int*: Keyword to check (1) or not (0) the reference temperature in comparison with the mean temperature value in the domain. It is set to 1 by default.

27.5 canal_perio

Description: Momentum source term to maintain flow rate. The expression of the source term is: S(t) = (2*(Q(0) - Q(t))-(Q(0)-Q(t-dt))/(coeff*dt*area)

```
Where:
```

coeff=damping coefficient area=area of the periodic boundary Q(t)=flow rate at time t dt=time step

Three files will be created during calculation on a datafile named DataFile.data. The first file contains

the flow rate evolution. The second file is useful for resuming a calculation with the flow rate of the previous stopped calculation, and the last one contains the pressure gradient evolution:

- -DataFile_Channel_Flow_Rate_ProblemName_BoundaryName
- $-DataFile_Channel_Flow_Rate_repr_ProblemName_BoundaryName$
- -DataFile_Pressure_Gradient_ProblemName_BoundaryName

```
See also: source_base (27)

Usage:
canal_perio obj Lire obj {

bord str
[h float]
[coeff float]
[debit_impose float]
}

where
```

- **bord** *str*: The name of the (periodic) boundary normal to the flow direction.
- h float: Half heigth of the channel.
- **coeff** *float*: Damping coefficient (optional, default value is 10).
- **debit_impose** *float*: Optional option to specify the aimed flow rate Q(0). If not used, Q(0) is computed by the code after the projection phase, where velocity initial conditions are slightly changed to verify incompressibility.

27.6 coriolis

Description: Keyword for a Coriolis term in hydraulic equation. Warning: Only available in VDF.

```
See also: source_base (27)

Usage:
coriolis omega
where
```

• omega str: Value of omega.

27.7 darcy

Description: Class for calculation in a porius media with source term of Darcy -nu/K*V. This keyword must be used with a permeability model. For the moment there are two models: permeability constant or Ergun's law. Darcy source term is available for quasi compressible calculation. A new keyword is aded for porosity (porosite).

```
See also: source_base (27)

Usage:
darcy bloc
where

• bloc bloc_lecture (3.41): Description.
```

27.8 dirac

Description: Class to define a source term corresponding to a volume power release in the energy equation.

```
See also: source_base (27)

Usage:
dirac position ch
where
```

- **position** *n x1 x2 ... xn*
- **ch** *champ_base* (15.1): Thermal power field type. To impose a volume power on a domain sub-area, the Champ_Uniforme_Morceaux (partly_uniform_field) type must be used.

Warning: The volume thermal power is expressed in W.m-3.

27.9 forchheimer

Description: Class to add the source term of Forchheimer -Cf/sqrt(K)*V2 in the Navier-Stokes equations. We must precise a permeability model: constant or Ergun's law. Moreover we can give the constant Cf: by default its value is 1. Forchheimer source term is available also for quasi compressible calculation. A new keyword is aded for porosity (porosite).

```
See also: source_base (27)

Usage:
forchheimer bloc
where

• bloc bloc_lecture (3.41): Description.
```

27.10 perte_charge_anisotrope

```
Description: Anisotropic pressure loss.

See also: source_base (27)

Usage:
perte_charge_anisotrope obj Lire obj {
    lambda str
    lambda_ortho str
    diam_hydr champ_don_base
    direction champ_don_base
    [ sous_zone str]
}

where
```

- lambda str: Function for loss coefficient which may be Reynolds dependant (Ex: 64/Re).
- lambda_ortho *str*: Function for loss coefficient in transverse direction which may be Reynolds dependant (Ex: 64/Re).
- **diam_hydr** *champ_don_base* (15.3): Hydraulic diameter value.
- **direction** *champ_don_base* (15.3): Field which indicates the direction of the pressure loss.
- sous_zone str: Optional sub-area where pressure loss applies.

27.11 perte_charge_circulaire

```
Description: New pressure loss.

See also: source_base (27)

Usage:
perte_charge_circulaire obj Lire obj {
    lambda str
    lambda_ortho str
    diam_hydr champ_don_base
    diam_hydr_ortho champ_don_base
    direction champ_don_base
    [ sous_zone str]
}

where
```

- lambda str: Function f(Re_tot, Re_long, t, x, y, z) for loss coefficient in the longitudinal direction
- lambda_ortho str: function: Function f(Re_tot, Re_ortho, t, x, y, z) for loss coefficient in transverse direction
- diam_hydr champ_don_base (15.3): Hydraulic diameter value.
- diam_hydr_ortho champ_don_base (15.3): Transverse hydraulic diameter value.
- **direction** *champ_don_base* (15.3): Field which indicates the direction of the pressure loss.
- sous_zone str: Optional sub-area where pressure loss applies.

27.12 perte_charge_directionnelle

```
Description: Directional pressure loss.

See also: source_base (27)

Usage:
perte_charge_directionnelle obj Lire obj {
    lambda str
    diam_hydr champ_don_base
    direction champ_don_base
    [sous_zone str]
}

where
```

- lambda str: Function for loss coefficient which may be Reynolds dependant (Ex: 64/Re).
- diam_hydr champ_don_base (15.3): Hydraulic diameter value.
- **direction** *champ_don_base* (15.3): Field which indicates the direction of the pressure loss.
- sous_zone str: Optional sub-area where pressure loss applies.

27.13 perte_charge_isotrope

```
Description: Isotropic pressure loss.

See also: source_base (27)

Usage:
perte_charge_isotrope obj Lire obj {
```

```
lambda str
  diam_hydr champ_don_base
[ sous_zone str]
}
where
```

- lambda str: Function for loss coefficient which may be Reynolds dependant (Ex: 64/Re).
- diam_hydr champ_don_base (15.3): Hydraulic diameter value.
- sous_zone str: Optional sub-area where pressure loss applies.

27.14 perte_charge_reguliere

Description: Source term modelling the presence of a bundle of tubes in a flow.

```
See also: source_base (27)

Usage: perte_charge_reguliere spec zone_name
```

- **spec** *spec_pdcr_base* (27.15): Description of longitudinale or transversale type.
- **zone_name** *str*: Name of the sub-area occupied by the tube bundle. A Sous_Zone (Sub-area) type object called zone_name should have been previously created.

27.15 spec_pdcr_base

Description: Class to read the source term modelling the presence of a bundle of tubes in a flow. Cf=A Re-B.

```
See also: objet_lecture (32) longitudinale (27.15.1) transversale (27.15.2)
```

Usage:

where

```
spec_pdcr_base ch_a a [ch_b][b]
where
```

- **ch_a** *str into ['a', 'cf']*: Keyword to be used to set law coefficient values for the coefficient of regular pressure losses.
- a float: Value of a law coefficient for regular pressure losses.
- ch_b str into ['b']: Keyword to be used to set law coefficient values for regular pressure losses.
- **b** *float*: Value of a law coefficient for regular pressure losses.

27.15.1 longitudinale

Description: Class to define the pressure loss in the direction of the tube bundle.

```
See also: spec_pdcr_base (27.15)

Usage:
longitudinale dir dd ch_a a [ch_b][b]
where
```

• dir str into ['x', 'y', 'z']: Direction.

- **dd** *float*: Tube bundle hydraulic diameter value. This value is expressed in m.
- **ch_a** *str into ['a', 'cf']*: Keyword to be used to set law coefficient values for the coefficient of regular pressure losses.
- a float: Value of a law coefficient for regular pressure losses.
- ch_b str into ['b']: Keyword to be used to set law coefficient values for regular pressure losses.
- **b** *float*: Value of a law coefficient for regular pressure losses.

27.15.2 transversale

Description: Class to define the pressure loss in the direction perpendicular to the tube bundle.

```
See also: spec_pdcr_base (27.15)
```

Usage:

transversale dir dd chaine_d d ch_a a [ch_b][b] where

- dir str into ['x', 'y', 'z']: Direction.
- **dd** *float*: Value of the tube bundle step.
- **chaine_d** *str into ['d']*: Keyword to be used to set the value of the tube external diameter.
- **d** *float*: Value of the tube external diameter.
- **ch_a** *str into ['a', 'cf']*: Keyword to be used to set law coefficient values for the coefficient of regular pressure losses.
- a *float*: Value of a law coefficient for regular pressure losses.
- ch_b str into ['b']: Keyword to be used to set law coefficient values for regular pressure losses.
- **b** *float*: Value of a law coefficient for regular pressure losses.

27.16 perte_charge_singuliere

Description: Source term that is used to model a pressure loss over a surface area (transition through a grid, sudden enlargement) defined by the faces of elements located on the intersection of a subzone named subzone_name and a X,Y, or Z plane located at X,Y or Z = location.

```
See also: source_base (27)
```

Usage:

perte_charge_singuliere dir coeff bloc_definition_surface
where

- dir str into ['kx', 'ky', 'kz']: KX, KY or KZ designate directional pressure loss coefficients for respectively X, Y or Z direction.
- **coeff** *float*: Value of friction coefficient (KX, KY, KZ).
- **bloc_definition_surface** *bloc_lecture* (3.41): Two syntaxes are possible for the surface definition block:

```
For VDF and VEF: { X|Y|Z = location subzone_name } Only for VEF: { Surface surface_name }.
```

27.17 puissance_thermique

Description: Class to define a source term corresponding to a volume power release in the energy equation.

```
See also: source_base (27)
```

Usage:

puissance_thermique ch

where

• **ch** *champ_base* (15.1): Thermal power field type. To impose a volume power on a domain sub-area, the Champ_Uniforme_Morceaux (partly_uniform_field) type must be used.

Warning: The volume thermal power is expressed in W.m-3 in 3D. It is a power per volume unit (in

27.18 source_constituant

a porous media, it is a power per fluid volume unit).

Description: Keyword to specify source rates, in [[C]/s], for each one of the nb constituents. [C] is the concentration unit.

See also: source_base (27)

Usage:

source_constituant ch

where

• **ch** *champ_base* (15.1): Field type.

27.19 source_generique

Description: to define a source term depending on some discrete fields of the problem and (or) analytic expression. It is expressed by the way of a generic field usually used for post-processing.

See also: source_base (27)

Usage:

source_generique champ

where

• **champ** *champ_generique_base* (7): the source field

27.20 source_qdm

Description: Momentum source term in the Navier-Stokes equations.

See also: source_base (27)

Usage:

source_qdm ch

where

• **ch** *champ_base* (15.1): Field type.

27.21 source_qdm_lambdaup

Description: This source term is a dissipative term which is intended to minimise the energy associated to non-conformscales u' (responsible for spurious oscillations in some cases). The equation for these scales can be seen as: du'/dt= -lambda. u' + grad P' where -lambda. u' represents the dissipative term, with lambda = a/Delta t For Crank-Nicholson temporal scheme, recommended value for a is 2.

Remark: This method requires to define a filtering operator.

```
See also: source_base (27)

Usage:
source_qdm_lambdaup obj Lire obj {

lambda float
[lambda_min float]
[lambda_max float]
[ubar_umprim_cible float]
}
where

lambda float: value of lambda
lambda_min float: value of lambda_min
lambda_max float: value of lambda_max
ubar_umprim_cible float: value of ubar_umprim_cible
```

27.22 source robin

Description: This source term should be used when a Paroi_decalee_Robin boundary condition is set in a hydraulic equation. The source term will be applied on the N specified boundaries. To post-process the values of tauw, u_tau and Reynolds_tau into the files tauw_robin.dat, reynolds_tau_robin.dat and u_tau_robin.dat, you must add a block Traitement_particulier { canal { } }

```
See also: source_base (27)

Usage:
source_robin bords
where

• bords vect_nom (3.104)
```

27.23 source_robin_scalaire

Description: This source term should be used when a Paroi_decalee_Robin boundary condition is set in a an energy equation. The source term will be applied on the N specified boundaries. The values temp_wall_valueI are the temperature specified on the Ith boundary. The last value dt_impr is a printing period which is mandatory to specify in the data file but has no effect yet.

```
See also: source_base (27)

Usage:
source_robin_scalaire bords
where

• bords listdeuxmots sacc (27.24)
```

27.24 listdeuxmots_sacc

Description: List of groups of two words (without accodances).

```
See also: listobj (31.3)

Usage:
n object1 object2 ....
list of deuxmots (5.21)
```

27.25 source th tdivu

Description: This term source is dedicated for any scalar (called T) transport. Coupled with upwind (amont) or muscl scheme, this term gives for final expression of convection: div(U.T)-T.div(U)=U.grad(T) This ensures, in incompressible flow when divergence free is badly resolved, to stay in a better way in the physical boundaries.

Warning: Only available in VEF discretization.

```
See also: source_base (27)
Usage:
source_th_tdivu
```

27.26 source_transport_k_eps

Description: Keyword to alter the source term constants in the standard k-eps model epsilon transport equation. By default, these constants are set to: C1_eps=1.44 C2_eps=1.92

See also: source_base (27) Source_Transport_K_Eps_anisotherme (27.1) source_transport_k_eps_aniso_concen (27.27) source_transport_k_eps_aniso_therm_concen (27.28)

Usage:

```
source_transport_k_eps obj Lire obj {
    [c1_eps float]
    [c2_eps float]
}
where
```

- c1_eps float: First constant.
- c2_eps float: Second constant.

27.27 source_transport_k_eps_aniso_concen

Description: Keywords to modify the source term constants in the anisotherm standard k-eps model epsilon transport equation. By default, these constants are set to: C1_eps=1.44 C2_eps=1.92 C3_eps=1.0

```
See also: source_transport_k_eps (27.26)

Usage:
source_transport_k_eps_aniso_concen obj Lire obj {

[ c3_eps float]
        [ c1_eps float]
```

```
[c2_eps float]
where
c3_eps float: Third constant.
c1_eps float for inheritance: First constant.
c2 eps float for inheritance: Second constant.
```

27.28 source_transport_k_eps_aniso_therm_concen

Description: Keywords to modify the source term constants in the anisotherm standard k-eps model epsilon transport equation. By default, these constants are set to: C1_eps=1.44 C2_eps=1.92 C3_eps=1.0

```
See also: source_transport_k_eps (27.26)

Usage:
source_transport_k_eps_aniso_therm_concen obj Lire obj {

    [ c3_eps float]
    [ c1_eps float]
    [ c2_eps float]
}
where

• c3_eps float: Third constant.
• c1_eps float for inheritance: First constant.
• c2_eps float for inheritance: Second constant.
```

28 sous_zone

Description: It is an object type describing a domain sub-set.

A Sous_Zone (Sub-area) type object must be associated with a Domaine type object. The Read (Lire) interpretor is used to define the items comprising the sub-area.

Caution: The Domain type object nom_domaine must have been meshed (and triangulated or tetrahedralised in VEF) prior to carrying out the Associate (Associer) nom_sous_zone nom_domaine instruction; this instruction must always be preceded by the read instruction.

```
See also: objet_u (33)

Usage:
sous_zone obj Lire obj {

    [restriction str]
    [rectangle bloc_origine_cotes]
    [segment bloc_origine_cotes]
    [boite bloc_origine_cotes]
    [liste n n1 n2 ... nn]
    [fichier str]
    [intervalle deuxentiers]
    [polynomes bloc_lecture]
    [couronne bloc_couronne]
    [tube bloc tube]
```

```
[ fonction_sous_zone str]
[ union str]
}
where
```

- **restriction** *str*: The elements of the sub-area nom_sous_zone must be included into the other sub-area named nom_sous_zone2. This keyword should be used first in the Read keyword.
- **rectangle** *bloc_origine_cotes* (28.1): The sub-area will include all the domain elements whose centre of gravity is within the Rectangle (in dimension 2).
- segment bloc_origine_cotes (28.1)
- **boite** *bloc_origine_cotes* (28.1): The sub-area will include all the domain elements whose centre of gravity is within the Box (in dimension 3).
- liste n n1 n2 ... nn: The sub-area will include n domain items, numbers No. 1 No. i No. n.
- fichier str: The sub-area is read into the file filename.
- **intervalle** *deuxentiers* (28.2): The sub-area will include domain items whose number is between n1 and n2 (where n1<=n2).
- **polynomes** *bloc_lecture* (3.41): A REPRENDRE
- **couronne** *bloc_couronne* (28.3): In 2D case, to create a couronne.
- tube bloc_tube (28.4): In 3D case, to create a tube.
- **fonction_sous_zone** *str*: Keyword to build a sub-area with the elements included into the area defined by fonction>0.
- **union** *str*: The elements of the sub-area nom_sous_zone3 will be added to the sub-area nom_sous_zone. This keyword should be used last in the Read keyword.

28.1 bloc_origine_cotes

```
Description: Class to create a rectangle (or a box).
```

See also: objet_lecture (32)

Usage:

name origin name2 cotes where

- name str into ['Origine']: Keyword to define the origin of the rectangle (or the box).
- origin $x1 \times x2 \times x3$): Coordinates of the origin of the rectangle (or the box).
- name2 str into ['Cotes']: Keyword to define the length along the axes.
- cotes x1 x2 (x3): Length along the axes.

28.2 deuxentiers

Description: Two integers.

See also: objet_lecture (32)

Usage:

int1 int2

where

- int1 int: First integer.
- int2 int: Second integer.

28.3 bloc_couronne

Description: Class to create a couronne (2D).

See also: objet lecture (32)

Usage:

name origin name3 ri name4 re where

- name str into ['Origine']: Keyword to define the center of the circle.
- origin $x1 \ x2 \ (x3)$: Center of the circle.
- name3 str into ['ri']: Keyword to define the interior radius.
- ri float: Interior radius.
- name4 str into ['re']: Keyword to define the exterior radius.
- re float: Exterior radius.

28.4 bloc tube

Description: Class to create a tube (3D).

See also: objet_lecture (32)

Usage:

name origin name2 direction name3 ri name4 re name5 h where

- name str into ['Origine']: Keyword to define the center of the tube.
- origin $x1 \ x2 \ (x3)$: Center of the tube.
- name2 str into ['dir']: Keyword to define the direction of the main axis.
- direction str into ['X', 'Y', 'Z']: direction of the main axis X, Y or Z
- name3 str into ['ri']: Keyword to define the interior radius.
- ri float: Interior radius.
- name4 str into ['re']: Keyword to define the exterior radius.
- re float: Exterior radius.
- name5 str into ['hauteur']: Keyword to define the heigth of the tube.
- h float: Heigth of the tube.

29 turbulence_paroi_base

Description: Basic class for wall laws for Navier-Stokes equations.

See also: objet_u (33) loi_standard_hydr_old (29.3) loi_standard_hydr (29.2) paroi_tble (29.5) negligeable (29.4) utau_imp (29.9)

Usage:

29.1 loi_expert_hydr

Description: This keyword is similar to the previous keyword Loi_standard_hydr but has several additional options into brackets.

See also: loi_standard_hydr (29.2)

```
Usage:
loi_expert_hydr obj Lire obj {

    [u_star_impose float]
    [methode_calcul_face_keps_impose str into ['toutes_les_faces_accrochees', 'que_les_faces_des_elts_dirichlet']]
    [kappa float]
    [Erugu float]
    [A_plus float]
}
where
```

- u_star_impose float: The value of the friction velocity (u*) is not calculated but given by the user.
- methode_calcul_face_keps_impose str into ['toutes_les_faces_accrochees', 'que_les_faces_des_elts_dirichlet']: The available options select the algorithm to apply K and Eps boundaries condition (the algorithms differ according to the faces).
 - toutes_les_faces_accrochees: Default option in 2D (the algorithm is the same than the algorithm used in Loi standard hydr)
 - que_les_faces_des_elts_dirichlet : Default option in 3D (another algorithm where less faces are concerned when applying K-Eps boundary condition).
- kappa *float*: The value can be changed from the default one (0.415)
- **Erugu** *float*: The value of E can be changed from the default one for a smooth wall (9.11). It is also possible to change the value for one boundary wall only with paroi_rugueuse keyword/
- **A_plus** *float*: The value can can be changed from the default one (26.0)

29.2 loi standard hydr

Description: Keyword for the logarithmic wall law for a hydraulic problem. Loi_standard_hydr refers to first cell rank eddy-viscosity defined from continuous analytical functions, whereas Loi_standard_hydr-3couches from functions separataly defined for each sub-layer

```
See also: turbulence_paroi_base (29) loi_expert_hydr (29.1)

Usage:
loi_standard_hydr

29.3 loi_standard_hydr_old

Description: not_set

See also: turbulence_paroi_base (29)
```

Usage:

loi_standard_hydr_old

29.4 negligeable

Description: Keyword to suppress the calculation of a law of the wall with a turbulence model. The wall stress is directly calculated with the derivative of the velocity, in the direction perpendicular to the wall (tau_tan /rho= nu dU/dy).

Warning: This keyword is not available for k-epsilon models. In that case you must choose a wall law.

```
See also: turbulence_paroi_base (29)
Usage:
negligeable
```

29.5 paroi tble

Description: Keyword for the Thin Boundary Layer Equation wall-model (a more complete description of the model can be found into this PDF file). The wall shear stress is evaluated thanks to boundary layer equations applied in a one-dimensional fine grid in the near-wall region.

```
See also: turbulence_paroi_base (29)
Usage:
paroi_tble obj Lire obj {
      [ n int]
      [ facteur float]
      [ modele visco str]
      [stats twofloat]
      [ sonde_tble liste_sonde_tble]
      [restart]
      [stationnaire entierfloat]
      [lambda str]
      \begin{bmatrix} \mathbf{mu} & str \end{bmatrix}
      [ sans_source_boussinesq ]
      [ alpha float]
      [kappa float]
}
where
```

- **n** *int*: Number of nodes in the TBLE grid (mandatory option).
- **facteur** *float*: Stretching ratio for the TBLE grid (to refine, the TBLE facteur must be greater than 1).
- modele_visco str: File name containing the description of the eddy viscosity model.
- **stats** *twofloat* (29.6): Statistics of the TBLE velocity and turbulent viscosity profiles. 2 values are required: the starting time and ending time of the statistics computation.
- sonde_tble liste_sonde_tble (29.7)
- restart
- stationnaire entierfloat (29.8)
- lambda str
- mu str
- sans_source_boussinesq
- alpha float
- kappa float

29.6 twofloat

```
Description: two reals.

See also: objet_lecture (32)

Usage:
a b
```

```
where
```

a float: First real.b float: Second real.

29.7 liste_sonde_tble

Description: not_set

See also: listobj (31.3)

Usage:
n object1 object2
list of sonde_tble (29.7.1)

29.7.1 sonde_tble

Description: not_set

See also: objet_lecture (32)

Usage: name point where

• name str

• **point** *un_point* (3.9.3)

29.8 entierfloat

Description: An integer and a real.

See also: objet_lecture (32)

Usage:

the_int the_float where

the_int int: Integer.the_float float: Real.

• the_nout from Real

29.9 utau_imp

Description: Keyword to impose the friction velocity on the wall with a turbulence model for thermohydraulic problems. There are two possibilities to use this keyword:

1 - we can impose directly the value of the friction velocity u_star.

2 - we can also give the friction coefficient and hydraulic diameter. So, TRUST determines the friction velocity by : $u_star = U*sqrt(lambda_c/8)$.

See also: turbulence_paroi_base (29)

Usage:

utau_imp obj Lire obj {

```
[ u_tau champ_base]
  [ lambda_c str]
  [ diam_hydr champ_base]
}
where
```

- u tau champ base (15.1): Field type.
- lambda_c str: The friction coefficient. It can be function of the spatial coordinates x,y,z, the Reynolds number Re, and the hydraulic diameter.
- diam_hydr champ_base (15.1): The hydraulic diameter.

30 turbulence_paroi_scalaire_base

Description: Basic class for wall laws for energy equation.

See also: objet_u (33) loi_standard_hydr_scalaire (30.4) loi_analytique_scalaire (30.1) paroi_tble_scal (30.6) loi_paroi_nu_impose (30.3) negligeable_scalaire (30.5)

Usage:

30.1 loi_analytique_scalaire

```
Description: not_set

See also: turbulence_paroi_scalaire_base (30)

Usage:
loi_analytique_scalaire
```

30.2 loi_expert_scalaire

Description: Keyword similar to keyword Loi_standard_hydr_scalaire but with additional option.

```
See also: loi_standard_hydr_scalaire (30.4)

Usage:
loi_expert_scalaire obj Lire obj {
        [ prdt_sur_kappa float]
        [ calcul_ldp_en_flux_impose int into [0, 1]]
}
where
```

- prdt_sur_kappa *float*: This option is to change the default value of 2.12 in the scalable wall function.
- calcul_ldp_en_flux_impose int into [0, 1]: By default (value set to 0), the law of the wall is not applied for a wall with a Neumann condition. With value set to 1, the law is applied even on a wall with Neumann condition.

30.3 loi_paroi_nu_impose

Description: Keyword to impose Nusselt numbers on the wall for the thermohydraulic problems. To use this option, it is necessary to give in the data file the value of the hydraulic diameter and the expression of the Nusselt number.

```
See also: turbulence_paroi_scalaire_base (30)

Usage:
loi_paroi_nu_impose obj Lire obj {
    nusselt str
    diam_hydr champ_base
}
where
```

- **nusselt** *str*: The Nusselt number. This expression can be a function of x, y, z, Re (Reynolds number), Pr (Prandtl number).
- diam_hydr champ_base (15.1): The hydraulic diameter.

30.4 loi_standard_hydr_scalaire

Description: Keyword for the law of the wall.

See also: turbulence_paroi_scalaire_base (30) loi_expert_scalaire (30.2)

Usage:

loi_standard_hydr_scalaire

30.5 negligeable_scalaire

Description: Keyword to suppress the calculation of a law of the wall with a turbulence model for thermohydraulic problems. The wall stress is directly calculated with the derivative of the velocity, in the direction perpendicular to the wall.

```
See also: turbulence_paroi_scalaire_base (30)
```

Usage:

negligeable_scalaire

30.6 paroi_tble_scal

Description: Keyword for the Thin Boundary Layer Equation thermal wall-model.

```
See also: turbulence_paroi_scalaire_base (30)
Usage:
```

```
paroi_tble_scal obj Lire obj {
    [ n int]
    [ facteur float]
    [ modele_visco str]
    [ nb_comp int]
    [ stats fourfloat]
```

```
[ sonde_tble liste_sonde_tble]
  [ prandtl float]
}
where
```

- n int: Number of nodes in the TBLE grid (mandatory option).
- **facteur** *float*: Stretching ratio for the TBLE grid (to refine, the TBLE facteur must be greater than 1).
- modele_visco str: File name containing the description of the eddy viscosity model.
- **nb_comp** *int*: Number of component to solve in the fine grid (1 if 2D simulation (2D not available yet), 2 if 3D simulation).
- stats fourfloat (30.7): Statistics of the TBLE velocity and turbulent viscosity profiles. 4 values are required: the starting time of velocity averaging, the starting time of the RMS fluctuations, the ending time of the statistics computation and finally the print time period for the statistics.
- sonde_tble liste_sonde_tble (29.7)
- prandtl float

30.7 fourfloat

```
Description: Four reals.

See also: objet_lecture (32)

Usage:
a b c d
where

a float: First real.
b float: Second real.
c float: Third real.
d float: Fourth real.
```

31 listobj_impl

```
Description: not_set

See also: objet_u (33) listobj (31.3)

Usage:

31.1 list_un_pb

Description: pour les groupes

See also: listobj (31.3)

Usage:
{ object1 , object2 .... }

list of un_pb (31.2) separeted with ,
```

31.2 un_pb

Description: pour les groupes

See also: objet lecture (32)

Usage: **mot** where

• mot str: the string

31.3 listobj

Description: List of objects.

See also: listobj_impl (31) champs_a_post (4.2.18) list_stat_post (4.2.21) listpoints (4.2.7) sondes (4.2.3) listchamp_generique (7.3) list_nom_virgule (7.2) definition_champs (4.2.1) post_processings (4.3) liste_post (4.5) liste_post_ok (4.4) condlims (5.4) sources (5.5) vect_nom (3.104) list_nom (3.89) list_bord (3.50.4) list_bloc_mailler (3.50) list_un_pb (31.1) list_list_nom (4.8) ecrire_fichier_xyz_valeur_param (5.6) pp (5.17) listdeuxmots_sacc (27.24) liste_sonde_tble (29.7) listeqn (4.10) list_info_med (4.33) listsous_zone_valeur (5.9.12) reactions (8.1)

Usage:

32 objet_lecture

Description: Auxiliary class for reading.

See also: objet_u (33) bloc_lecture (3.41) deuxmots (5.21) format_file (4.6) deuxentiers (28.2) floatfloat (5.22) entierfloat (29.8) champ_a_post (4.2.19) champs_posts (4.2.17) stat_post_deriv (4.2.22) stats_posts (4.2.20) stats serie posts (4.2.28) sonde base (4.2.5) un point (3.9.3) sonde (4.2.4) definition champ (4.2.2) postraitement base (4.4.2) un postraitement (4.3.1) type un post (4.5.2) type postraitement ftlata (4.5.3) un postraitement spec (4.5.1) nom postraitement (4.4.1) condinit (5.3.1) condinits (5.3) condlimlu (5.4.1) mailler_base (3.50.1) bloc_pave (3.50.3) defbord (3.50.7) bord_base (3.50.5) parametre_equation-_base (5.7) un_pb (31.2) bords_ecrire (5.6.2) ecrire_fichier_xyz_valeur_item (5.6.1) convection_deriv (5.9.1) bloc_convection (5.9) diffusion_deriv (5.2.1) op_implicite (5.2.9) bloc_diffusion (5.2) traitement_particulierbase (5.23.1) traitement particulier (5.23) penalisation 12 ftd lec (5.17.1) dt impr ustar mean only (5.26.1) modele_turbulence_hyd_deriv (5.26) paroi_ft_disc_deriv (32.1) bloc_sutherland (20.5) form_a_nb_points (5.26.4) modele_fonction_bas_reynolds_base (5.26.12) fourfloat (30.7) twofloat (29.6) sonde_tble (29.7.1) remove_elem_bloc (3.77) lecture_bloc_moment_base (3.9) bloc_origine_cotes (28.1) bloc_couronne (28.3) bloc_tube (28.4) verifiercoin_bloc (3.107) bloc_lecture_poro (3.61) bloc_lec_champ_init_canal_sinal (15.13) fonction_champ_reprise (15.9) bloc_decouper (3.58) troisf (3.35) spec_pdcr_base (27.15) format_lata_to-_med (3.46) info_med (4.33.1) methode_transport_deriv (32.2) bloc_ef (5.9.9) sous_zone_valeur (5.9.13) bloc_diffusion_standard (5.2.7) reaction (8.1.1)

Usage:

32.1 paroi_ft_disc_deriv

Description: not_set

See also: objet lecture (32) symetrie (32.1.1)

```
Usage:
paroi_ft_disc_deriv
```

32.1.1 symetrie

Description: Symetrie condition in the case of two-phase flows

See also: paroi_ft_disc_deriv (32.1)

Usage: symetrie

32.2 methode_transport_deriv

Description: Basic class for method of transport of interface.

See also: objet_lecture (32) loi_horaire (32.2.1)

Usage:

methode_transport_deriv

32.2.1 loi_horaire

Description: not_set

See also: methode_transport_deriv (32.2)

Usage:

loi_horaire nom_loi

where

• nom_loi str

33 index

Index

	/*, 136	cf, 245, 246
	#, 156	chakravarthy, 102
	, 130	champ_frontiere, 141
	, 91, 94, 98, 116	chsom, 53
	associer, 7	composante , 146, 147
	champ_post_statistiques_correlation, 59, 139	conservation_masse, 193, 194
	champ_post_statistiques_ecart_type, 59, 140	constant, 193, 194
	champ_post_statistiques_moyenne, 59, 143	coriolis_seul, 240
	champ_uniforme, 180	Cotes, 251
	decouper, 30, 199	d, 246
	discretiser, 12	debit_total, 21
	divergence, 140	default, 142
	ecrire_fichier, 50	defaut_bar, 92, 100
	extraction, 141	dir, 252
	fin , 19	distant, 26
	gradient, 141	divrhouT_moins_Tdivrhou, 104, 105
	interpolation, 142	divuT_moins_Tdivu, 104, 105
	lire, 35	dt_integr, 60
	lire_fichier, 36	dt_post, 57, 58
	lire_fichier_bin, 36	edo, 193, 194
	lire_med , 5	elem, 28, 29, 57, 59, 60, 173
	morceau_equation, 143	entrainement_seul, 240
	operateur_eqn, 138	euclidian_norm , 144, 145
	postraitement, 62	faces, 57, 59, 60
	postraitements, 61	family_names_from_group_names, 6
	raffiner_simplexes, 34	filtrer_resu, 93, 100
	rectify_mesh, 37	Fluctu_Temperature_ext , 158
	reduction_0d, 144	flux_bords, 143
	refchamp, 145	Flux_Chaleur_Turb_ext, 158
	resoudre, 41	fonction, 174
	schema_euler_explicite, 208	format_post_sup, 22
	schema_euler_implicite, 229	formatte, 13, 56, 63, 173
	tparoi_vef, 146	formule , 146, 147
1	transformation, 146	grad_Ubar, 93
	<=, 25, 26	grav, 53
:	= , 25	hauteur, 252
	a, 245, 246	homogene, 26
	amont, 102	implicite, 93
	ancien, 104, 105	integrale_en_z, 21
	antisym, 100	k, 168
	arrete, 124–130	K_Eps_ext, 158
	avec_les_cl , 114, 119–121, 133, 134	kx, 246
	avec_sources, 114, 119–121, 133, 134	ky, 246
	avec_sources_et_operateurs, 114, 119–121, 133, 134	kz, 246
	average, 144, 145	L1_norm, 144, 145
1	b, 245, 246	L2_norm , 144, 145
	binaire, 13, 56, 63, 173	last_time, 173
	bords, 95	lata, 22, 33, 52, 62
	C, 194	lata_v1, 22, 33, 52, 62
	C_ext , 158	lata_v2, 22, 33, 52, 62
•	centre, 102	

left_value, 144, 145	use_existing_domain, 173
lml, 22, 33, 52, 62	V2_ext, 158
local, 26	valeur_a_gauche, 144, 145
max , 144, 145	valeur_normale, 186
med, 22, 33, 52, 62	vanalbada, 102
med_major, 52, 62	vanleer, 102
min, 144, 145	vecteur, 146, 147
minmod, 102	vef , 6
moins_rho_moyen, 193, 194	vitesse_paroi, 168
moyenne, 144, 145	vitesse_tangentielle, 189
moyenne_ponderee , 144, 145	volume, 124–130
mu0, 194	volume_sans_lissage, 124–130
muscl, 102	weighted_average, 144, 145
nb_pas_dt_post , 57, 58	weighted_sum , 144, 145
no , 135, 136, 142	weighted_sum_porosity, 144, 145
nodes, 53	X, 25, 40, 252
non, 30	x, 245, 246
normalized_euclidian_norm , 144, 145	xyz, 63, 173
norme, 146, 147	Y, 25, 26, 40, 252
nu, 93	y, 245, 246
nu_transp, 93	yes, 135, 136, 142
_	Z, 25, 26, 40, 252
nut, 93	
nut_transp, 93	z, 245, 246
Origine , 251, 252	, 91, 94, 98, 116
oui, 30	champs , 52, 62
periode, 53	conditions_initiales , 90, 97, 104–106, 108–113,
post_processing, 63	115, 120, 122, 135, 136
postraitement, 63	conditions_limites , 90, 97, 104–106, 108–113,
postraitement_ft_lata, 63	115, 120, 122, 135, 136
postraitement_lata, 63	fichier, 33
produit_scalaire, 146, 147	nom_zones , 31
que_les_faces_des_elts_dirichlet, 253	partitionneur, 31
re, 252	postraitement , 51, 65–78, 80–87, 89
ri , 252	postraitements , 51, 65–78, 80–87, 89
sans_rien, 114, 119–121, 133, 134	Read_file , 49
scotti, 124–130	save_matrice , 150, 151, 156
short_family_names, 6	sondes , 52, 62
Slambda, 194	1D , 118
solveur, 93	3D , 118
som, 28, 29, 53, 57, 59, 60, 173	A_plus , 253
somme, 144, 145	acceleration, 240
somme_ponderee, 144, 145	alias , 106, 107
somme_ponderee_porosite, 144, 145	alpha , 100, 101, 254
stabilite, 143	alpha_0 , 201
standard, 193, 194	alpha_1 , 201
sum, 144, 145	alpha_a , 201
superbee, 102	alpha_sous_zone , 101
T0, 194	amont_sous_zone , 101
T_ext, 158	ampli_bruit , 175
terme_complet, 240	ampli_sin , 175
toutes_les_faces_accrochees, 253	ascii , 5, 43
trace, 141	avec_certains_bords , 16
transportant_bar, 100	avec_certains_bords_pour_extraire_surface , 16
transporte bar, 100	avec les bords, 16

beta_co , 192, 193	convection_diffusion_temperature_turbulent , 78,
beta_th , 192, 193	79, 84, 87
binaire , 11, 33	correction_fraction , 190
boite , 251	correction_visco_turb_pour_controle_pas_de_temp
bord , 9, 116, 242	, 122, 124, 126–128, 130–133
bords_a_decouper , 11	correction_visco_turb_pour_controle_pas_de_temp
boundaries , 123	_parametre , 122, 124, 126–128, 130–
boundary_conditions , 90, 97, 104–106, 108–113,	133
115, 120, 122, 135, 136	corriger_partition , 198
boundary_xmax , 28	couronne, 251
boundary_xmin , 28	Cp , 190
boundary_ymax , 28	cp , 164, 165, 171, 190–195
boundary_ymin , 28	crank, 96
boundary_zmax , 28	critere_absolu , 18
boundary_zmin , 28	cs , 127
btd , 103	Cv , 190
co , 241	cw , 126
c1_eps , 240, 249, 250	
<u>-</u>	d , 179, 181
c2_eps , 240, 249, 250	debit , 164, 165
c3_eps , 240, 250	debit_impose , 242
calc_spectre , 118	debut_stat , 117
calcul_ldp_en_flux_impose , 256	definition_champs , 52, 62
canalx , 129	delta, 163
centre_rotation , 240	derivee_rotation , 191
champ_med , 21	dh , 164, 165
changement_de_base_p1bulle , 170	diag , 151
cl_pression_sommet_faible , 170	diam_hydr , 243–245, 256, 257
cmu , 133	diam_hydr_ortho , 244
coef , 191	diffusion , 90, 97, 104–106, 108–113, 115, 120,
coeff, 242	121, 134, 136
coefficient_diffusion , 192	diffusion_implicite, 203, 205, 207, 209, 210, 212,
coefficients_activites , 148	214, 216, 217, 219, 221, 224, 226, 228,
compo , 143	231, 233, 235
condition_elements , 15, 16	dim_espace_krilov , 151
condition_faces , 16	dir , 164, 165
condition_geometrique , 11	dir_flow, 175
conduction, 66	dir_wall, 175
conduction_milieu_variable , 67	direction , 9, 17–19, 116, 243, 244
conservation_Ec , 118	disable_dt_ev , 203, 205, 207, 209, 211, 213, 214,
constante_modele_micro_melange , 147	216, 218, 220, 222, 224, 227, 229, 231,
constante_taux_reaction , 148	233, 235
contre_energie_activation , 148	disable_progress , 203, 205, 207, 209, 211, 213,
contre_reaction , 148	214, 216, 218, 220, 222, 224, 227, 229,
controle_residu , 151, 236–239	231, 233, 235
convection , 97, 104–108, 110–113, 115, 120, 121,	dmax , 129
134, 136	domain , 27
convection_diffusion_chaleur_qc , 81, 82	domaine , 9, 10, 15, 16, 18, 19, 33, 52, 62, 141,
convection_diffusion_chaleur_turbulent_qc , 85,	142, 199
86	domaine_final , 9, 17
convection_diffusion_concentration , 69, 70, 76,	domaine_grossier, 10
77	domaine_init , 9, 17
convection_diffusion_concentration_turbulent ,	domaines , 33
71, 72, 78, 79	domegadt , 240
convection diffusion temperature , 75–77, 83	

```
dt_impr , 123, 164, 165, 202, 204, 207, 208, 210,
                                                           234
         212, 214, 215, 217, 219, 221, 223, 226,
                                                 facsec_max , 204, 206, 220, 223, 225, 227, 230
         228, 231, 233, 234
                                                  facteur, 103, 254, 258
                                                  facteurs, 24
dt_impr_moy_spat , 117
                                                  fichier, 52, 62, 129, 198, 251
dt impr moy temp, 117
dt_impr_nusselt, 195-197
                                                  fichier_ecriture_K_Eps , 129
dt impr ustar , 123, 125–128, 130–133
                                                  fichier matrice, 43
                                                 fichier post, 9
dt impr ustar mean only , 123, 125–128, 130–
                                                  fichier secmem . 43
dt max , 202, 204, 207, 208, 210, 212, 213, 215,
                                                 fichier solution, 43
         217, 219, 221, 223, 226, 228, 230, 232,
                                                  fichier solveur, 43
                                                  fichier_solveur_non_recree , 152
dt_min , 202, 204, 207, 208, 210, 212, 213, 215,
                                                  fichier_sortie, 21
         217, 219, 221, 223, 226, 228, 230, 232,
                                                 fields , 52, 62
                                                  file , 33
dt_projection, 114, 119, 121, 134
                                                  file_coord_x , 28
dt_sauv , 202, 204, 207, 208, 210, 212, 213, 215,
                                                 file_coord_y, 28
                                                  file_coord_z, 28
         217, 219, 221, 223, 226, 228, 230, 232,
                                                  fin_stat, 117
dt start , 203, 205, 207, 209, 211, 212, 214, 216,
                                                  fonction , 39, 128
         218, 219, 222, 224, 226, 229, 231, 233,
                                                  fonction filtre, 29
         235
                                                  fonction sous zone, 251
dtol fraction, 190
                                                  format, 33, 52, 62
Ec , 117
                                                  format post, 29
Ec dans repere fixe, 117
                                                  formatte, 31
ecrire decoupage . 31
                                                  formulation a nb points, 124, 126–130
ecrire_fichier_xyz_valeur , 90, 97, 104–106, 108–
                                                 frequence recalc, 152
         113, 115, 120, 122, 135, 136
                                                  function coord x, 28
ecrire_fichier_xyz_valeur_bin , 90, 97, 104, 105,
                                                 function_coord_y , 28
         107-113, 115, 120, 122, 135, 136
                                                  function_coord_z, 28
ecrire_frontiere, 33
                                                  gamma , 190
                                                  genere_fichier_solveur, 43
ecrire lata, 31
emissivite_pour_rayonnement_entre_deux_plaquesghost_thickness, 27
         _quasi_infinies , 165
                                                  groupes, 64
energie_activation, 148
                                                  h, 175, 242
enthalpie_reaction, 148
                                                  hexa_old, 17
epaisseur, 16, 18
                                                  ignore check fraction, 190
eps max, 131, 133
                                                  impr , 43, 149–151, 156
eps min , 131, 133
                                                  impr diffusion implicite, 203, 205, 207, 209, 211,
equation_frequence_resolue, 97
                                                           212, 214, 216, 218, 219, 222, 224, 226,
equation non resolue, 90, 97, 98, 104, 106–113,
                                                           229, 231, 233, 235
         115, 120, 122, 135, 136
                                                  indice , 192-194
equations scalaires passifs , 65, 70, 72, 77, 79,
                                                 info . 92
         82, 83, 86, 87
                                                  init Ec , 118
Erugu, 253
                                                  initial conditions, 90, 97, 104–106, 108–113, 115,
                                                           120, 122, 135, 136
erugu , 168
espece , 108, 110
                                                  initial_value, 176, 182
espece_en_competition_micro_melange , 147
                                                  interfaces, 52, 62
expert_only, 49
                                                  intervalle, 251
exposant_beta, 148
                                                  inverse_condition_element, 16
                                                  joints_non_postraites, 33
expression, 147
facon_init, 118
                                                  k, 193
facsec , 202, 205, 207, 208, 210, 212, 214, 215,
                                                 k_min, 132, 133
         217, 219, 221, 224, 226, 228, 231, 233, kappa, 192–194, 253, 254
```

kmetis, 199	nb_procs , 14
lambda , 164, 165, 171, 191–195, 243–245, 248,	nb_test, 43
254	nb_tranche, 21
lambda_c , 256	nb_tranches , 17–19
lambda_max , 248	nb_var , 128
lambda_min , 248	new_jacobian , 92
lambda_ortho , 243, 244	niter_avg , 204, 206
larg_joint , 31	niter_max , 204, 206
Lire_fichier , 49	niter_max_diffusion_implicite, 96, 203, 205, 207
liste, 39, 251	209, 211, 212, 214, 216, 218, 219, 222
liste_cas , 14	224, 226, 229, 231, 233, 235
liste_de_postraitements , 51, 65–78, 80–87, 89	niter_min , 204, 206
liste_postraitements , 51, 65–78, 80–87, 89	no_check_disk_space , 203, 205, 207, 209, 211
localisation , 29, 142, 147	213, 214, 216, 218, 220, 222, 224, 227
loi_etat , 194	229, 231, 233, 235
longueur_boite , 118	no_conv_subiteration_diffusion_implicite , 203
longueur_maille , 124, 126–130	205, 207, 209, 211, 212, 214, 216, 218
longueurs , 24	219, 222, 224, 226, 229, 231, 233, 235
main, 32	no_error_if_not_converged_diffusion_implicite
masse_molaire , 106, 107, 171	203, 205, 207, 209, 211, 212, 214, 216
max_iter_implicite , 221, 223, 225, 228, 230, 232	218, 219, 222, 224, 226, 229, 231, 233 235
methode , 21, 141, 142, 145, 146	
methode_calcul_face_keps_impose , 253	no_qdm , 236–239
methode_calcul_pression_initiale , 114, 119, 121,	nom , 176, 182
134	nom_bord , 17, 18
min_dir_flow , 176	nom_cl_derriere , 19
min_dir_wall , 176	nom_cl_devant , 19
mode_calcul_convection , 104, 105	nom_domaine , 29
modele_fonc_bas_reynolds , 132	nom_fichier_post , 29
modele_micro_melange , 147	nom_fichier_solveur , 152
modele_turbulence , 105, 107, 109, 112, 121, 134	nom_fichier_sortie , 11
modele_visco , 254, 258	nom_frontiere , 141
modif_div_face_dirichlet , 171	nom_inconnue , 106, 107
moyenne_convergee , 144	nom_pb , 29
mu, 164, 165, 171, 192–194, 254	nom_source , 137–147
n , 165, 193, 254, 258	nombre_de_noeuds , 24
name_of_initial_zones , 5	noms_champs , 29
name_of_new_zones , 5	non_perio , 17
navier_stokes_qc , 81, 82	normal_value , 181
navier_stokes_standard , 68-70, 75-77, 83	nu , 92, 164, 165
navier_stokes_turbulent , 71-73, 78, 79, 84, 87	nu_transp , 92
navier_stokes_turbulent_qc , 85, 86	numero , 143, 147
nb_comp , 176, 182, 258	numero_op , 138
nb_corrections_max , 236-238	numero_source , 138
nb_it_max , 150, 151, 156, 236–239	nusselt, 257
nb_nodes , 27	nut , 92
nb_parts , 198–200	nut_max , 123, 125–128, 130–133
nb_parts_geom , 10	nut_transp , 92
nb_parts_naif , 10	old , 101
nb_parts_tot , 31	omega , 175, 201, 204, 240
nb_pas_dt_max , 203, 205, 207, 209, 211, 212,	omega_relaxation_drho_dt , 194
214, 216, 218, 219, 222, 224, 226, 229,	optimisation_sous_maillage , 142
231, 233, 235	optimized , 150, 156
nb points par phase , 117	option , 143, 240
AND PURSON PER PRINCIPLY 1 1 1 /	Operation 1 1 10 1 10 10

```
Origine, 24
                                                  reactifs, 148
origine, 16
                                                  reactions, 147
p0, 170
                                                  rectangle, 251
                                                  relax_pression, 238
p1, 170
p_imposee_aux_faces, 30
                                                  reorder, 31
pa , 170
                                                  reprise , 51, 65–77, 79–86, 88, 89, 117
par sous zone, 9
                                                  reprise correlation, 164, 165
                                                 resolution explicite, 97
parametre equation , 90, 97, 104, 106–113, 115,
         120, 122, 135, 136
                                                  restart, 254
                                                  restriction, 251
Partition tool, 31
pas de solution initiale, 43
                                                  resume last time , 51, 65–76, 78–85, 87–89
pb_champ , 144, 145
                                                  rho, 164, 165, 191–195
pb_name, 32
                                                  rho_constant_pour_debug, 190
penalisation_l2_ftd , 110
                                                  rotation, 191
perio_x , 27
                                                  sans_passer_par_le2D , 17
perio_y , 27
                                                  sans_solveur_masse, 138
perio_z, 28
                                                  sans_source_boussinesq, 254
periode, 118
                                                  sauvegarde , 51, 65-78, 80-87, 89
periode_calc_spectre , 118
                                                  sauvegarde_simple , 51, 65-77, 79-86, 88, 89
periode sauvegarde securite en heures , 203, 205, save matrix , 150, 151, 156
         207, 209, 211, 213, 214, 216, 218, 220,
                                                 sc , 190
         222, 224, 227, 229, 231, 233, 235
                                                  scturb, 197
periodique, 31
                                                  segment, 251
point1, 16
                                                  seuil, 150, 151, 156, 204, 206
                                                  seuil convergence implicite, 96, 236-238
point2, 16
point3, 16
                                                  seuil convergence solveur, 97, 236–239
                                                  seuil diffusion implicite, 96, 203, 205, 207, 209,
polynomes, 251
position, 191
                                                           211, 212, 214, 216, 218, 219, 222, 224,
Post_processing , 51, 65–78, 80–87, 89
                                                           226, 229, 231, 233, 235
Post_processings , 51, 65–78, 80–87, 89
                                                  seuil_divU , 114, 119, 121, 134
                                                  seuil generation solveur, 236-239
prandt_turbulent_fonction_nu_t_alpha , 196
Prandtl, 190
                                                  seuil_statio , 203, 205, 207, 209, 210, 212, 214,
prandtl , 190, 258
                                                           216, 217, 219, 221, 224, 226, 228, 231,
prandtl_eps , 133
                                                           233, 234
prandtl_k , 133
                                                  seuil_statio_relatif_deconseille , 203, 205, 207,
prdt , 196
                                                           209, 210, 212, 214, 216, 217, 219, 221,
                                                           224, 226, 228, 231, 233, 235
prdt sur kappa, 256
precision impr , 203, 205, 207, 209, 211, 213,
                                                 seuil test preliminaire solveur, 236–239
         214, 216, 218, 220, 222, 224, 227, 229,
                                                  seuil verification, 43
         231, 233, 235
                                                  seuil_verification_solveur, 236-239
                                                  solveur, 43, 97, 221, 223, 225, 228, 230, 232, 236-
precond, 150, 156
                                                           239
precond0, 201
precond1, 201
                                                  solveur0, 150
precond nul , 150, 156
                                                  solveur1, 150
preconda, 201
                                                  solveur_bar , 114, 119, 121, 134
preconditionnement_diag, 96
                                                  solveur_pression , 114, 119, 121, 134
pression, 194
                                                  sonde_tble , 254, 258
Probes , 52, 62
                                                  source, 137-147
probleme , 15, 16, 176, 177, 182
                                                  source reference, 137–147
                                                  sources , 90, 97, 104–106, 108–113, 115, 120, 122,
produits, 148
projection_initiale , 114, 119, 121, 134
                                                           135-147
projection_normale_bord , 18
                                                  sources_reference , 137–147
pulsation_w , 117
                                                  sous_zone , 15, 176, 177, 182, 243–245
quiet , 132, 133, 149–151, 156
                                                  sous zones, 200
```

splitting, 27	vingt_tetra , 17
standard, 92	vitesse , 191, 240
stationnaire, 254	volume , 164
statistiques , 52, 62	volumes_etendus , 101
statistiques_en_serie , 52, 62	volumes_non_etendus , 101
stats , 254, 258	volumique , 32
surface, 165	with_nu , 136
surfacique, 32	xinf , 165
sutherland, 194	xsup , 165
symx , 24	zmax, 21
symy , 24	zmin , 21
symz , 24	zones_name , 31
t0, 241	
t_deb , 139, 140, 144	acceleration, 240
t_fin , 139, 140, 144	amont, 98
tanh , 24	amont_old, 98
tanh_dilatation, 24	analyse_angle, 6
tanh_taille_premiere_maille , 24	associate, 6
tcpumax , 202, 204, 207, 208, 210, 212, 213, 215,	axi, 7
217, 219, 221, 223, 226, 228, 230, 232,	1.1.
234	bidim_axi, 7
tdivu , 101	bord, 24
temps_debut_prise_en_compte_drho_dt , 194	bord_base, 24
test , 101	boundary_field_inward, 181 boundary_field_uniform_keps_from_ud, 181
tinf , 164, 165	boundary_neid_uniform_keps_from_ud, 181 boussinesq_concentration, 240
tinit, 202, 204, 206, 208, 210, 212, 213, 215, 217,	boussinesq_temperature, 241
219, 221, 223, 226, 228, 230, 232, 234	btd, 103
tmax , 202, 204, 207, 208, 210, 212, 213, 215, 217,	btd, 103
219, 221, 223, 226, 228, 230, 232, 234	calcul, 8
traitement_coins , 30	calculer_moments, 7
traitement_particulier , 115, 120, 121, 134	canal, 116
traitement_pth , 194	canal_perio, 241
traitement_rho_gravite , 194	centre, 98
tranches , 200	centre4, 99
transport_k_epsilon , 132 triangle , 16	centre_de_gravite, 8
trois_tetra , 17	centre_old, 99
tsup , 164, 165	ch_front_input, 181
tube , 251	ch_front_input_uniforme, 182
turbulence_paroi , 123, 125–128, 130–133, 195–	champ_base, 171
197	champ_don_base, 172
tuyauz, 129	champ_don_lu, 172
type , 143	champ_fonc_fonction, 172
u , 179, 181	champ_fonc_fonction_txyz, 172
u_star_impose, 253	champ_fonc_med, 173
u_tau , 256	Champ_Fonc_MEDfile, 171
ubar_umprim_cible , 248	champ_fonc_reprise, 173
ucent , 175	champ_fonc_t, 174
union, 251	champ_fonc_tabule, 174
use_weights , 199	champ_fonc_txyz, 178
val_Ec , 118	champ_fonc_xyz, 179
verif_boussinesq , 241	champ_front_base, 181
verif_dparoi , 129	champ_front_bruite, 183
via_extraire_surface, 16	champ_front_calc, 183

champ_front_contact_vef, 183	convection_diffusion_chaleur_qc, 103
champ_front_debit, 184	convection_diffusion_chaleur_turbulent_qc, 105
champ_front_fonc_pois_ipsn, 184	convection_diffusion_concentration, 106
champ_front_fonc_pois_tube, 184	convection_diffusion_concentration_turbulent, 107
champ_front_fonc_txyz, 185	convection_diffusion_fraction_massique_qc, 108
champ_front_fonc_xyz, 185	convection_diffusion_fraction_massique_turbulent_qc,
champ_front_fonction, 185	109
champ_front_lu, 185	convection_diffusion_temperature, 110
champ_front_MED, 182	convection_diffusion_temperature_turbulent, 111
champ_front_normal_vef, 186	coriolis, 242
champ_front_pression_from_u, 186	Correlation, 57
champ_front_recyclage, 186	correlation, 59, 139
champ_front_tabule, 188	corriger_frontiere_periodique, 8
champ_front_tangentiel_vef, 188	create_domain_from_sous_zone, 9
champ_front_uniforme, 189	
champ_generique_base, 136	darcy, 242
champ_init_canal_sinal, 174	debog, 9
champ_input_base, 176	decoupebord_pour_rayonnement, 10
champ_input_p0, 176	decouper_bord_coincident, 11
champ ostwald, 177	di_12, 99
champ_post_de_champs_post, 136	diffusion_deriv, 91
champ_post_extraction, 141	dilate, 11
champ_post_interpolation, 142	dimension, 11
champ_post_morceau_equation, 142	dirac, 242
champ_post_operateur_base, 137	dirichlet, 157
champ_post_operateur_divergence, 140	disable_TU, 11
champ_post_operateur_eqn, 138	discretisation_base, 169
champ_post_operateur_gradient, 141	discretiser_domaine, 12
champ_post_reduction_0d, 144	discretize, 12
champ_post_refchamp, 145	distance_paroi, 12
champ_post_statistiques_base, 138	domain, 26
champ_post_tparoi_vef, 145	domaine, 171
champ_post_transformation, 146	dt_calc, 149
champ_som_lu_vdf, 177	dt_fixe, 149
champ_som_lu_vef, 177	dt_min, 149
champ_tabule_temps, 177	dt_start, 149
champ_uniforme_morceaux, 178	Dt_post, 57
champ_uniforme_morceaux_tabule_temps, 178	
Champ_front_fonc_txyz, 3	ec, 117
chimie, 147	ecart_type, 59, 140
chmoy_faceperio, 118	Ecart_type, 57, 60
Cholesky, 152–154	ecrire, 49
cholesky, 148	ecrire_champ_med, 13
circle, 56	ecrire_fichier_bin, 49
circle_3, 56	ecrire_fichier_formatte, 13
class_generic, 148	ecrire_med, 50
combinaison, 127	ecrire_medfile, 50
Concentration, 57, 60	ecriturelecturespecial, 13
condlim_base, 157	ef, 99, 169
condlims, 94	ef_stab, 100
conduction, 90	end, 19
conduction_milieu_variable, 97	entree_temperature_imposee_h, 158
constituant, 191	epsilon, 26
convection_deriv, 98	eqn_base, 112

execute_parallel, 13	internes, 26
export, 14	interprete, 4
extract_2d_from_3d, 14	interprete_geometrique_base, 21
extract_2daxi_from_3d, 14	
extraire_domaine, 14	k_epsilon, 132
extraire_plan, 15	kquick, 102
extraire_surface, 16	
extrudebord, 16	lata_to_med, 21
extrudeparoi, 17	lata_to_other, 22
extruder, 18	leap_frog, 209
extruder_en20, 18	lire_ideas, 22
extruder_en3, 19	lire_medfile, 6
	lire_tgrid, 36
fichier_decoupage, 198	list_bloc_mailler, 23
field_uniform_keps_from_ud, 179	list_bord, 24
fluide_incompressible, 192	list_nom, 42
fluide_ostwald, 192	list_nom_virgule, 137
fluide_quasi_compressible, 193	liste_post, 62
forchheimer, 243	liste_post_ok, 61
frontiere_ouverte, 158	listobj, 259
frontiere_ouverte_concentration_imposee, 158	listobj_impl, 258
frontiere_ouverte_fraction_massique_imposee, 158	local, 154
frontiere_ouverte_gradient_pression_impose, 159	loi_analytique_scalaire, 256
frontiere_ouverte_gradient_pression_impose_vefprep	ılpi,_etat_base, 189
159	loi_expert_hydr, 252
frontiere_ouverte_gradient_pression_libre_vef, 159	loi_expert_scalaire, 256
frontiere_ouverte_gradient_pression_libre_vefprep1b	,loi_fermeture_base, 190
159	loi_fermeture_test, 190
frontiere_ouverte_k_eps_impose, 159	loi_horaire, 191, 260
frontiere_ouverte_pression_imposee, 160	loi_paroi_nu_impose, 256
frontiere_ouverte_pression_imposee_orlansky, 160	loi_standard_hydr, 253
frontiere_ouverte_pression_moyenne_imposee, 160	loi_standard_hydr_old, 253
frontiere_ouverte_rho_u_impose, 160	loi_standard_hydr_scalaire, 257
frontiere_ouverte_temperature_imposee, 161	longitudinale, 245
frontiere_ouverte_vitesse_imposee, 161	longueur_melange, 129
frontiere_ouverte_vitesse_imposee_sortie, 161	:II 22
	mailler, 22
gaz_parfait, 190	mailler_base, 23
gaz_reel_rhot, 189	maillerparallel, 27
GCP, 152, 155	melange_gaz_parfait, 189 methode_transport_deriv, 260
gcp, 155	
gcp_ns, 149	metis, 198
gen, 150	milieu_base, 191
generic, 101	mod_turb_hyd_rans, 131
gmres, 150	mod_turb_hyd_ss_maille, 124
Gradient, 152	modele_fonction_bas_reynolds_base, 133 modele_turbulence_hyd_deriv, 122
IBICGSTAB, 152	modele_turbulence_scal_base, 195
implicite, 235	modif_bord_to_raccord, 28
imprimer_flux, 20	
imprimer_flux_sum, 20	mor_eqn, 90 Moyenne, 57, 60
init_par_partie, 179	moyenne, 59, 143
integrer_champ_med, 20	moyenne_volumique, 28
Interface, 153	muscl, 102
11101100, 100	1114501, 102

muscl3, 100	partition, 30, 199
muscl_new, 102	partitionneur_deriv, 198
muscl_old, 102	pave, 23
musei_old, 102	pb_avec_passif, 64
N, 153	Pb_base, 50
navier_stokes_qc, 113	pb_conduction, 65
navier_stokes_standard, 119	pb_conduction_milieu_variable, 66
navier_stokes_turbulent, 120	pb_gen_base, 50
navier_stokes_turbulent_qc, 133	pb_hydraulique, 67
negligeable, 91, 103, 253	pb_hydraulique_concentration, 68
negligeable_scalaire, 257	pb_hydraulique_concentration_scalaires_passifs, 69
nettoiepasnoeuds, 29	pb_hydraulique_concentration_turbulent, 70
neumann, 161	pb_hydraulique_concentration_turbulent_scalaires_passifs,
Neumann_homogene, 157	po_nydradique_concentration_turbulent_scarafies_passiis,
Neumann_paroi_adiabatique, 157	nh hydraulique turbulent 73
nom, 197	pb_hydraulique_turbulent, 73
NUL, 123	pb_thermohydraulique, 74
NULL, 154	pb_thermohydraulique_concentration, 75
numero_elem_sur_maitre, 54	pb_thermohydraulique_concentration_scalaires_passifs,
municio_ciem_sur_martie, 54	76
objet_lecture, 259	pb_thermohydraulique_concentration_turbulent, 78
optimal, 151	pb_thermohydraulique_concentration_turbulent_scalaires-
option, 93	_passifs, 79
option_vdf, 29	pb_thermohydraulique_qc, 80
orientefacesbord, 30	pb_thermohydraulique_qc_fraction_massique, 81
orienter_simplexes, 37	pb_thermohydraulique_scalaires_passifs, 82
orienter_simplexes, s /	pb_thermohydraulique_turbulent, 83
p1b, 91	pb_thermohydraulique_turbulent_qc, 84
plncplb, 91	pb_thermohydraulique_turbulent_qc_fraction_massique,
parametre_diffusion_implicite, 96	85
parametre_equation_base, 95	pb_thermohydraulique_turbulent_scalaires_passifs, 87
parametre_implicite, 96	pbc_med, 88
Paroi, 157	periodique, 168
paroi_adiabatique, 162	perte_charge_anisotrope, 243
paroi_contact, 162	perte_charge_circulaire, 243
paroi_contact_fictif, 163	perte_charge_directionnelle, 244
paroi_decalee_robin, 163	perte_charge_isotrope, 244
paroi_defilante, 163	perte_charge_reguliere, 245
paroi_echange_contact_correlation_vdf, 163	perte_charge_singuliere, 246
paroi_echange_contact_correlation_vef, 164	Petsc, 152, 154
paroi_echange_contact_vdf, 165	petsc, 152
paroi_echange_externe_impose, 166	pilote_icoco, 31
paroi_echange_externe_impose_h, 166	piso, 236
paroi_echange_global_impose, 166	plan, 55
manai fina 167	point, 54
paroi_fixe_iso_Genepi2_sans_contribution_aux_vites	points, 53
_sommets, 167	
paroi_flux_impose, 167	porosites_champ, 32
paroi_ft_disc_deriv, 259	position_like, 55
paroi_knudsen_non_negligeable, 167	post_processing, 61
paroi_knudsen_non_negrigeable, 107	post_processings, 60
paroi_tugueuse, 108	postraitement_base, 61
paroi_tole, 254 paroi_tble_scal, 257	postraiter_domaine, 33
paroi_tore_scar, 257 paroi_temperature_imposee, 168	pp, 111
paroi_competatore_imposee, 100	prandtl 196

precisiongeom, 33	segment, 55
Precond, 152, 154	segmentpoints, 54
precond_base, 200	simple, 237
precondsolv, 200	simpler, 238
predefini, 144	solide, 194
Pression, 57, 60	solide_milieu_variable, 195
Print, 153	solve, 41
problem_read_generic, 88	Solver, 152, 155
probleme_couple, 63	Solveur, 152, 154
puissance_thermique, 246	solveur_implicite_base, 235
1 - 1 /	solveur_lineaire_std, 239
quick, 103	solveur_sys_base, 156
	Solveur_pression, 152, 154
raccord, 26	sonde_base, 53
raffiner_anisotrope, 34	sortie_libre_temperature_imposee_h, 169
raffiner_isotrope, 34	source_base, 239
Raffiner_isotrope_parallele, 5	source_constituent, 247
read, 35	source_generique, 247
read_file, 35	source_qdm, 247
read_file_binary, 36	source_qdm_lambdaup, 247
read_med, 5	source_robin, 248
read_unsupported_ascii_file_from_icem, 36	source_robin_scalaire, 248
redresser_hexaedres_vdf, 37	source_th_tdivu, 249
refine_mesh, 37	source_transport_k_eps, 249
regroupebord, 37	source_transport_k_eps_aniso_concen, 249
remove_elem, 38	source_transport_k_eps_aniso_therm_concen, 250
remove_invalid_internal_boundaries, 39	Source_Transport_K_Eps_anisotherme, 239
reordonner, 40	sources, 94
reordonner_faces_periodiques, 39	sous_maille, 130
reorienter_tetraedres, 39	sous_maille_smago, 126
reorienter_triangles, 39	sous_maille_wale, 125
rotation, 40	sous_zone, 250
runge_kutta_ordre_3, 211	sous_zones, 199
runge_kutta_ordre_4_d3p, 213	Spai, 154
runge_kutta_rationnel_ordre_2, 214	spec_pdcr_base, 245
	SSOR, 154, 155
scalaire_impose_paroi, 168	ssor, 201
scatter, 40	ssor_bloc, 201
scatterformatte, 41	stab, 91
scattermed, 41	standard, 92
Sch_CN_EX_iteratif, 203	stat_post_deriv, 58
Sch_CN_iteratif, 205	Statistiques, 57, 60
schema_adams_bashforth_order_2, 216	Statistiques_en_serie, 60
schema_adams_bashforth_order_3, 218	supg, 103
schema_adams_moulton_order_2, 220	supprime_bord, 41
schema_adams_moulton_order_3, 222	symetrie, 169, 259
schema_backward_differentiation_order_2, 224	system, 42
schema_backward_differentiation_order_3, 227	system, 12
schema_implicite_base, 231	t_deb, 58
schema_predictor_corrector, 233	t_fin, 59
schema_temps_base, 202	tayl_green, 180
scheme_euler_explicit, 208	Temperature, 57, 60
scheme_euler_implicit, 229	temperature, 116
schmidt, 196	temperature_imposee_paroi, 169

```
test_solveur, 42
testeur, 43
testeur_medcoupling, 43
tetraedriser, 43
tetraedriser_homogene, 44
tetraedriser_homogene_compact, 44
tetraedriser_homogene_fin, 45
tetraedriser_par_prisme, 46
thi, 118
traitement_particulier_base, 116
tranche, 200
transformer, 46
transport_k_epsilon, 135
transversale, 246
trianguler, 46
trianguler_fin, 47
trianguler_h, 47
turbulence_paroi_base, 252
turbulence_paroi_scalaire_base, 256
type, 57, 60, 153, 154
uniform_field, 180
utau_imp, 255
valeur_totale_sur_volume, 180
vdf, 170
vect_nom, 48
vef, 170
vefprep1b, 170
verifier_qualite_raffinements, 48
verifier_simplexes, 48
verifiercoin, 49
Vitesse, 57, 60
volume, 55
xyz, 3
```