


Star 1000

STARSIGNAL VEHICLE PRODUCTS


Model 1400

Driver

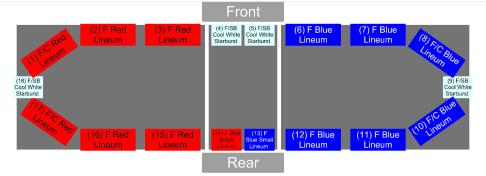


assenger

Customer	Order Number / PO	Order Date Jun 23, 2015
Order Notes		

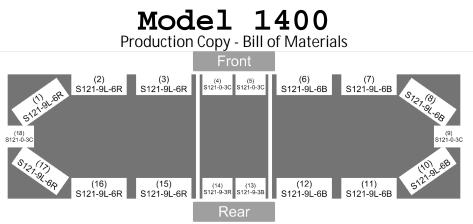


Quantity	Component	Description
6	S121-9L-6R	Red Lineum
4	S121-0-3C	Cool White Starburst
6	S121-9L-6B	Blue Lineum
1	S121-9-3B	Blue Small Lineum
1	S121-9-3R	Red Small Lineum

Wiring Diagram

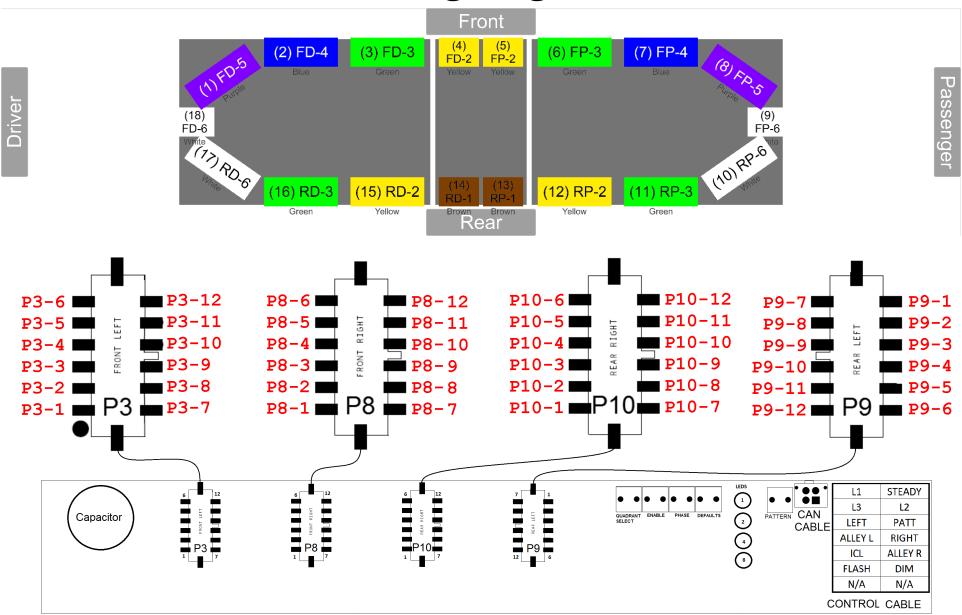

Bar Programming

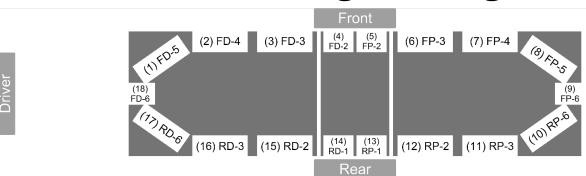

Input Map

Default Program 1 Level 1 Takedown / Work Lights
Level 2 Flashing Alley & Pursuit
Level 3 Pattern
ICL Dimmer
Direct Left Direct Right
Left Alley Right Alley

Default Program 1

Function Definitions

Function	Positions		Dottorn(s)
	Phase A	Phase B	Pattern(s)
Takedown / Work Lights	FD-2, FP-2		Steady Burn
Level 1	RP-1 thru -3, RP-6	RD-1 thru -3, RD-6	Slow Triple
Level 2	FP-3 thru -5	FD-3 thru -5	Quadruple w/ Post Pop
Level 3	FP-3 thru -5, RP-1 thru -3, RP-6	FD-3 thru -5, RD-1 thru -3, RD-6	Random 2
Direct Left	RP-1 thru -3, RD-1 thru -3		Snake
Direct Right	RP-1 thru -3, RD-1 thru -3		Snake
Left Alley	FD-6		Steady Burn
Right Alley	FP-6		Steady Burn
ICL	FP-5	FD-5	Flicker
Dimmer	FD-2 thru -6, FP-2 thru -6, RP-1 thru -3, RP-6, RD-1 thru -3, RD-6		Steady Burn
Flashing Pursuit	FP-2	FD-2	Fast Triple
Flashing Alley	FP-6	FD-6	Flicker