Notes:

- 1. No tracks or vias in the shaded "KEEP OUT" AREA.
- 2. No other track or signal within 0.020" of any contact pad.
- 3. Do not allow solder paste on the contact pads. It is essential to eliminate any hole in the solder paste-mask (solder stencil) layer. If this is not possible make the contact pads thru-hole with finished hole size of 0.008" or less.
- 4. To avoid ordering confusion, please specify DNL in your BOM.

FOOTPRINT FOR TC2050-IDC-NL PLUG OF NAILS(TM) CABLE


REV TC2050-IDC-NL-FP 12/2/10 MS

5. The TC2050-CLIP board can attach to the three alignment pins from underneath the PCB to temporarily retain the cable in place.

Α


TC2050-IDC-NLFP

www.TAG-CONNECT.com | SHEET 1 Of 3

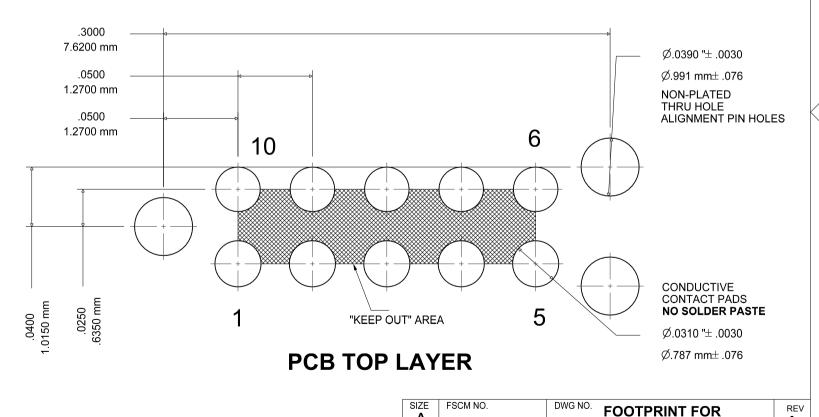

Α

SCALE 10:1

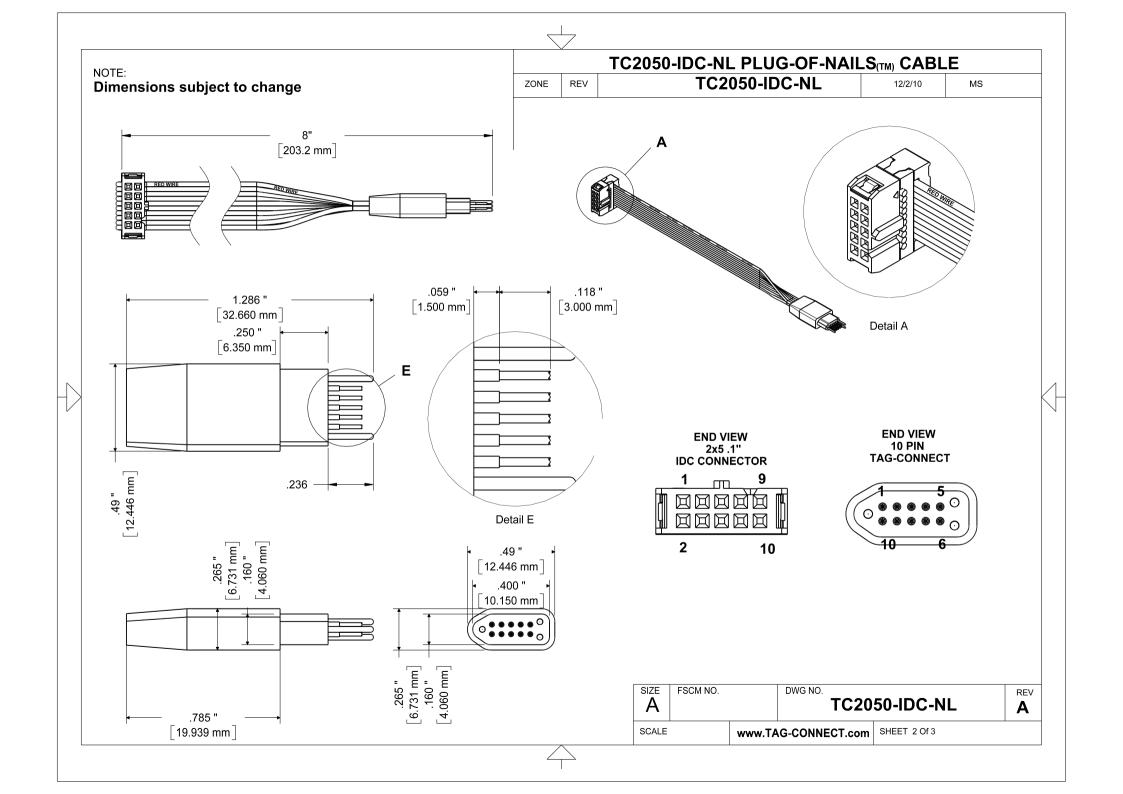

Layout Problems to Avoid

