
## **AUTOCAD PRINTING INSTRUCTIONS**

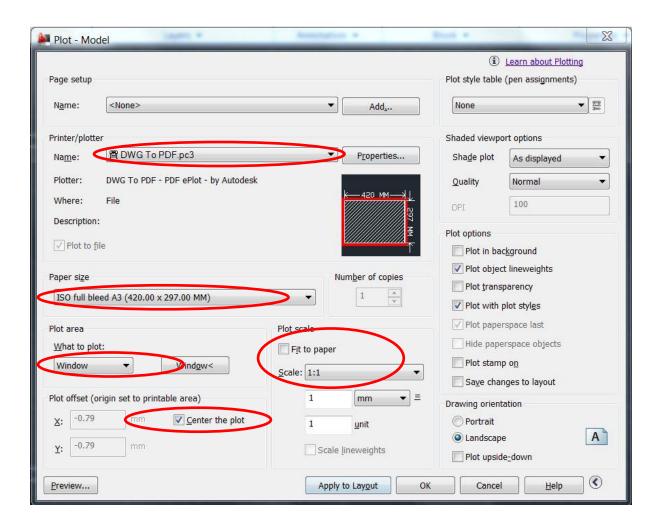

- Printer/Plotter: DWG to PDF.pc3
- Paper size: ISO full bleed A3 (420.00 x 297.00 MM)

  Please ensure that you do not select ISO A3 (420.00 x 297.00 MM). That will give you error.
- Plot scale: Deselect Fit to paper, Choose Scale 1:1
- Plot offset: Select Center the plot
- Plot area: What to plot: Window

Select the A3 size rectangle (420 x 297) you have made.