PureLink

PureTools silk print *Styleguide.*

Version 1.0

Table of Content

New Design	3
Overview silk printing	5
Silk printing structure	8
Logo	12
Function coding	16

New Design

The new PureTools devices differ in terms of their housing design and a new silk print layout. The new design has rounded corners on the top and new cooling elements on the sides. The silk print is more uniform and tidier.


Old:



New:



Overview silk printing

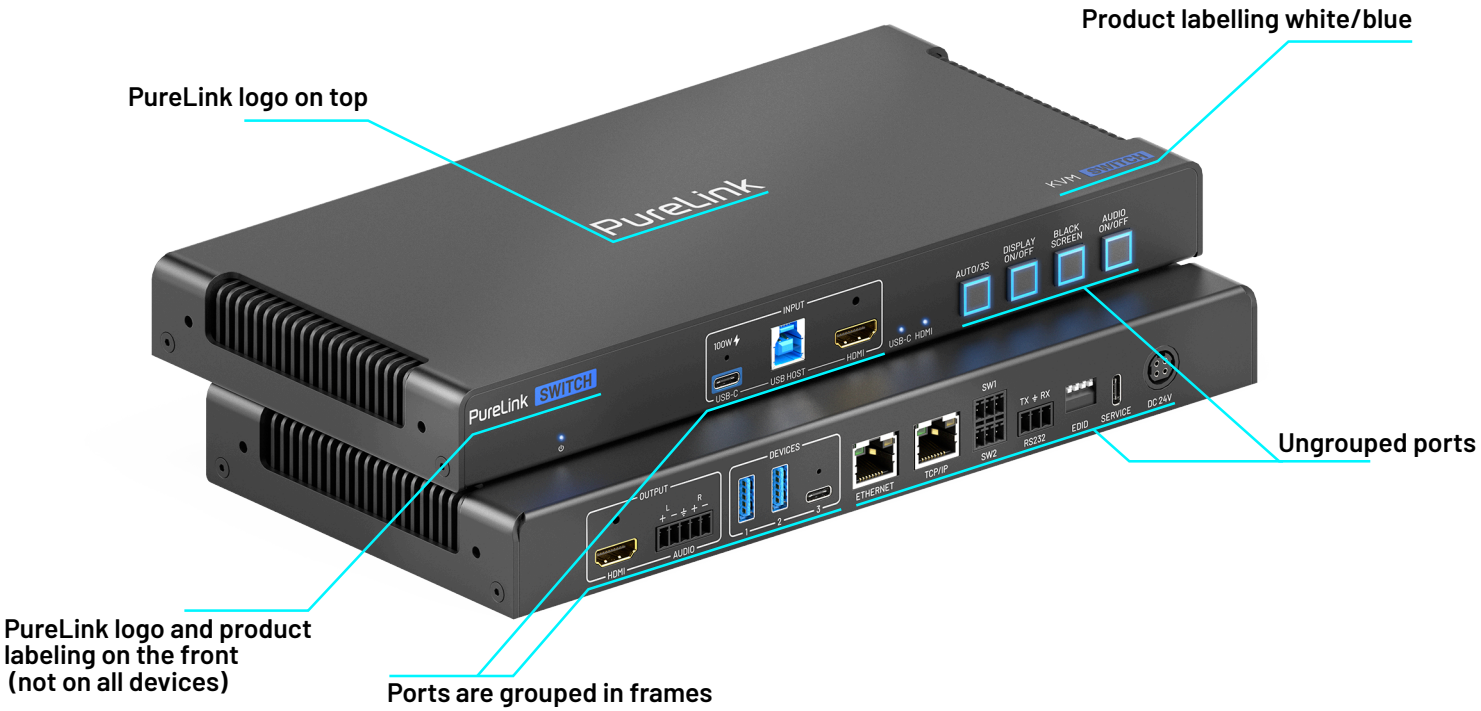

Product labelling white/blue
PureLink logo on top
Ungrouped ports
PureLink logo and product labeling on the front (not on all devices)
Ports are grouped in frames

An overview of the new changes


Top




Front

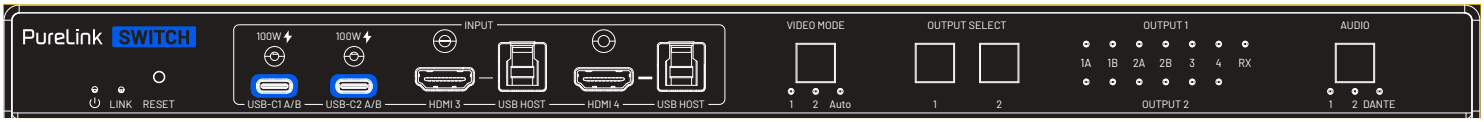

Below

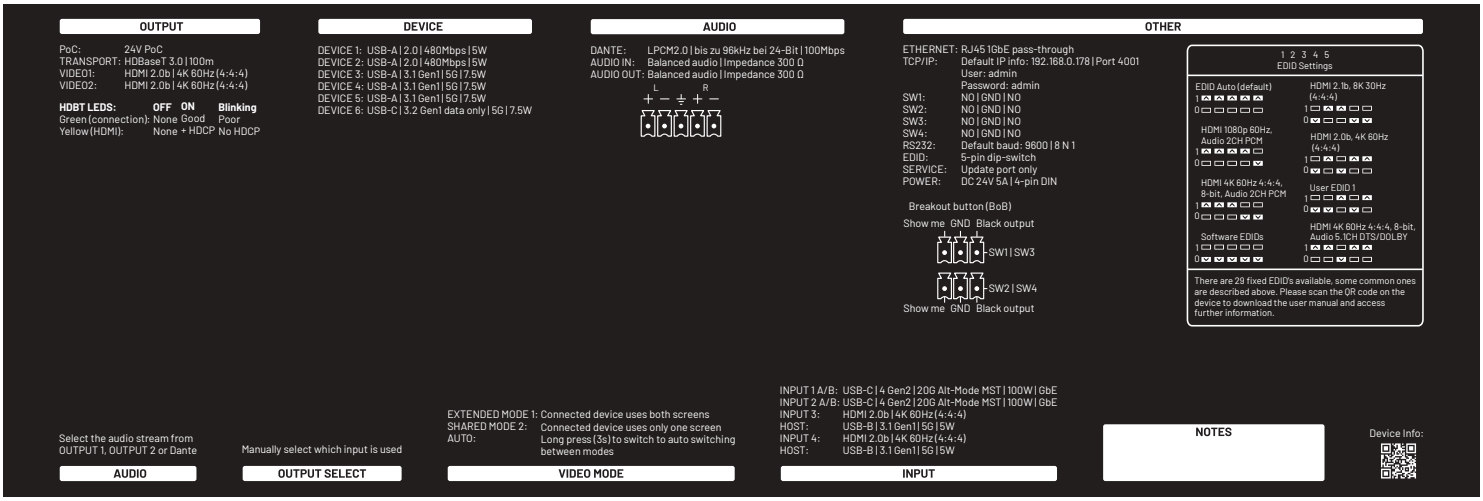

Back

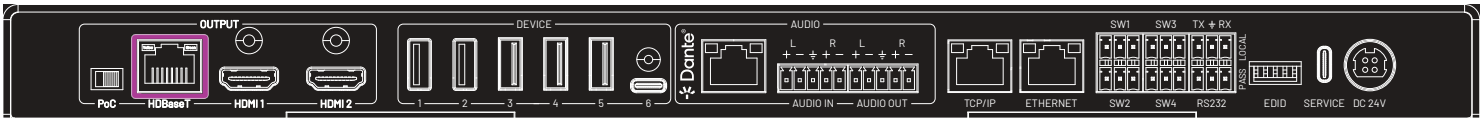


Silk printing structure

1. Frame

The input and output ports are each enclosed in a frame to provide a better overview and clear structure.
In this case, these are the input ports.

The distance between the frame and the port will be defined later, once the labels have been set.

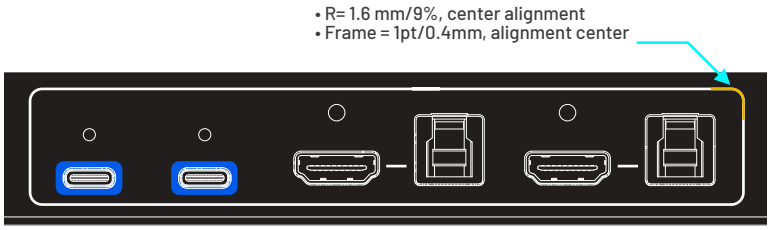


2. Positioning the frame and port labels

Rule 1


The input and output ports are each enclosed in a frame to provide a better overview and clear structure.
In this case, these are the input ports.

The texts are aligned in the centre of the frame.

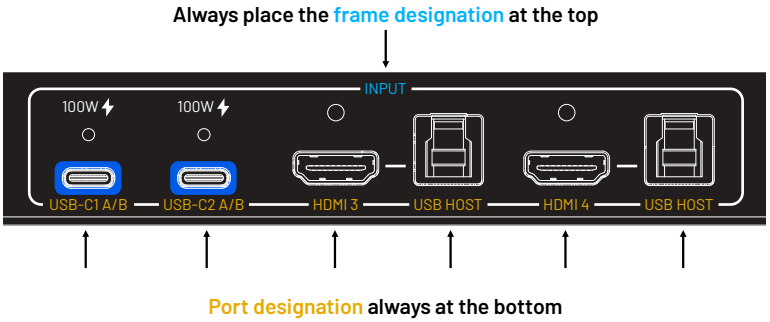


Rule 2

If there is not enough space above for the frame label, it must be moved down. The port label is then at the top or directly above the port.

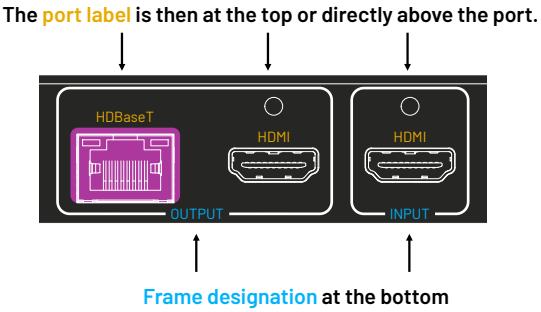

3. Fonts


The font is **Barlow Regular** style. The font size is **8pt** for larger devices with a case size of 30mm and **7pt** for case heights of 23mm.

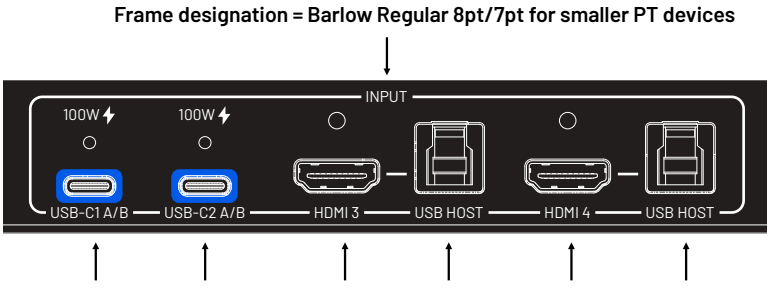

4. Positioning the frame and port labels:

First, you need to check which port is suitable as the starting point so that all labels can be on the same level. In this case, it is the USB-C port with the blue border. All other labels are also on the same level.

The INPUT label is centered across the entire frame width.

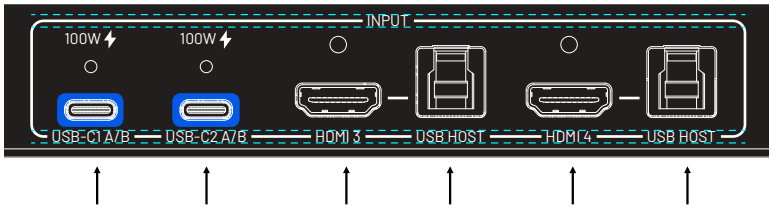


The PORT labels are centered relative to the port.

4.1 Exceptions:


For other ports/switches that are not part of an input or output group, the text can also be at the same height. This is only the case if the port/switch is of a certain size and the distance between the label and the port/switch is not too great.

The spacing isn't too wide and the text can be aligned with the input group.

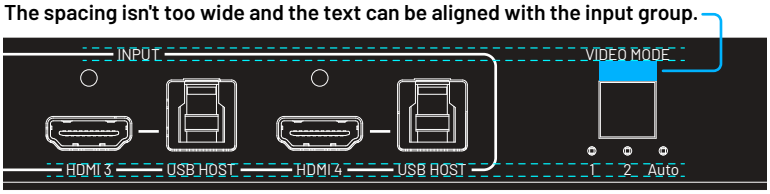


If the port/switch is small and the distance to the text is too great relative to the input/output group, the text will remain above the port/switch.

There is no exact rule for this decision, it will be based purely on visual considerations.

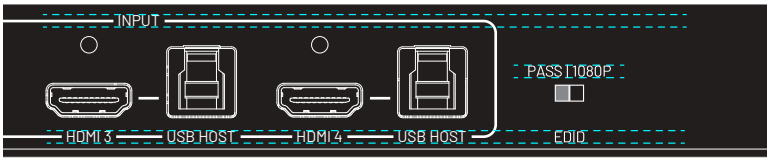


5.Spacing between frames, ports and fonts:


The space between the text and the frame is always 1 mm.

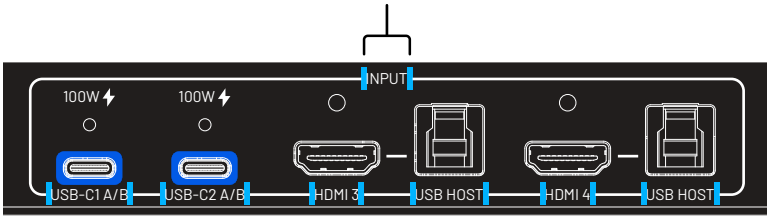


The spacing between texts or ports must be at least 1 mm/3pt. The frame may need to be adjusted.

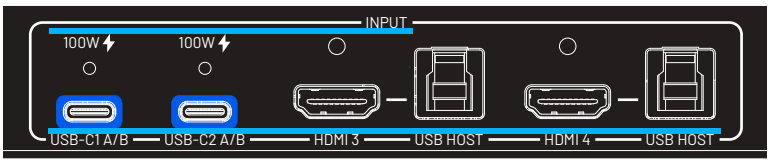


The lateral distance between the port and the frame may vary depending on the space available, but it should be visually the same on both sides. This ensures that it is symmetrically aligned.

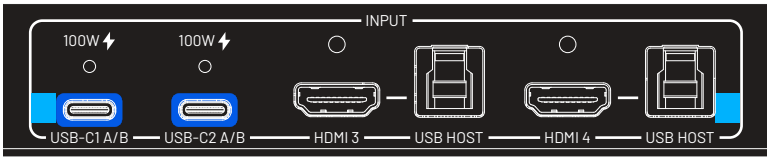

6. Colour coding HDBasT and USB-C:

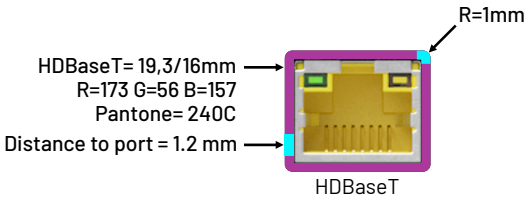


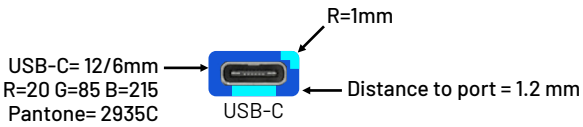

7. USB-C 1, 2, etc. after the port name




Here is another example of the arrangement of silkprints:








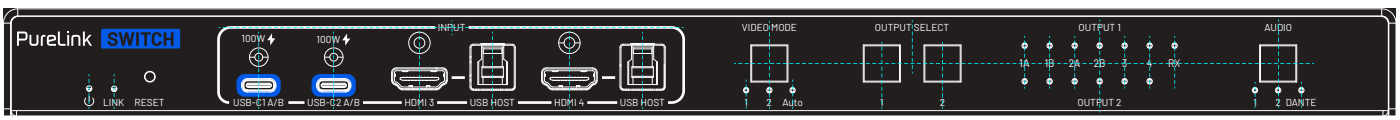


Display multiple identical items:

Some devices have LED indicators on the front that display a signal. In some cases, eight or more LEDs are required. When more than three LEDs are fitted, the silkscreen is adjusted accordingly, with a frame containing the LED numbers and a heading added.

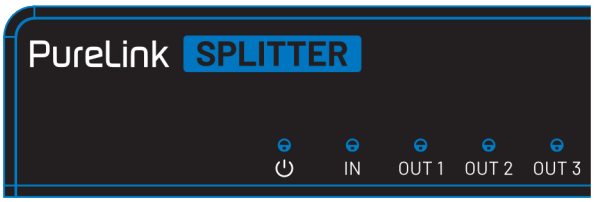

Housing with 3 LEDs, labelled OUT1, OUT2 and OUT3.

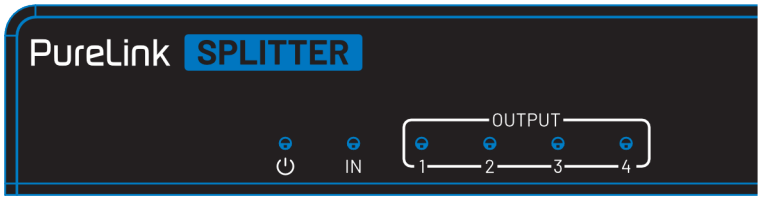

From 4 LEDs onwards, a frame is described with 'OUTPUT' as the heading and the LEDs listed by number.


Logo

7. Logo on the front side:

The logo on the front of the case is also displayed with a blue text box.
The PureLink logo is the same height as the lettering in the blue box.
The font used in the box is **Barlow Bold** and the colour of the blue text box is: R=20 G=85 B=215 / **Pantone= 2935C**.





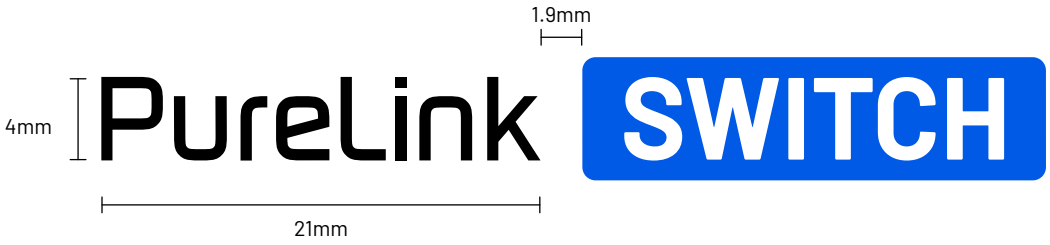

8. Position of the logo on the front side:

The following rules apply when printing the logo on the front of a 30 mm housing.

The distance between the logo and the edge of the case is 5.5 mm on the left and 6.5 mm from the top. The logo size is 21 mm x 4 mm.




9. Positioning Logo and text on top:

The Logo is printed centrally on the top of the case. The size of the logo depends on the with of the case.


The table shows how large the logo must be in relation to the width of the housing.

enclosure width	logo width
50mm - 89mm	30mm
90mm - 209mm	45mm
210mm - 400mm	55mm


Small: Logo width 30mm

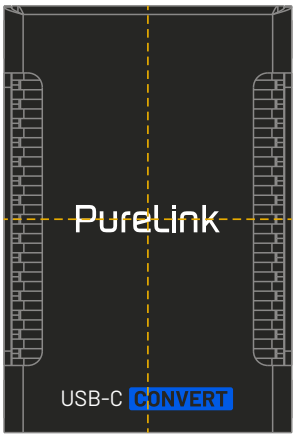


Medium: Logo width 45mm

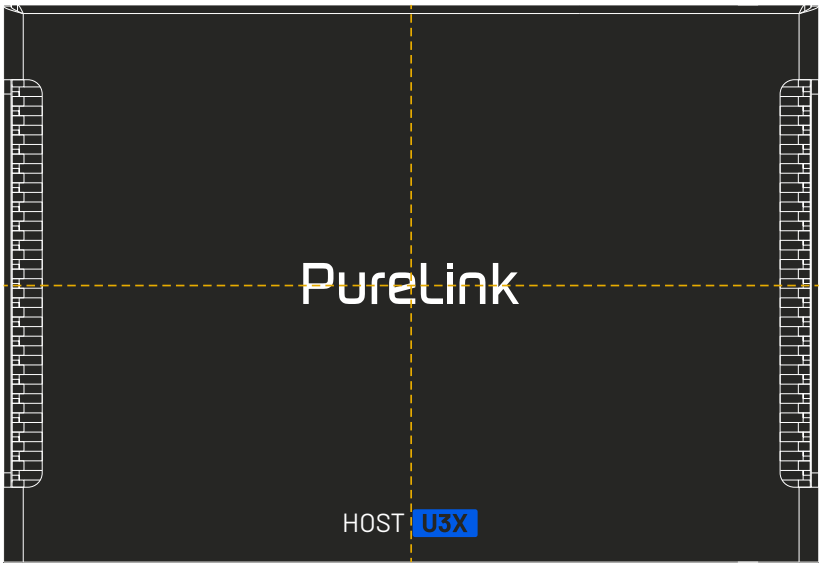

Large: Logo width 55mm

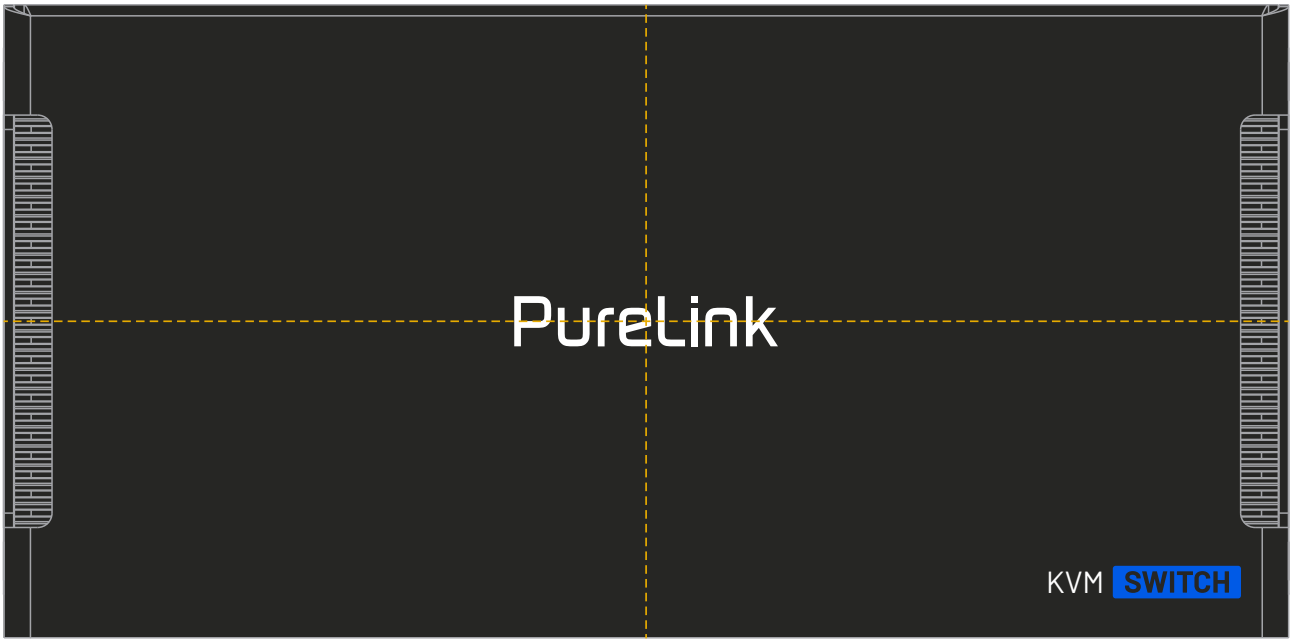

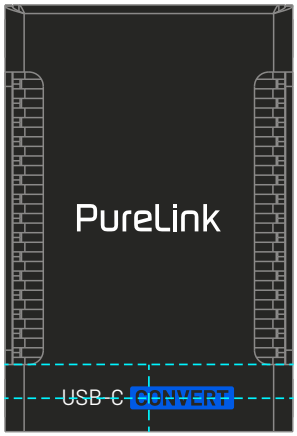

Small scale: 1:1


HOST U3X

Small and Medium: The text block is **centred**
Large: The text block is **right-aligned** with the cut-out in the housing

White text: **Barlow Regular**
Blue box: **Barlow bold**.

The different text sizes are shown in the table.

enclosure width	white text (Barlow Regular)	blue text (Barlow Bold)	radius of the corners of the blue box
50mm - 89mm	12,5pt/3,2mm	12,5pt/3,2mm	0,5mm
90mm - 209mm	15,5pt/3,9mm	15,5pt/3,9mm	0,6mm
210mm - 400mm	18pt/4,6mm	18pt/4,6mm	0,8mm

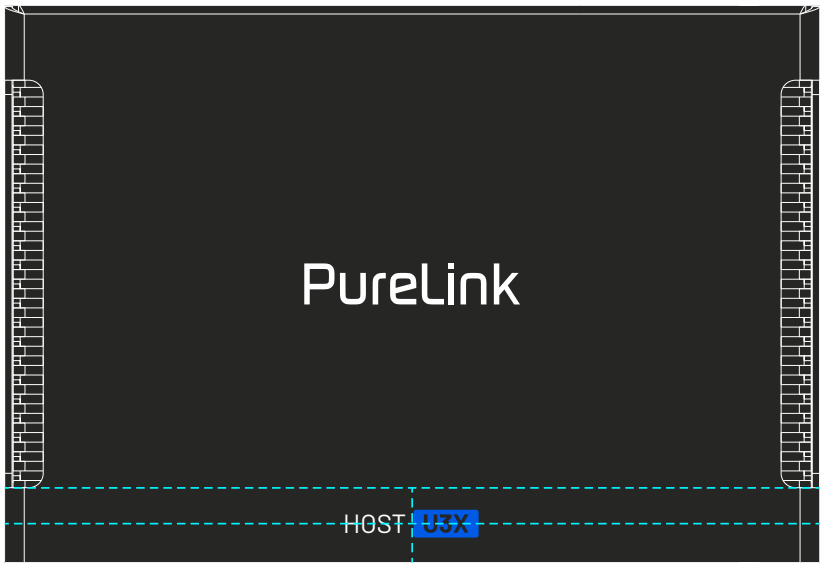

Medium scale: 1:1

HOST U3X

Large scale: 1:1

HOST U3X




Logo 1U Rack


10. Logo on the front side:

On Matrix enclosures, the logo and blue text box are placed one below the other. The blue text box is structured in exactly the same way as on other Puretools devices.

The distance between the logo and the blue box is again **1/2X**, in this case **1.8 mm**.



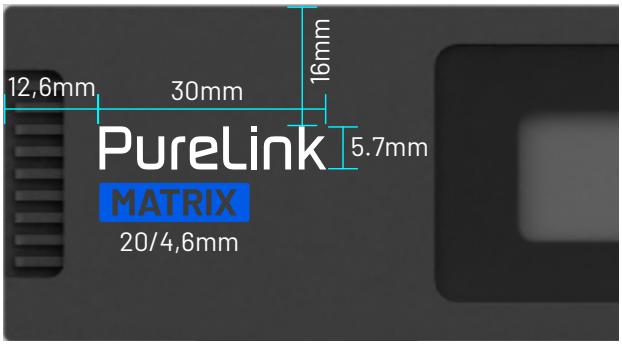

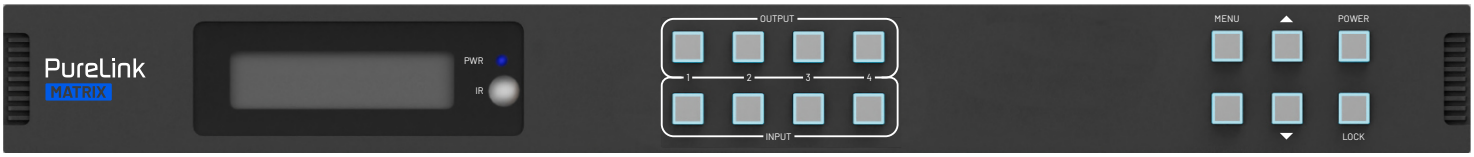

Function coding

10. Function coding:

On the underside of PureTools devices, there is a detailed function coding that shows more detailed information about the ports. The labelling is always grouped into blocks corresponding to the areas on the front.


The blocks are given the same designations as the frames on the front. **OUTPUT->OUTPUT**, **INPUT->INPU**T, etc.Ports that are not in a frame and have no designation are labelled **OTHER** on the underside.

The positions of the block on the underside should be approximately level with the areas on the front and back. If this is not possible, it should be close to it.


The blocks are aligned evenly with each other so that the distances between the blocks are the same.

The blocks are 4 mm away from the edge of the case. The headings in the white boxes are 4 mm and the distance between the heading and the text is 3 mm.

Back

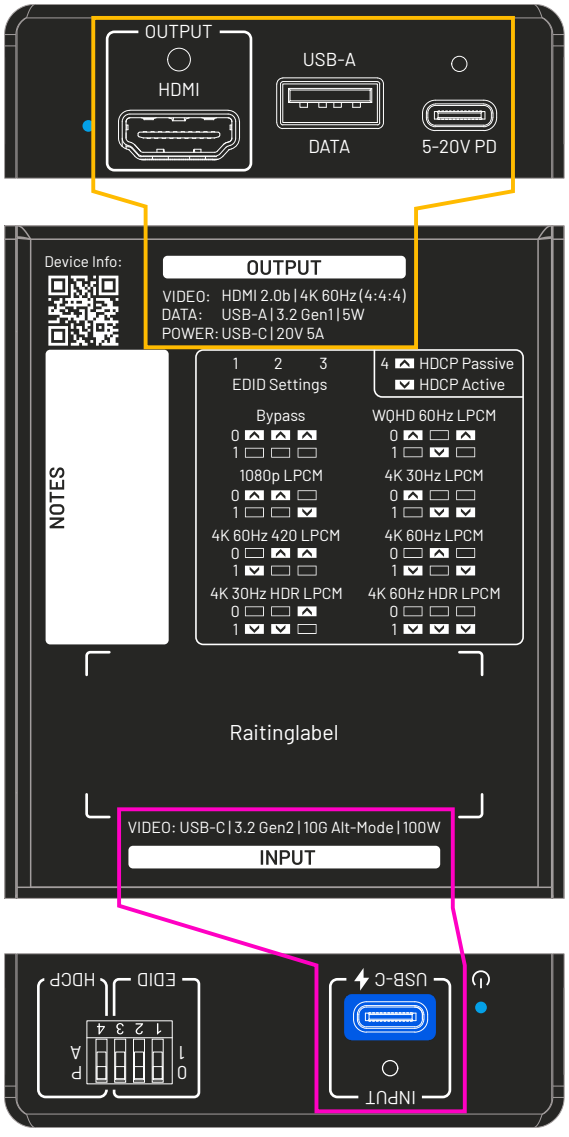


Front

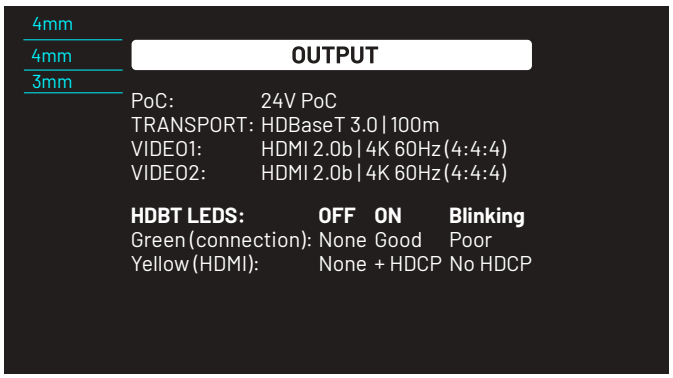


Font white box: **Barlow Bold 9pt, white printing ink**

- Depending on the space available on the housing:
- Description of small enclosures: **Barlow Regular 7pt**
- Description of large enclosures:, **Barlow Regular 8pt**
- For table headings: **Barlow Bolt**.

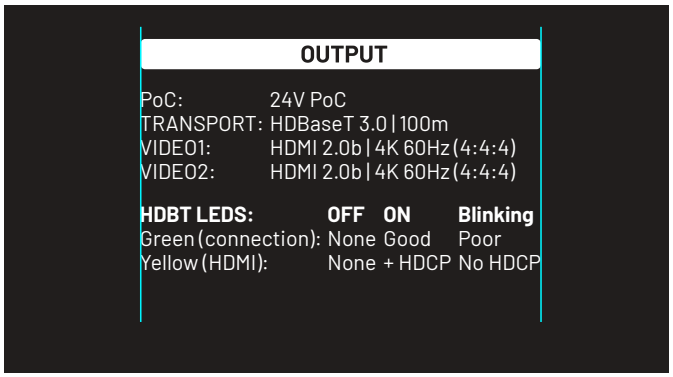

Back

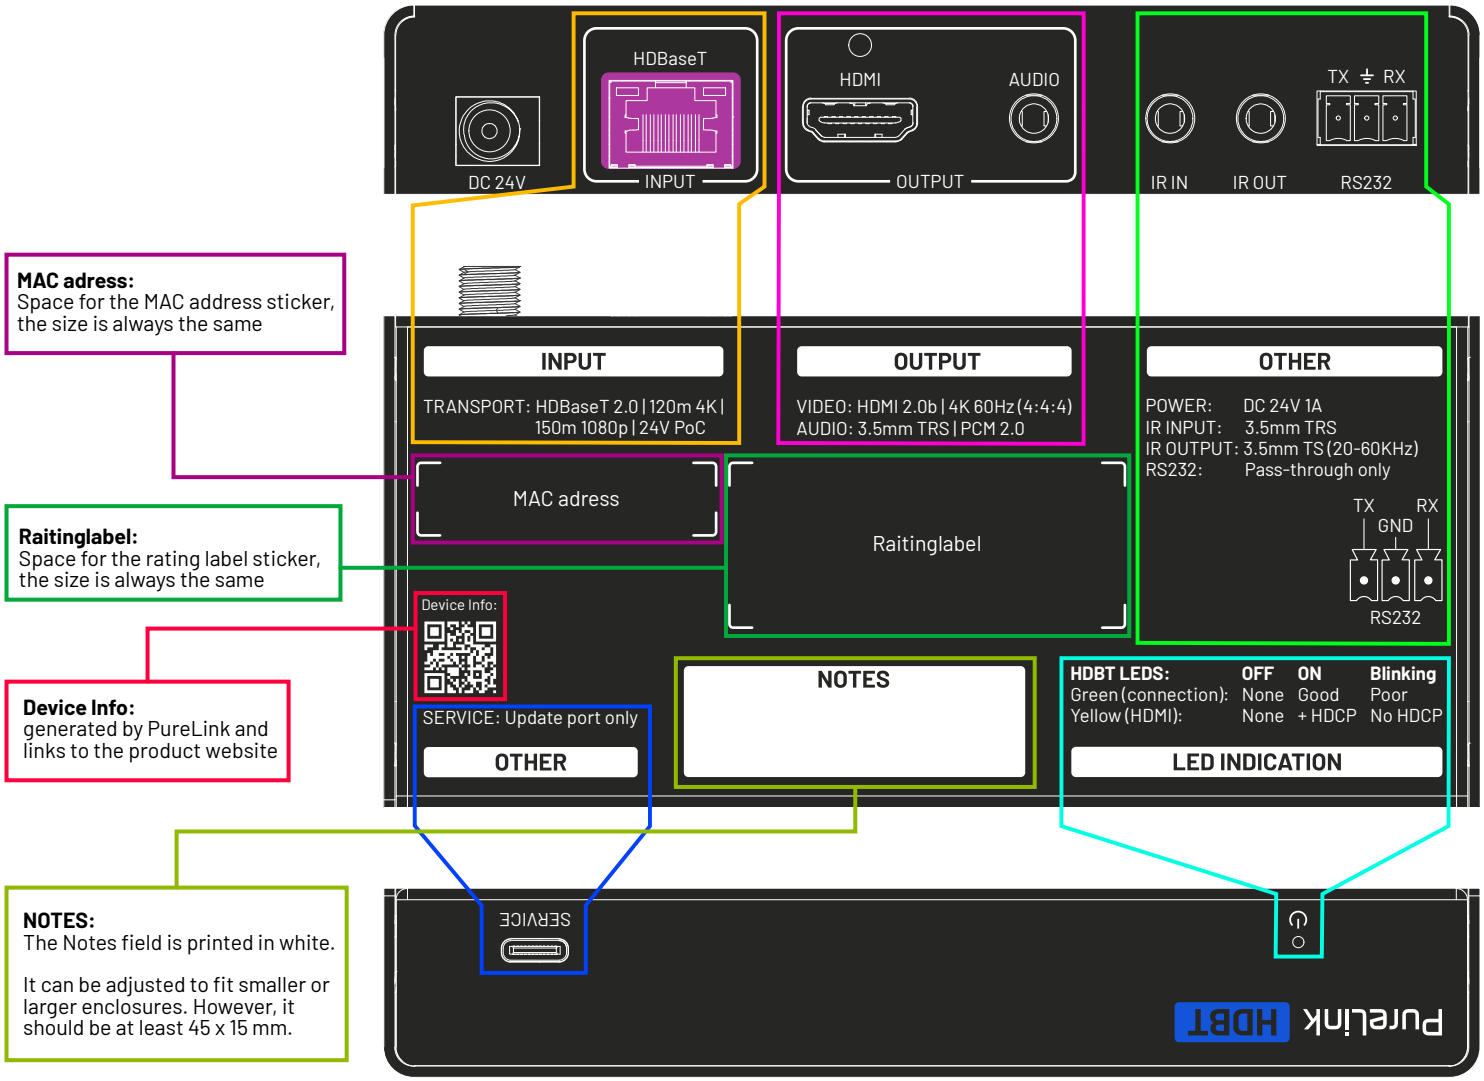

MAC adress:
Space for the MAC address sticker, the size is always the same

Raitinglabel:
Space for the rating label sticker, the size is always the same


Device Info:
generated by PureLink and links to the product website

NOTES:
The Notes field is printed in white.

It can be adjusted to fit smaller or larger enclosures. However, it should be at least 45 x 15 mm.

Front

Back

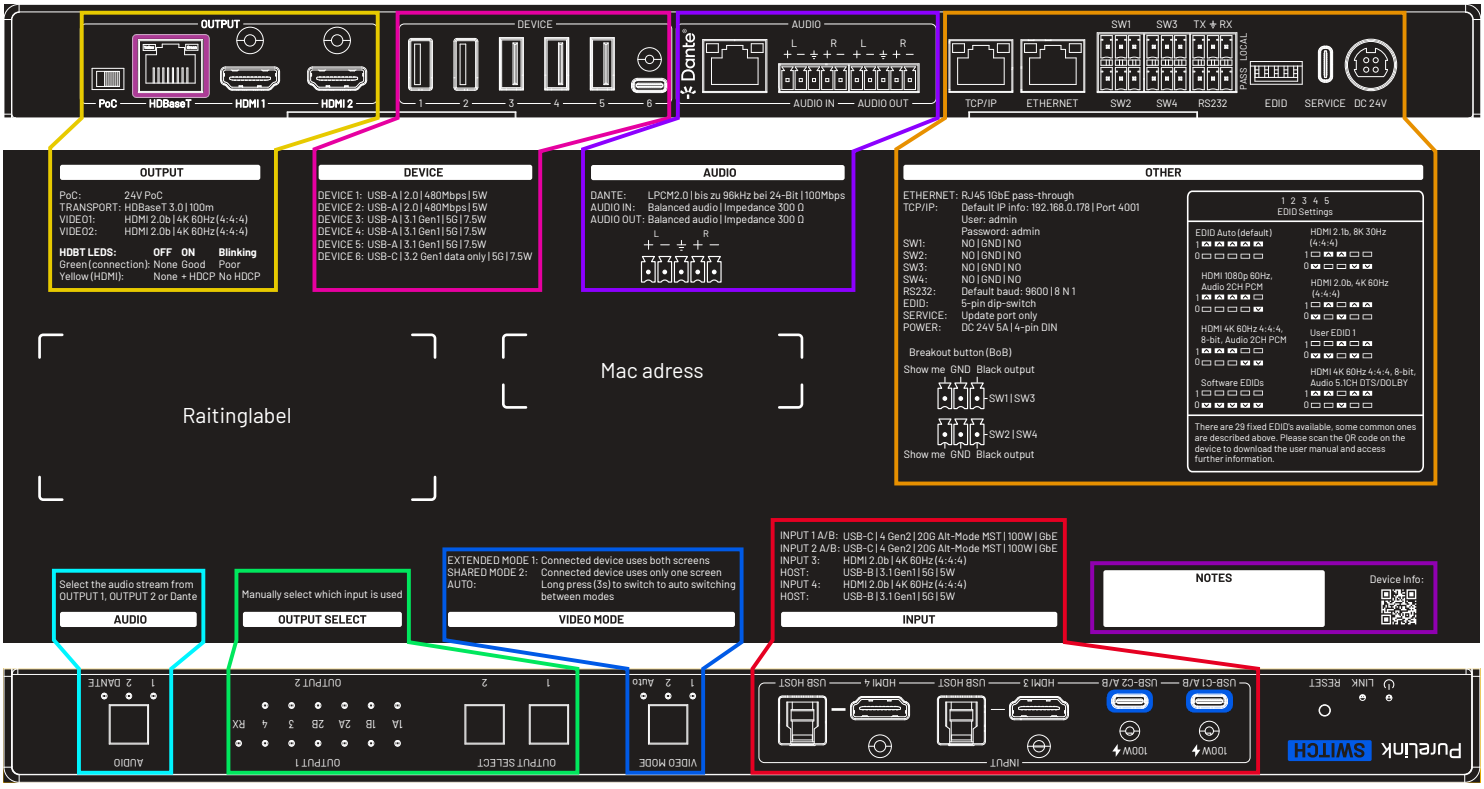
OUTPUT
PoC
HDBaseT
HDMI 1
HDMI 2
DEVICE
1 2 3 4 5 6
AUDIO
AUDIO IN
AUDIO OUT
SW1 SW3 TX ⇂ RX
PASS LOCAL
TCP/IP
ETHERNET
SW2 SW4
RS232
EDID
SERVICE
DC 24V
OUTPUT
PoC: 24V PoC
TRANSPORT: HDBaseT 3.0 | 100m
VIDEO1: HDMI 2.0b | 4K 60Hz (4:4:4)
VIDEO2: HDMI 2.0b | 4K 60Hz (4:4:4)
HDBT LEDS: OFF ON Blinking
Green (connection): None Good Poor
Yellow (HDMI): None + HDCP No HDCP
DEVICE
DEVICE 1: USB-A | 2.0 | 480Mbps | 5W
DEVICE 2: USB-A | 2.0 | 480Mbps | 5W
DEVICE 3: USB-A | 3.1 Gen1 | 5G | 7.5W
DEVICE 4: USB-A | 3.1 Gen1 | 5G | 7.5W
DEVICE 5: USB-A | 3.1 Gen1 | 5G | 7.5W
DEVICE 6: USB-C | 3.2 Gen1 data only | 5G | 7.5W
AUDIO
DANTE: LPCM2.0 | bis zu 96kHz bei 24-Bit | 100Mbps
AUDIO IN: Balanced audio | Impedance 300 Ω
AUDIO OUT: Balanced audio | Impedance 300 Ω
L R
OTHER
ETHERNET: RJ45 1GbE pass-through
TCP/IP: Default IP info: 192.168.0.178 | Port 4001
User: admin
Password: admin
SW1: NO | GND | NO
SW2: NO | GND | NO
SW3: NO | GND | NO
SW4: NO | GND | NO
RS232: Default baud: 9600 | 8 N 1
EDID: 5-pin dip-switch
SERVICE: Update port only
POWER: DC 24V 5A | 4-pin DIN
Breakout button (BoB)
Show me GND Black output
SW1 | SW3
SW2 | SW4
Show me GND Black output
1 2 3 4 5
EDID Settings
EDID Auto (default)
HDMI 2.1b, 8K 30Hz (4:4:4)
HDMI 1080p 60Hz, Audio 2CH PCM
HDMI 2.0b, 4K 60Hz (4:4:4)
HDMI 4K 60Hz 4:4:4, 8-bit, Audio 2CH PCM
User EDID 1
Software EDIDs
HDMI 4K 60Hz 4:4:4, 8-bit, Audio 5.1CH DTS/DOLBY
There are 29 fixed EDID's available, some common ones are described above. Please scan the QR code on the device to download the user manual and access further information.
Raitinglabel
Mac adress
Select the audio stream from OUTPUT 1, OUTPUT 2 or Dante
AUDIO
Manually select which input is used
OUTPUT SELECT
EXTENDED MODE 1: Connected device uses both screens
SHARED MODE 2: Connected device uses only one screen
AUTO: Long press (3s) to switch to auto switching between modes
VIDEO MODE
INPUT 1 A/B: USB-C | 4 Gen2 | 20G Alt-Mode MST | 100W | GbE
INPUT 2 A/B: USB-C | 4 Gen2 | 20G Alt-Mode MST | 100W | GbE
INPUT 3: HDMI 2.0b | 4K 60Hz (4:4:4)
HOST: USB-B | 3.1 Gen1 | 5G | 5W
INPUT 4: HDMI 2.0b | 4K 60Hz (4:4:4)
HOST: USB-B | 3.1 Gen1 | 5G | 5W
INPUT
NOTES
Device Info:
AUDIO
OUTPUT 1
OUTPUT SELECT
VIDEO MODE
INPUT
100W
100W
LINK
RESET
PureLink SWITCH

Front