



Materials

- plywood panel 13 mm or OSB panel 11/12mm
- wood screws \approx Ø4.5x60mm
- glue

Tools


- hand saw, circular saw, jigsaw
- drill, drill bit 3mm, screwdriver...,
- sander, paper sand...

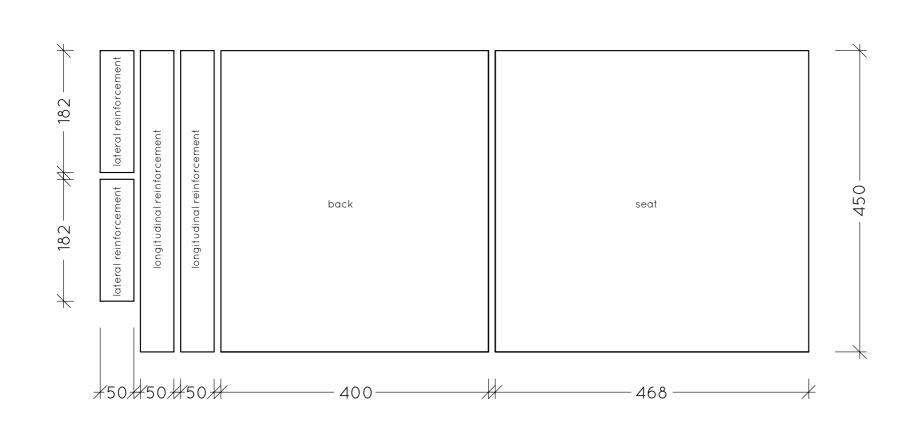

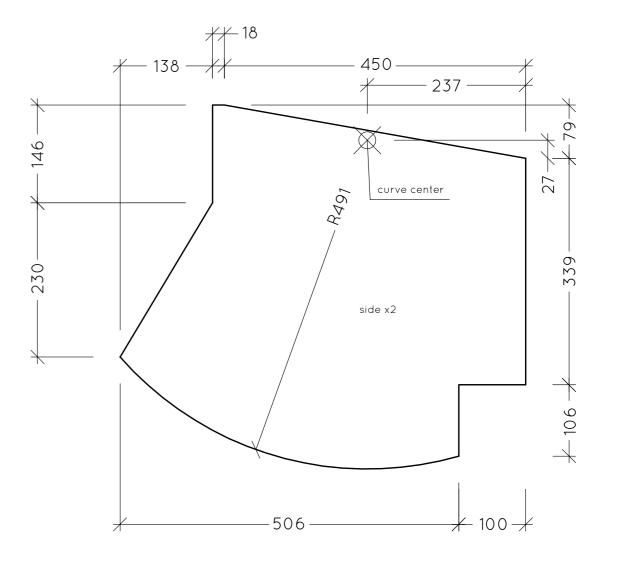


02/12/2013



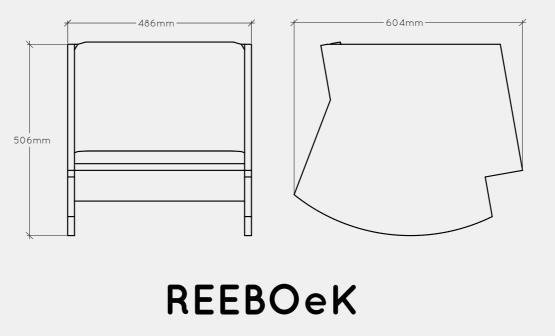


Building steps

- 1 join back part and sides
- 2 build a frame with reinforcements
- 3 fix the frame under the seat with small screws, put the seat part on the frame top
- 4 add lastest screws and enjoy!

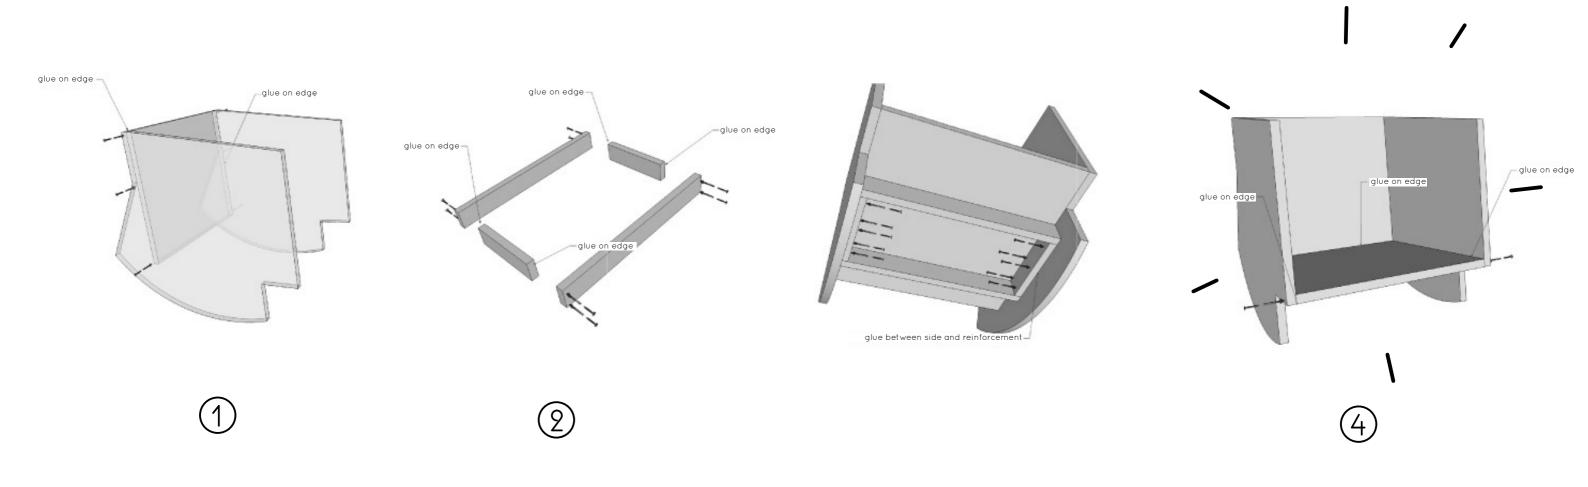




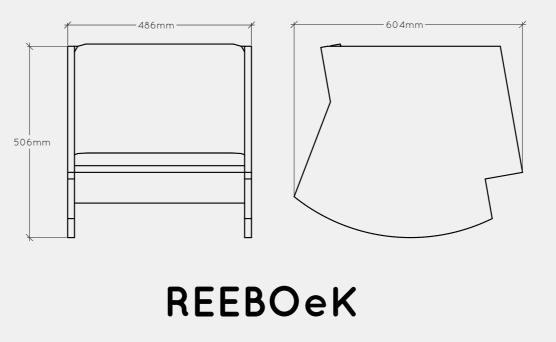

Cutting advice

After cut, soft all edges and sand down faces

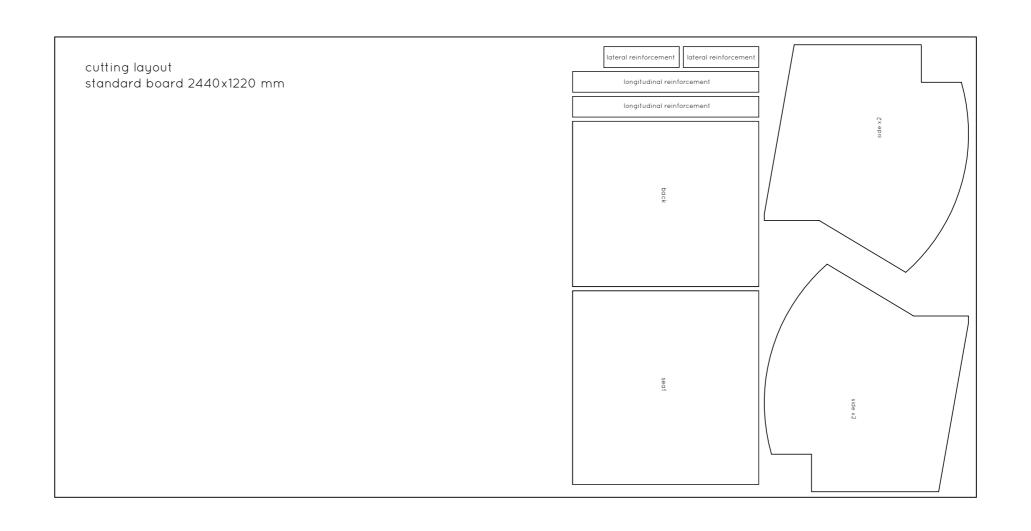

License : Free Art License Design : Laurent Verly