


# Bouctje


#### Materials

- plywood panel 13 mm or OSB panel 11/12mm
- 10 wood screws  $\approx$  Ø3.5x40mm


#### Tools

- hand saw, circular saw, jigsaw
- drill, drill bit 3mm, screwdriver...,
- sander, paper sand...

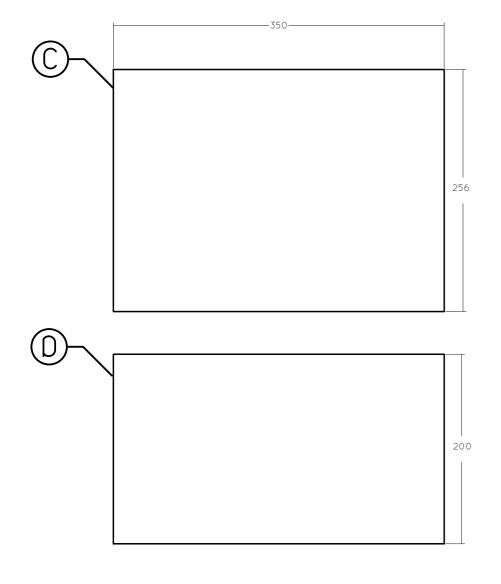


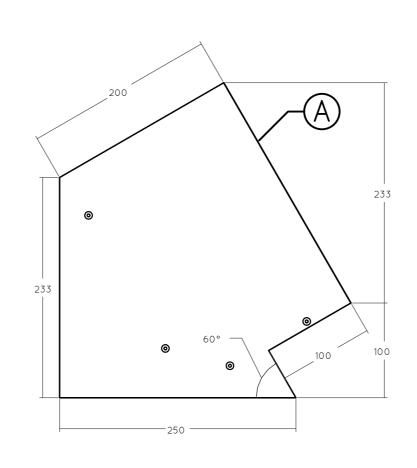

20/09/2013

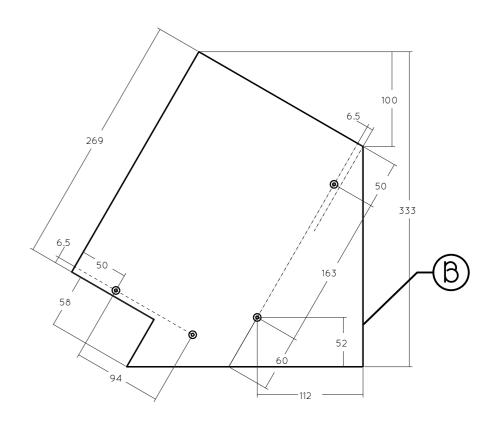



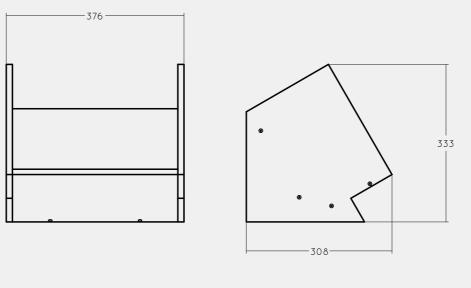

## Bouctje

### Building steps

- 1 drill two 3mm holes on D part
- 2 put two screws to fix D and C
- 3 drill all holes at the right place for A and B. For a better finition, you should used a combined drill and countersink to make littles chamfers
- 4 place B part and put screws
- 5 place A part and put screws
- 6 your Bouctje is done! Congretulations;)

