


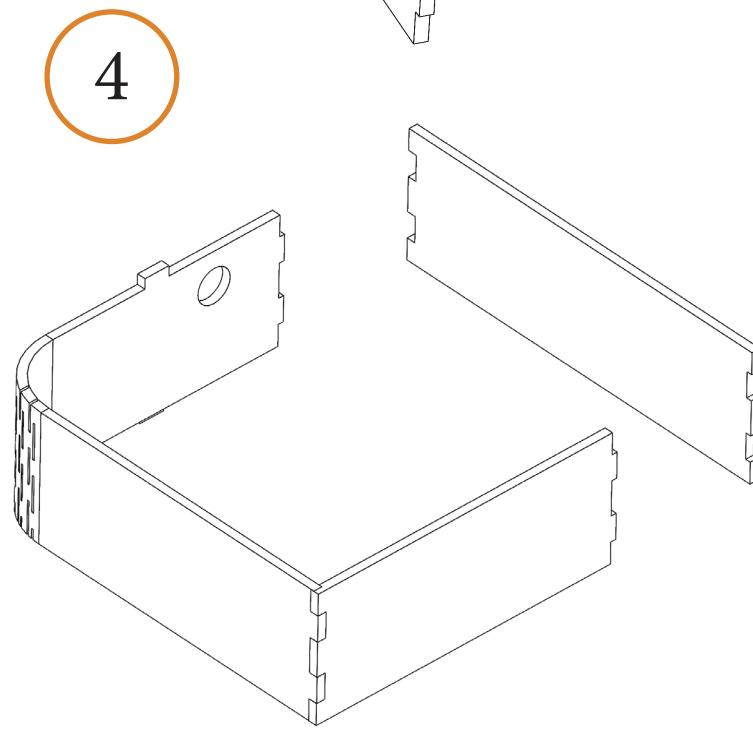
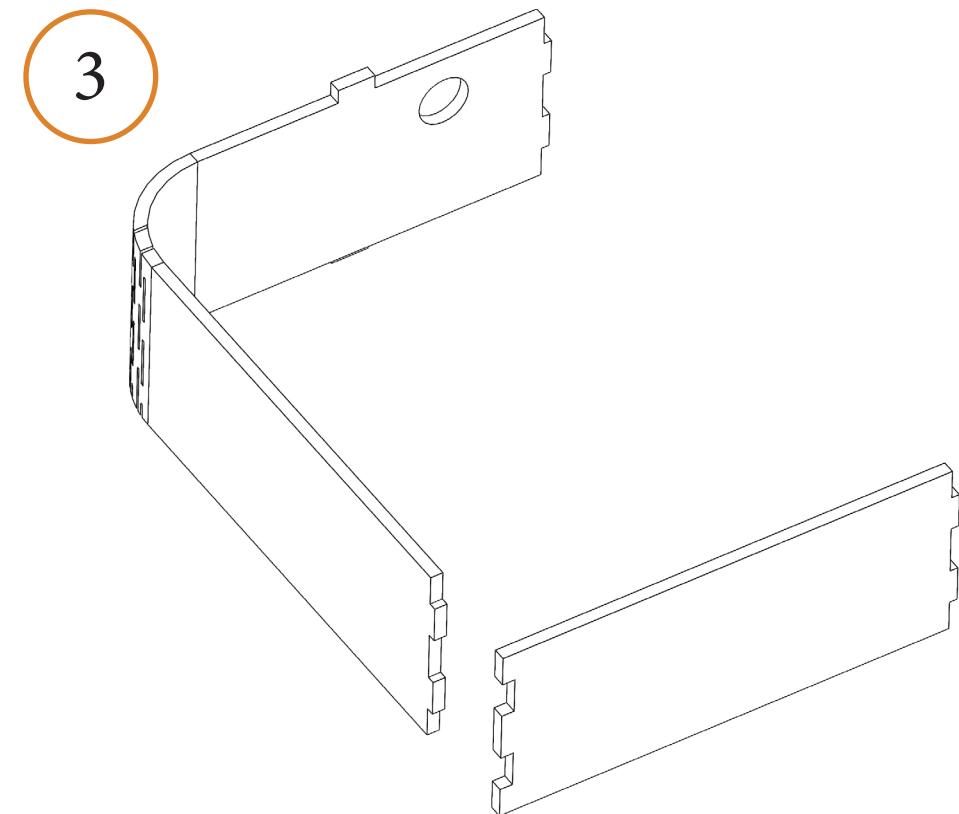
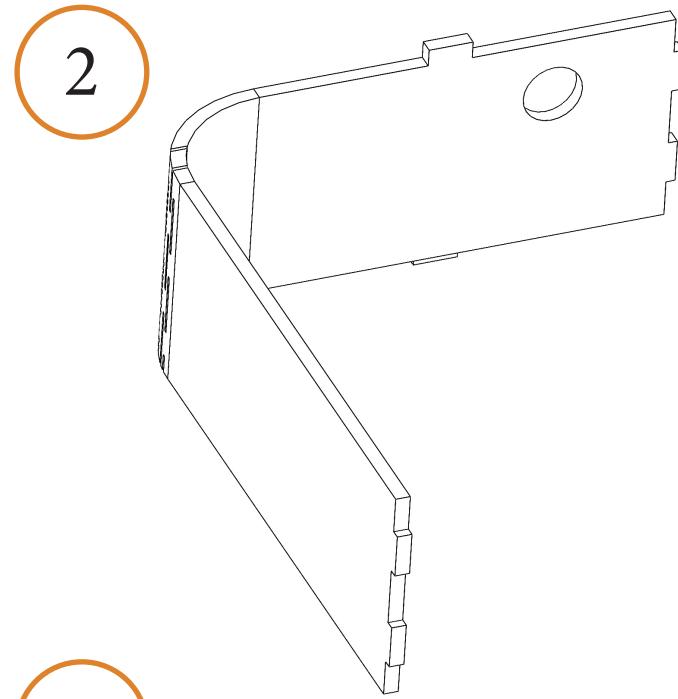
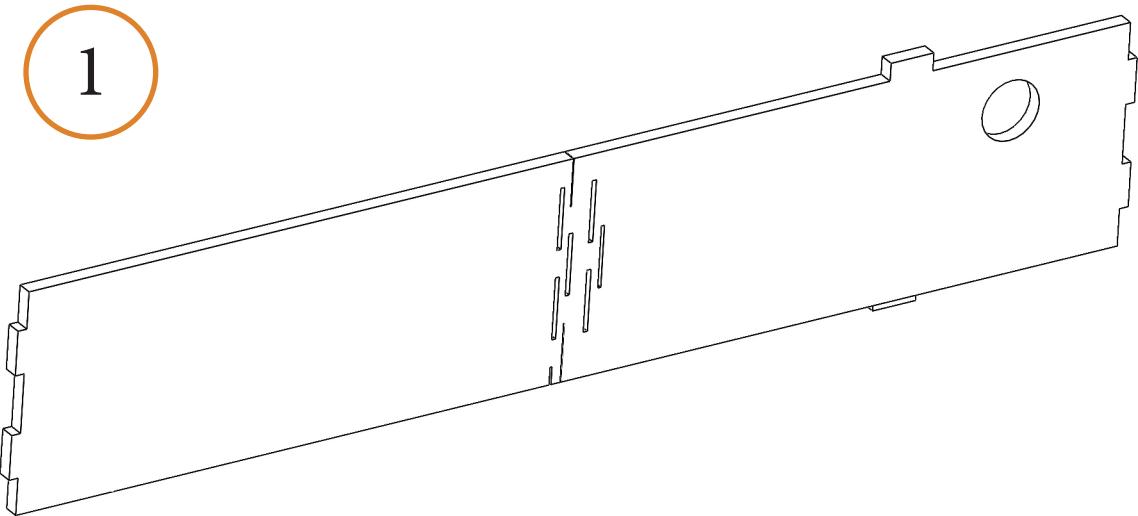
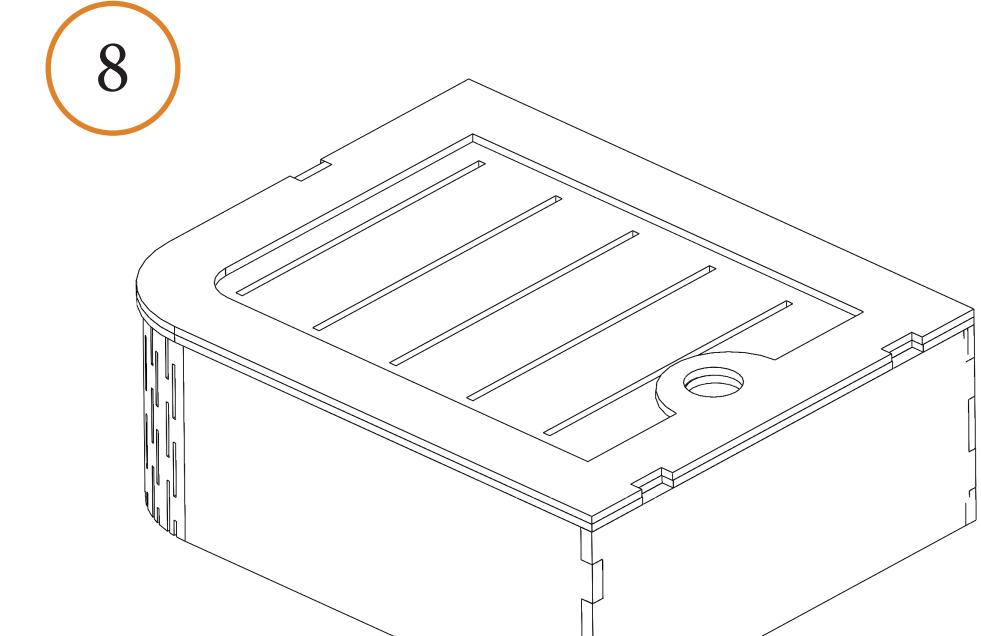
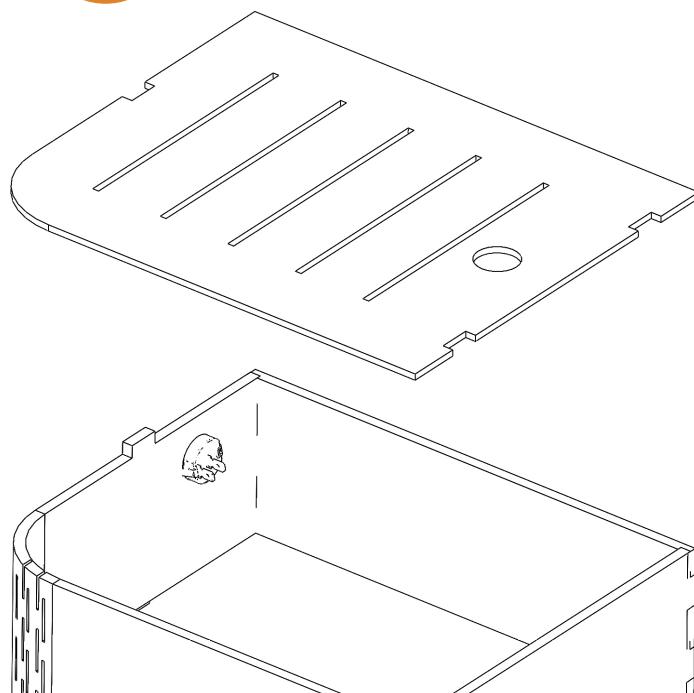


DIY Assembly Walkthrough


Tools Required
- Screwdriver (M4)
- MDF Tape

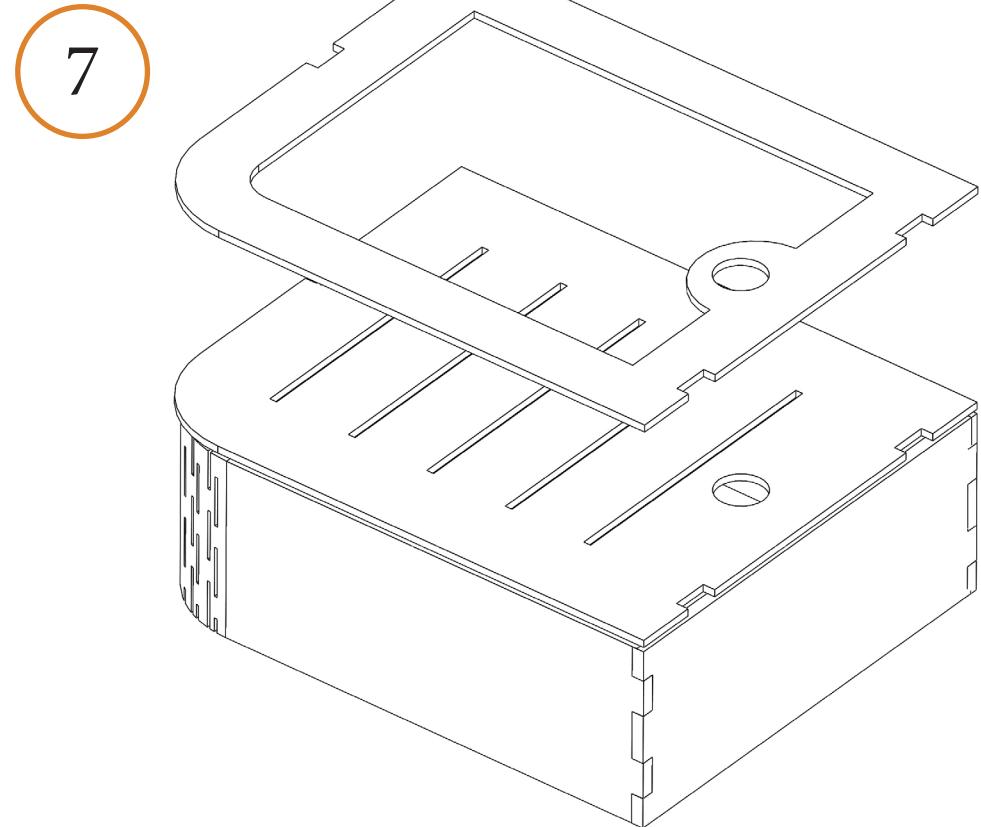

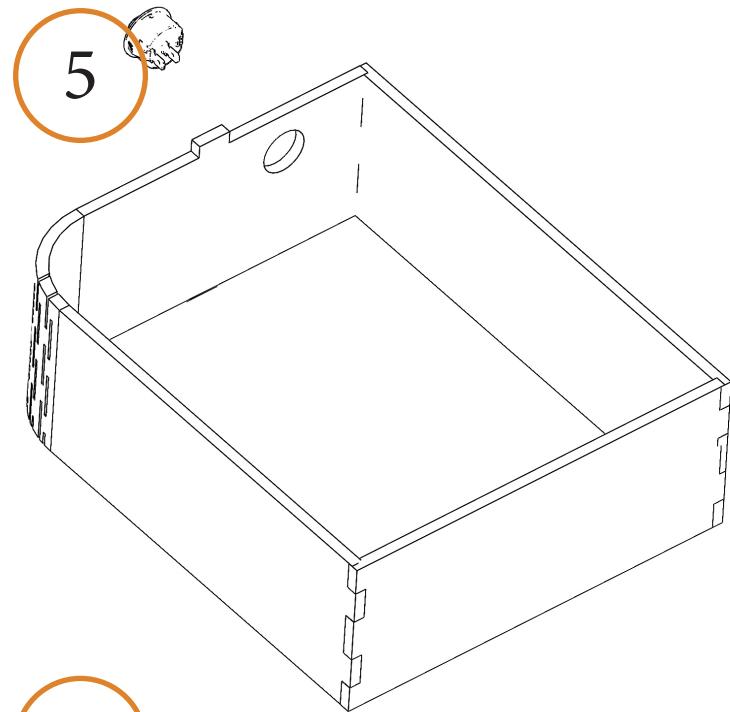


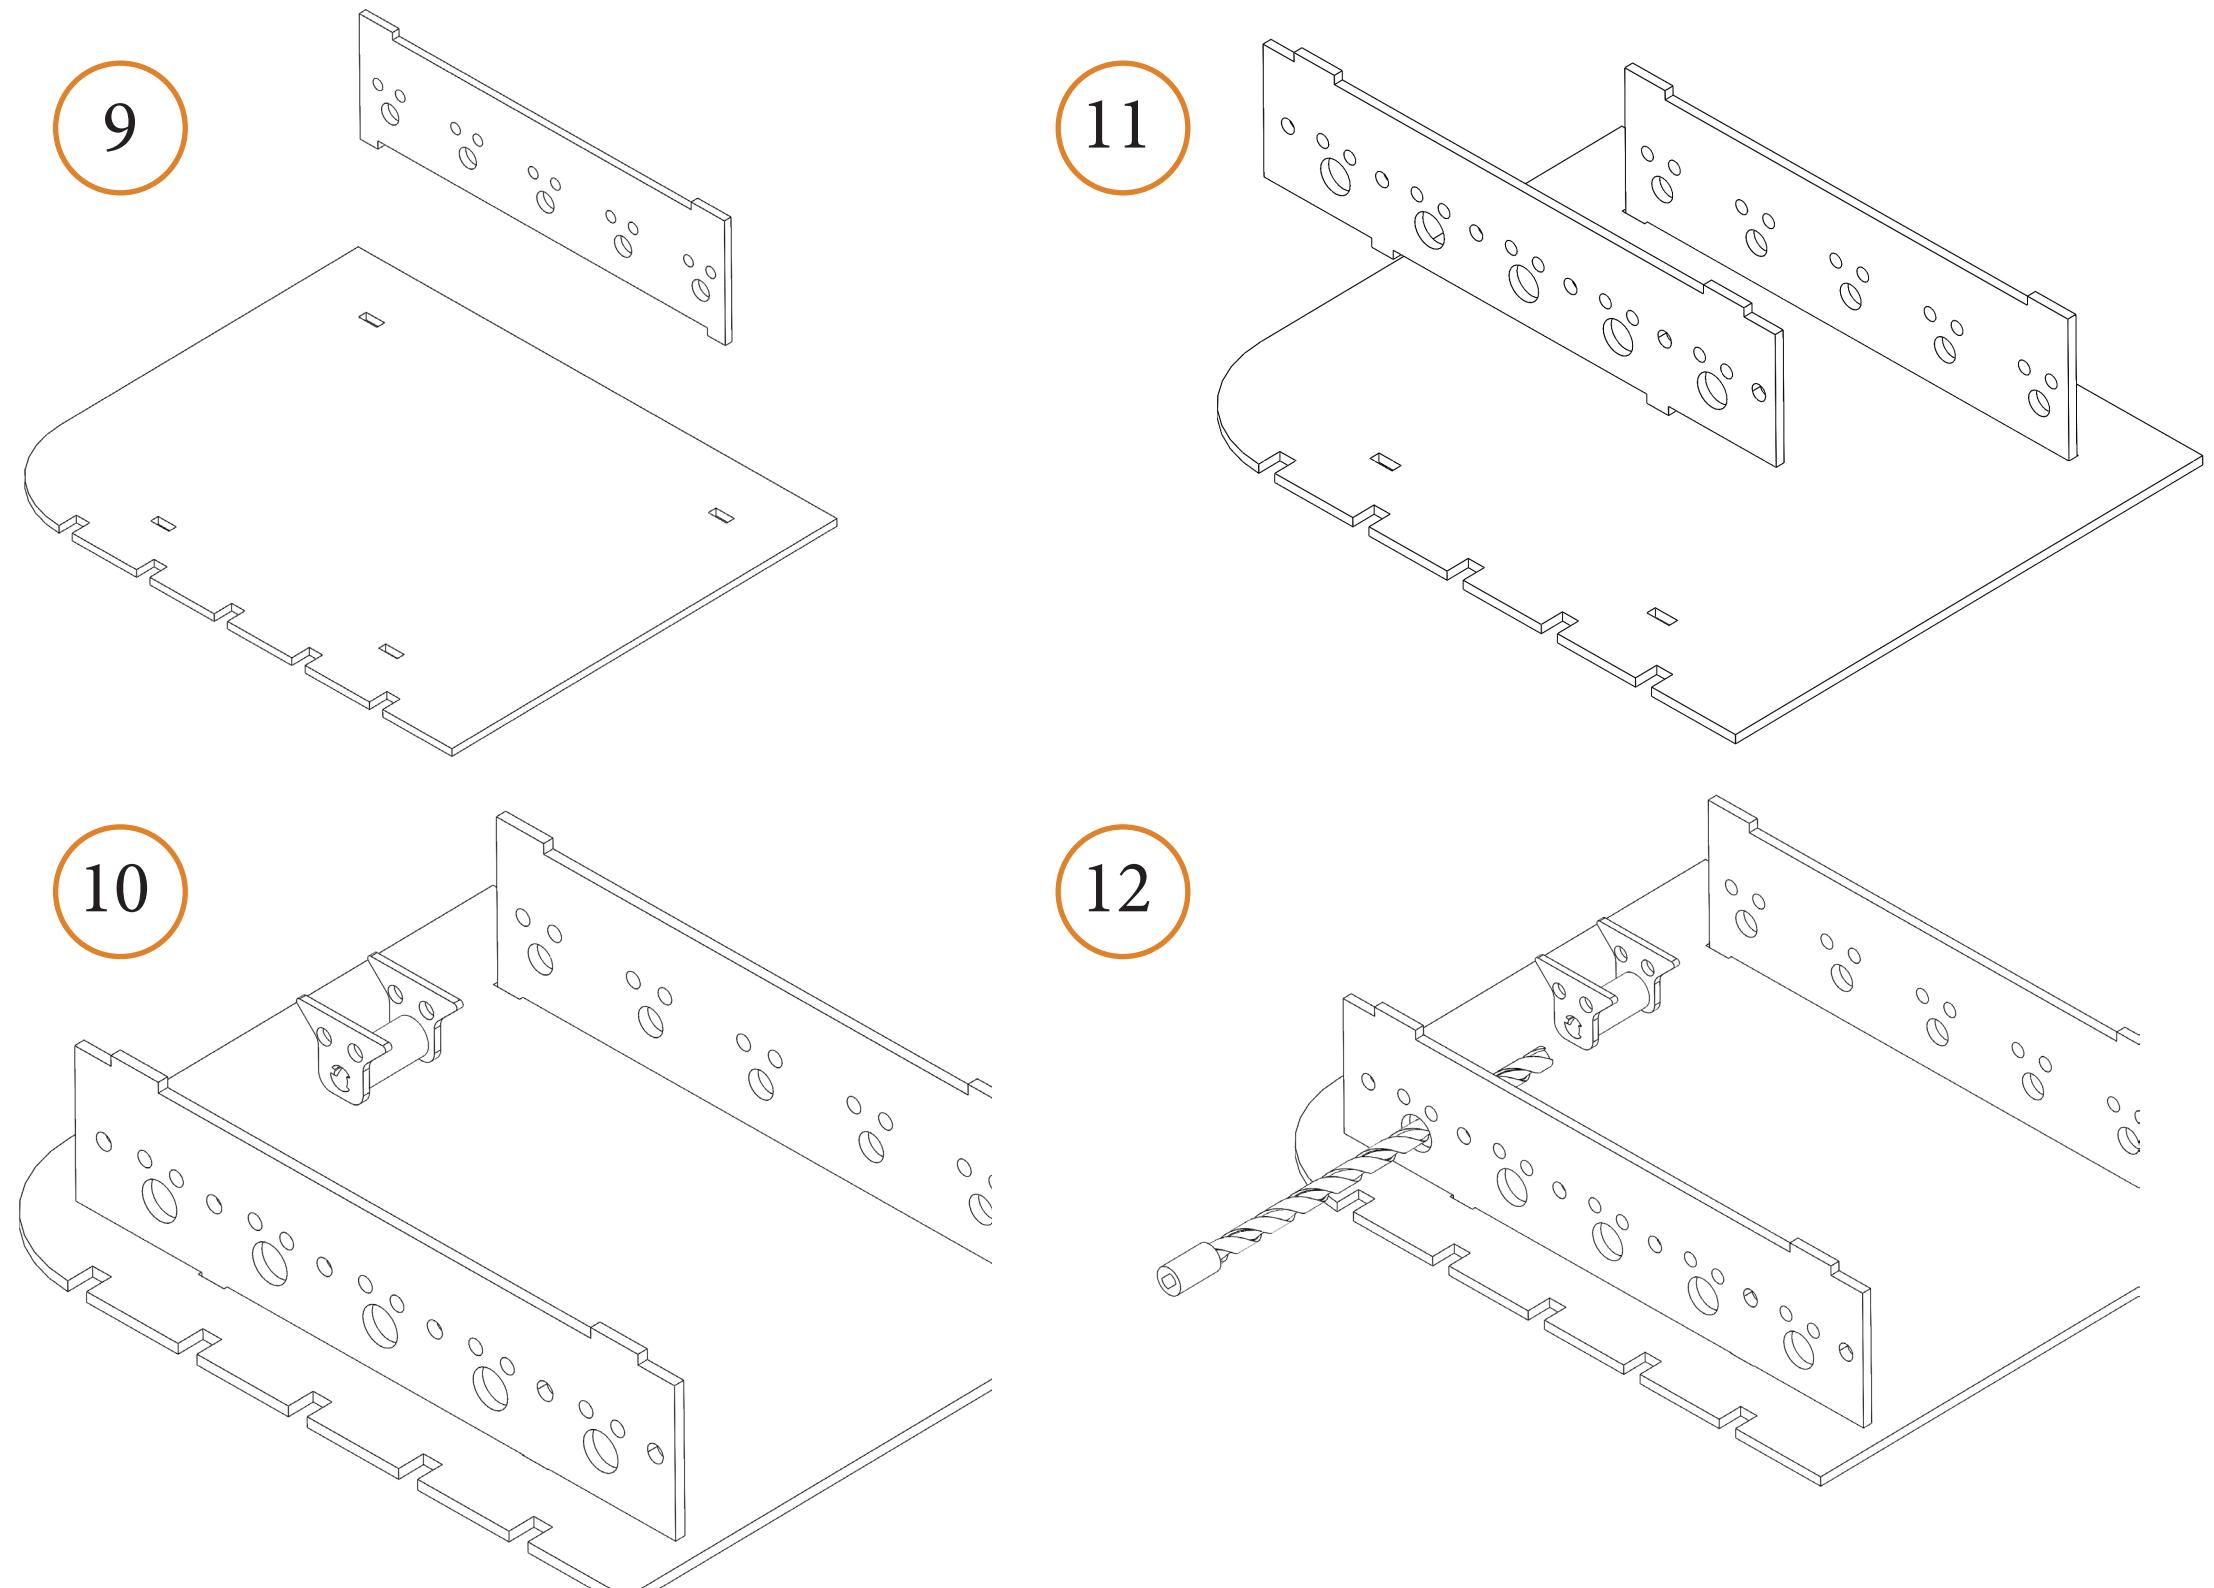


13

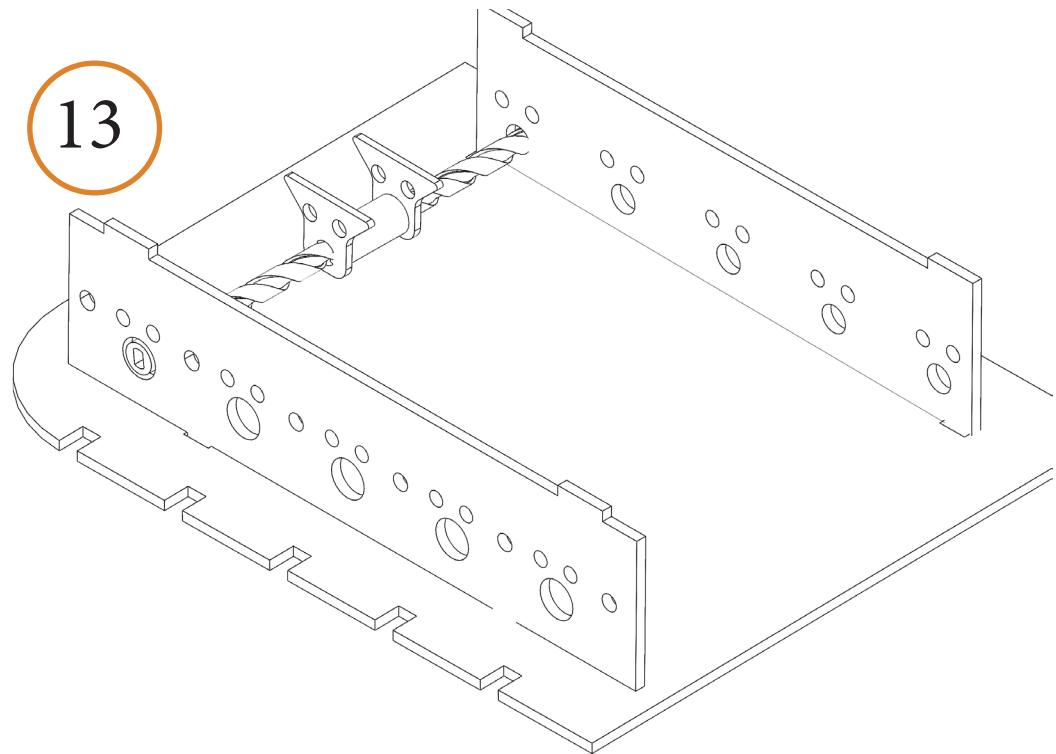


15

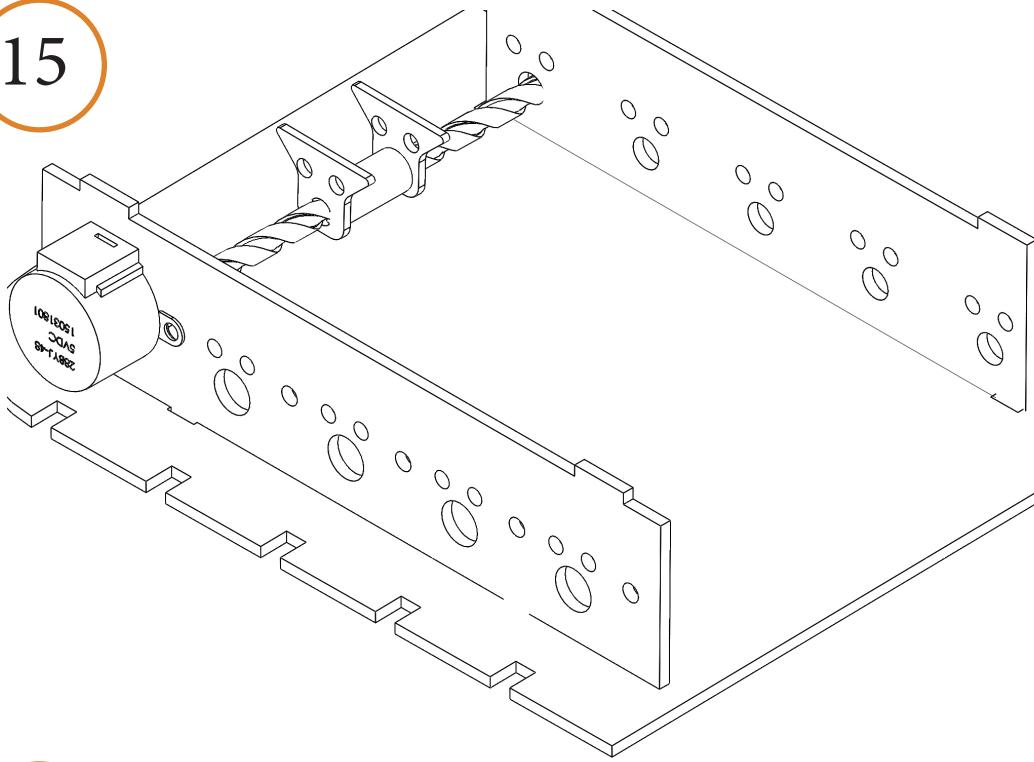


14

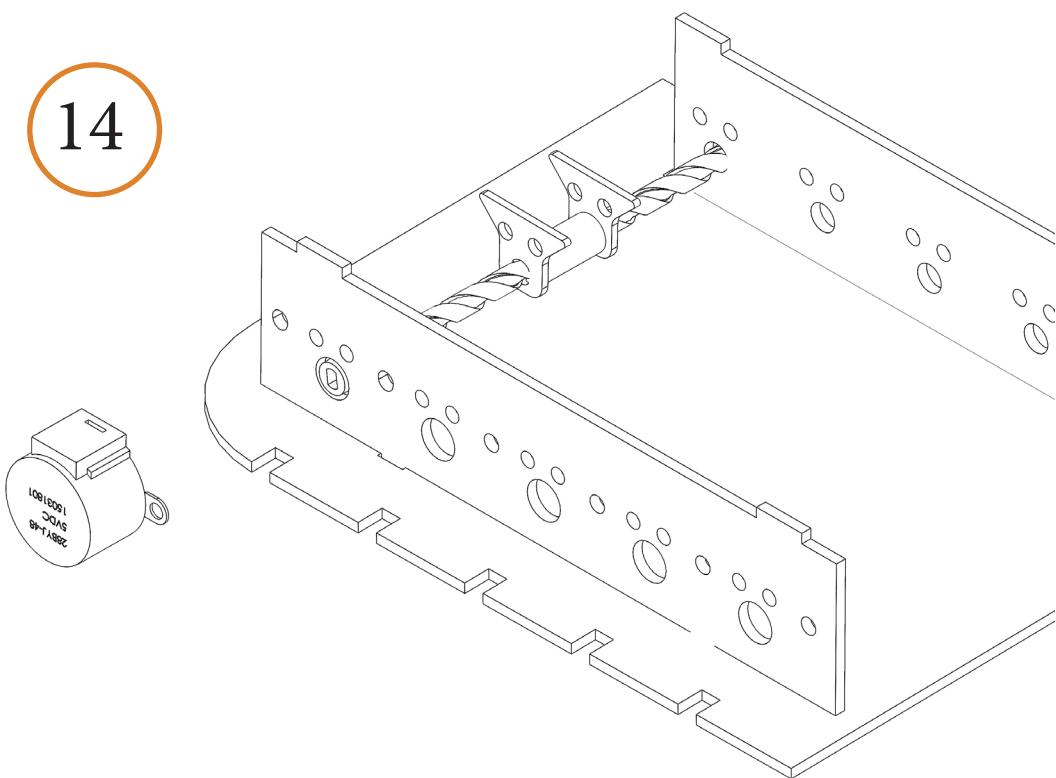


16

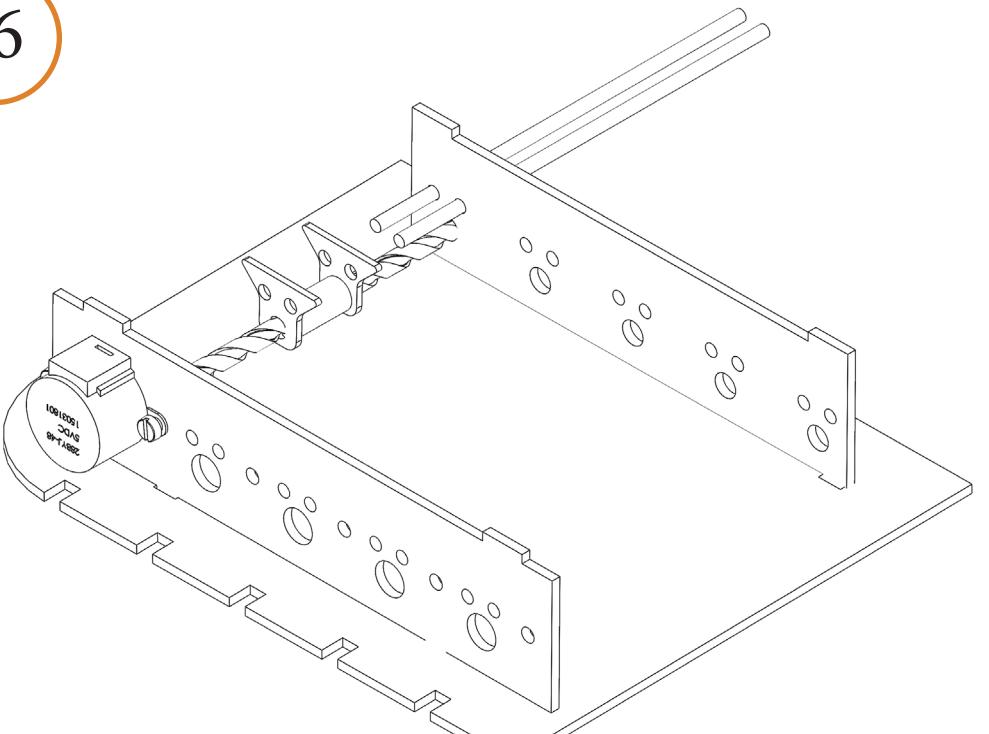


17

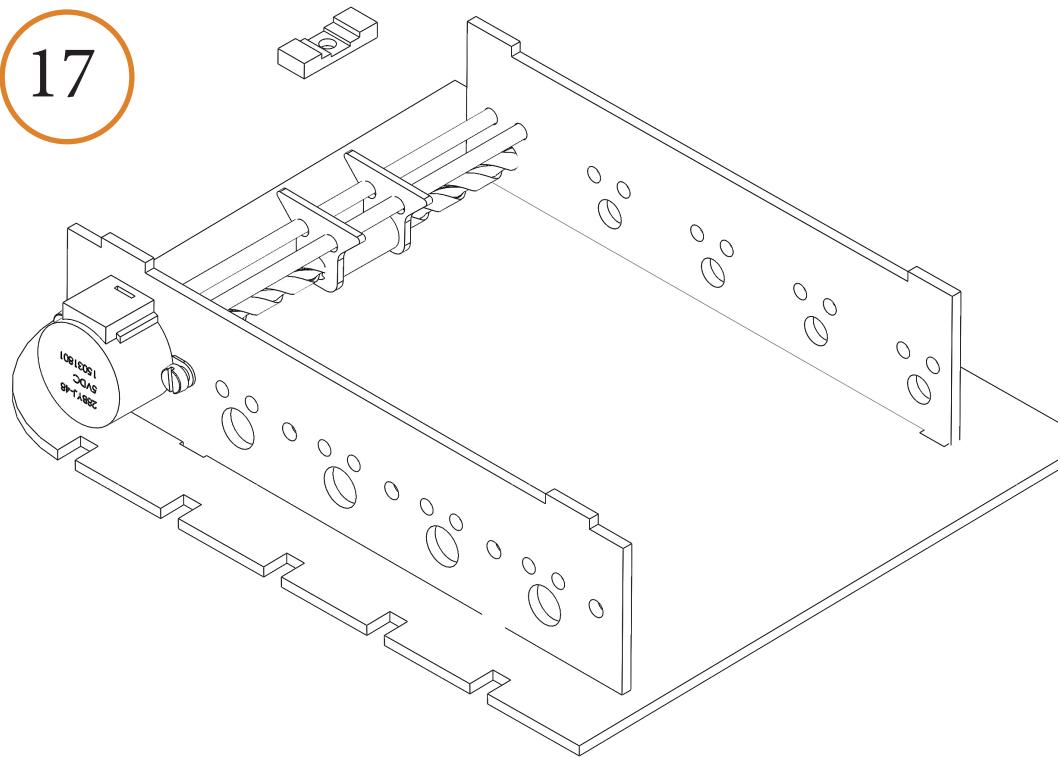


19

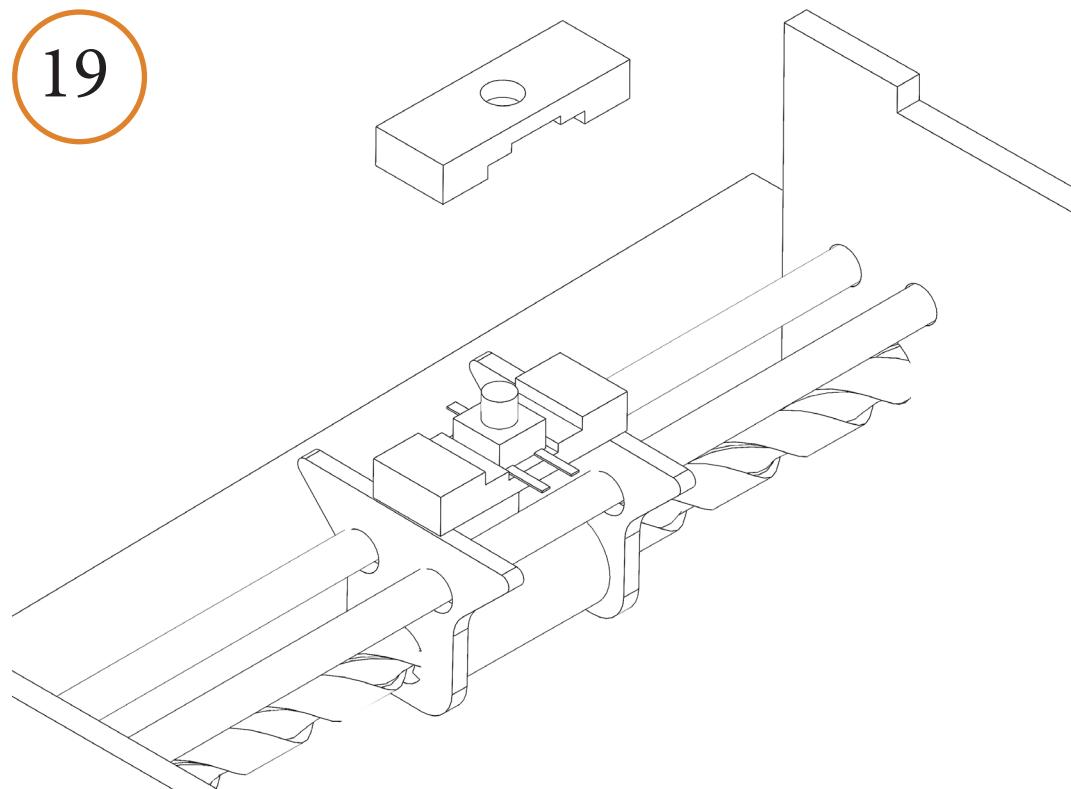


18

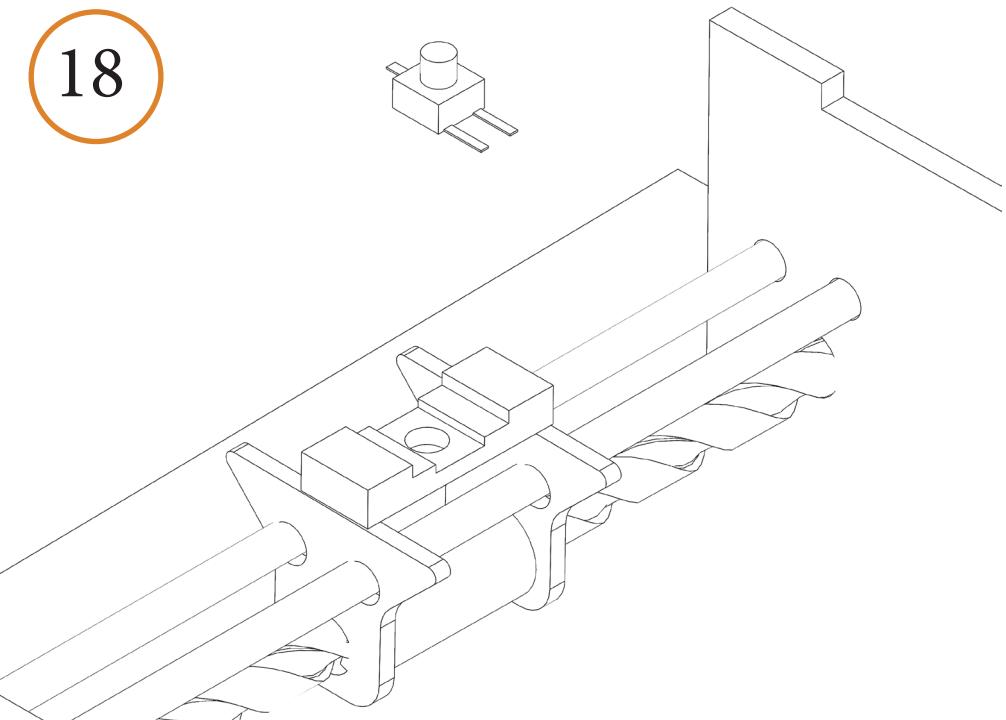


20

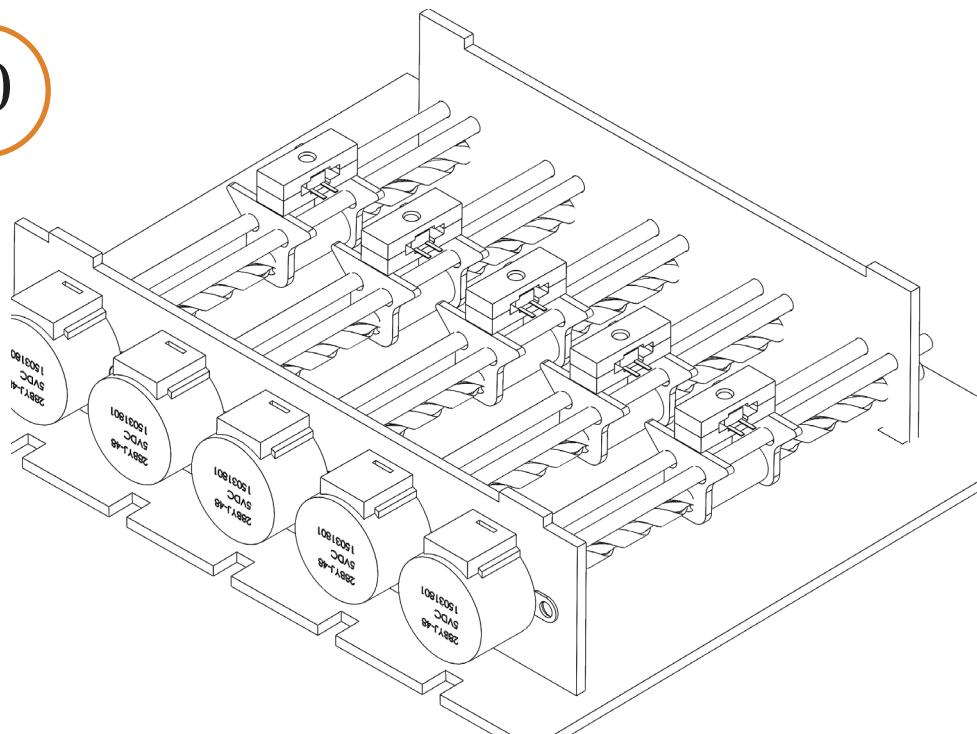


21

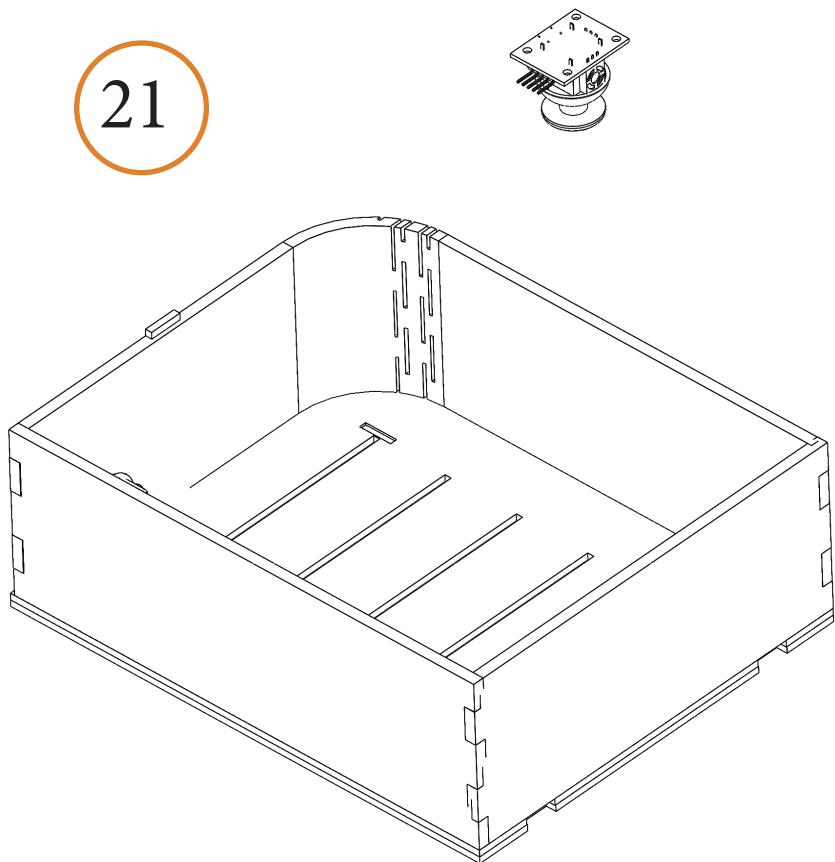


22

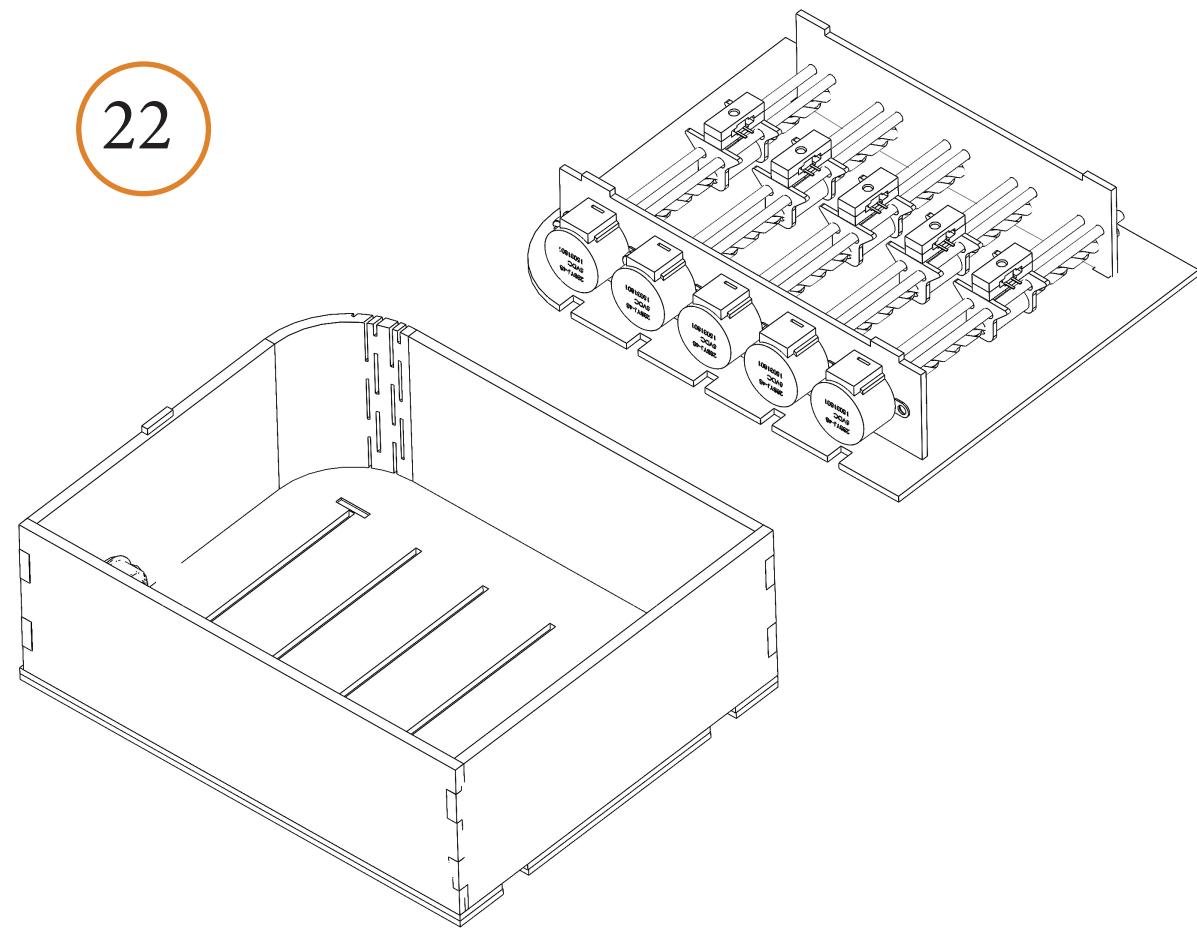


23

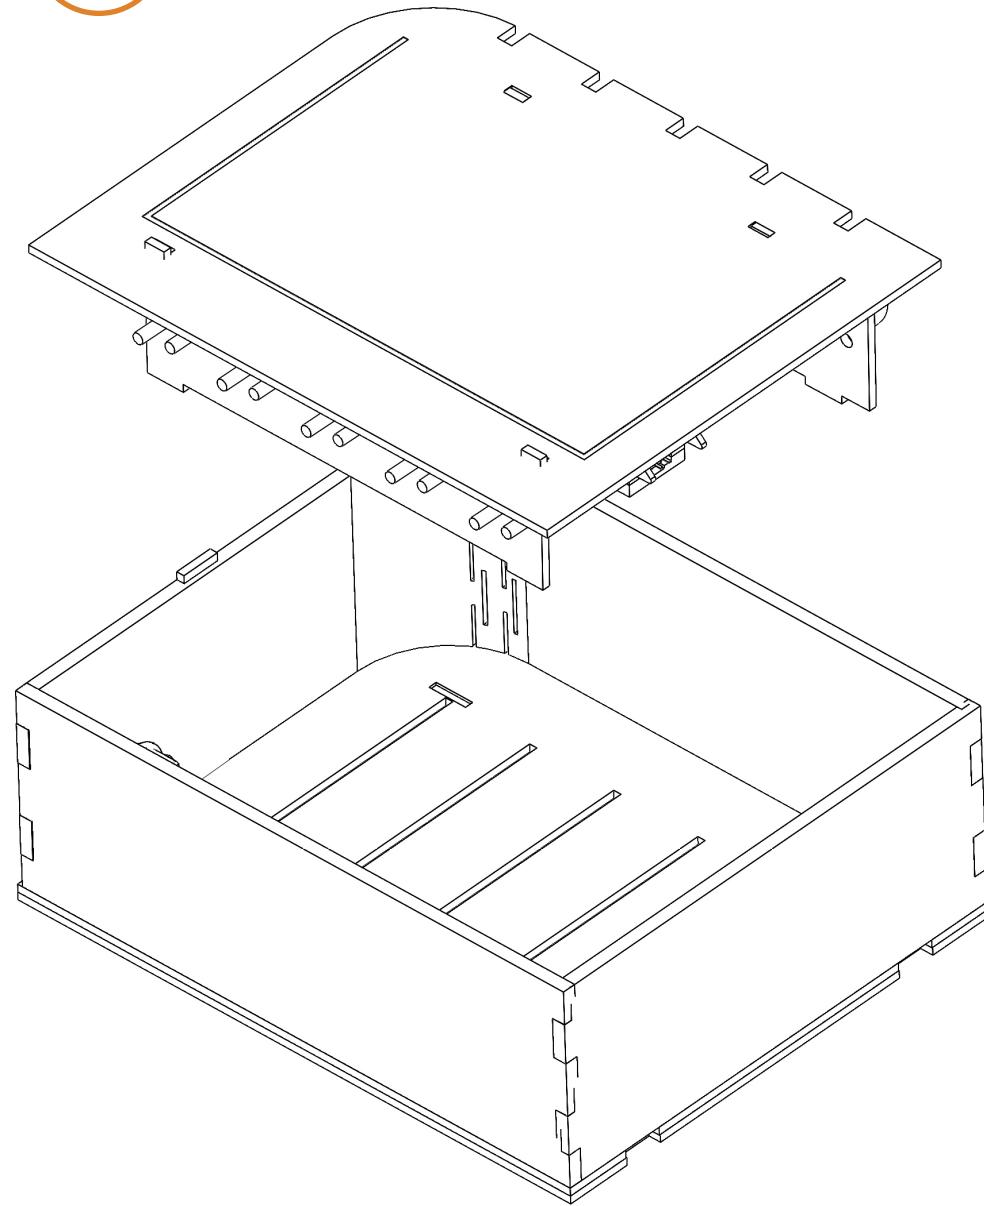




24

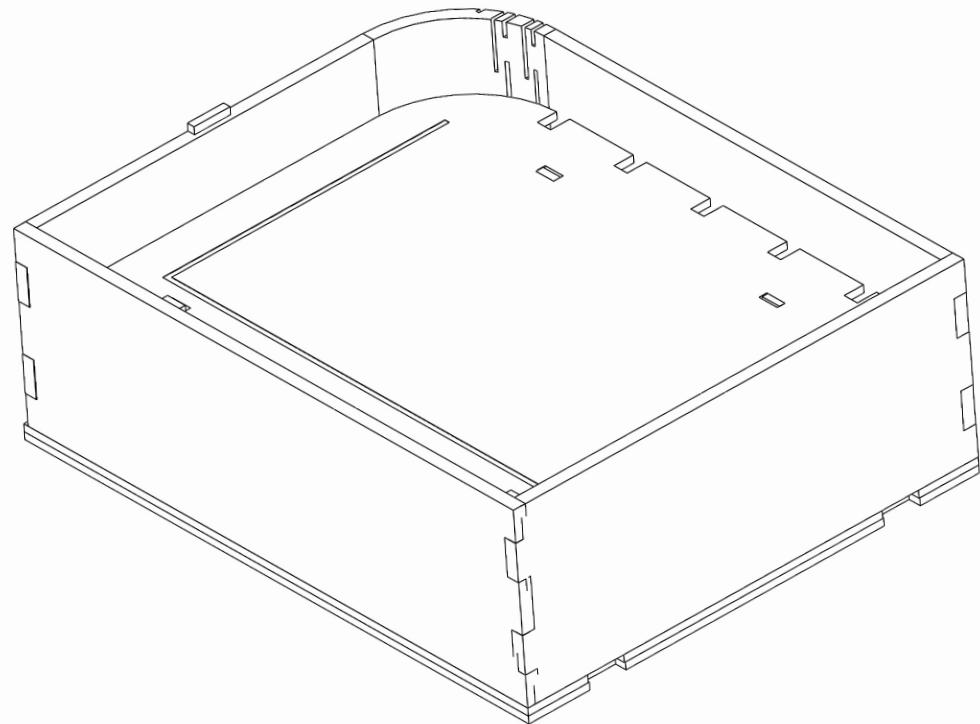


25

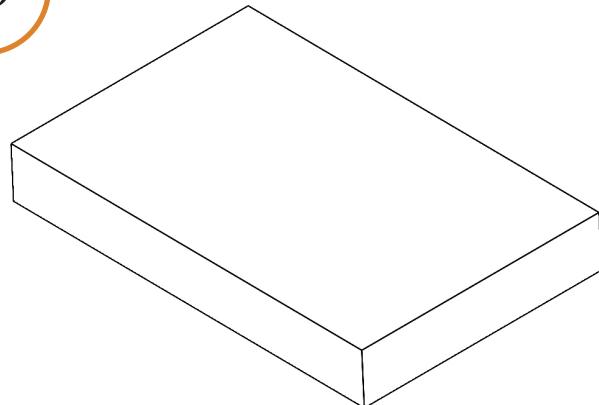

26

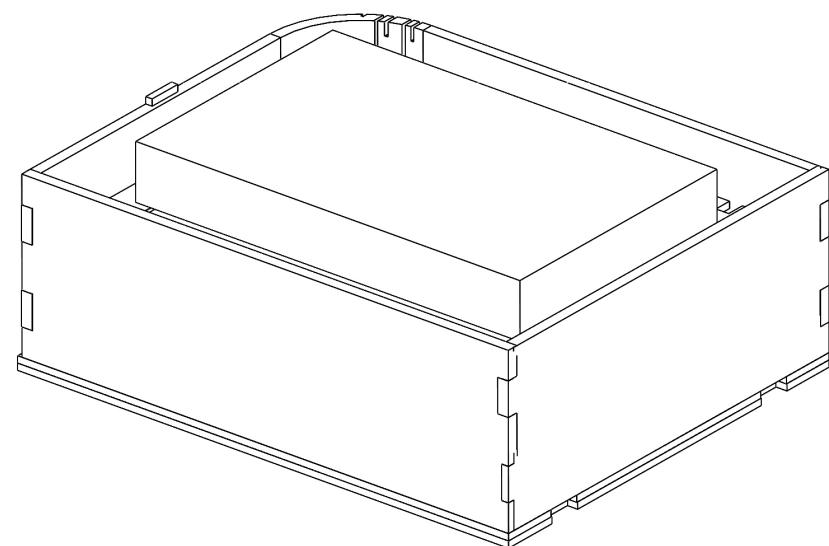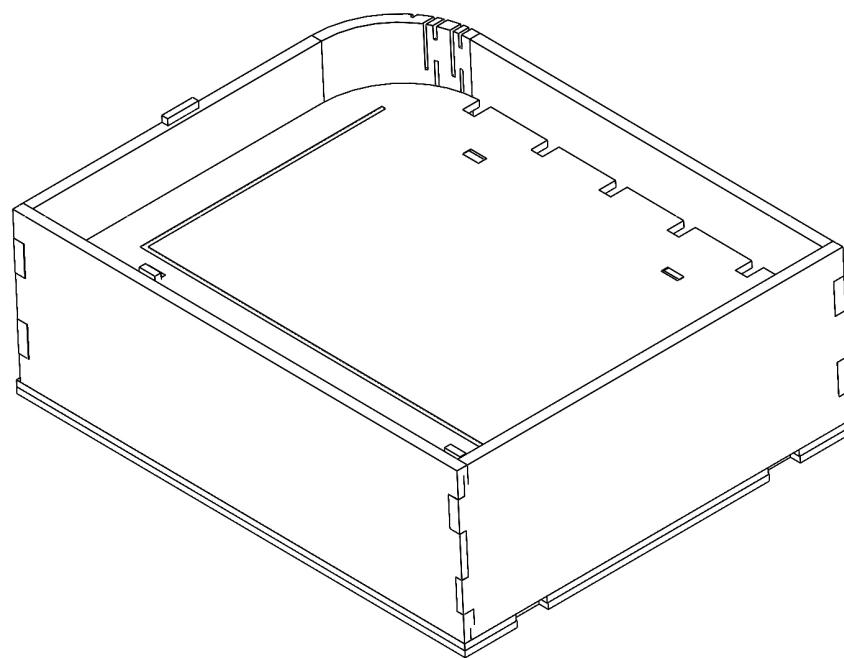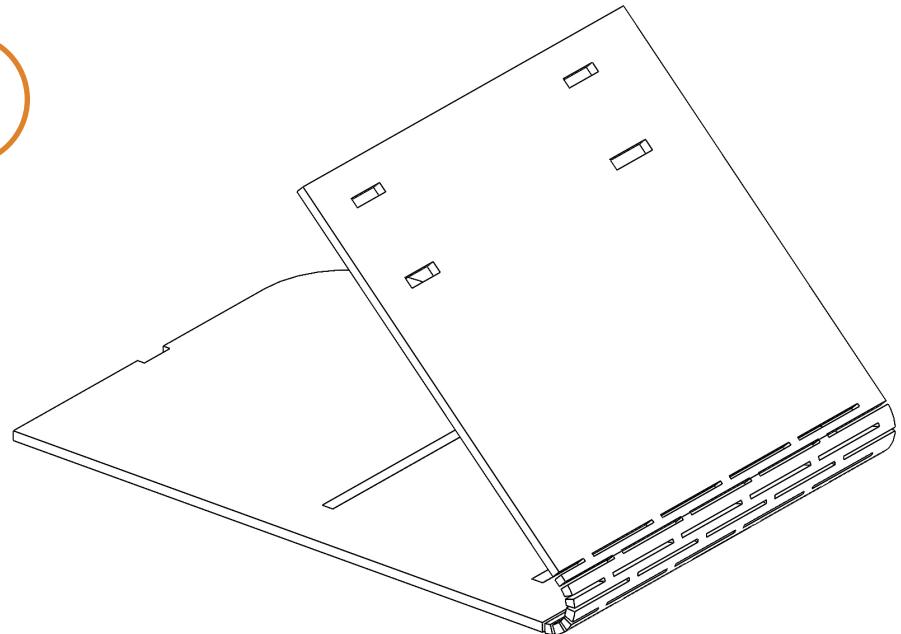

27

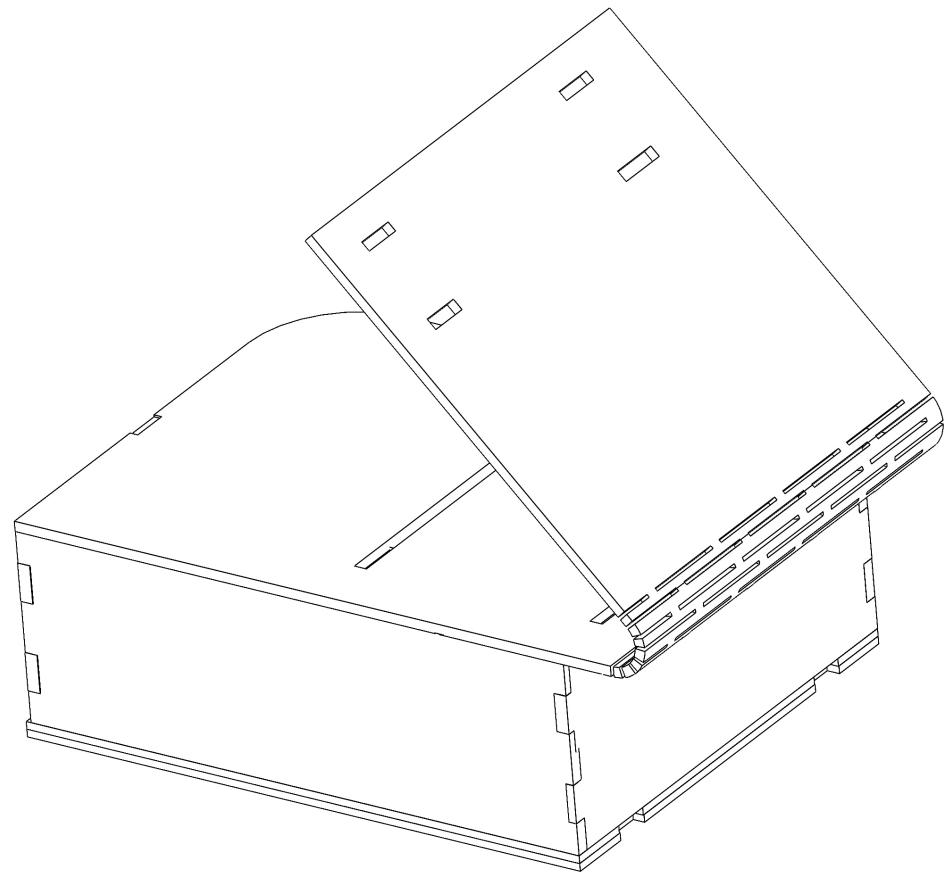

28

