



Data Bus on Board Diagnostic Interface and Diagnostic Link Connector (DLC)

From July 2016




Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

cardinalerWan

Data Bus on Board Diagnostic Interface, Diagnostic Connection

- J533 Data Bus on Board Diagnostic Interface
- T16 16-Pin Connector, Black
- T54 54-Pin Connector, Black
- U31 Diagnostic Connection
- 367 Ground Connection 2 (in Main Wiring Harness)
- 602 Ground Connection in Left Front Footwell
- * From May 2017
- *2 Through May 2017

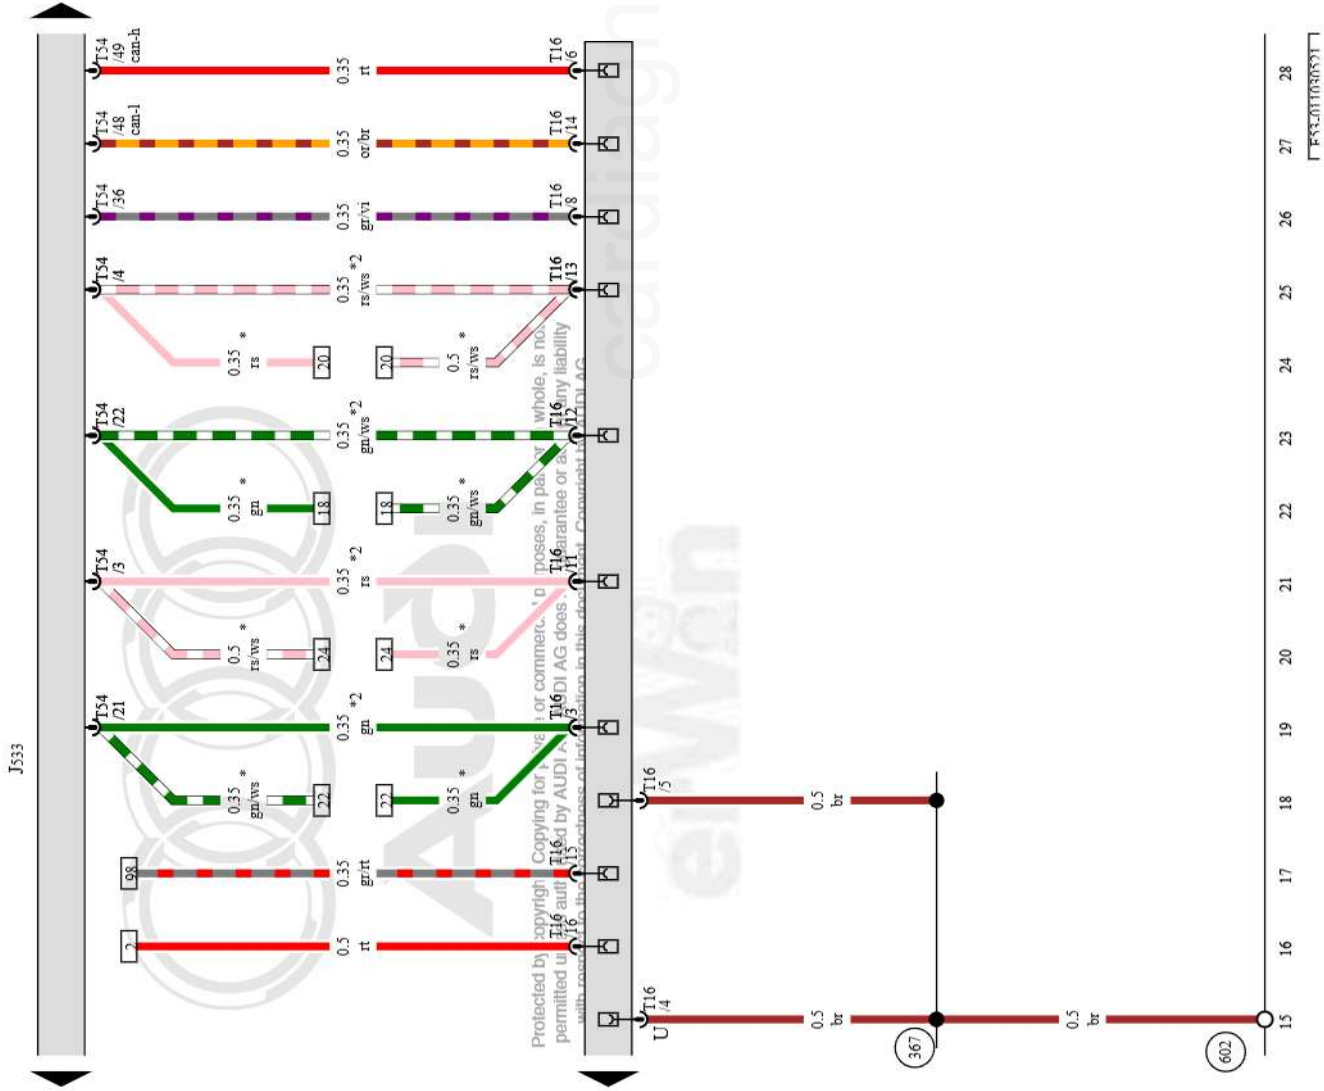


Data Bus on Board Diagnostic Interface, Comfort System
CAN Bus High Connection 1 (in Main Wiring Harness),
Comfort System CAN Bus High Connection 3 (in Main
Wiring Harness), Comfort System CAN Bus Low
Connection 1 (in Main Wiring Harness), Comfort System
CAN Bus Low Connection 3 (in Main Wiring Harness)

- J256 Convertible Top Control Module
- J345 Towing Recognition Control Module
- J387 Front Passenger Door Control Module
- J533 Data Bus on Board Diagnostic Interface
- J605 Rear Lid Control Module
- J608 Special Purpose Vehicle Control Module
- T4r 4-Pin Connector, Black
- T10i 10-Pin Connector, Black
- T16e 16-Pin Connector, Black
- T20m 20-Pin Connector, Black
- T20r 20-Pin Connector, White
- T28b 28-Pin Connector, Black
- T28bx 28-Pin Connector, Black
- T32e 32-Pin Connector, Black
- T54 54-Pin Connector, Black
- TTIVR Coupling Point in Right Front Door
- TTVR Right Front Door Coupling Point


- Comfort System CAN Bus High Connection 1 (in Main Wiring Harness)
- Comfort System CAN Bus High Connection 3 (in Main Wiring Harness)
- Comfort System CAN Bus Low Connection 1 (in Main Wiring Harness)
- Comfort System CAN Bus Low Connection 3 (in Main Wiring Harness)

- * For Vehicles with Trailer Hitch
- *2 Refer to Applicable Convenience System Wiring Diagram
- *3 For Vehicles with Auxiliary Lamps
- *4 For Convertible

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

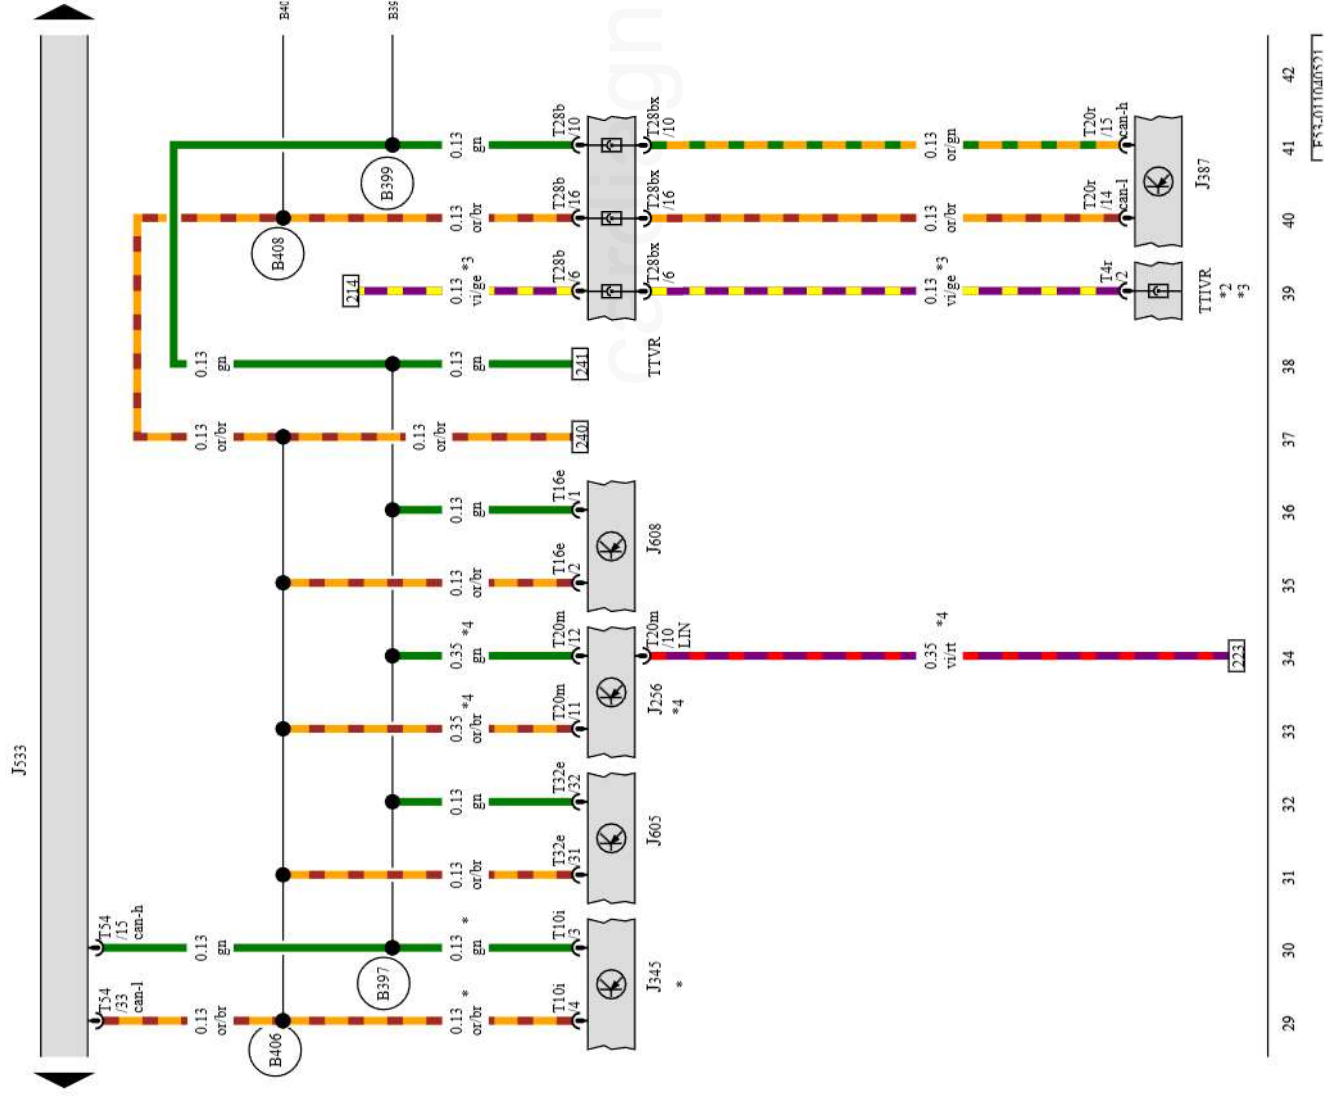


Data Bus on Board Diagnostic Interface, Left Front Seat Coupling Station, Comfort System CAN Bus High Connection 2 (in Main Wiring Harness), Comfort System CAN Bus High Connection 3 (in Main Wiring Harness), Comfort System CAN Bus Low Connection 2 (in Main Wiring Harness), Comfort System CAN Bus Low Connection 3 (in Main Wiring Harness)

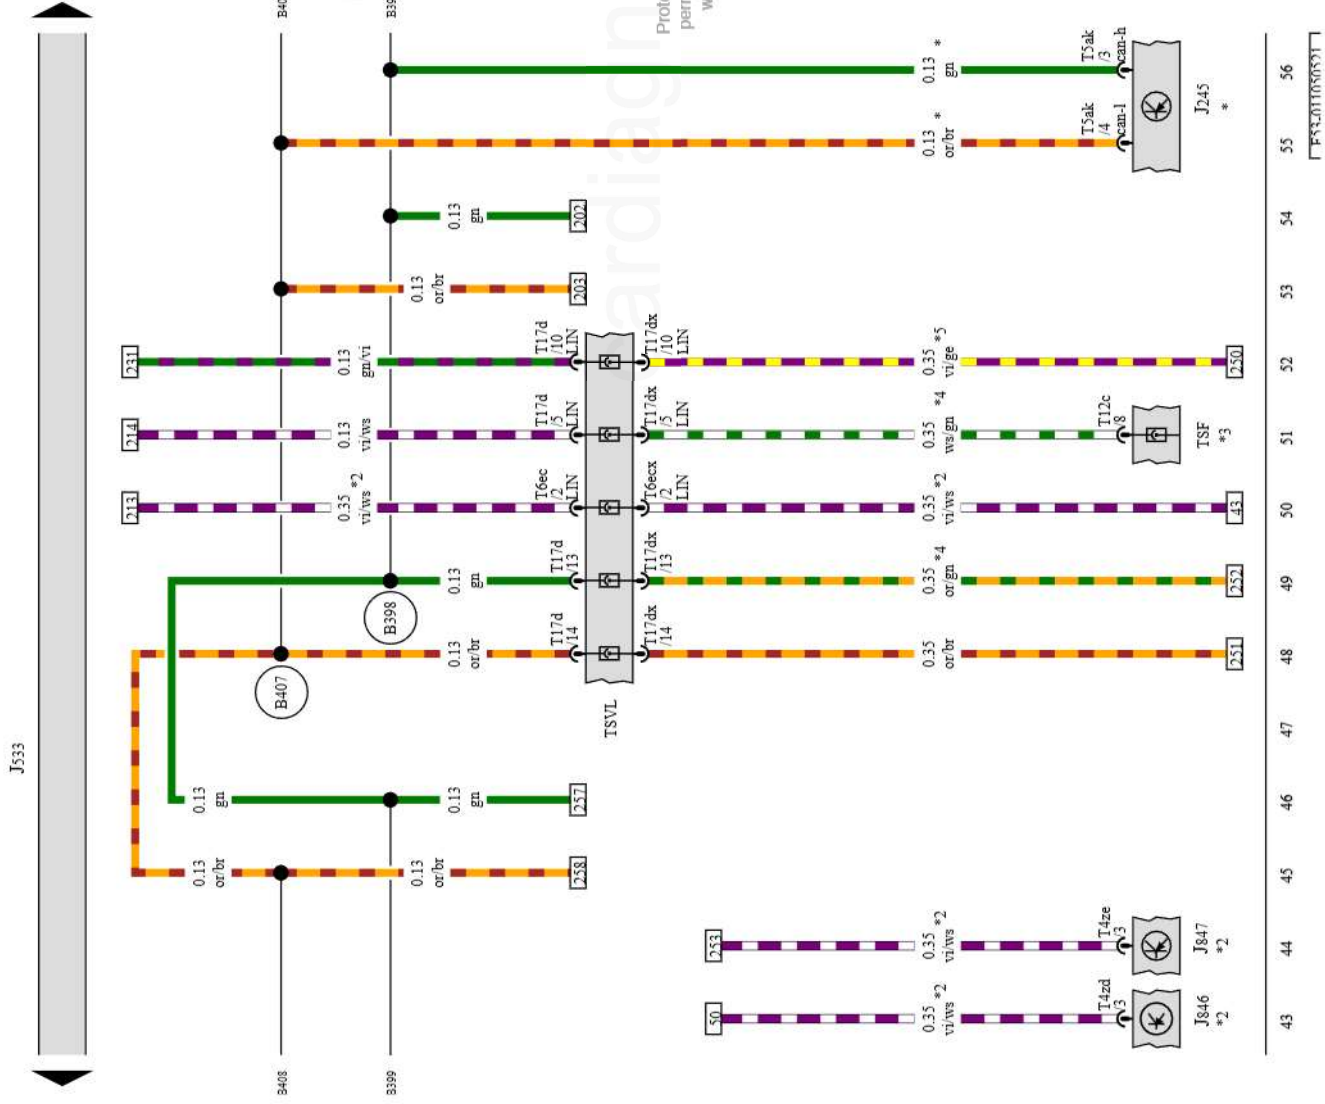


- J245 Sunroof Control Module
- J533 Data Bus on Board Diagnostic Interface
- J846 Left Neck Heating Control Module
- J847 Right Neck Heating Control Module
- T42d 4-Pin Connector, Black
- T42e 4-Pin Connector, Black
- T5ak 5-Pin Connector, Black
- T6ec 6-Pin Connector, Gray
- T6ecx 6-Pin Connector, Gray
- T12c 12-Pin Connector, Black
- T17d 17-Pin Connector, Red
- T17dx 17-Pin Connector, Red
- TSF Driver Seat Backrest Coupling Point
- TSVL Left Front Seat Coupling Station
- B398 Comfort System CAN Bus High Connection 2 (in Main Wiring Harness)
- B399 Comfort System CAN Bus High Connection 3 (in Main Wiring Harness)
- B407 Comfort System CAN Bus Low Connection 2 (in Main Wiring Harness)
- B408 Comfort System CAN Bus Low Connection 3 (in Main Wiring Harness)
- * For Vehicles with Panorama Sunroof
- *2 For Convertible
- *3 Refer to Applicable Seat Adjustment Wiring Diagram
- *4 Different Wire Color Possible
- *5 For Vehicles with Auxiliary Lamps

Protected by copyright. Copying for purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information.

Data Bus on Board Diagnostic Interface, Infotainment CAN Bus High Connection (in Instrument Panel Wiring Harness), Infotainment CAN Bus Low Connection (in Instrument Panel Wiring Harness), Comfort System CAN Bus High Connection 2 (in Main Wiring Harness), Comfort System CAN Bus Low Connection 2 (in Main Wiring Harness)

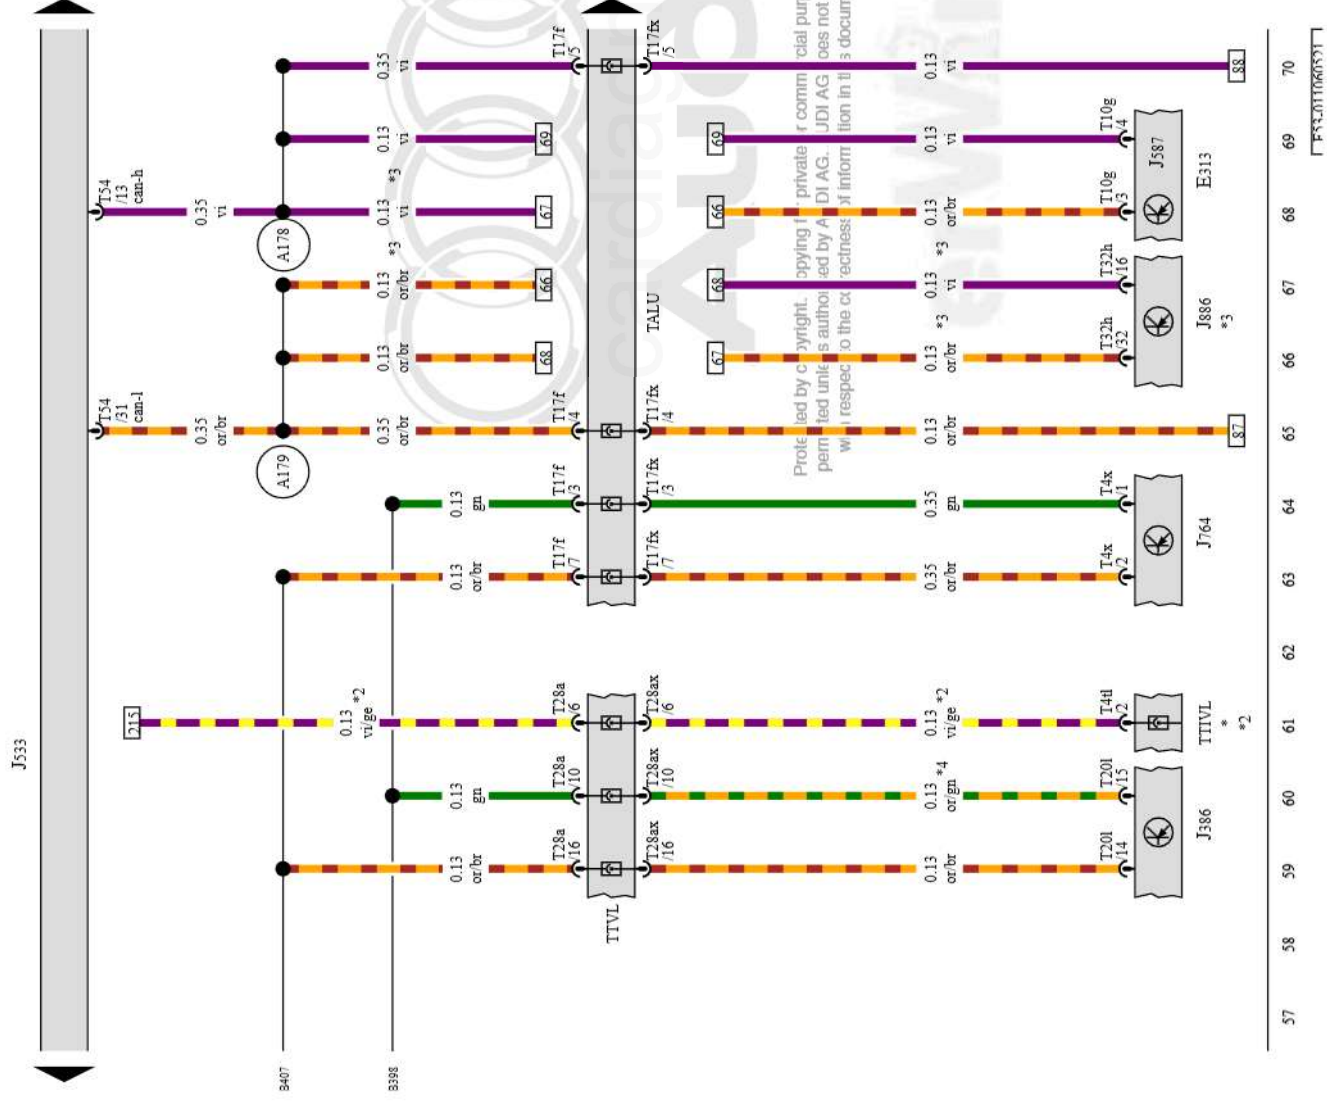

Data Bus on Board Diagnostic Interface, Powertrain CAN Bus High Connection 1 (in Main Wiring Harness), Powertrain CAN Bus Low Connection 1 (in Main Wiring Harness)

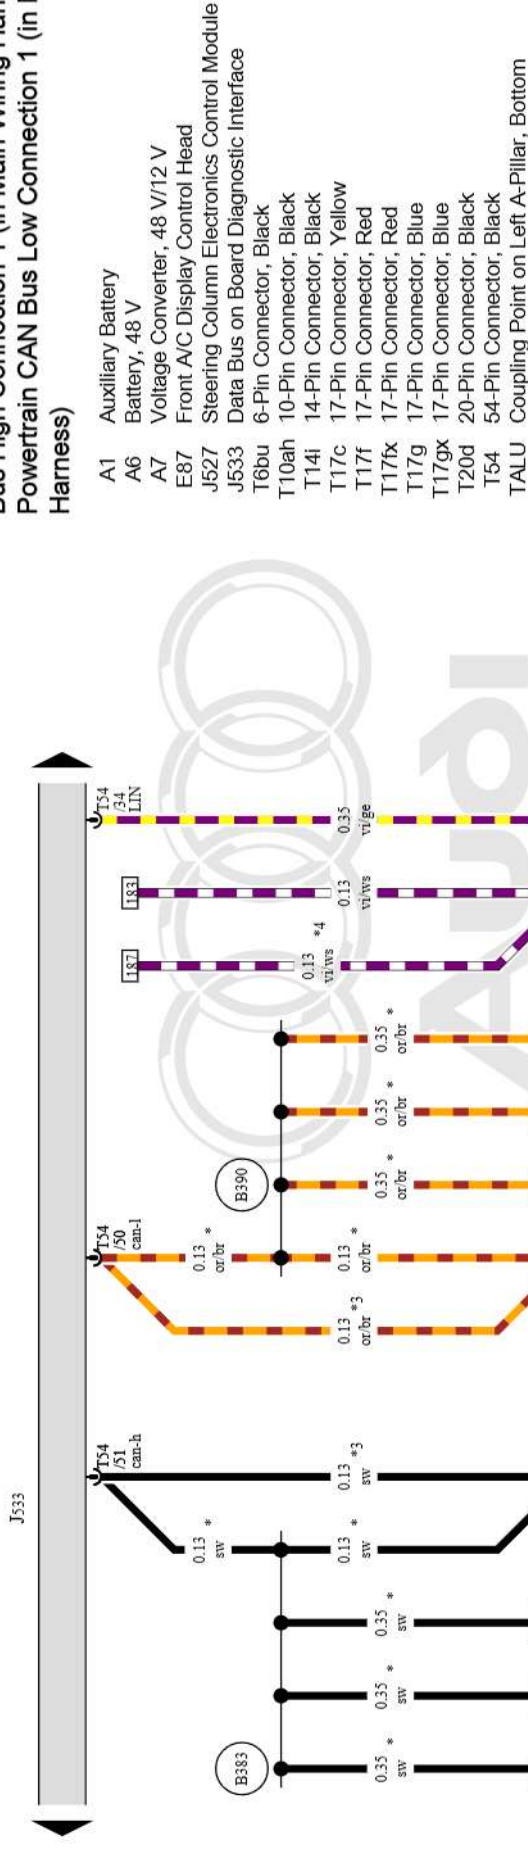

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

71	72	73	74	75	76	77	78	79	80	81	82	83	84
----	----	----	----	----	----	----	----	----	----	----	----	----	----

Data Bus on Board Diagnostic Interface, Infotainment
CAN Bus High Connection 2 (in Instrument Panel Wiring
Harness), Infotainment CAN Bus Low Connection 2 (in
Instrument Panel Wiring Harness), CAN Bus Extended
High Connection 1 (in Main Wiring Harness), CAN Bus
Extended Low Connection 1 (in Main Wiring Harness)

- J234 Airbag Control Module
- J285 Instrument Cluster Control Module
- J533 Data Bus on Board Diagnostic Interface
- J854 Left Front Seat Belt Tensioner Control Module
- J855 Right Front Seat Belt Tensioner Control Module
- J898 Windshield Projection Head Up Display Control Module
- NX10 Left Front Seat Belt
- NX11 Right Front Seat Belt
- T5s 5-Pin Connector, Naturally Cloudy
- T5t 5-Pin Connector, Naturally Cloudy
- T10d 10-Pin Connector, Black
- T18k 18-Pin Connector, Black
- T32f 32-Pin Connector, Gray
- T96 96-Pin Connector, Yellow


A225 Infotainment CAN Bus High Connection 2 (in Instrument Panel
Wiring Harness)

A226 Infotainment CAN Bus Low Connection 2 (in Instrument Panel
Wiring Harness)


B108 CAN Bus Extended High Connection 1 (in Main Wiring
Harness)

B109 CAN Bus Extended Low Connection 1 (in Main Wiring
Harness)

* Depending on Equipment

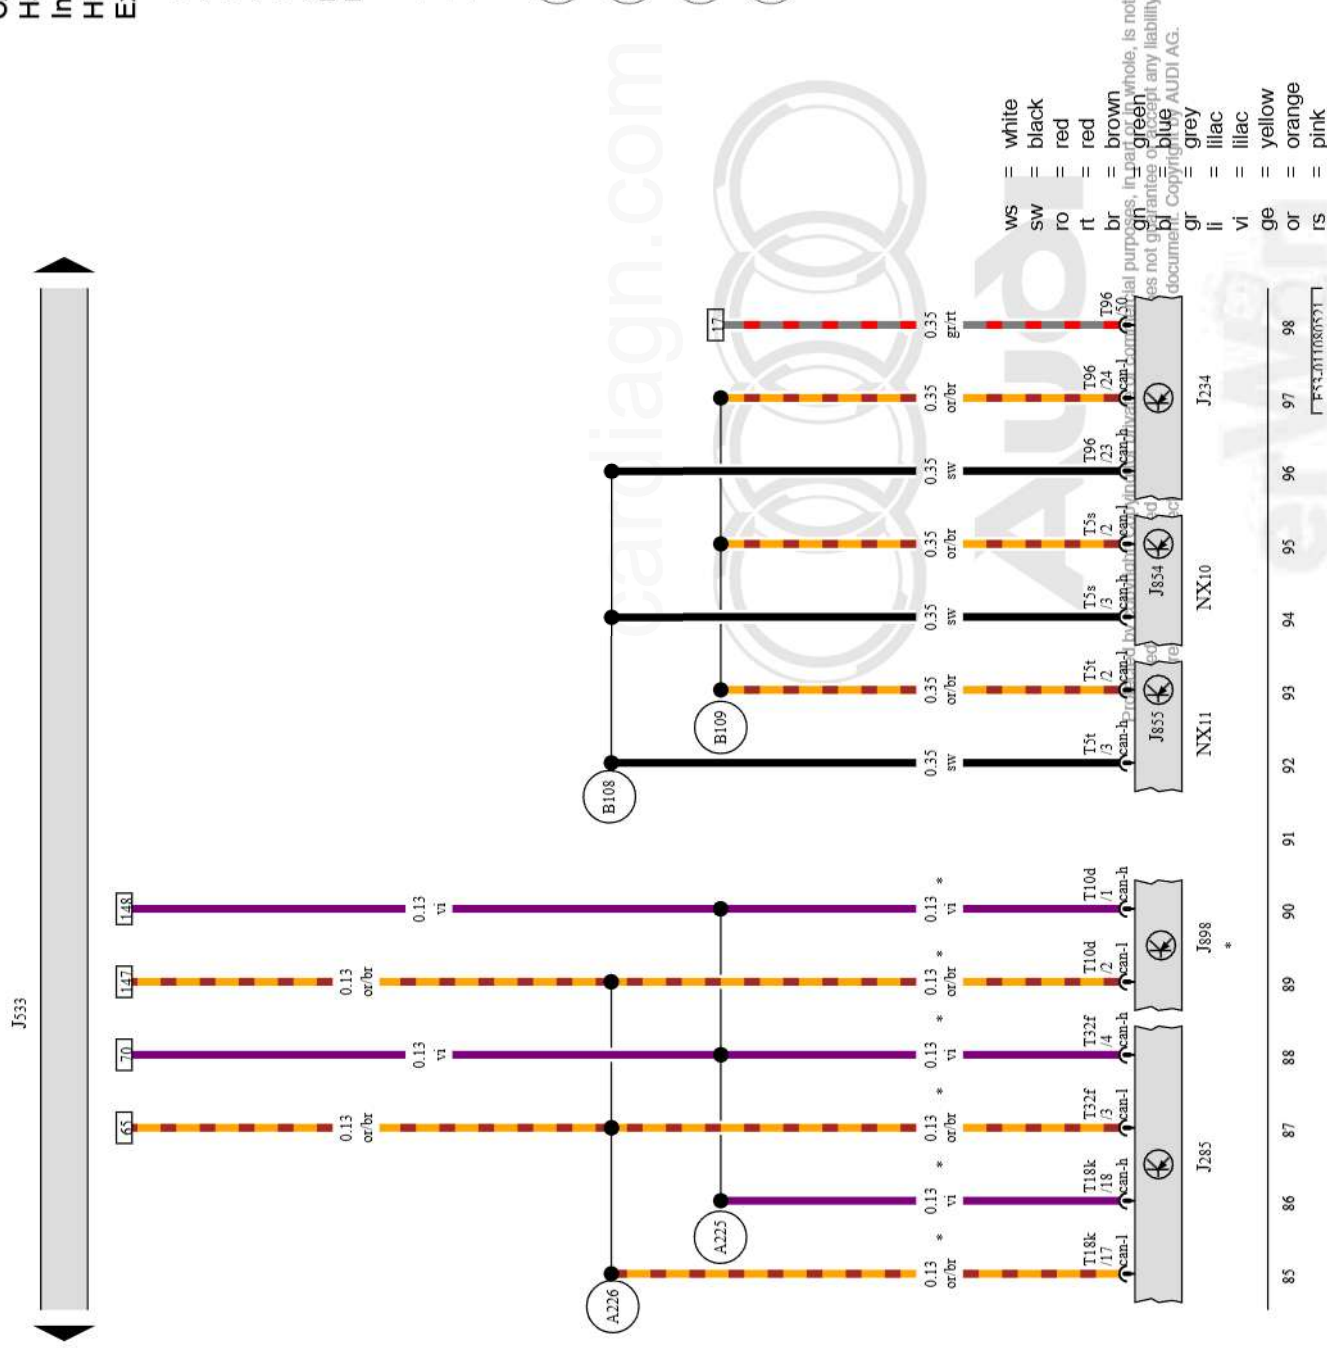


**Data Bus on Board Diagnostic Interface, CAN Bus Extended High Connection 3 (in Main Wiring Harness)
CAN Bus Extended Low Connection 3 (in Main Wiring Harness)**

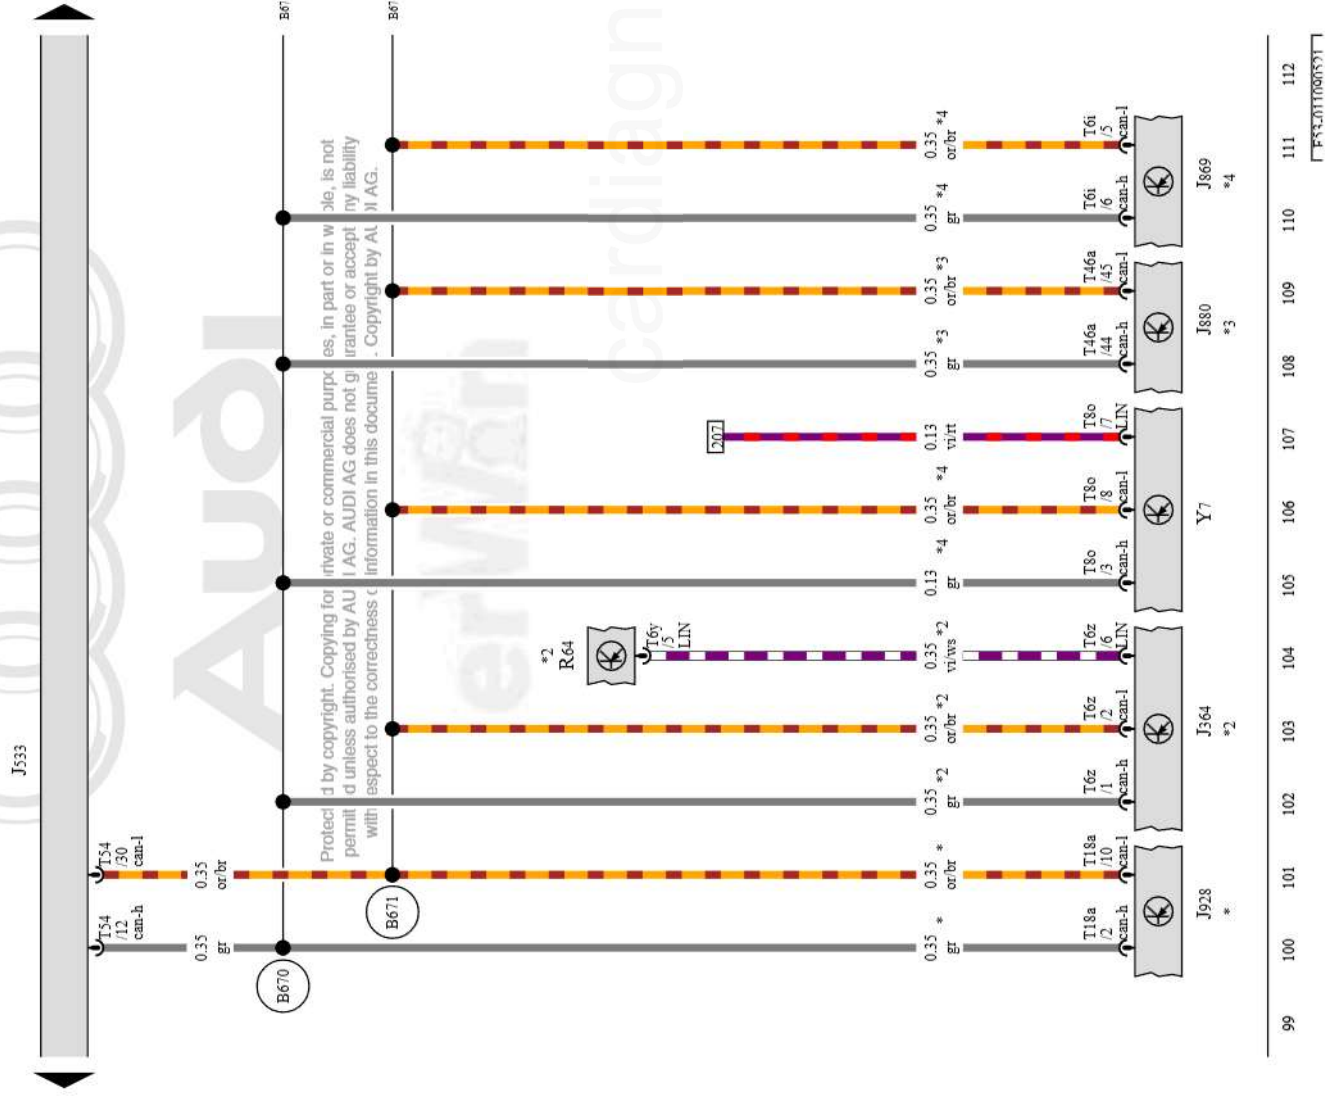

Data Bus on Board Diagnostic Interface, CAN Bus Extended High Connection 3 (in Main Wiring Harness), CAN Bus Extended Low Connection 3 (in Main Wiring Harness)

J533

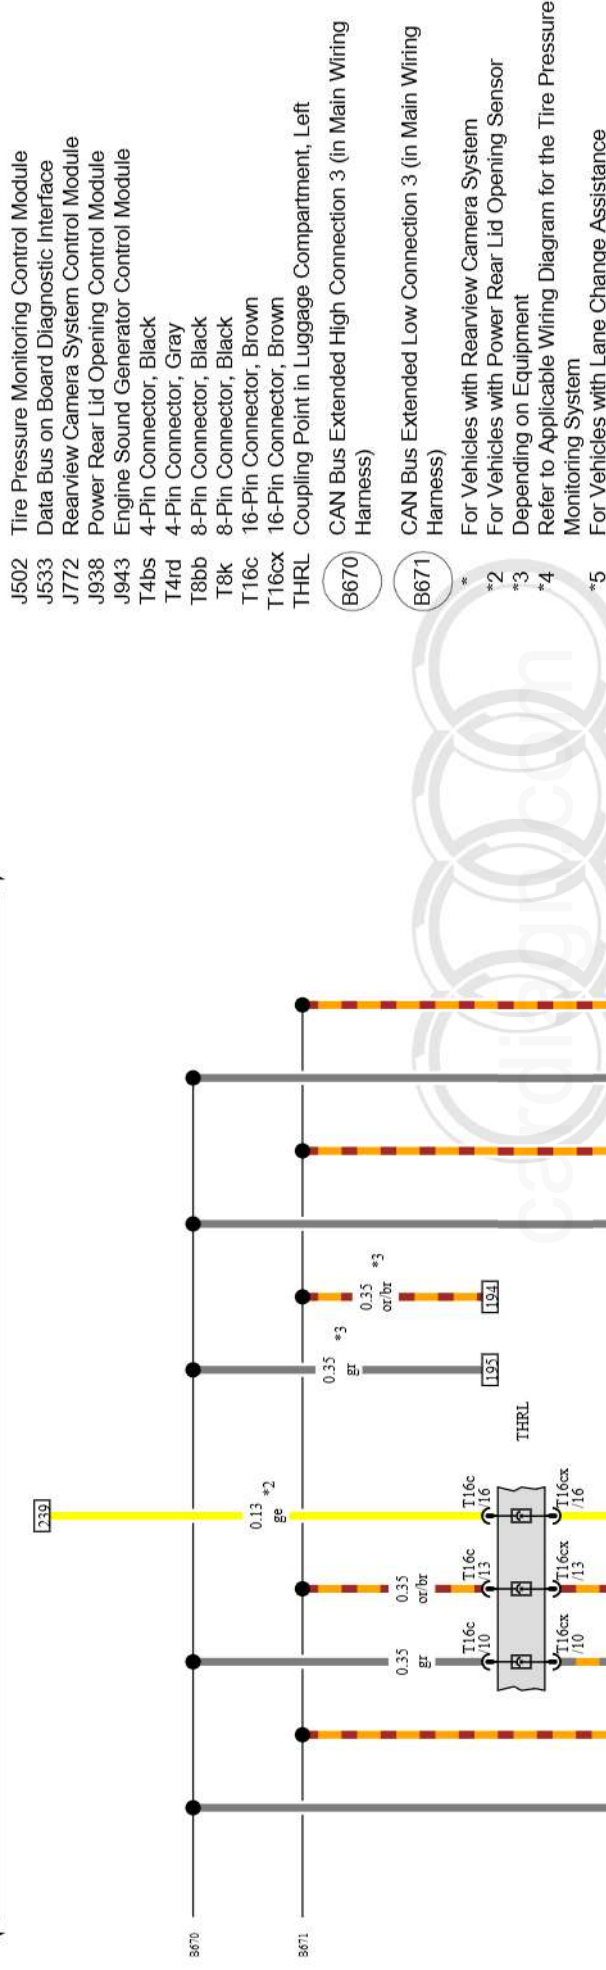


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

WS = white
SW = black
RO = red
RT = red
BR = brown
GN = green
BL = blue
GR = grey
LI = lilac
VI = lilac
GE = yellow
OR = orange
RS = pink

113 114 115 116 117 118 119 120 121 122 123 124 125 126

Data Bus on Board Diagnostic Interface, Connection 1 (CAN Bus, Vehicle Electrical System Control Module, High), Connection 1 (CAN Bus, Vehicle Electrical System Control Module, Low)

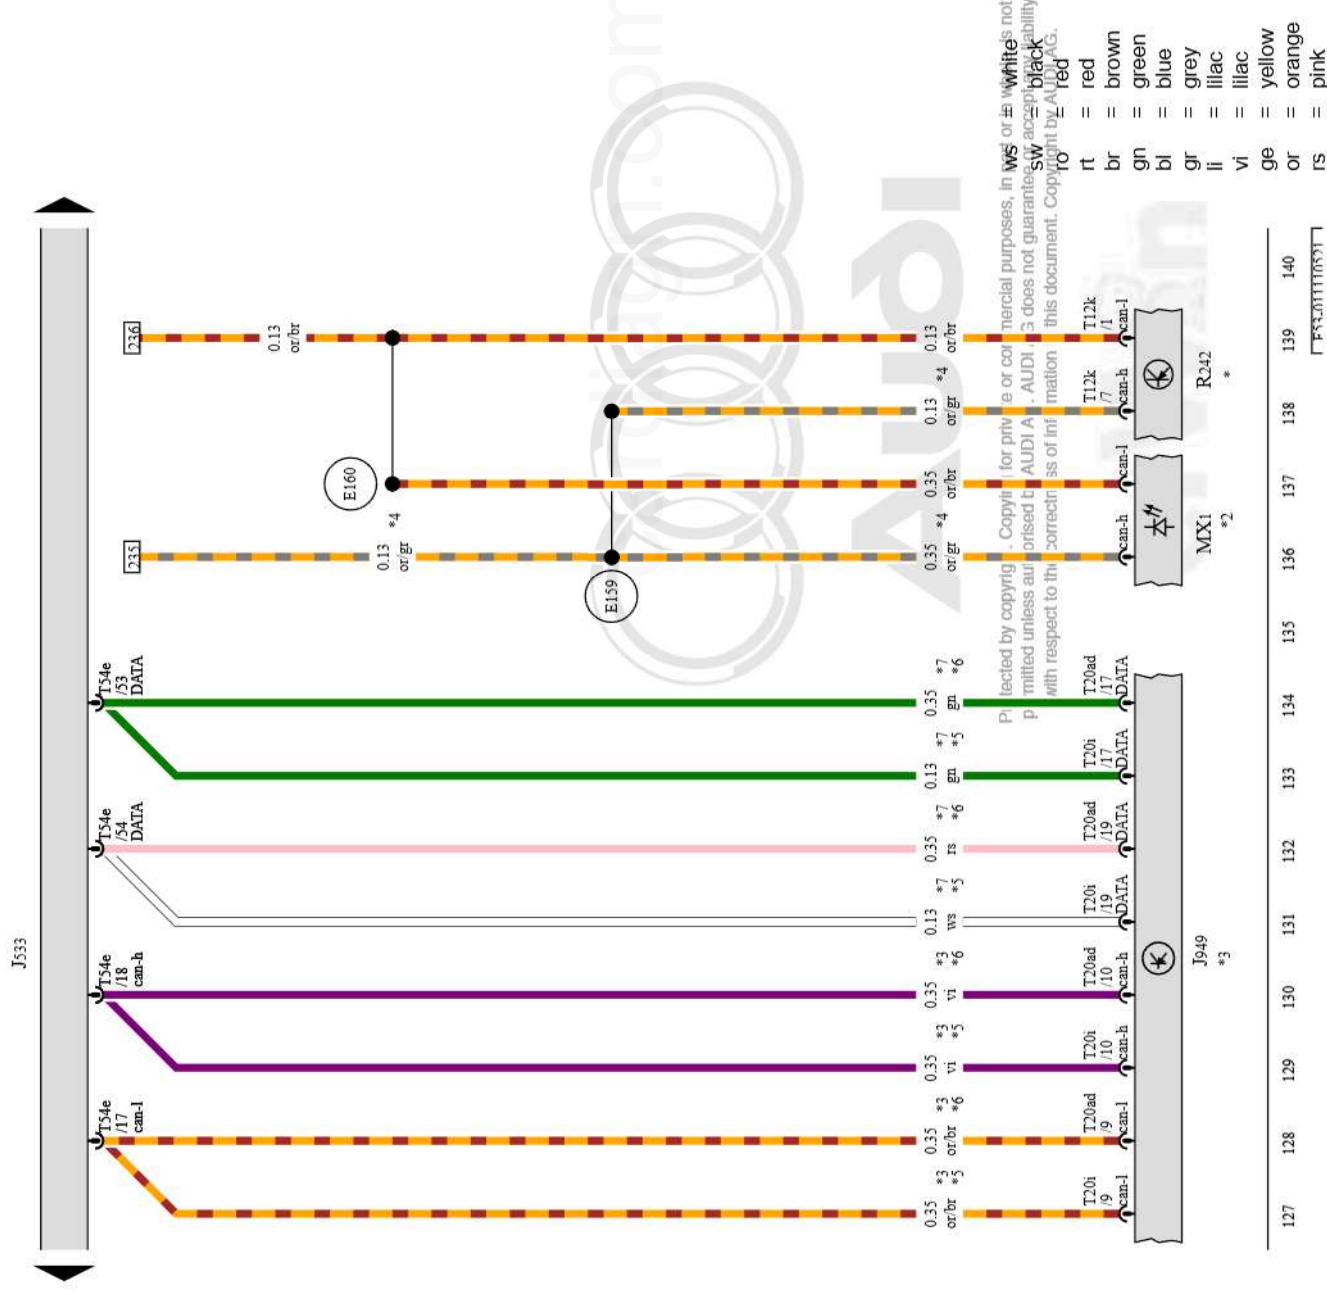

Data Bus on Board Diagnostic Interface, Connection 2 (CAN Bus Information Electronics Control Module 1, High), Connection 2 (CAN Bus Information Electronics Control Module 1, Low)


E380	Multimedia System Control Head
J533	Data Bus on Board Diagnostic Interface
J685	Front Information Display Control Head
J794	Information Electronics Control Module 1
T9b	9-Pin Connector, Blue
T10m	10-Pin Connector, Black
T10mx	10-Pin Connector, Black
T12ab	12-Pin Connector, Green
T12n	12-Pin Connector, Gray
T16v	16-Pin Connector, Brown
T16vx	16-Pin Connector, Brown
T20c	20-Pin Connector, Black
T54e	54-Pin Connector, Gray

Protected by copyright. All rights reserved. For commercial purposes, in part or in whole, is not permitted unless expressly permitted by Audi AG. Copyright by Audi AG.

Connection 2 (CAN Bus Information Electronics Control Module 1, High)

Connection 2 (CAN Bus Information Electronics Control Module 1, Low)

- * Refer to Applicable Radio Navigation System Wiring Diagram
- *2 From December 2019
- *3 Ethernet Connection
- *4 Through November 2019
- *5 From October 2019

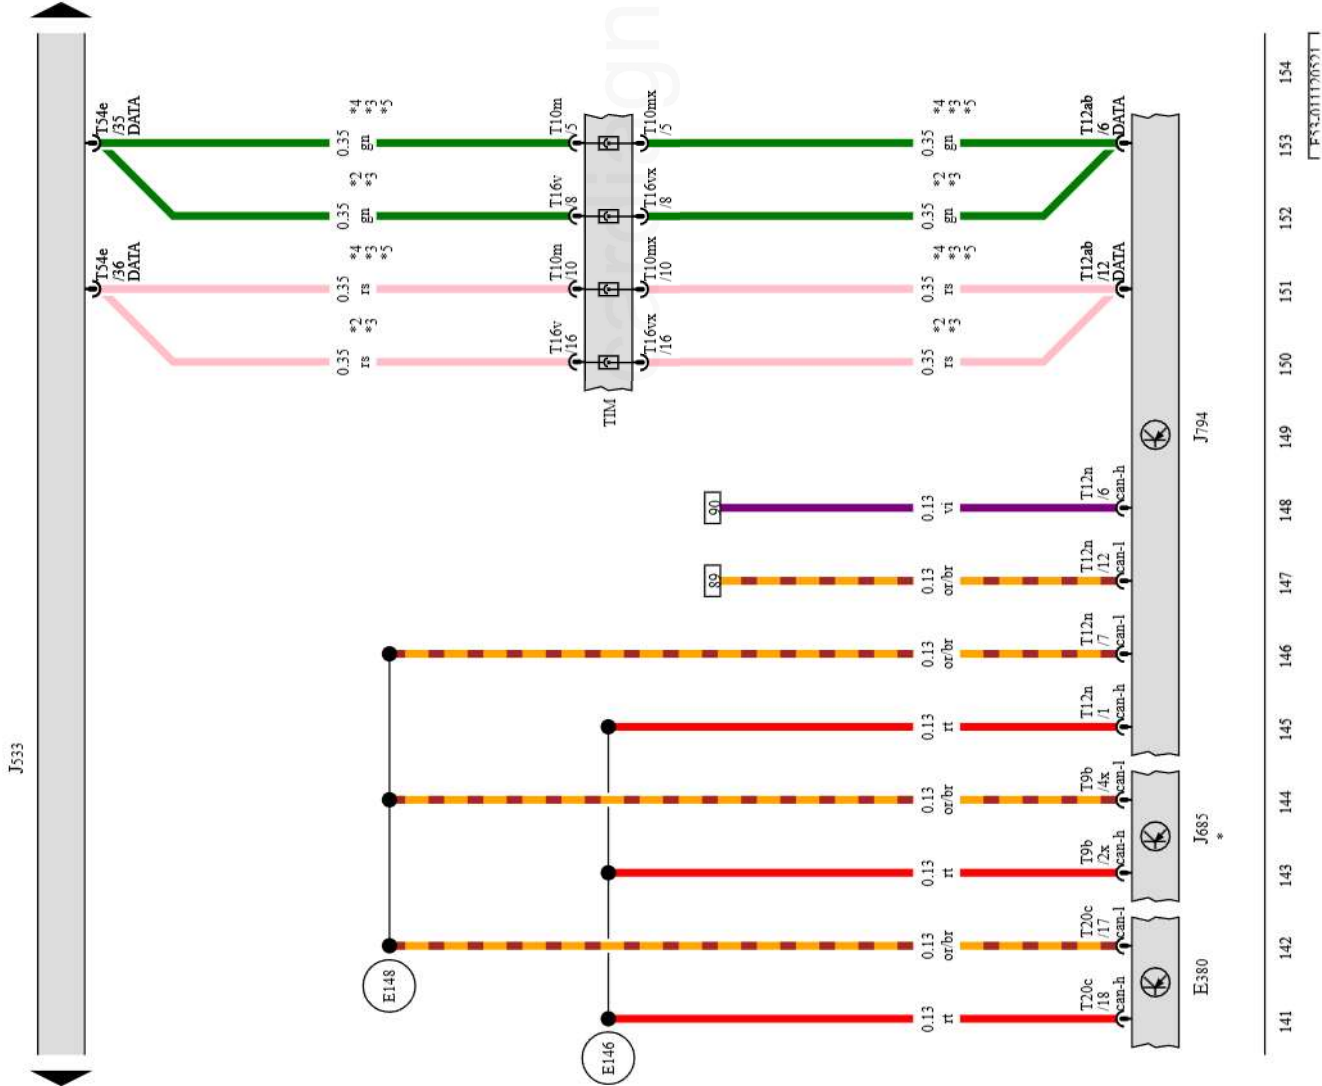

Data Bus on Board Diagnostic Interface, High Bus
Connection (in Interior Wiring Harness), Low Bus
Connection (in Interior Wiring Harness), High Bus
Connection 2 (in Interior Wiring Harness), Low Bus
Connection 2 (in Interior Wiring Harness)


G784 Particulate Sensor
G932 NOx Sensor 3
J533 Data Bus on Board Diagnostic Interface
J881 NOx Sensor Control Module 2
J1183 NOx Sensor Control Module 3
T4s 4-Pin Connector, Black
T5x 5-Pin Connector, Black
T5za 5-Pin Connector, Black
T5zb 5-Pin Connector, Black
T14a 14-Pin Connector
T54 54-Pin Connector, Black
TML Coupling Point in Engine/Motor Compartment, Left
B229 High Bus Connection (in Interior Wiring Harness)
B230 Low Bus Connection (in Interior Wiring Harness)

Protected by copyright. Copying is
permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
with respect to the correctness of the information in this document. Copyright by AUDI AG.

B766 High Bus Connection 2 (in Interior Wiring Harness)
B767 Low Bus Connection 2 (in Interior Wiring Harness)

* For Vehicles with Diesel Engine
*2 Depending on Equipment
*3 Refer to Applicable Engine Wiring Diagram
*4 For Vehicles with a 6-Cylinder Engine
*5 For Vehicles with Gasoline Engine
*6 Data Bus Wire (CAN Bus)

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

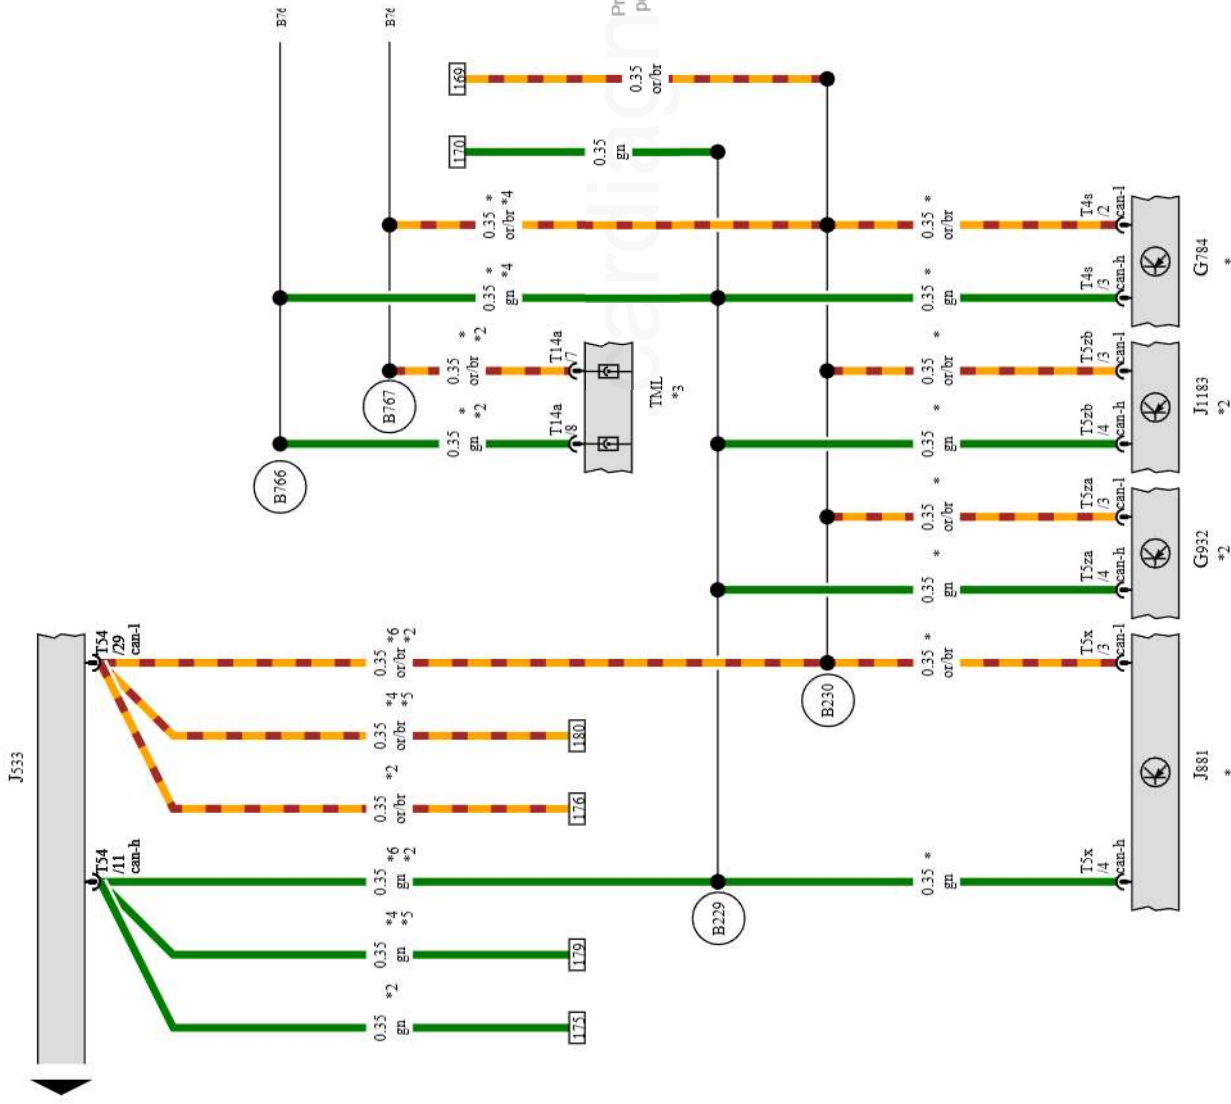

155 156 157 158 159 160 161 162 163 164 165 166 167 168

FR3,011130531

J583 NOx Sensor Control Module
J623 Engine/Motor Control Module
T5w 5-Pin Connector, Black
T56f 56-Pin Connector, Black
T91 91-Pin Connector, Black

ws	white
sw	black
ro	red
rt	red
br	brown
gn	green
bl	blue
gr	gray
li	lilac
vi	lilac
ge	yellow
or	orange
rs	pink

D160 Low Bus Positive Connection (in Engine/Motor Compartment Wiring Harness)

* For Vehicles with Diesel Engine
*2 For Vehicles with a 6-Cylinder Engine
*3 For Vehicles with Gasoline Engine
*4 Depending on Equipment

169	170	171	172	173	174	175	176	177	178	179	180	181	182
-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----

LIN Bus Connection 2 (in Instrument Panel Wiring Harness), LIN Bus Connection 4 (in Main Wiring Harness)

- E265 Rear A/C Display Control Head
- G65 High Pressure Sensor
- G657 Humidity Sensor in Fresh Air Intake Duct
- J65 Heater Control Module
- J126 Fresh Air Blower Control Module
- T3bc 3-Pin Connector, Black
- T3bd 3-Pin Connector, Black
- T4bc 4-Pin Connector, Black
- T4dr 4-Pin Connector, Black
- T8n 8-Pin Connector, Black
- T8y 8-Pin Connector, Black
- T20p 20-Pin Connector, Black
- TH Coupling Point on Roof
- V562 Instrument Panel Vent Motor


LIN Bus Connection 2 (in Instrument Panel Wiring Harness)




LIN Bus Connection 4 (in Main Wiring Harness)



- * Refer to Applicable A/C System Wiring Diagram
- *2 Refer to Applicable Wiring Diagram
- *3 For Vehicles with Front Heater
- *4 Depending on Equipment

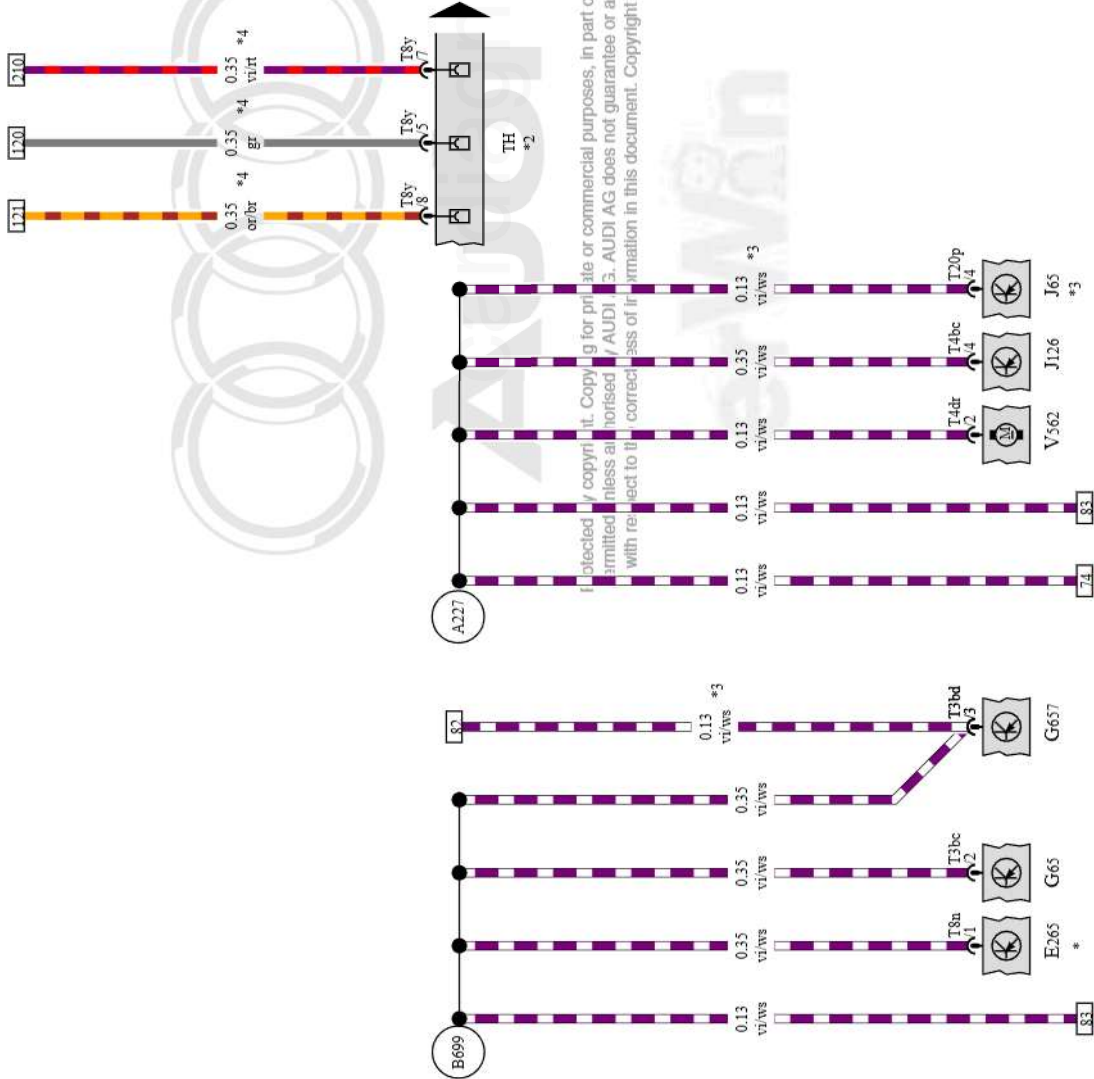

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

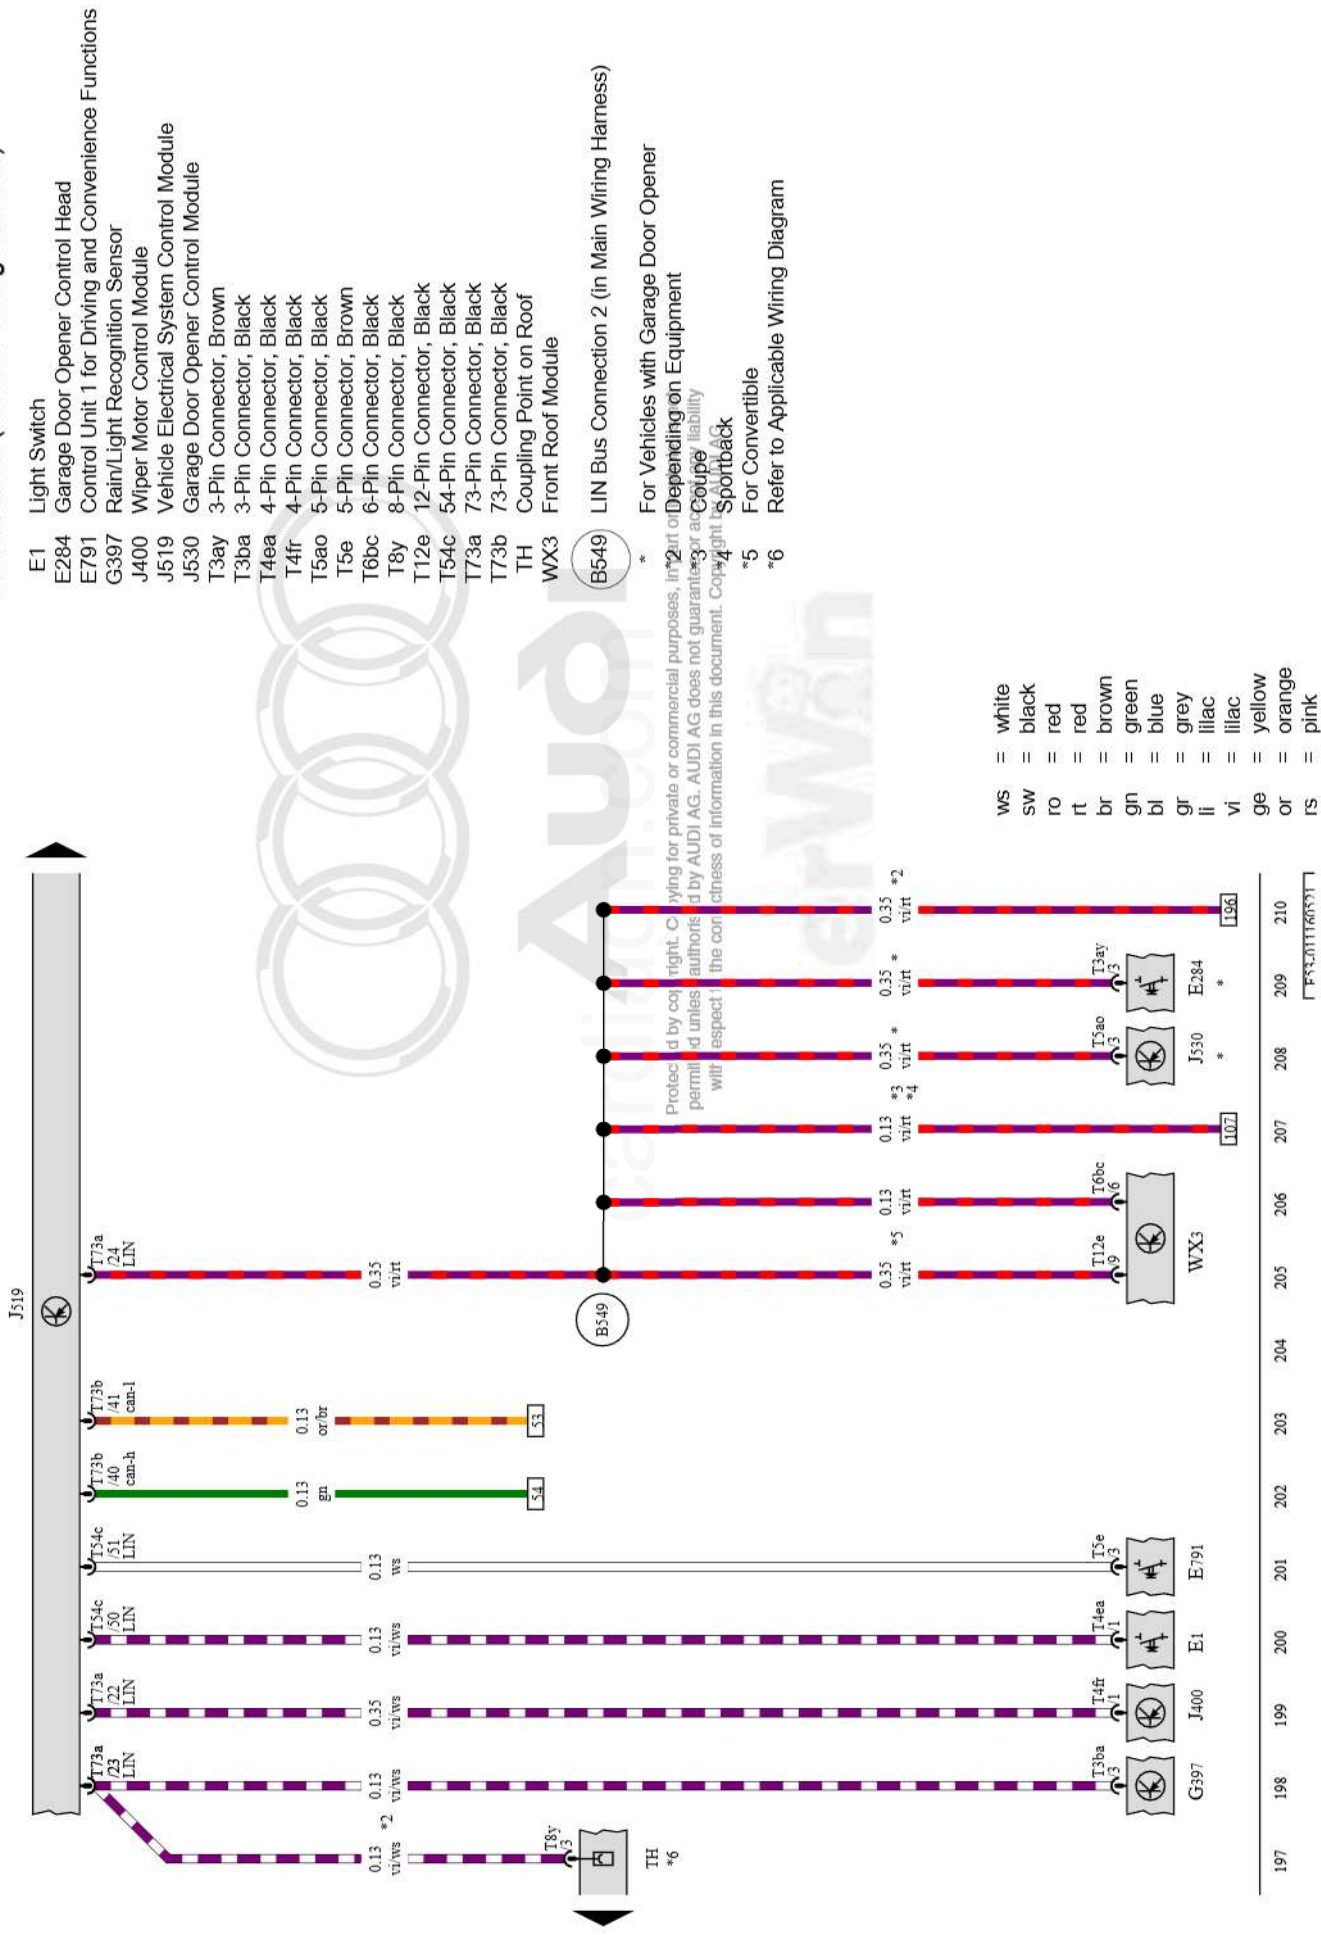Vehicle Electrical System Control Module, LIN Bus
Connection 2 (in Main Wiring Harness)

Vehicle Electrical System Control Module, LIN Bus Connection 6 (in Main Wiring Harness), LIN Bus Connection 7 (in Main Wiring Harness)

G981 Rear Passenger Compartment Monitoring Left Ultrasound Sensor

J519 Vehicle Electrical System Control Module

L201 Left Rear Door Ambient Lighting Bulb 1

T4bv 4-Pin Connector, Brown

T4er 4-Pin Connector, Black

T4hl 4-Pin Connector, Black

T4hr 4-Pin Connector, Black

T4zf 4-Pin Connector, Black

T17l 17-Pin Connector, Black

T17lx 17-Pin Connector

T19a 19-Pin Connector, Black

T19ax 19-Pin Connector, Black

T19b 19-Pin Connector, Black

T19bx 19-Pin Connector, Black

T2l 21-Pin Connector, Black

T2lx 21-Pin Connector, Black

T73a 73-Pin Connector, Black

TRAHL Left Rear Wheel Housing Wiring Coupling Point

TTHL Left Rear Door Coupling Point

TTHR Right Rear Door Coupling Point

TTIHL Coupling Point in Left Rear Door

TTIHR Coupling Point in Right Rear Door

W74 Fiber Optic Cable for Front Center Console Ambient Lighting

B711 LIN Bus Connection 6 (in Main Wiring Harness)

B712 LIN Bus Connection 7 (in Main Wiring Harness)


* Sportback

*2 Refer to Applicable Convenience System Wiring Diagram


*3 For Vehicles with Auxiliary Lamps

*4 For Convertible

*5 Coupe

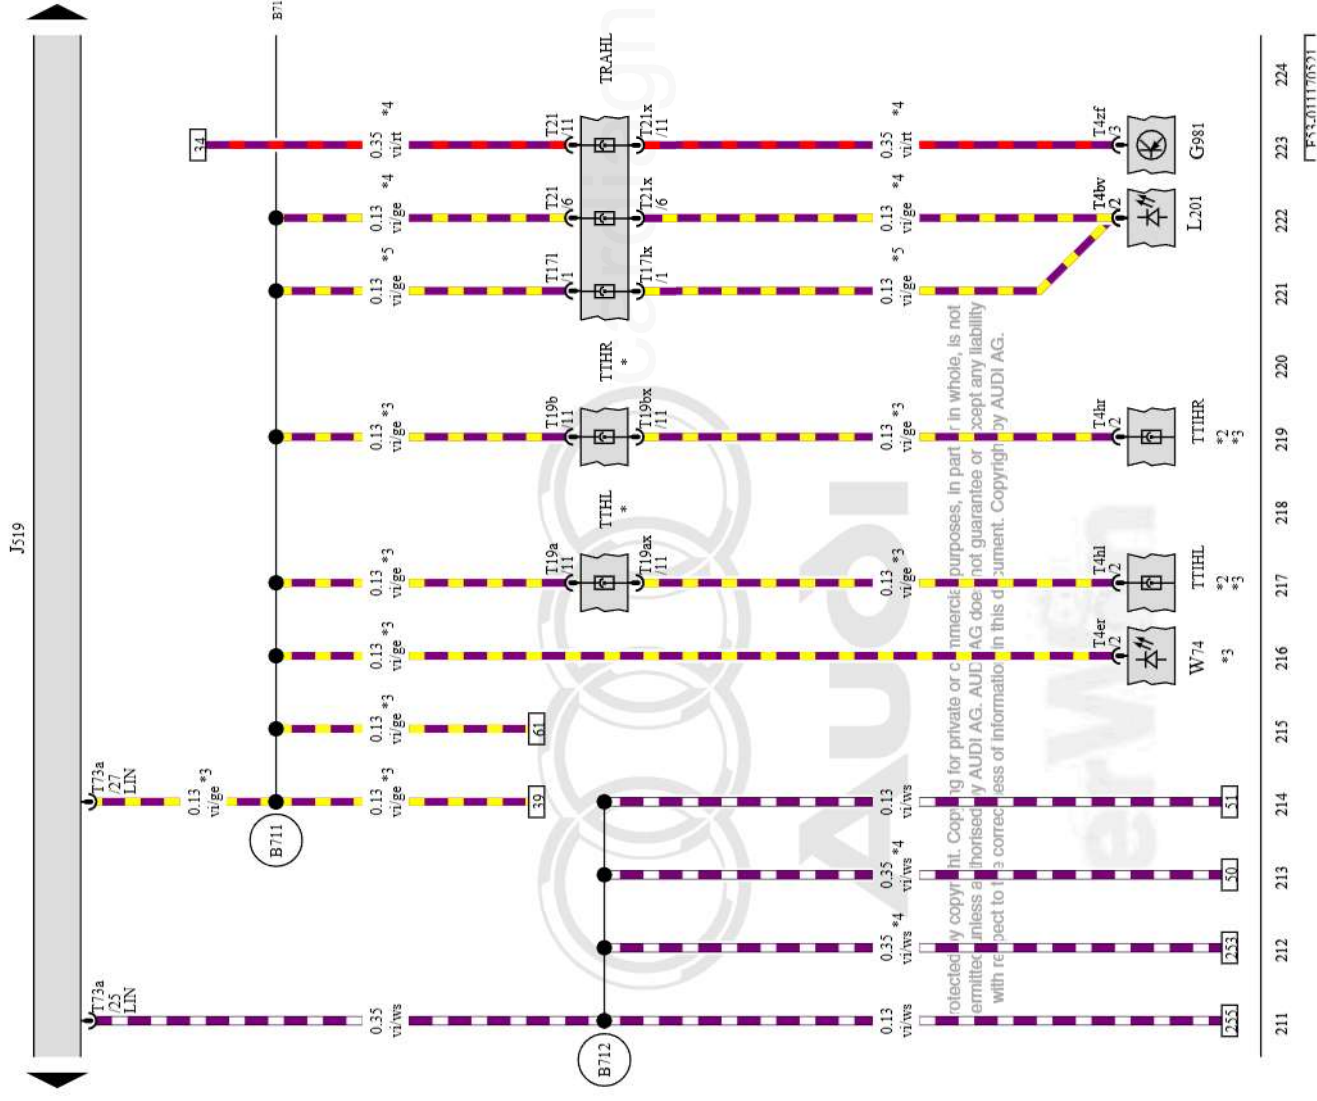

Vehicle Electrical System Control Module, LIN Bus Connection 5 (in Main Wiring Harness), LIN Bus Connection 6 (in Main Wiring Harness)

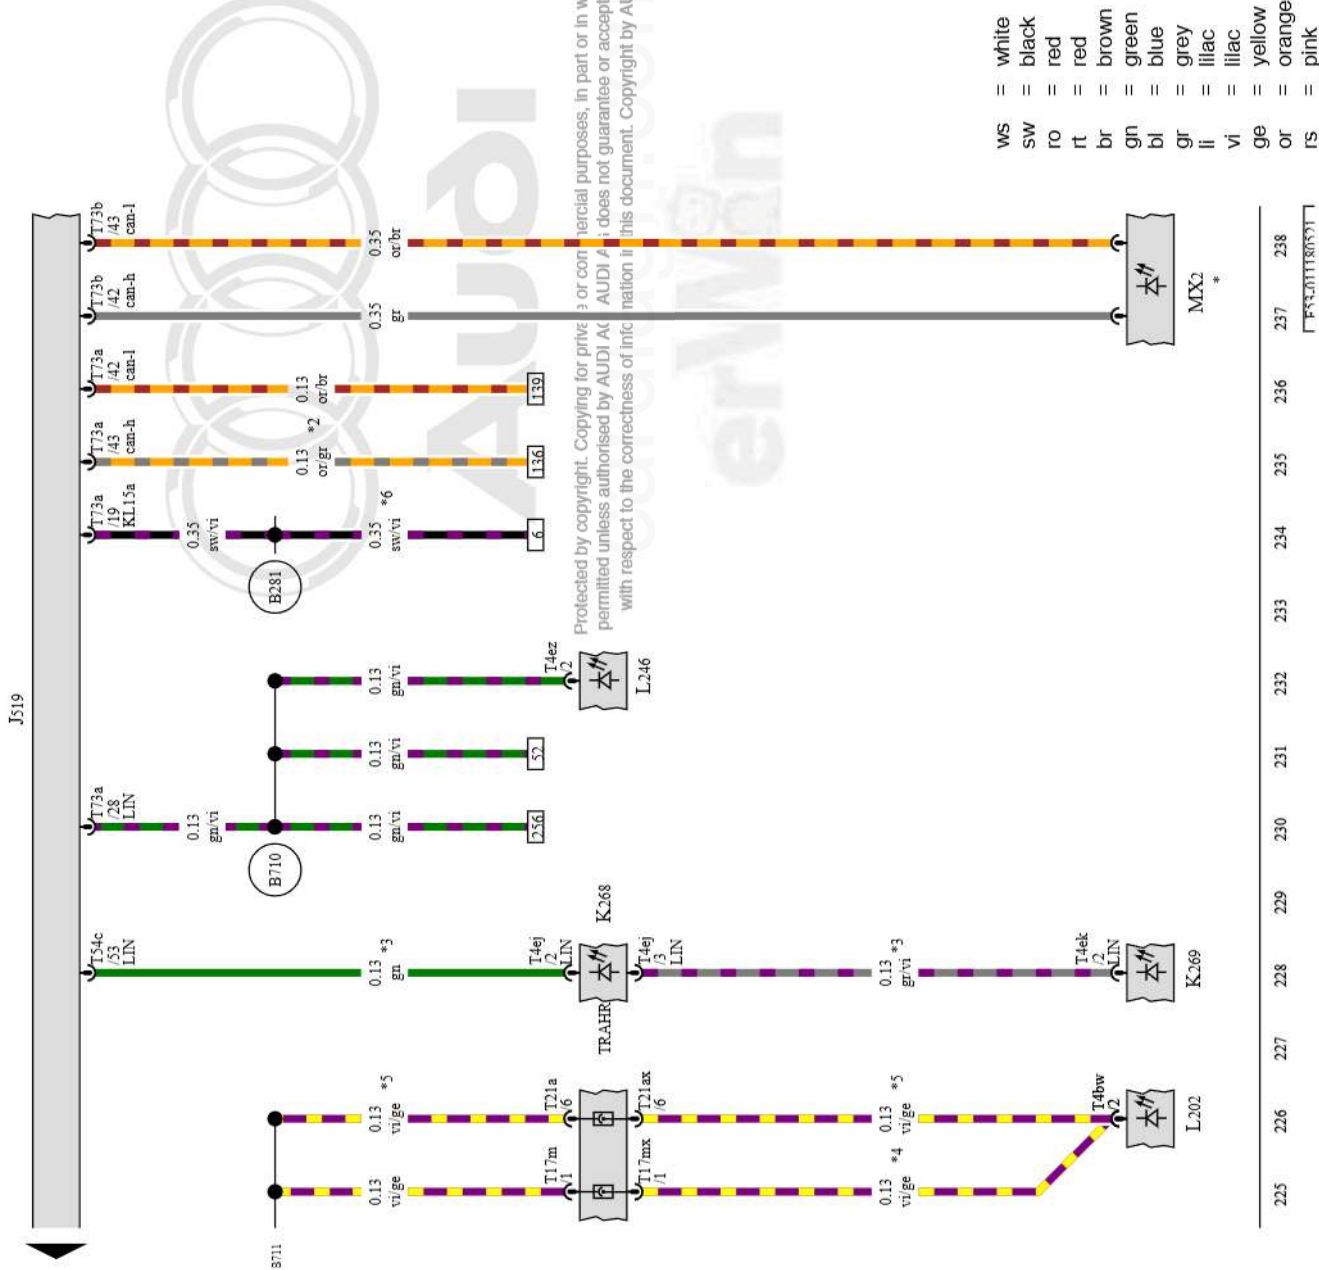

Comfort System Central Control Module, LIN Bus
Connection 8 (in Main Wiring Harness), Connection 1
(CAN Bus Extended High) (in Rear Bumper Wiring
Harness), Connection 1 (CAN Bus Extended Low) (in
Rear Bumper Wiring Harness)


- G578 Anti-Theft Alarm System Sensor
- H12 Alarm Horn
- J136 Memory Seat/Steering Column Adjustment Control Module
- J393 Comfort System Central Control Module
- J769 Lane Change Assistance Control Module
- J770 Lane Change Assistance Control Module 2
- T3bl 3-Pin Connector, Black
- T4bg 4-Pin Connector, Black
- T4hy 4-Pin Connector, Brown
- T8j 8-Pin Connector, Black
- T8q 8-Pin Connector, Black
- T20a 20-Pin Connector, Black
- T32c 32-Pin Connector, Black
- T32d 32-Pin Connector, Blue
- W45 Left Rear Footwell Lamp

LIN Bus Connection 8 (in Main Wiring Harness)

Connection 1 (CAN Bus Extended High) (in Rear Bumper
Wiring Harness)

Connection 1 (CAN Bus Extended Low) (in Rear Bumper
Wiring Harness)

- * For Vehicles with Lane Change Assistance
- *2 Anti-Theft Alarm System with Interior Monitoring
- *3 For Vehicles with Auxiliary Lamps
- *4 Depending on Equipment
- *5 For Vehicles with Power Rear Lid Opening Sensor
- *6 Different Wire Color Possible

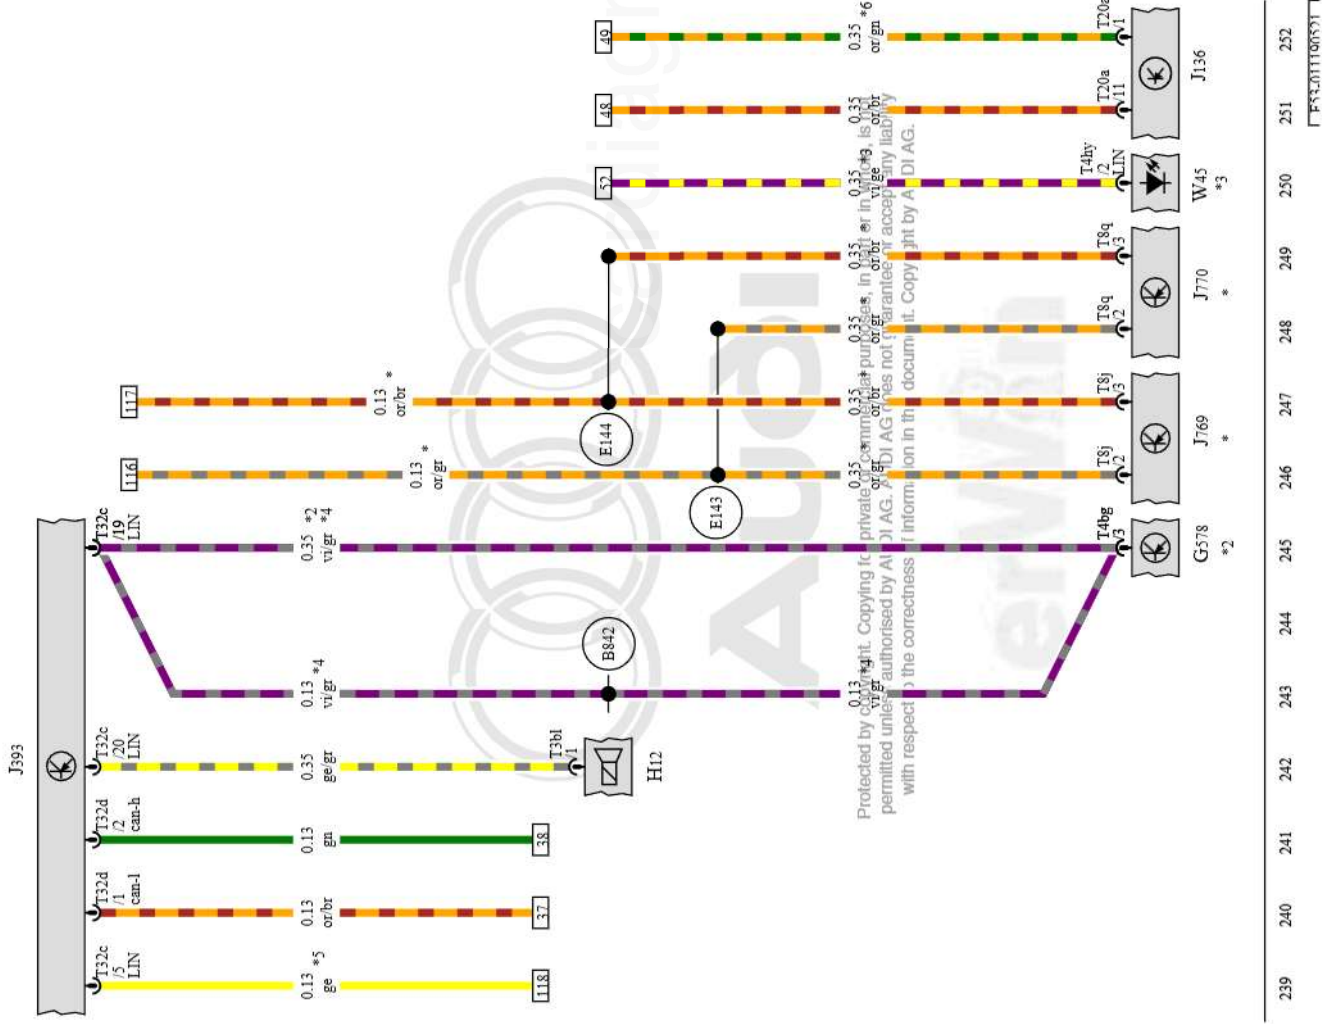

Right Front Seat Coupling Station

- J521 Front Passenger Memory Seat Control Module
- T4iy 4-Pin Connector, Black
- T6ed 6-Pin Connector, Gray
- T6edx 6-Pin Connector, Gray
- T12b 12-Pin Connector, Black
- T17e 17-Pin Connector, Red
- T17ex 17-Pin Connector, Red
- T20b 20-Pin Connector, Black
- TSB Front Passenger Seat Backrest Coupling Point
- TSVR Right Front Seat Coupling Station
- W46 Right Rear Footwell Lamp
- * For Vehicles with Auxiliary Lamps
- *2 Refer to Applicable Seat Adjustment Wiring Diagram
- *3 For Convertible

