



## FRONT CROSSMEMBER (ASSY)

## **REMOVAL**




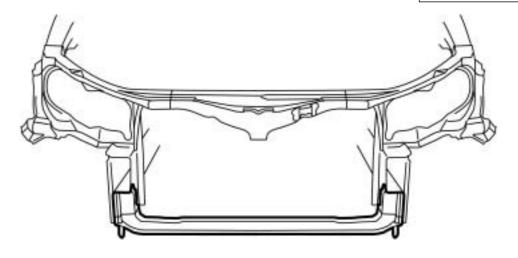


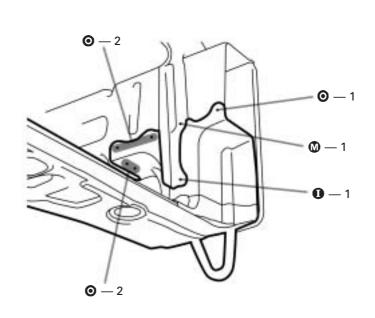

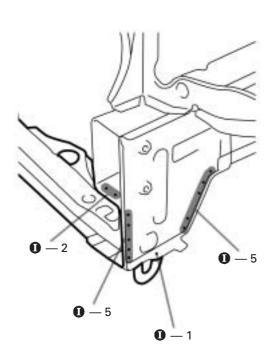

## **INSTALLATION**

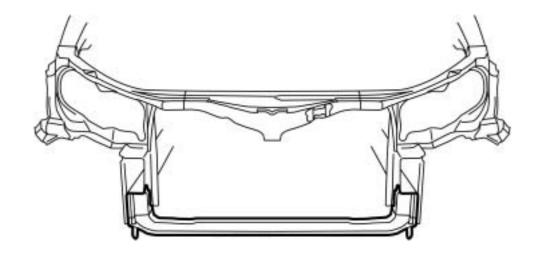

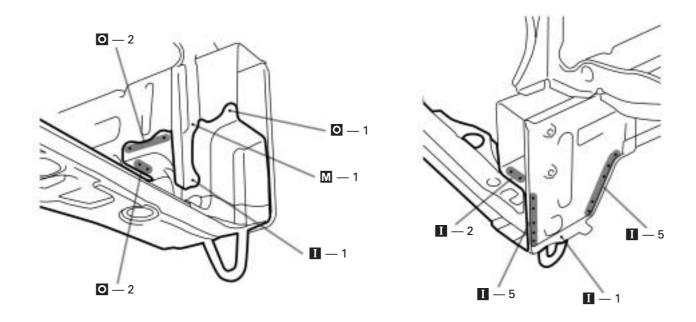

 Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

HINT: First install the hood lock support.