
SAORF-02

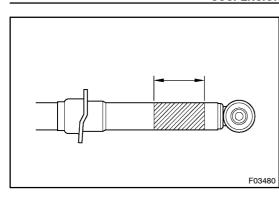

DISPOSAL

- 1. FULLY EXTEND SHOCK ABSORBER ROD
- 2. DRILL HOLE TO REMOVE GAS FROM CYLINDER
- (a) Place the shock absorber horizontally to prevent the oil from coming out.
- (b) Using a drill, make a hole on the top of the shell as shown to discharge the gas inside.

CAUTION:

The gas coming out is harmless, but be careful of chips which may fly up when drilling.