


FRONT FENDER APRON (ASSY)

REMOVAL (With the radiator side support removed.)

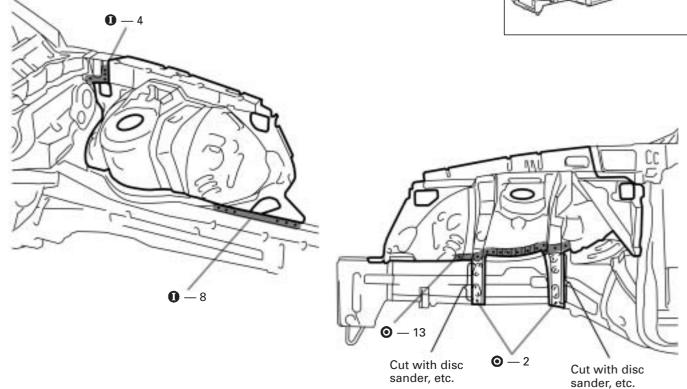


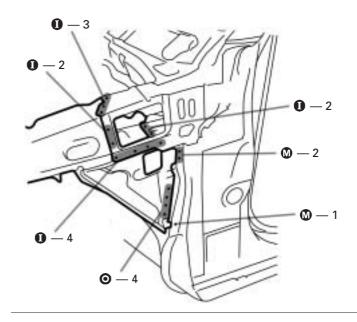


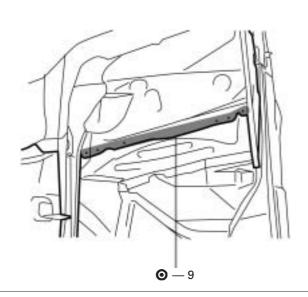




INSTALLATION

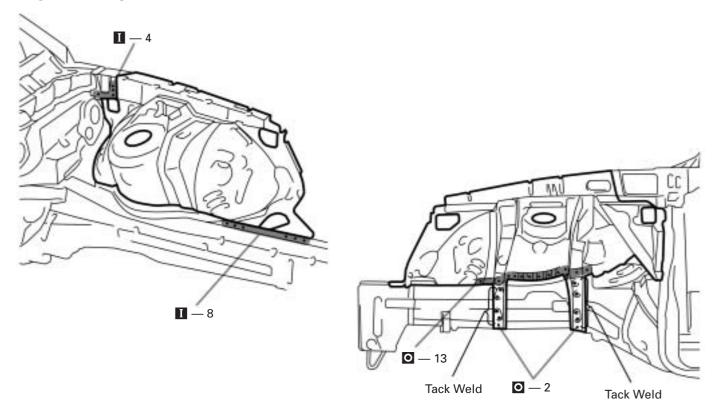

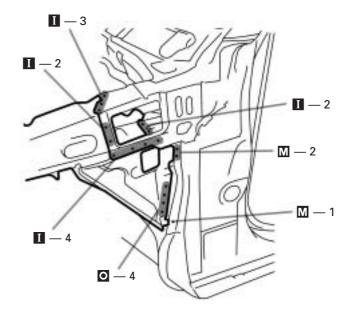

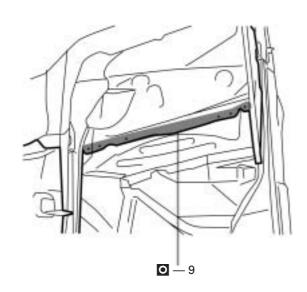

- Temporarily install the new parts and measure each part in accordance with the body dimension diagram.
- 2. Measurements must be accurate with the body dimension diagram, as this affects the front wheel alignment.
- 3. Temporarily install the front fender and hood, and check the fit.