
DI2F7-02

Mirror motor circuit

WIRING DIAGRAM

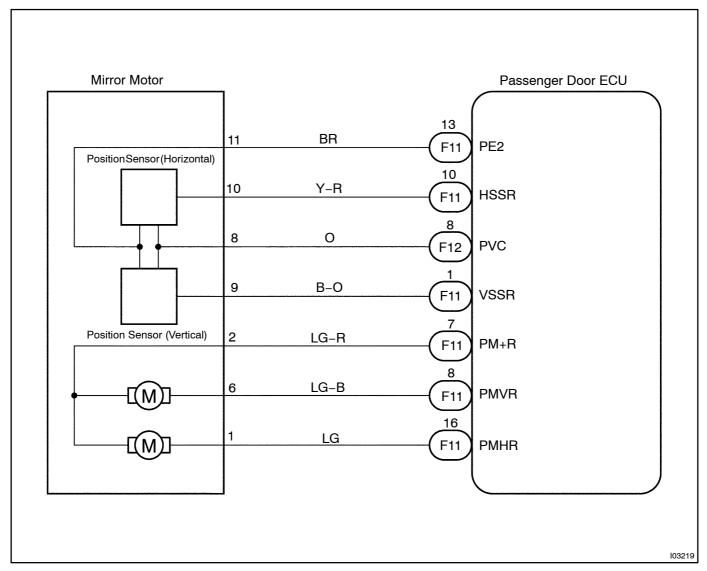

INSPECTION PROCEDURE

HINT:

Incase of using the LEXUS hand-held tester, start the inspection from step of and incase of the LEXUS hand-held tester, start from step 2.

1 |

Check mirror motor using LEXUS hand-held tester.

PREPARATION:

Connect[]he[]LEXUS[]hand-held[]ester[]o[]he[]DLC[3].

CHECK:

Check[]hat[]he[]mirror[]motor[can[operate[]n[an[ACTIVE[]TEST.



Proceed_to_next_circuit_inspection_shown_on problem_symptoms_table._(See_page_DI-738)

NG

2 | Check[mirror[motor.[See[page[BE-192)]

NG

Replace the mirror motor.

OK

3 Check wireharness and connector between mirror motor and passenger door ECU.

NG□

Repair or replace wireharness or connector.

OK

Proceed lo next circuit inspection shown on problem symptoms table. (See page DI-738)