
SA0RJ-02

## **REMOVAL**

- 1. REMOVE FRONT WHEEL
  Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
- 2. REMOVE FRONT SHOCK ABSORBER (See page \$A-18)

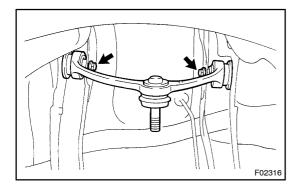

## 3. REMOVE UPPER SUSPENSION ARM

Remove the 2 bolts and upper suspension arm.

Torque: 53 N·m (540 kgf·cm, 39 ft·lbf)

HINT:

At the time of installation, after stabilizing the suspension, torque the bolts.