
SA0RK-02

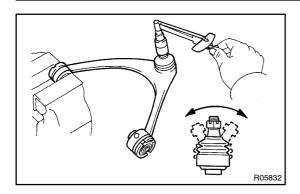

INSPECTION

INSPECT FRONT UPPER SUSPENSION ARM BALL JOINT FOR ROTATION CONDITION

- (a) As shown, flip the ball joint stud back and forth5 times, before installing the nut.(b) Using a torque wrough turn the nut continuously of
- (b) Using a torque wrench, turn the nut continuously one turn per 2 4 seconds and take the torque reading on the 5th turn.

Turning torque:

1.0 - 3.4 N·m (10 - 35 kgf·cm, 9 - 30 in.·lbf)