
SA0RG-02

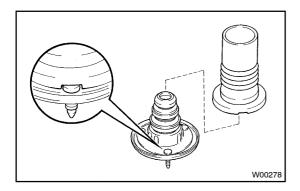


## REASSEMBLY

# 1. INSTALL SPRING BUMPER TO SUSPENSION SUPPORT

#### HINT:

Match the bolt of the suspension support with the cut-out part of the spring bumper.

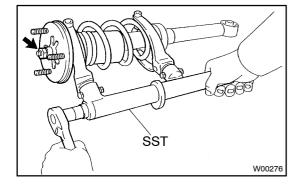

#### 2. INSTALL COIL SPRING TO SHOCK ABSORBER

(a) Using SST, compress the coil spring. SST 09727–30021

#### NOTICE:

Do not use an impact wrench. It will damage the SST.


(b) Install the coil spring to the shock absorber.

## HINT:

Fit the lower end of the coil spring into the recess of the spring seat of the shock absorber.

### 3. INSTALL SUSPENSION SUPPORT

- (a) Install the suspension support sub-assembly to the shock absorber.
- (b) Temporarily tighten a new lock nut.

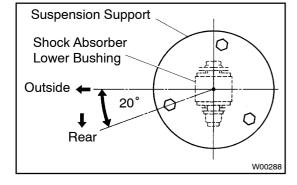

(c) Align the suspension support with the shock absorber lower bolt, as shown.

## 4. REMOVE SST

#### HINT:

After removing the SST, recheck the direction of the suspension support.