
# DIFFERENTIAL MOUNTING CUSHION REPLACEMENT


SAOSH-C

1. REMOVE DIFFERENTIAL (See page \$A-65)

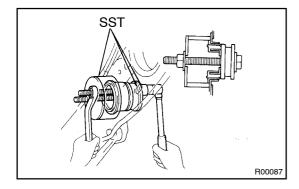


# 2. REMOVE DIFFERENTIAL MOUNTING CUSHION

Using \$ST, \$\textit{permove} the \$\textit{differential} mounting \$\text{cushion}. \$ST\$ 09316-12010, \$\textit{Q9570-24010}\$

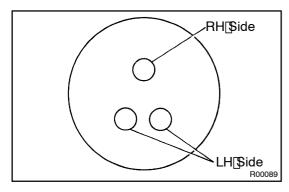

### NOTICE:

- When driving out the mounting cushion, be careful not to touch the suspension member with the SST.
- •□ Align[the[SST[straight[so[that[the[bolt[of[the[SST[]s parallel[with[the[center]]ine[of[the[mounting[cushion.
- When installing the bolts to the LHand RH differential mount ing cushions, make sure that the bolts are passed through the correct holes in the SST, as shown in the illustration.

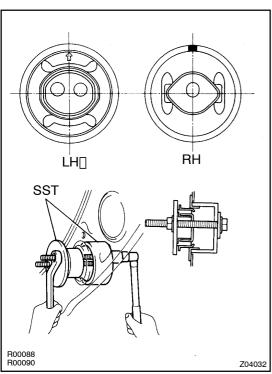

## 3. | INSTALL | DIFFERENTIAL | MOUNTING | CUSHION

Using \$ST, install the dushion so that the marks are positioned, as \$hown in the illustration.

SST∏ 09570-24010

### NOTICE:

- Pay@enough@attention@to\_LH@and@RH\sides@r@top@and bottom.
- Set[the[\$ST]after[temporarily[installing[the]differential mounting[cushion[into]the[member[so]as[not[to]install at an angle.
- To confirm that the differential mounting cushion is aligned straight in relation to the member, check that the SST is fully in contact with all of the cushion.
- 4. INSTALL DIFFERENTIAL (See page \$A-84)