
BO0UN-02

## INSTALLATION

## 1. INSTALL SEATBACK ASSEMBLY

HINT:


Before installation, confirm that the seat belts are positioned.

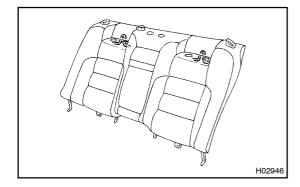

(a) Mount the seatback assembly to the body.

HINT:

Hook the frames on the stud bolts on the body side.

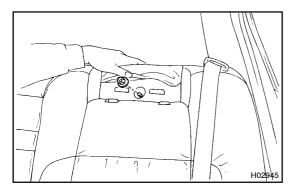

(b) Rip the seatback cover open and install the nut.

HINT:

Do the same for RH and LH.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

(c) Install the 4 bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

- (d) Install the seat belt to the shoulder belt guide.
- 2. INSTALL SEAT CUSHION ASSEMBLY
- (a) Pass the seat cushion wire to seatback.
- (b) Push down the cushion to install the hook to the body panel.

HINT:

Confirm that the seat is installed firmly.

3. INSTALL HEADRESTS