
SA0SM-02

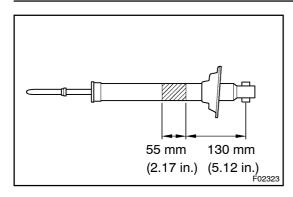

DISPOSAL

- 1. FULLY EXTEND SHOCK ABSORBER ROD
- 2. DRILL HOLE TO DISCHARGE GAS FROM CYLINDER Using a drill, make a hole in the cylinder, as shown to discharge the gas inside.

CAUTION:

The gas coming out is harmless, but be careful of chips which may fly up when drilling.