


PARKING BRAKE PEDAL ON-VEHICLE INSPECTION

BB0 ID 0

1. CHECK PARKING BRAKE PEDAL TRAVEL

Depress the parking brake pedal all the way and count the number of clicks.

Parking brake lever travel at 294 N (30 kgf, 66.1 lbf): 7 – 9 clicks

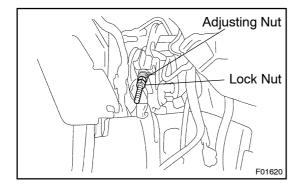

2. IF NECESSARY, ADJUST PARKING BRAKE

- (a) Adjust the parking brake shoe clearance.
- (b) Remove the lock nut.
- (c) Using the socket wrench, tighten the adjusting nut until it turns freely.