
DS07L 0


INSPECTION

1. VEHICLES [NOT] NVOLVED [] N [COLLISION

- (a) Do@diagnostic[system@heck.[SeepageDI-386)
- (b) Doat visual theck which includes the following items with the side airbag assembly installed in the vehicle.

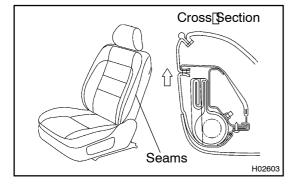

Check[that[there]are[ho[cuts[br[the]frayed[on[seams shown[ht]]he]]lustration.

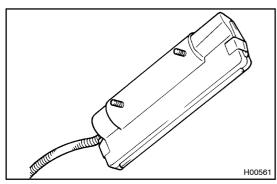

2. VEHICLE INVOLVED IN COLLISION AND AIRBAG IS NOT DEPLOYED

- (a) Do a diagnostic system check. See page DI-386)
- (b) Doalvisualcheck which includes the following items with the side airbag assembly removed from the vehicle.
 - Check@uts@and@racks,@r@marked@discoloration@f the@side@airbag@assembly.
 - Check cuts and cracks n wire harness, and chipping n connectors.

CAUTION:

For removal and installation of the side airbag assembly, see page RS-40 and RS-50. Be sure to follow the correct procedure.

- 3. VEHICLE[INVOLVED[IN[COLLISION[AND[AIRBAG[IS DEPLOYED]]]]
- (a) Do a diagnostic system check. (See page DI-386)
- (b) Do a visual check which includes the following items with the side airbag assembly removed from the vehicle.
 - Check the side airbag installation part of the seat frame.
 - Check the damage to the connector and wire harness.

HINT:

If the seat frame is deformed, never repair it. Always replace it with new one.