


FRONT APRON TO COWL SIDE MEMBER (ASSY)

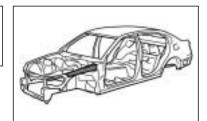


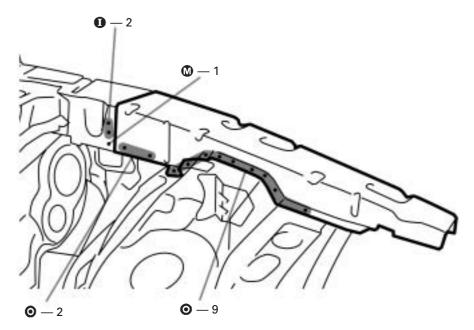


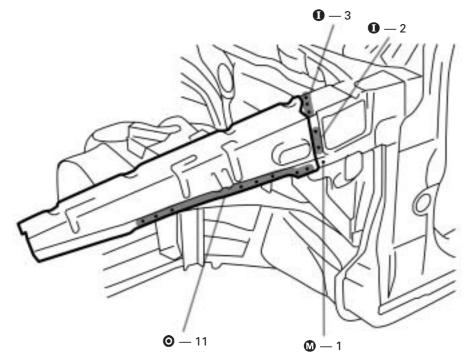



INSTALLATION

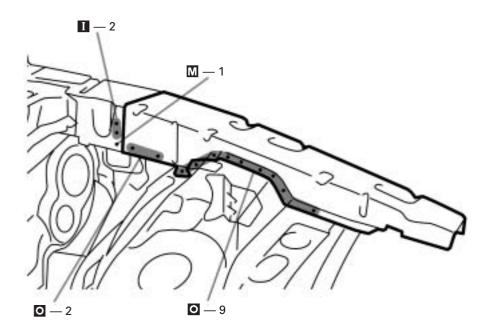

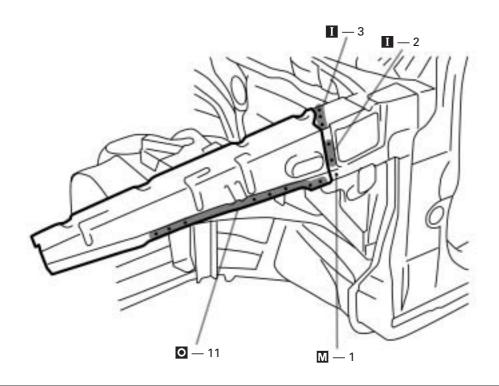

- Temporarily install the new parts and measure each part in accordance with the body dimension diagram.
- 2. Temporarily install the front fender and hood, and check the fit.